



**MITSUBISHI  
ELECTRIC**

General-Purpose AC Servo

MITSUBISHI SERVO AMPLIFIERS & MOTORS


**MELSERVO-JE**

General-Purpose Interface AC Servo  
**MODEL**

**MR-JE- \_A**

SERVO AMPLIFIER

INSTRUCTION MANUAL

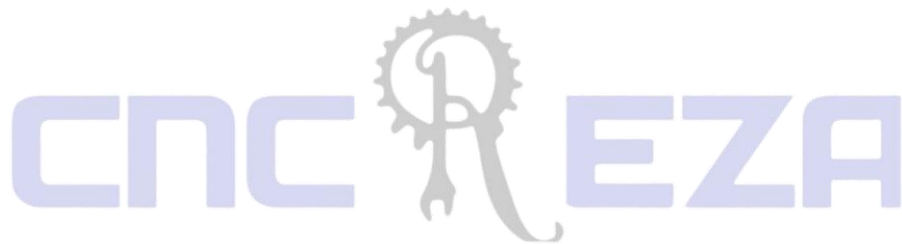

سازنده انواع ماشین آلات صنعتی و ماشین مخصوص

[WWW.CNCREZA.IR](http://WWW.CNCREZA.IR)



## ● Safety Instructions ●

Please read the instructions carefully before using the equipment.

To use the equipment correctly, do not attempt to install, operate, maintain, or inspect the equipment until you have read through this Instruction Manual, Installation guide, and appended documents carefully. Do not use the equipment until you have a full knowledge of the equipment, safety information and instructions. In this Instruction Manual, the safety instruction levels are classified into "WARNING" and "CAUTION".




Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight injury to personnel or may cause physical damage.

Note that the CAUTION level may lead to a serious consequence according to conditions. Please follow the instructions of both levels because they are important to personnel safety. What must not be done and what must be done are indicated by the following diagrammatic symbols.



Indicates what must not be done. For example, "No Fire" is indicated by .



Indicates what must be done. For example, grounding is indicated by .

In this Instruction Manual, instructions at a lower level than the above, instructions for other functions, and so on are classified into "POINT".

After reading this Instruction Manual, keep it accessible to the operator.

### 1. To prevent electric shock, note the following

 **WARNING**

- Before wiring and inspections, turn off the power and wait for 15 minutes or more until the charge lamp turns off. Otherwise, an electric shock may occur. In addition, when confirming whether the charge lamp is off or not, always confirm it from the front of the servo amplifier.
- Ground the servo amplifier and servo motor securely.
- Any person who is involved in wiring and inspection should be fully competent to do the work.
- Do not attempt to wire the servo amplifier and servo motor until they have been installed. Otherwise, it may cause an electric shock.
- Do not operate switches with wet hands. Otherwise, it may cause an electric shock.
- The cables should not be damaged, stressed, loaded, or pinched. Otherwise, it may cause an electric shock.
- To prevent an electric shock, always connect the protective earth (PE) terminal (marked  $\oplus$ ) of the servo amplifier to the protective earth (PE) of the cabinet.
- When using an earth-leakage current breaker (RCD), select the type B.
- To avoid an electric shock, insulate the connections of the power supply terminals.

## 2. To prevent fire, note the following

### CAUTION

- Install the servo amplifier, servo motor, and regenerative resistor on incombustible material. Installing them directly or close to combustibles will lead to a fire.
- Always connect a magnetic contactor between the power supply and the power supply (L1, L2, and L3) of the servo amplifier, in order to configure a circuit that shuts down the power supply on the side of the servo amplifier's power supply. If a magnetic contactor is not connected, continuous flow of a large current may cause a fire when the servo amplifier malfunctions.
- When using the regenerative resistor, switch power off with the alarm signal. Not doing so may cause a fire when a regenerative transistor malfunctions or the like may overheat the regenerative resistor.
- When you use a regenerative option with an MR-JE-40A to MR-JE-100A, remove the built-in regenerative resistor and wiring from the servo amplifier.
- Provide adequate protection to prevent screws and other conductive matter, oil and other combustible matter from entering the servo amplifier and servo motor.
- Always connect a molded-case circuit breaker to the power supply of the servo amplifier.

## 3. To prevent injury, note the following

### CAUTION

- Only the voltage specified in the Instruction Manual should be applied to each terminal. Otherwise, a burst, damage, etc. may occur.
- Connect cables to the correct terminals. Otherwise, a burst, damage, etc. may occur.
- Ensure that polarity (+/-) is correct. Otherwise, a burst, damage, etc. may occur.
- The servo amplifier heat sink, regenerative resistor, servo motor, etc. may be hot while power is on or for some time after power-off. Take safety measures, e.g. provide covers, to avoid accidentally touching the parts (cables, etc.) by hand.

## 4. Additional instructions

The following instructions should also be fully noted. Incorrect handling may cause a malfunction, injury, electric shock, etc.

## (1) Transportation and installation

### CAUTION

- Transport the products correctly according to their mass.
- Stacking in excess of the specified number of product packages is not allowed.
- Do not hold the lead wire of the regenerative resistor when transporting the servo amplifier.
- Install the servo amplifier and the servo motor in a load-bearing place in accordance with the Instruction Manual.
- Do not get on or put heavy load on the equipment.
- The equipment must be installed in the specified direction.
- Leave specified clearances between the servo amplifier and the cabinet walls or other equipment.
- Do not install or operate the servo amplifier and servo motor which have been damaged or have any parts missing.
- Do not block the intake and exhaust areas of the servo amplifier. Otherwise, it may cause a malfunction.
- Do not drop or strike the servo amplifier and servo motor. Isolate them from all impact loads.

When you keep or use the equipment, please fulfill the following environment.


Item		Environment
Ambient temperature	Operation	0 °C to 55 °C (non-freezing)
	Storage	-20 °C to 65 °C (non-freezing)
Ambient humidity	Operation	90 %RH or less (non-condensing)
	Storage	
Ambience		Indoors (no direct sunlight), free from corrosive gas, flammable gas, oil mist, dust, and dirt
Altitude		1000 m or less above sea level
Vibration resistance		5.9 m/s <sup>2</sup> , at 10 Hz to 55 Hz (directions of X, Y and Z axes)

- When the product has been stored for an extended period of time, contact your local sales office.
- When handling the servo amplifier, be careful about the edged parts such as corners of the servo amplifier.
- The servo amplifier must be installed in a metal cabinet.
- When fumigants that contain halogen materials such as fluorine, chlorine, bromine, and iodine are used for disinfecting and protecting wooden packaging from insects, they cause malfunction when entering our products. Please take necessary precautions to ensure that remaining materials from fumigant do not enter our products, or treat packaging with methods other than fumigation (heat method). Additionally, disinfect and protect wood from insects before packing products.


## (2) Wiring

### CAUTION

- Before removing the CNP1 connector of MR-JE-40A to MR-JE-100A, disconnect the lead wires of the regenerative resistor from the CNP1 connector.
- Wire the equipment correctly and securely. Otherwise, the servo motor may operate unexpectedly.
- Do not install a power capacitor, surge killer, or radio noise filter (optional FR-BIF) on the servo amplifier output side.
- To avoid a malfunction, connect the wires to the correct phase terminals (U, V, and W) of the servo amplifier and servo motor.
- Connect the servo amplifier power output (U, V, and W) to the servo motor power input (U, V, and W) directly. Do not let a magnetic contactor, etc. intervene. Otherwise, it may cause a malfunction.

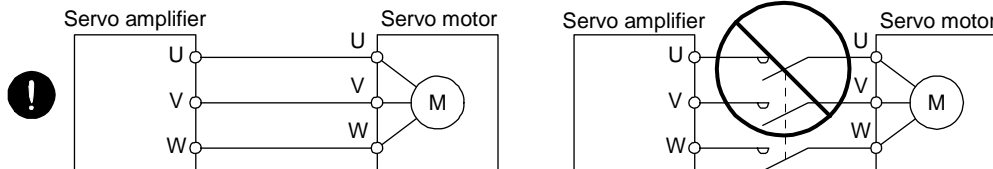

- The connection diagrams in this instruction manual are shown for sink interfaces, unless stated otherwise.
- The surge absorbing diode installed to the DC relay for control output should be fitted in the specified direction. Otherwise, the emergency stop and other protective circuits may not operate.

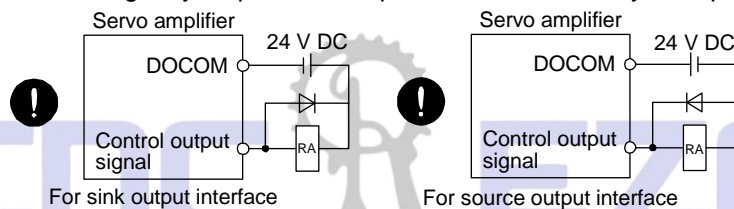

- When the cable is not tightened enough to the terminal block, the cable or terminal block may generate heat because of the poor contact. Be sure to tighten the cable with specified torque.
- Connecting a servo motor of the wrong axis to U, V, W, or CN2 of the servo amplifier may cause a malfunction.

### (3) Test run and adjustment

#### ⚠ CAUTION

- Before operation, check the parameter settings. Improper settings may cause some machines to operate unexpectedly.
- Never make a drastic adjustment or change to the parameter values as doing so will make the operation unstable.
- Do not get close to moving parts during the servo-on status.

### (4) Usage

#### ⚠ CAUTION


- When it is assumed that a hazardous condition may occur due to a power failure or product malfunction, use a servo motor with an external brake to prevent the condition.
- Do not disassemble, repair, or modify the equipment.
- Before resetting an alarm, make sure that the run signal of the servo amplifier is off in order to prevent a sudden restart. Otherwise, it may cause an accident.
- Use a noise filter, etc. to minimize the influence of electromagnetic interference. Electromagnetic interference may be given to the electronic equipment used near the servo amplifier.
- Burning or breaking a servo amplifier may cause a toxic gas. Do not burn or break it.
- Use the servo amplifier with the specified servo motor.
- The electromagnetic brake on the servo motor is designed to hold the motor shaft and should not be used for ordinary braking.
- For such reasons as service life and mechanical structure (e.g. where a ball screw and the servo motor are coupled via a timing belt), the electromagnetic brake may not hold the motor shaft. To ensure safety, install a stopper on the machine side.

## (5) Corrective actions

### ⚠ CAUTION

- When it is assumed that a hazardous condition may occur due to a power failure or product malfunction, use a servo motor with an electromagnetic brake or external brake to prevent the condition.
- Configure an electromagnetic brake circuit so that it is activated also by an external EMG stop switch.

Contacts must be opened when ALM (alarm) contacts must be opened (brake interlock) turns off.

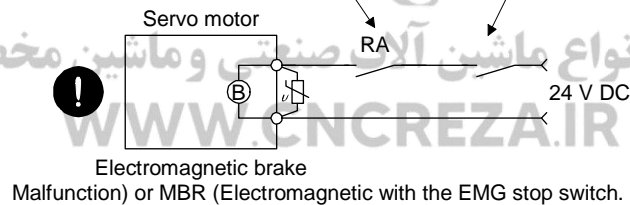

- When any alarm has occurred, eliminate its cause, ensure safety, and deactivate the alarm before restarting operation.
- Provide an adequate protection to prevent unexpected restart after an instantaneous power failure.

## (6) Maintenance, inspection and parts replacement

### ⚠ CAUTION

- With age, the electrolytic capacitor of the servo amplifier will deteriorate. To prevent a secondary accident due to a malfunction, it is recommended that the electrolytic capacitor be replaced every 10 years when it is used in general environment. For replacement, please contact your local sales office.

## (7) General instruction

●To illustrate details, the equipment in the diagrams of this Instruction Manual may have been drawn without covers and safety guards. When the equipment is operated, the covers and safety guards must be installed as specified. Operation must be performed in accordance with this Instruction Manual.

## ● DISPOSAL OF WASTE ●

Please dispose a servo amplifier and other options according to your local laws and regulations.

### ! EEP-ROM life

The number of write times to the EEP-ROM, which stores parameter settings, etc., is limited to 100,000. If the total number of the following operations exceeds 100,000, the servo amplifier may malfunction when the EEP-ROM reaches the end of its useful life.

- Write to the EEP-ROM due to parameter setting changes
- Write to the EEP-ROM due to device changes

### Compliance with global standards

Refer to appendix 2 for the compliance with global standard.

### «About the manual»

You must have this Instruction Manual and the following manuals to use this servo. Ensure to prepare them to use the servo safely.

#### Relevant manuals

Manual name	Manual No.
MELSERVO-JE Series Instructions and Cautions for Safe Use of AC Servos (packed with the servo amplifier)	IB(NA)0300194
MELSERVO HF-KN/HF-SN Servo Motor Instruction Manual	SH(NA)030123
EMC Installation Guidelines	IB(NA)67310

### «Cables used for wiring»

Wires mentioned in this Instruction Manual are selected based on the ambient temperature of 40 °C.



## CONTENTS

<b>1. FUNCTIONS AND CONFIGURATION</b>	<b>1- 1 to 1-12</b>
1.1 Summary.....	1- 1
1.2 Function block diagram.....	1- 2
1.3 Servo amplifier standard specifications.....	1- 4
1.4 Combinations of servo amplifiers and servo motors .....	1- 5
1.5 Function list.....	1- 5
1.6 Model designation.....	1- 7
1.7 Structure .....	1- 8
1.7.1 Parts identification.....	1- 8
1.8 Configuration including peripheral equipment.....	1-10
<b>2. INSTALLATION</b>	<b>2- 1 to 2- 6</b>
2.1 Installation direction and clearances .....	2- 2
2.2 Keep out foreign materials.....	2- 3
2.3 Encoder cable stress .....	2- 4
2.4 Inspection items.....	2- 4
2.5 Parts having service lives .....	2- 5
<b>3. SIGNALS AND WIRING</b>	<b>3- 1 to 3-62</b>
3.1 Input power supply circuit.....	3- 2
3.2 I/O signal connection example.....	3- 6
3.2.1 Position control mode.....	3- 6
3.2.2 Speed control mode.....	3-11
3.2.3 Torque control mode.....	3-13
3.3 Explanation of power supply system .....	3-15
3.3.1 Signal explanations.....	3-15
3.3.2 Power-on sequence.....	3-16
3.3.3 Wiring CNP1 and CNP2.....	3-17
3.4 Connectors and pin assignment.....	3-19
3.5 Signal (device) explanations.....	3-21
3.6 Detailed explanation of signals.....	3-29
3.6.1 Position control mode.....	3-29
3.6.2 Speed control mode.....	3-34
3.6.3 Torque control mode.....	3-36
3.6.4 Position/speed control switching mode.....	3-39
3.6.5 Speed/torque control switching mode.....	3-41
3.6.6 Torque/position control switching mode.....	3-43
3.7 Forced stop deceleration function .....	3-44
3.7.1 Forced stop deceleration function.....	3-44
3.7.2 Base circuit shut-off delay time function .....	3-46
3.7.3 Vertical axis freefall prevention function .....	3-47
3.7.4 Residual risks of the forced stop function (EM2).....	3-47
3.8 Alarm occurrence timing chart.....	3-48
3.8.1 When you use the forced stop deceleration function.....	3-48
3.8.2 When you do not use the forced stop deceleration function.....	3-49
3.9 Interfaces .....	3-50
3.9.1 Internal connection diagram.....	3-50
3.9.2 Detailed explanation of interfaces.....	3-52

3.9.3 Source I/O interfaces .....	3-56
3.10 Servo motor with an electromagnetic brake.....	3-57
3.10.1 Safety precautions .....	3-57
3.10.2 Timing chart .....	3-58
3.11 Grounding.....	3-61

<b>4. STARTUP</b>	<b>4- 1 to 4-36</b>
-------------------	---------------------

4.1 Switching power on for the first time.....	4- 1
4.1.1 Startup procedure .....	4- 1
4.1.2 Wiring check.....	4- 2
4.1.3 Surrounding environment.....	4- 3
4.2 Startup in position control mode.....	4- 4
4.2.1 Power on and off procedures.....	4- 4
4.2.2 Stop.....	4- 4
4.2.3 Test operation .....	4- 5
4.2.4 Parameter setting.....	4- 6
4.2.5 Actual operation .....	4- 6
4.2.6 Trouble at start-up.....	4- 7
4.3 Startup in speed control mode.....	4- 9
4.3.1 Power on and off procedures.....	4- 9
4.3.2 Stop.....	4- 9
4.3.3 Test operation .....	4-10
4.3.4 Parameter setting.....	4-11
4.3.5 Actual operation .....	4-12
4.3.6 Trouble at start-up.....	4-12
4.4 Startup in torque control mode .....	4-13
4.4.1 Power on and off procedures.....	4-13
4.4.2 Stop.....	4-13
4.4.3 Test operation .....	4-14
4.4.4 Parameter setting.....	4-15
4.4.5 Actual operation .....	4-15
4.4.6 Trouble at start-up.....	4-16
4.5 Display and operation sections.....	4-17
4.5.1 Summary.....	4-17
4.5.2 Display flowchart.....	4-18
4.5.3 Status display mode.....	4-19
4.5.4 Diagnostic mode .....	4-23
4.5.5 Alarm mode.....	4-25
4.5.6 Parameter mode .....	4-26
4.5.7 External I/O signal display.....	4-28
4.5.8 Output signal (DO) forced output.....	4-31
4.5.9 Test operation mode.....	4-32

<b>5. PARAMETERS</b>	<b>5- 1 to 5-44</b>
----------------------	---------------------

5.1 Parameter list.....	5- 1
5.1.1 Basic setting parameters ([Pr. PA_ _ ] ).....	5- 1
5.1.2 Gain/filter setting parameters ([Pr. PB_ _ ] ).....	5- 2
5.1.3 Extension setting parameters ([Pr. PC_ _ ] ) .....	5- 3
5.1.4 I/O setting parameters ([Pr. PD_ _ ] ) .....	5- 5
5.1.5 Extension setting 2 parameters ([Pr. PE_ _ ] ).....	5- 6

5.1.6 Extension setting 3 parameters ([Pr. PF_ _]).....	5- 7
5.2 Detailed list of parameters.....	5- 8
5.2.1 Basic setting parameters ([Pr. PA_ _]).....	5- 8
5.2.2 Gain/filter setting parameters ([Pr. PB_ _]).....	5-17
5.2.3 Extension setting parameters ([Pr. PC_ _]) .....	5-28
5.2.4 I/O setting parameters ([Pr. PD_ _]) .....	5-38
5.2.5 Extension setting 2 parameters ([Pr. PE_ _]).....	5-42
5.2.6 Extension setting 3 parameters ([Pr. PF_ _]).....	5-43

<b>6. NORMAL GAIN ADJUSTMENT</b>	<b>6- 1 to 6-24</b>
----------------------------------	---------------------

6.1 Different adjustment methods.....	6- 1
6.1.1 Adjustment on a single servo amplifier.....	6- 1
6.1.2 Adjustment using MR Configurator2.....	6- 2
6.2 One-touch tuning .....	6- 3
6.2.1 One-touch tuning flowchart.....	6- 3
6.2.2 Display transition and operation procedure of one-touch tuning.....	6- 5
6.2.3 Caution for one-touch tuning.....	6-13
6.3 Auto tuning.....	6-14
6.3.1 Auto tuning mode.....	6-14
6.3.2 Auto tuning mode basis.....	6-15
6.3.3 Adjustment procedure by auto tuning.....	6-16
6.3.4 Response level setting in auto tuning mode.....	6-17
6.4 Manual mode.....	6-18
6.5 2 gain adjustment mode .....	6-22

<b>7. SPECIAL ADJUSTMENT FUNCTIONS</b>	<b>7- 1 to 7-26</b>
--	---------------------

7.1 Filter setting .....	7- 1
7.1.1 Machine resonance suppression filter .....	7- 1
7.1.2 Adaptive filter II.....	7- 4
7.1.3 Shaft resonance suppression filter.....	7- 6
7.1.4 Low-pass filter.....	7- 7
7.1.5 Advanced vibration suppression control II.....	7- 7
7.1.6 Command notch filter.....	7-12
7.2 Gain switching function.....	7-13
7.2.1 Applications.....	7-13
7.2.2 Function block diagram.....	7-14
7.2.3 Parameter.....	7-15
7.2.4 Gain switching procedure .....	7-17
7.3 Tough drive function .....	7-20
7.3.1 Vibration tough drive function.....	7-20
7.3.2 Instantaneous power failure tough drive function.....	7-22

<b>8. TROUBLESHOOTING</b>	<b>8- 1 to 8-28</b>
---------------------------	---------------------

8.1 Alarm and warning list .....	8- 1
8.2 Remedies for alarms.....	8- 6
8.3 Remedies for warnings.....	8-24

<b>9. DIMENSIONS</b>	<b>9- 1 to 9- 6</b>
----------------------	---------------------

9.1 Servo amplifier.....	9- 1
9.2 Connector .....	9- 4

<b>10. CHARACTERISTICS</b>	<b>10- 1 to 10- 8</b>
10.1 Overload protection characteristics.....	10- 1
10.2 Power supply capacity and generated loss.....	10- 3
10.3 Dynamic brake characteristics.....	10- 5
10.3.1 Dynamic brake operation.....	10- 5
10.3.2 Permissible load to motor inertia when the dynamic brake is used.....	10- 6
10.4 Cable bending life.....	10- 7
10.5 Inrush current at power-on .....	10- 7
<b>11. OPTIONS AND PERIPHERAL EQUIPMENT</b>	<b>11- 1 to 11-30</b>
11.1 Cable/connector sets.....	11- 1
11.1.1 Combinations of cable/connector sets.....	11- 2
11.2 Regenerative option.....	11- 4
11.2.1 Combination and regenerative power.....	11- 4
11.2.2 Selection of regenerative option .....	11- 5
11.2.3 Parameter setting.....	11- 6
11.2.4 Selection of regenerative option .....	11- 7
11.2.5 Dimensions .....	11-10
11.3 Junction terminal block MR-TB50.....	11-12
11.4 MR Configurator2 .....	11-14
11.5 Selection example of wires.....	11-16
11.6 Molded-case circuit breakers, fuses, magnetic contactors (recommended).....	11-17
11.7 Power factor improving AC reactor.....	11-17
11.8 Relay (recommended).....	11-18
11.9 Noise reduction techniques .....	11-19
11.10 Earth-leakage current breaker.....	11-25
11.11 EMC filter (recommended) .....	11-27
<b>APPENDIX</b>	<b>App. - 1 to App. -13</b>
App. 1 Peripheral equipment manufacturer (for reference).....	App. - 1
App. 2 Compliance with global standards.....	App.- 1
App. 3 Analog monitor.....	App.-10
App. 4 Low-voltage directive .....	App.-13

# 1. FUNCTIONS AND CONFIGURATION

---

## 1. FUNCTIONS AND CONFIGURATION

### 1.1 Summary

The Mitsubishi general-purpose AC servo MELSERVO-JE series have limited functions with keeping high performance based on MELSERVO-J4 series.

The servo amplifier has position, speed, and torque control modes. In the position control mode, the maximum pulse train of 4 Mpulses/s is supported. Further, it can perform operation with the control modes switched, e.g. position/speed control, speed/torque control and torque/position control. Hence, it is applicable to a wide range of fields, not only precision positioning and smooth speed control of machine tools and general industrial machines but also line control and tension control.

With one-touch tuning and real-time auto tuning, you can automatically adjust the servo gains according to the machine.

The tough drive function, drive recorder function, and preventive maintenance support function strongly support machine maintenance.

The servo amplifier has a USB communication interface. Therefore, you can connect the servo amplifier to the personal computer with MR Configurator2 installed to perform the parameter setting, test operation, gain adjustment, and others.

The MELSERVO-JE series servo motor equipped with an incremental encoder whose resolution is 131072 pulses/rev will enable a high-accuracy positioning.




# 1. FUNCTIONS AND CONFIGURATION

## 1.2 Function block diagram

The function block diagram of this servo is shown below.

### (1) MR-JE-100A or less

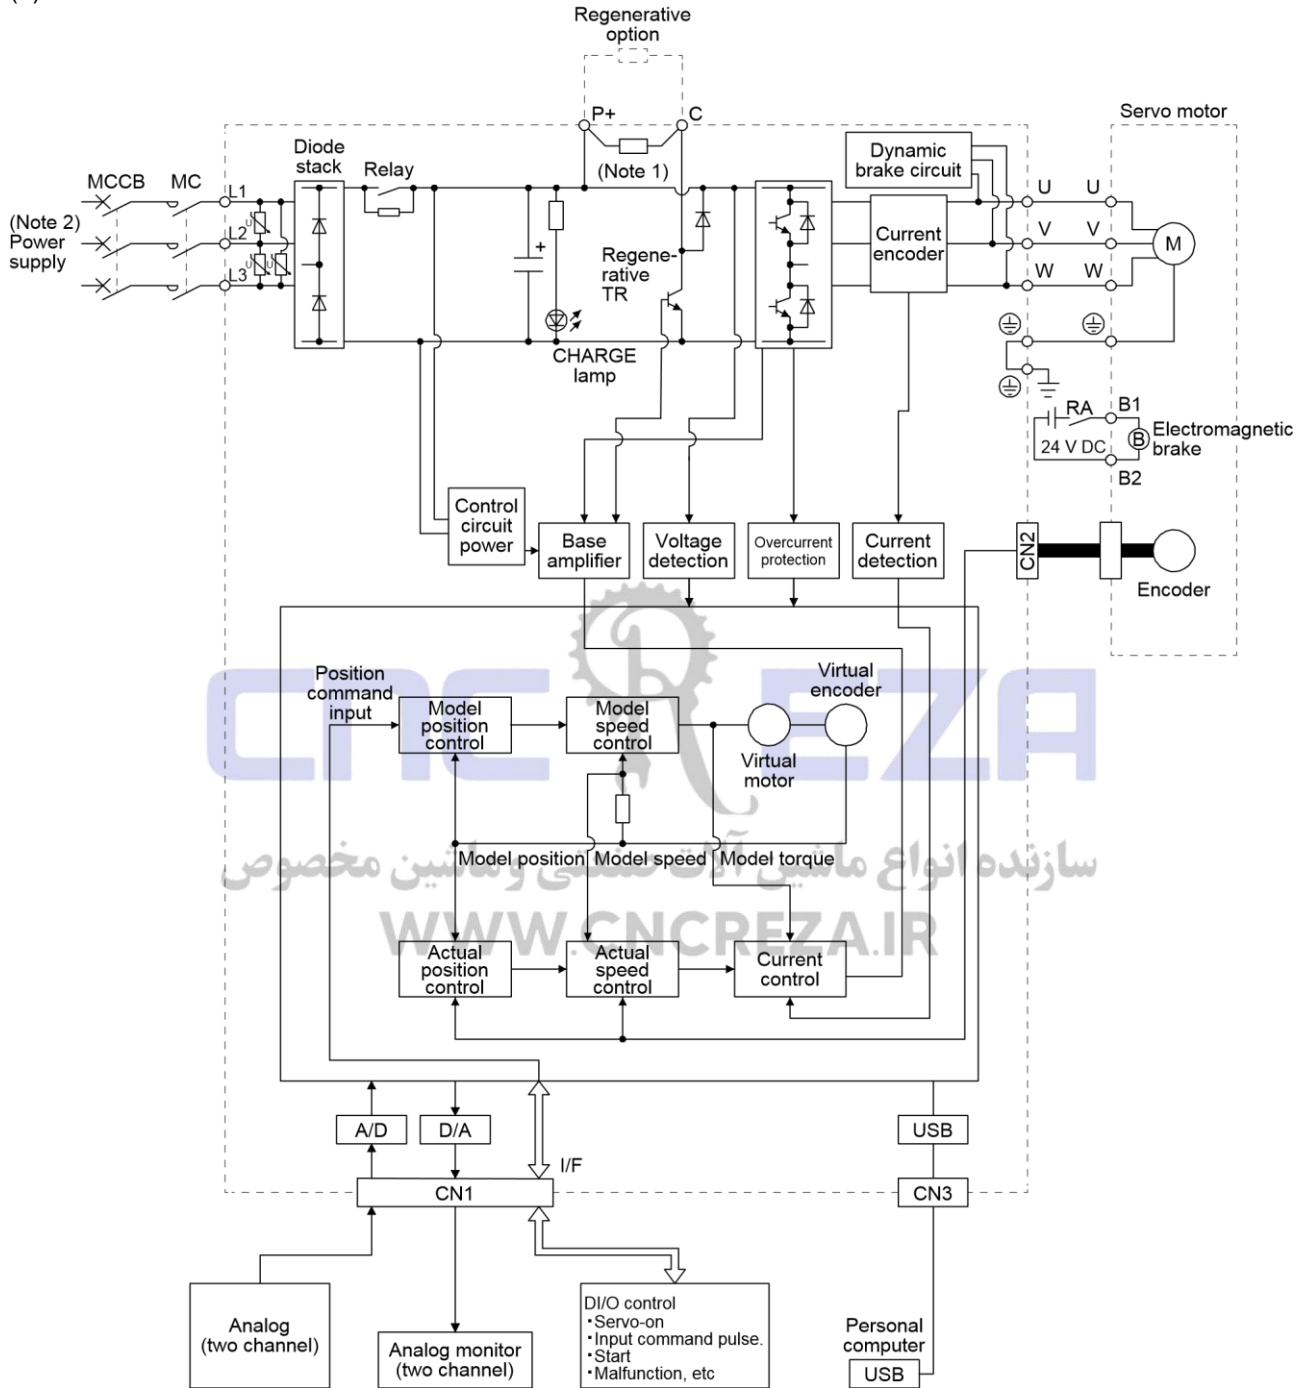


Note 1. The built-in regenerative resistor is not provided for MR-JE-10A and MR-JE-20A.

2. For 1-phase 200 V AC to 240 V AC, connect the power supply to L1 and L3. Leave L2 open. For the power supply specifications, refer to section 1.3.

### (2) MR-JE-200A or more

# 1. FUNCTIONS AND CONFIGURATION

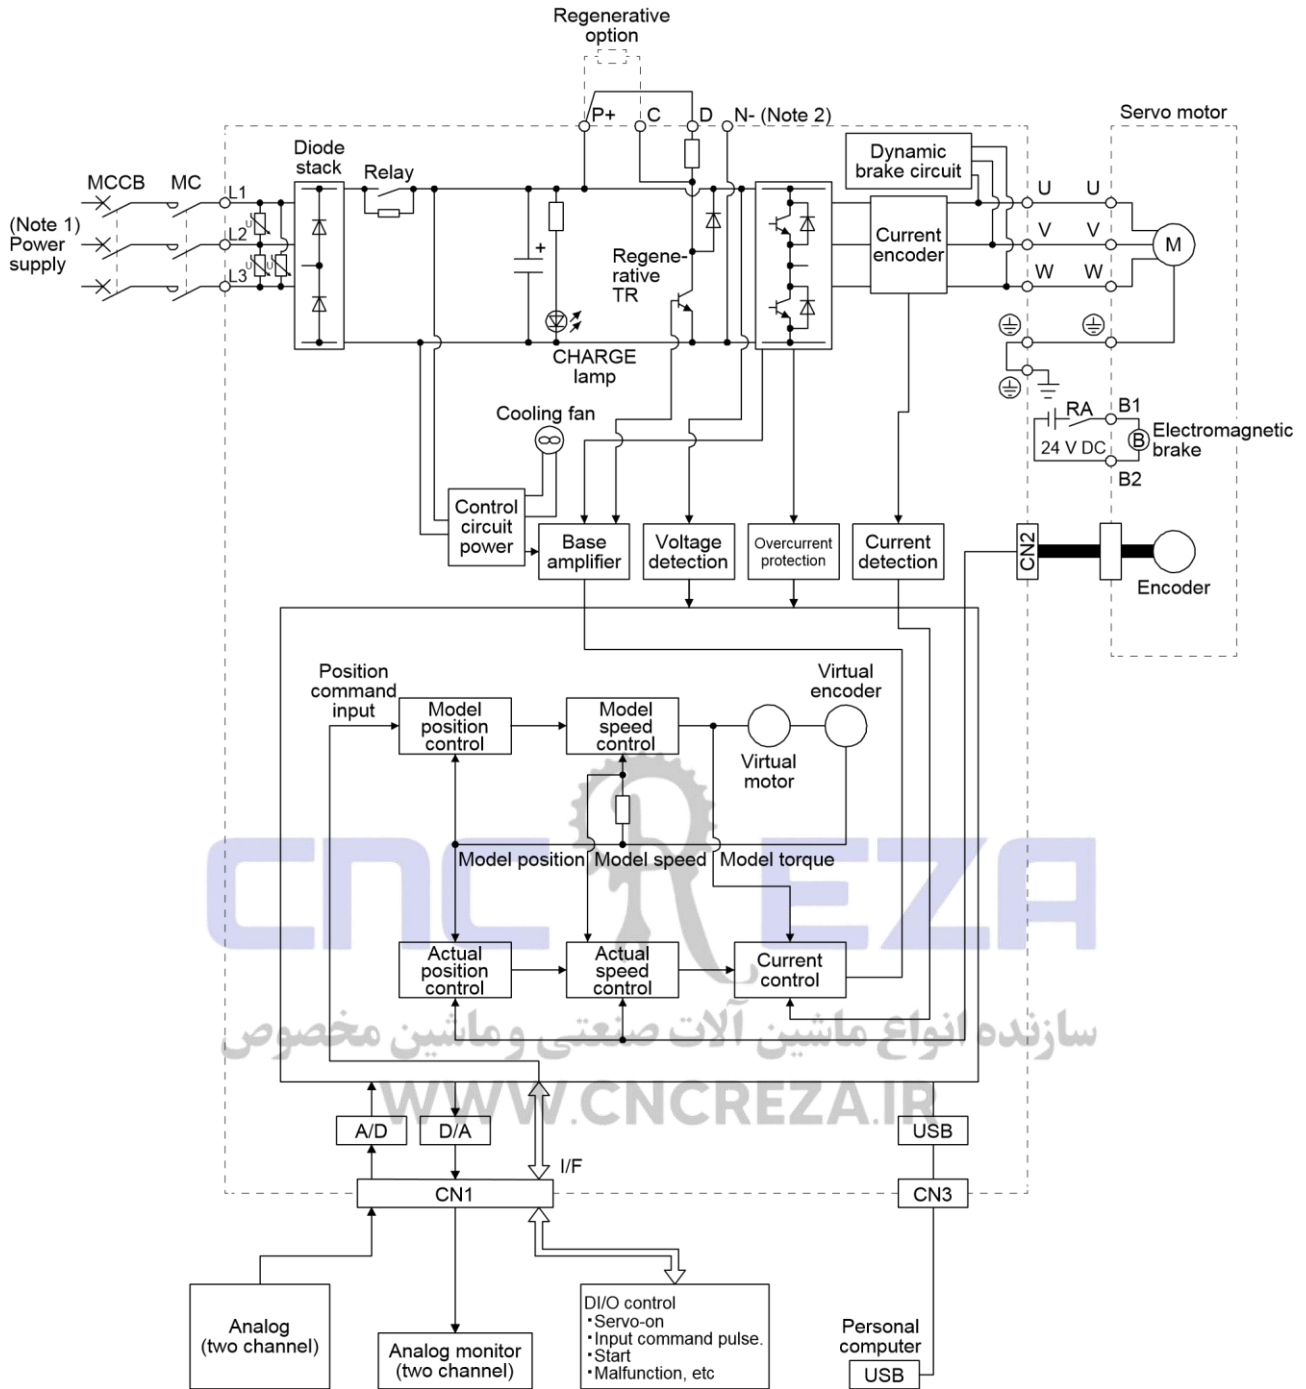

- Note 1. For the power supply specifications, refer to section 1.3.  
 2. This is for manufacturer adjustment. Leave this open.

## 1.3 Servo amplifier standard specifications

Model: MR-JE-		10A	20A	40A	70A	100A	200A	300A
Output	Rated voltage	3-phase 170 V AC						
	Rated current [A]	1.1	1.5	2.8	5.8	6.0	11.0	11.0
Power supply input	Voltage/Frequency	3-phase or 1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz				3-phase 200 V AC to 240 V AC, 50 Hz/60 Hz		
	Rated current [A]	0.9	1.5	2.6	3.8	5.0	10.5	14.0
	Permissible voltage fluctuation	3-phase or 1-phase 170 V AC to 264 V AC				3-phase 170 V AC to 264 V AC		

# 1. FUNCTIONS AND CONFIGURATION

	Permissible frequency fluctuation	Within $\pm 5\%$		
	Power supply capacity [kVA]	Refer to section 10.2.		
	Inrush current [A]	Refer to section 10.5.		
Interface power supply	Voltage	24 V DC $\pm 10\%$		
	Current capacity [A]	(Note 1) 0.3		
Control method		Sine-wave PWM control, current control method		
Dynamic brake		Built-in		
Communication function		USB: Connection to a personal computer or others (MR Configurator2-compatible)		
Encoder output pulses		Compatible (A/B/Z-phase pulse)		
Analog monitor		Two channels		
Position control mode	Max. input pulse frequency	4 Mpulses/s (for differential receiver) (Note 3), 200 kpulses/s (for open collector)		
	Positioning feedback pulse	Encoder resolution (resolution per servo motor revolution): 131072 pulses/rev		
	Command pulse multiplying factor	Electronic gear A:1 to 16777215, B:1 to 16777215, $1/10 < A/B < 4000$		
	In-position range setting	0 pulse to $\pm 65535$ pulses (command pulse unit)		
	Error excessive	$\pm 3$ revolutions		
	Torque limit	Set by parameter setting or external analog input (0 V DC to +10 V DC/maximum torque)		
Speed control mode	Speed control range	Analog speed command 1: 2000, internal speed command 1: 5000		
	Analog speed command input	0 to $\pm 10$ V DC/rated speed (The speed at 10 V is changeable with [Pr. PC12].)		
	Speed fluctuation ratio	$\pm 0.01\%$ or less (load fluctuation 0% to 100%), 0% (power fluctuation $\pm 10\%$ ), $\pm 0.2\%$ or less (ambient temperature $25\text{ }^{\circ}\text{C} \pm 10\text{ }^{\circ}\text{C}$ ) when using analog speed command		
	Torque limit	Set by parameter setting or external analog input (0 V DC to +10 V DC/maximum torque)		
Torque control mode	Analog torque command input	0 V DC to $\pm 8$ V DC/maximum torque (input impedance 10 k $\Omega$ to 12 k $\Omega$ )		
	Speed limit	Set by parameter setting or external analog input (0 V DC to 10 V DC/rated speed)		
Protective functions		Overcurrent shut-off, regenerative overvoltage shut-off, overload shut-off (electronic thermal), servo motor overheat protection, encoder error protection, regenerative error protection, undervoltage protection, instantaneous power failure protection, overspeed protection, and error excessive protection		
Compliance to global standards	CE marking	LVD: EN 61800-5-1 EMC: EN 61800-3 MD: EN ISO 13849-1, EN 61800-5-2, EN 62061		
	UL standard	UL 508C		
Structure (IP rating)		Natural cooling, open (IP20)	Force cooling, open (IP20)	
Close mounting (Note 2)		Possible		
Environment	Ambient temperature	Operation	0 $^{\circ}\text{C}$ to 55 $^{\circ}\text{C}$ (non-freezing)	
		Storage	-20 $^{\circ}\text{C}$ to 65 $^{\circ}\text{C}$ (non-freezing)	
	Ambient humidity	Operation	90 %RH or less (non-condensing)	
		Storage		
	Ambience		Indoors (no direct sunlight), free from corrosive gas, flammable gas, oil mist, dust, and dirt	
	Altitude		1000 m or less above sea level	
Vibration resistance		5.9 m/s <sup>2</sup> , at 10 Hz to 55 Hz (directions of X, Y and Z axes)		
Mass [kg]		0.8	1.5	
			2.1	

Note 1. 0.3 A is the value applicable when all I/O signals are used. The current capacity can be decreased by reducing the number of I/O points.

2. When closely mounting the servo amplifier of 3.5 kW or less, operate them at the ambient temperatures of 0  $^{\circ}\text{C}$  to 45  $^{\circ}\text{C}$  or at 75% or smaller effective load ratio.

3. 1 Mpulse/s or lower commands are supported in the initial setting. When inputting commands over 1 Mpulse/s and 4 Mpulses/s or lower, change the setting in [Pr. PA13].

## 1.4 Combinations of servo amplifiers and servo motors

Servo amplifier	Servo motor
-----------------	-------------



# 1. FUNCTIONS AND CONFIGURATION

MR-JE-10A	HF-KN13
MR-JE-20A	HF-KN23
MR-JE-40A	HF-KN43
MR-JE-70A	HF-KN73 HF-SN52
MR-JE-100A	HF-SN102
MR-JE-200A	HF-SN152, HF-SN202
MR-JE-300A	HF-SN302

## 1.5 Function list

The following table lists the functions of this servo. For details of the functions, refer to each section indicated in the detailed explanation field.

Function	Description	Detailed explanation
Position control mode	This servo is used as a position control servo.	Section 3.2.1 Section 3.6.1 Section 4.2
Speed control mode	This servo is used as a speed control servo.	Section 3.2.2 Section 3.6.2 Section 4.3
Torque control mode	This servo is used as a torque control servo.	Section 3.2.3 Section 3.6.3 Section 4.4
Position/speed control mode control.	Using an input device, control can be switched between position control and speed control.	Section 3.6.4
Speed/torque control mode control.	Using an input device, control can be switched between speed control and torque control.	Section 3.6.5
Torque/position control mode control.	Using an input device, control can be switched between torque control and position control.	Section 3.6.6
High-resolution encoder	High-resolution encoder of 131072 pulses/rev is used for the encoder of the servo motor compatible with the MELSERVO-JE series.	
Gain switching function	You can switch gains during rotation and during stop, and can use an input device to Section 7.2 switch gains during operation.	
Advanced vibration suppression control II	This function suppresses vibration at the arm end or residual vibration.	Section 7.1.5
Adaptive filter II	Servo amplifier detects mechanical resonance and sets filter characteristics automatically to suppress mechanical vibration.	Section 7.1.2
Low-pass filter	Suppresses high-frequency resonance which occurs as servo system response is increased.	Section 7.1.4
Machine analyzer function	Analyzes the frequency characteristic of the mechanical system by simply connecting an MR Configurator2 installed personal computer and servo amplifier. MR Configurator2 is necessary for this function.	
Robust filter	This function provides better disturbance response in case low response level that [Pr. PE41] load to motor inertia ratio is high for such as roll send axes.	
Slight vibration suppression	Suppresses vibration of $\pm 1$ pulse produced at a servo motor stop. [Pr. PB24] control [Pr. PA06] Electronic gear Input pulses can be multiplied by 1/10 to 4000.	[Pr. PA07]
S-pattern		

# 1. FUNCTIONS AND CONFIGURATION

acceleration/deceleration time	Speed can be increased and decreased smoothly. [Pr. PC03] constant Automatically adjusts the gain to optimum value if load applied to the servo motor	
Auto tuning	shaft varies.	Section 6.3
Regenerative option	Used when the built-in regenerative resistor of the servo amplifier does not have Section 11.2 sufficient regenerative capability for the regenerative power generated.	


Function	Description	Detailed explanation
Alarm history clear	Alarm history is cleared.	[Pr. PC18]
Output signal selection (device settings)	ST1 (Forward rotation start), ST2 (Reverse rotation start), and SON (Servo-on) and other input device can be assigned to any pins.	[Pr. PD03] to [Pr. PD20]
Output signal selection (device settings)	The output devices including MBR (Electromagnetic brake interlock) can be assigned to certain pins of the CN1 connector.	[Pr. PD24] to [Pr. PD28]
Output signal (DO) forced	Output signal can be forced on/off independently of the servo status. Section 4.5.8 output	Use this function for checking output signal wiring, etc.
Command pulse selection	Command pulse train form can be selected from among three different types.	[Pr. PA13] Section 3.6.1 (5)
Torque limit	Servo motor torque can be limited to any value.	[Pr. PA11] [Pr. PA12] Section 3.6.3 (3)
Speed limit	Servo motor speed can be limited to any value.	[Pr. PC05] to [Pr. PC11] Section 4.5.3
Status display	Servo status is shown on the 5-digit, 7-segment LED display.	Section 4.5.7
External I/O signal display	On/off statuses of external I/O signals are shown on the display.	Section 4.5.4
Automatic VC offset	Voltage is automatically offset to stop the servo motor if it does not come to a stop when VC (Analog speed command) or VLA (Analog speed limit) is 0 V.	Section 4.5.4
Alarm code output	If an alarm has occurred, the corresponding alarm number is outputted in 3-bit code.	Chapter 8
Test operation mode	Jog operation, positioning operation, motor-less operation, DO forced output, and program operation MR Configurator2 is required for the positioning operation and program operation. [Pr. PC14], Analog monitor output	Section 4.5.9 Servo status is outputted in terms of voltage in real time. [Pr. PC15]
MR Configurator2	Using a personal computer, you can perform the parameter setting, test operation, monitoring, and others.	Section 11.4
One-touch tuning	Gain adjustment is performed just by one click on a certain button on MR Configurator2 or operation section.	Section 6.2
Tough drive function	This function makes the equipment continue operating even under the condition that an alarm occurs. The tough drive function includes two types: the vibration tough drive and the instantaneous power failure tough drive.	Section 7.3


<b>1. FUNCTIONS AND CONFIGURATION</b>		
	This function continuously monitors the servo status and records the status transition	






# 1. FUNCTIONS AND CONFIGURATION

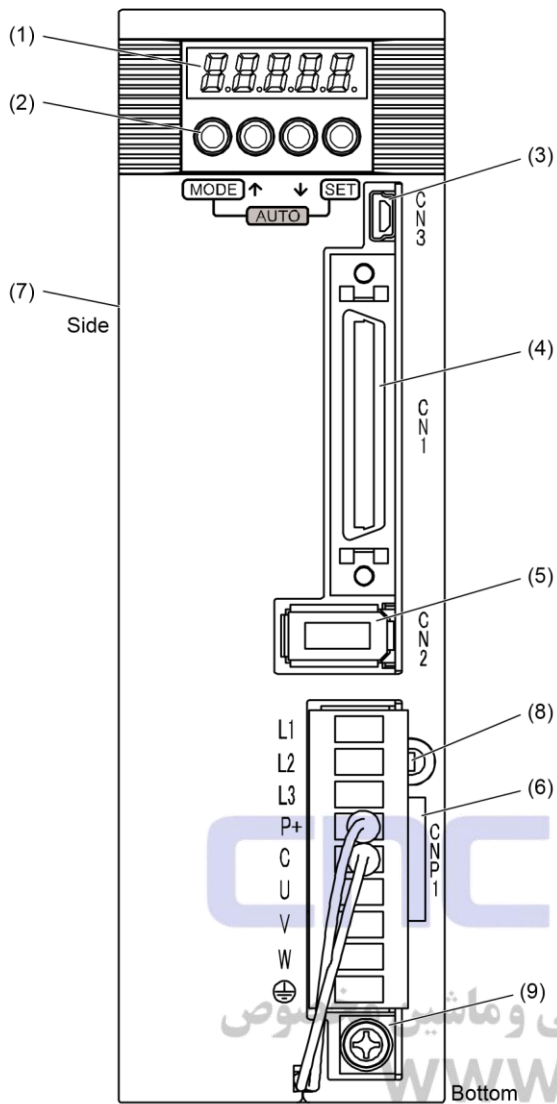

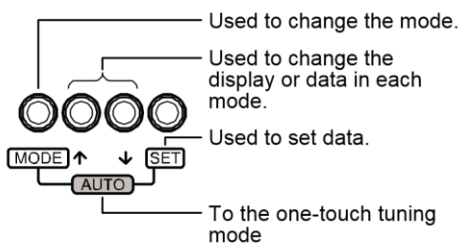No.	Name/Application	Detailed explanation
(1)	Display The 5-digit, 7-segment LED shows the servo status and the alarm number.	Section 4.5
(2)	Operation section Used to perform status display, diagnostic, alarm, and parameter setting operations. Push the "MODE" and "SET" buttons at the same time for 3 s or more to switch to the one-touch tuning mode.  	Section 4.5 Section 6.2
(3)	USB communication connector (CN3) Connect with the personal computer.	Section 11.4
(4)	I/O signal connector (CN1) Digital I/O signal, analog input signal, and analog monitor output are connected.	Section 3.2 Section 3.4
(5)	Encoder connector (CN2) Used to connect the servo motor encoder.	Section 3.4
(6)	Power connector (CNP1) Input power supply, built-in regenerative resistor, regenerative option, and servo motor are connected.	Section 3.1 Section 3.3
	Rating plate	Section 1.6
(8)	Charge lamp When the main circuit is charged, this will light up. While this lamp is lit, do not reconnect the cables.	
(9)	Protective earth (PE) terminal Grounding terminal	Section 3.1 Section 3.3

(2) MR-JE-200A or more

# 1. FUNCTIONS AND CONFIGURATION

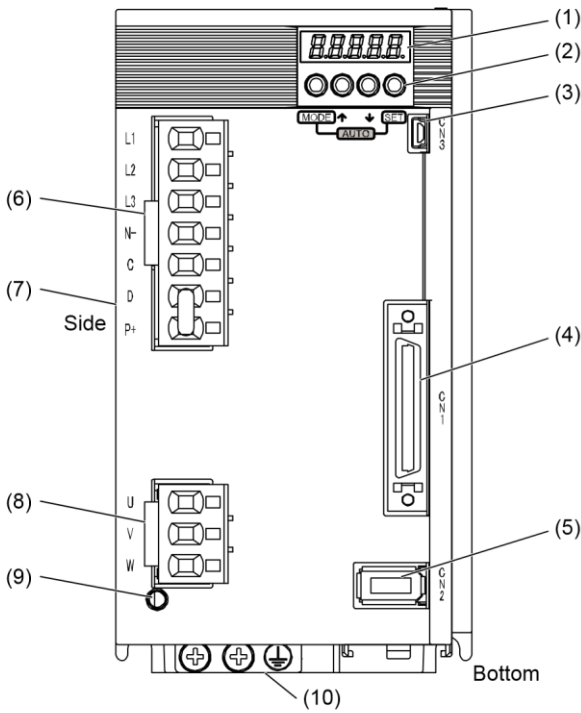

No.	Name/Application	Detailed explanation
(1)	Display	The 5-digit, 7-segment LED shows the servo status and the alarm number.
(2)	Operation section	Used to perform status display, diagnostic, alarm, and parameter setting operations. Push the "MODE" and "SET" buttons at the same time for 3 s or more to switch to the one-touch tuning mode.  
(3)	USB communication connector (CN3)	Connect with the personal computer.
(4)	I/O signal connector (CN1)	Digital I/O signal, analog input signal, and analog monitor output are connected.
(5)	Encoder connector (CN2)	Used to connect the servo motor encoder.
(6)	Power connector (CNP1)	Input power supply and regenerative option are connected.
(7)	Rating plate	
(8)	Servo motor power connector (CNP2)	Connect the servo motor.
(9)	Charge lamp	When the main circuit is charged, this will light up. While this lamp is lit, do not reconnect the cables.
(10)	Protective earth (PE) terminal	Grounding terminal

## 1.8 Configuration including peripheral equipment

**CAUTION** Connecting a servo motor of the wrong axis to U, V, W, or CN2 of the servo amplifier may cause a malfunction.


**POINT**

Other than the servo amplifier and servo motor are optional or add products.

# 1. FUNCTIONS AND CONFIGURATION

## (1) MR-JE-100A or less

The diagram shows MR-JE-10A.

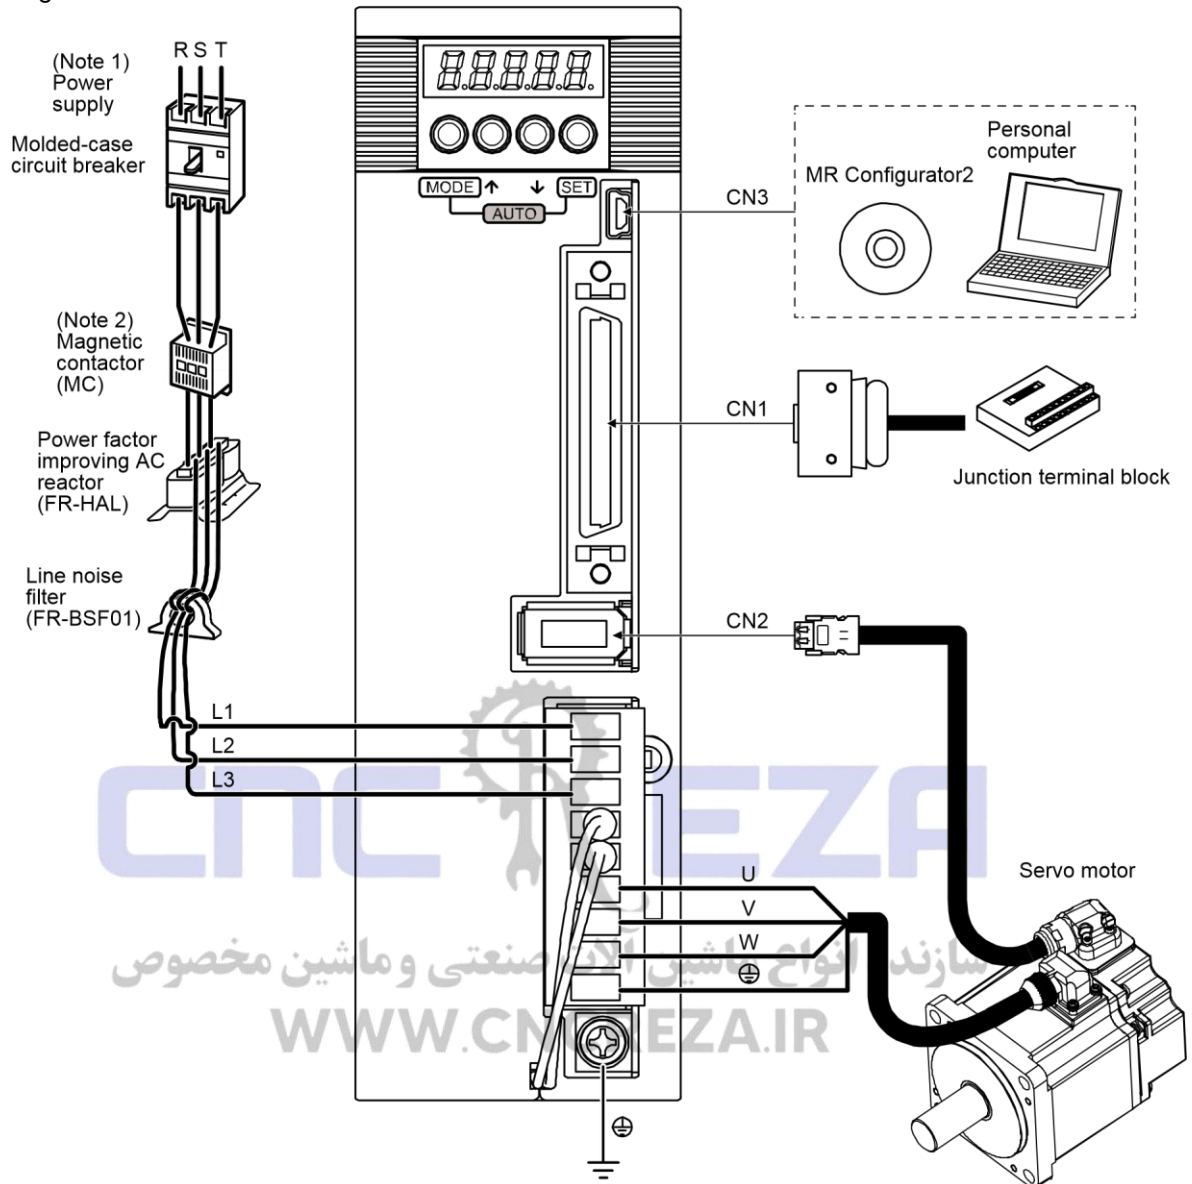


Note 1. A 1-phase 200 V AC to 240 V AC power supply may be used with the servo amplifier of MR-JE-70A or less. For 1-phase 200 V AC to 240 V AC, connect the power supply to L1 and L3. Leave L2 open. For the power supply specifications, refer to section 1.3.

2. Depending on the power supply voltage and operation pattern, bus voltage can decrease. This can shift the mode to the dynamic brake deceleration during forced stop deceleration. When dynamic brake deceleration is not required, slow the time to turn off the magnetic contactor.

## (2) MR-JE-200A or more

The diagram shows MR-JE-200A.

# 1. FUNCTIONS AND CONFIGURATION

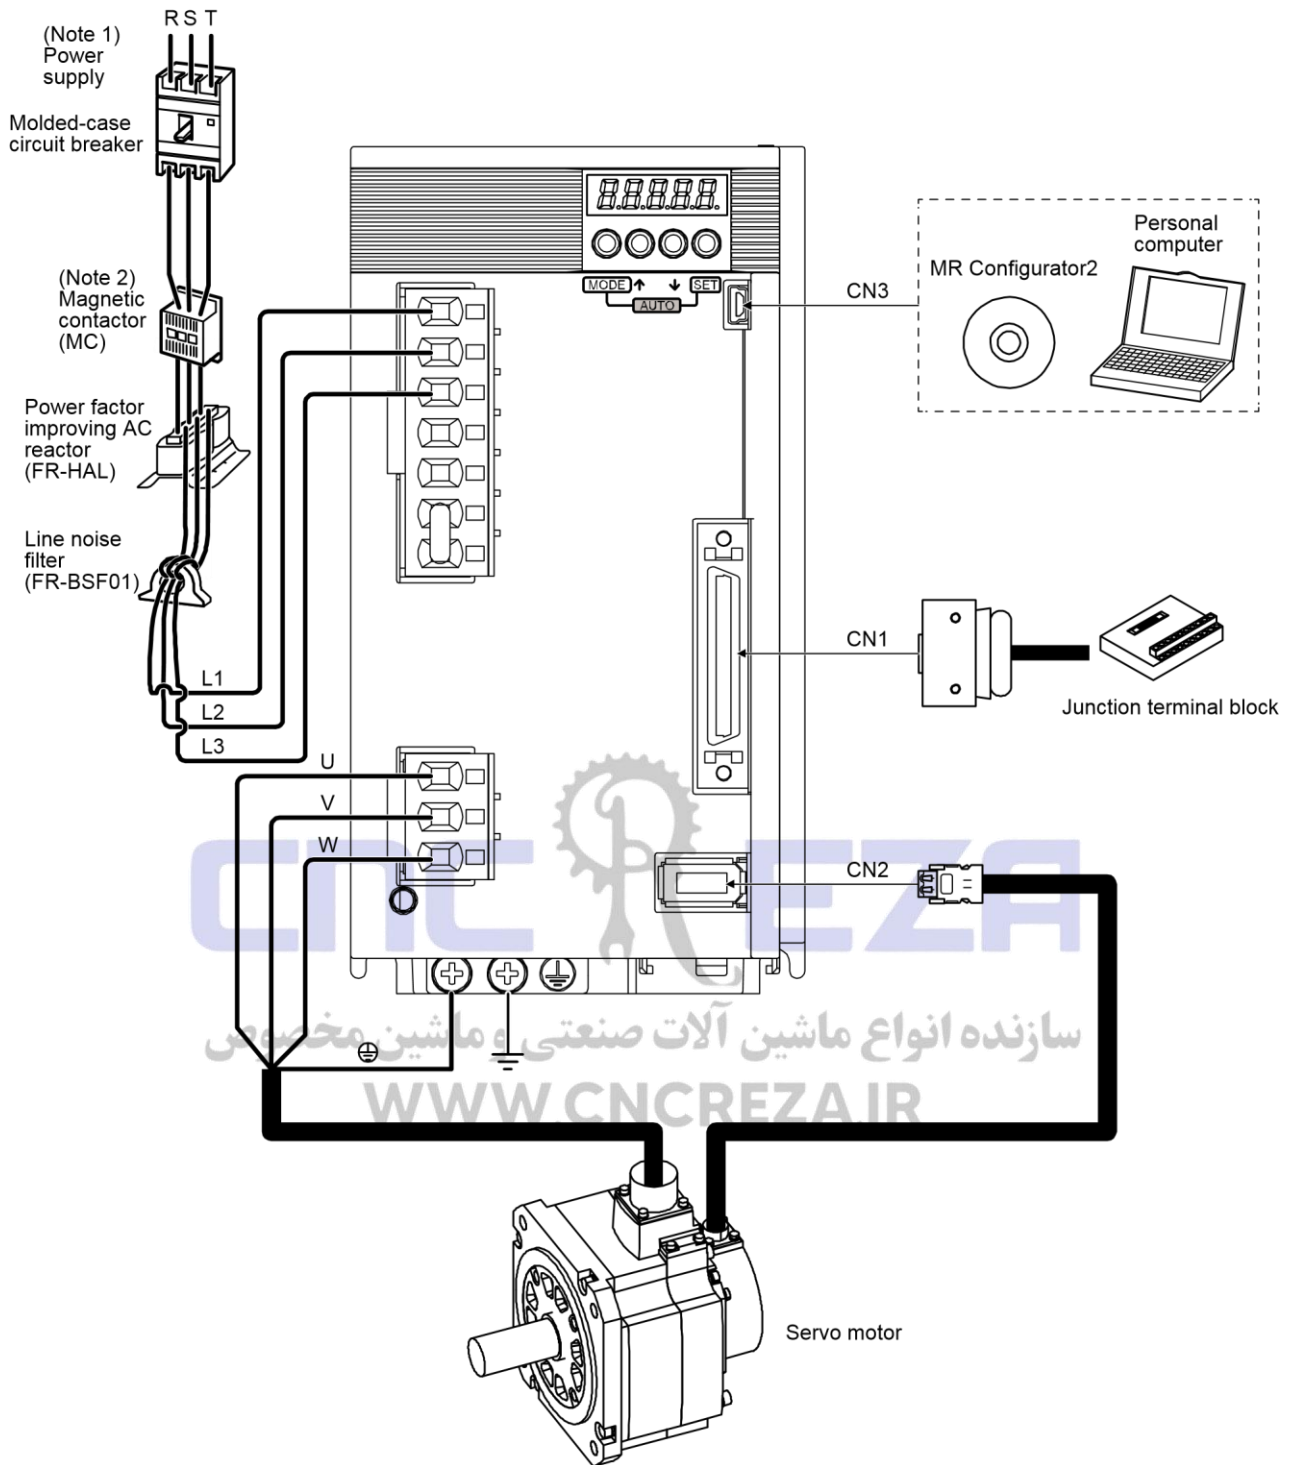

Note 1. For the power supply specifications, refer to section 1.3.

2. Depending on the power supply voltage and operation pattern, bus voltage can decrease. This can shift the mode to the dynamic brake deceleration during forced stop deceleration. When dynamic brake deceleration is not required, slow the time to turn off the magnetic contactor.

## MEMO





## 1. FUNCTIONS AND CONFIGURATION

---

---

---

---



## 2. INSTALLATION

### 2. INSTALLATION



#### WARNING

To prevent electric shock, ground each equipment securely.

- Stacking in excess of the specified number of product packages is not allowed. Do
- not hold the lead wire of the regenerative resistor when transporting the servo amplifier.
- Install the equipment on incombustible material. Installing them directly or close to combustibles will lead to a fire.
- Install the servo amplifier and the servo motor in a load-bearing place in accordance with the Instruction Manual.
- Do not get on or put heavy load on the equipment. Otherwise, it may cause injury.
- Use the equipment within the specified environment. For the environment, refer to section 1.3.
- Provide an adequate protection to prevent screws and other conductive matter, oil and other combustible matter from entering the servo amplifier.
- Do not block the intake and exhaust areas of the servo amplifier. Otherwise, it may cause a malfunction.
- Do not drop or strike the servo amplifier. Isolate it from all impact loads.
- Do not install or operate the servo amplifier which has been damaged or has any parts missing.
- When the product has been stored for an extended period of time, contact your local sales office.
- When handling the servo amplifier, be careful about the edged parts such as corners of the servo amplifier.
- The servo amplifier must be installed in a metal cabinet.



#### CAUTION

- When fumigants that contain halogen materials such as fluorine, chlorine, bromine, and iodine are used for disinfecting and protecting wooden packaging from insects, they cause malfunction when entering our products. Please take necessary precautions to ensure that remaining materials from fumigant do not enter our products, or treat packaging with methods other than fumigation (heat method). Additionally, disinfect and protect wood from insects before packing products.

#### 2.1 Installation direction and clearances




#### CAUTION

- The equipment must be installed in the specified direction. Otherwise, it may cause a malfunction.
- Leave specified clearances between the servo amplifier and the cabinet walls or other equipment. Otherwise, it may cause a malfunction.

MR-JE-40A to MR-JE-100A have a regenerative resistor on their back face. The regenerative resistor generates heat of 100 °C higher than the ambient temperature. Please fully consider heat dissipation, installation position, etc. when mounting it.

## 2. INSTALLATION

- (1) Installation clearances of the servo amplifier (a) Installation of one servo amplifier

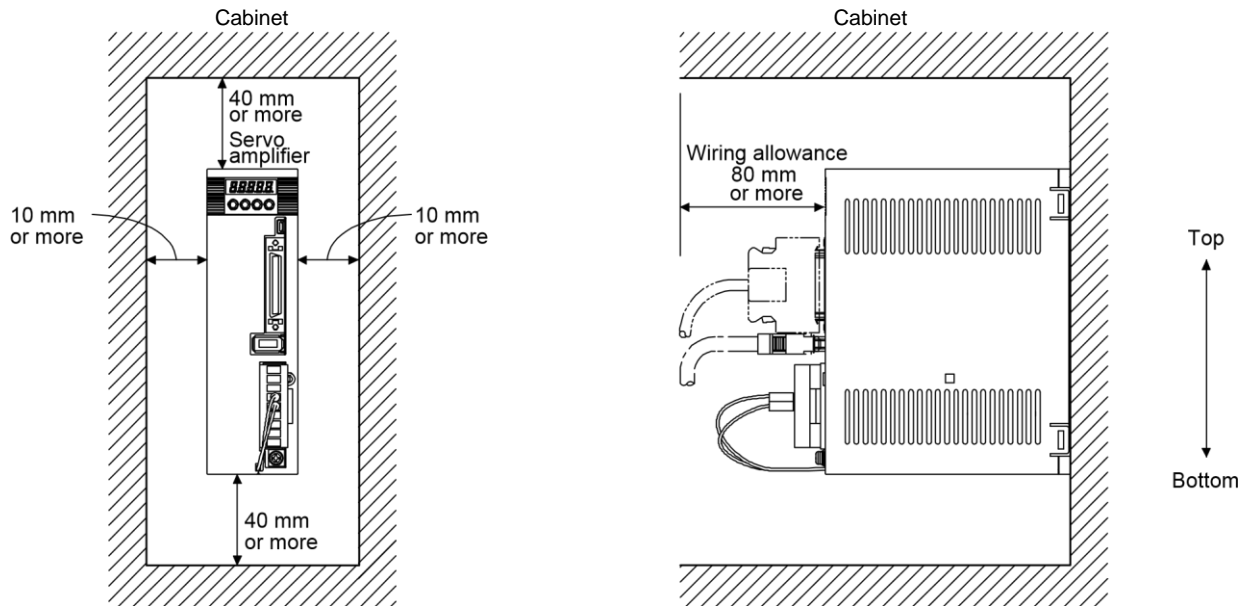


- (b) Installation of two or more servo amplifiers

POINT	<p>● Wiring is possible for all capacity type of MR-JE servo amplifiers.</p>
●	

Leave a large clearance between the top of the servo amplifier and the cabinet walls, and install a cooling fan to prevent the internal temperature of the cabinet from exceeding the environment. When mounting the servo amplifiers closely, leave a clearance of 1 mm between the adjacent servo amplifiers in consideration of mounting tolerances. In this case, keep the ambient temperature within 0 °C to 45 °C or use the servo amplifier with 75% or less of the effective load ratio.

## 2. INSTALLATION

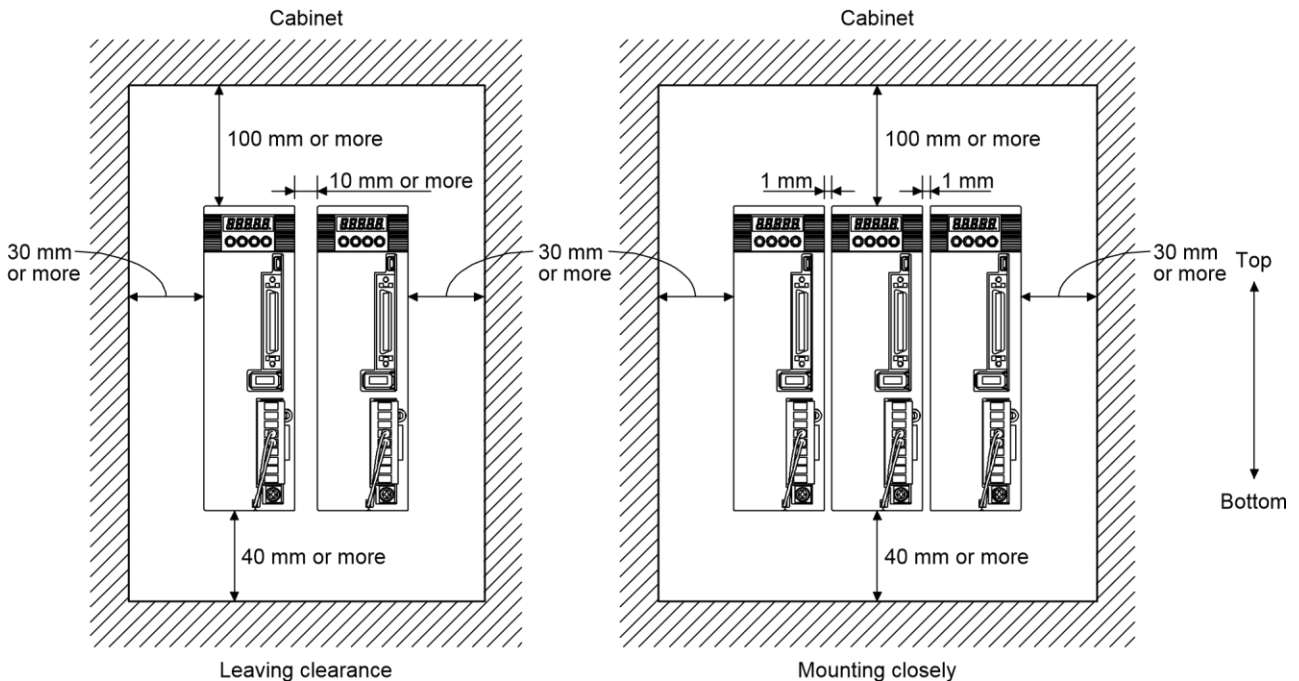

### (2) Others

When using heat generating equipment such as the regenerative option, install them with full consideration of heat generation so that the servo amplifier is not affected.

Install the servo amplifier on a perpendicular wall in the correct vertical direction.

### 2.2 Keep out foreign materials

- (1) When drilling in the cabinet, prevent drill chips and wire fragments from entering the servo amplifier.
- (2) Prevent oil, water, metallic dust, etc. from entering the servo amplifier through openings in the cabinet or a cooling fan installed on the ceiling.
- (3) When installing the cabinet in a place where toxic gas, dirt and dust exist, conduct an air purge (force clean air into the cabinet from outside to make the internal pressure higher than the external pressure) to prevent such materials from entering the cabinet.

### 2.3 Encoder cable stress

- (1) The way of clamping the cable must be fully examined so that bending stress and cable's own weight stress are not applied to the cable connection.
- (2) For use in any application where the servo motor moves, fix the cables (encoder, power supply, and brake) with having some slack from the connector connection part of the servo motor to avoid putting stress on the connector connection part. Use the optional encoder cable within the bending life range. Use the power supply and brake wiring cables within the bending life of the cables.
- (3) Avoid any probability that the cable sheath might be cut by sharp chips, rubbed by a machine corner or stamped by workers or vehicles.

## 2. INSTALLATION

- (4) For installation on a machine where the servo motor moves, the flexing radius should be made as large as possible. Refer to section 10.4 for the bending life.

### 2.4 Inspection items

#### WARNING

- Before starting maintenance and/or inspection, turn off the power and wait for 15 minutes or more until the charge lamp turns off. Otherwise, an electric shock may occur. In addition, when confirming whether the charge lamp is off or not, always confirm it from the front of the servo amplifier.
- To avoid an electric shock, only qualified personnel should attempt inspections. For repair and parts replacement, contact your local sales office.

#### CAUTION

- Do not perform insulation resistance test on the servo amplifier. Otherwise, it may cause a malfunction.
- Do not disassemble and/or repair the equipment on customer side.

It is recommended that the following points periodically be checked.

- (1) Check for loose terminal block screws. Retighten any loose screws.
- (2) Check the cables and the like for scratches or cracks. Inspect them periodically according to operating conditions especially when the servo motor is movable.
- (3) Check that the connector is securely connected to the servo amplifier.
- (4) Check that the wires are not coming out from the connector.
- (5) Check for dust accumulation on the servo amplifier.
- (6) Check for unusual noise generated from the servo amplifier.

### 2.5 Parts having service lives

Service lives of the following parts are listed below. However, the service life vary depending on operating methods and environment. If any fault is found in the parts, they must be replaced immediately regardless of their service lives. For parts replacement, please contact your local sales office.

Part name	Life guideline
Smoothing capacitor	10 years
Relay	Number of power-on and forced stop times by EM1 (Forced stop 1): 100,000 times
Cooling fan	50,000 hours to 70,000 hours (7 years to 8 years)

- (1) Smoothing capacitor

## 2. INSTALLATION

---

The characteristic of smoothing capacitor is deteriorated due to ripple currents, etc. The life of the capacitor greatly depends on ambient temperature and operating conditions. The capacitor will reach the end of its life in 10 years of continuous operation in normal air-conditioned environment (40 °C surrounding air temperature or less).

(2) Relays

Contact faults will occur due to contact wear arisen from switching currents. Relays will reach the end of their lives depending on their power supply capacity when the number of power-on times and number of forced stop times by EM1 (Forced stop 1) are 100,000 times in total.

(3) Servo amplifier cooling fan

The cooling fan bearings reach the end of their life in 50,000 hours to 70,000 hours. Normally, therefore, the cooling fan must be replaced in seven to eight years of continuous operation as a guideline. It must also be changed if unusual noise or vibration is found during inspection.

The life indicates under the yearly average ambient temperature of 40 °C, free from corrosive gas, flammable gas, oil mist, dust and dirt.

## MEMO







### 3. SIGNALS AND WIRING

#### 3. SIGNALS AND WIRING


- Any person who is involved in wiring should be fully competent to do the work.
- Before wiring, turn off the power and wait for 15 minutes or more until the charge lamp turns off. Otherwise, an electric shock may occur. In addition, when confirming whether the charge lamp is off or not, always confirm it from the front of the servo amplifier.
- Ground the servo amplifier and servo motor securely.
- Do not attempt to wire the servo amplifier and servo motor until they have been installed. Otherwise, it may cause an electric shock.
- The cables should not be damaged, stressed, loaded, or pinched. Otherwise, it may cause an electric shock.



#### WARNING

- To avoid an electric shock, insulate the connections of the power supply terminals.

- Before removing the CNP1 connector from MR-JE-40A to MR-JE-100A, disconnect the lead wires of the regenerative resistor from the CNP1 connector.
- Wire the equipment correctly and securely. Otherwise, the servo motor may operate unexpectedly, resulting in injury.
- Connect cables to the correct terminals. Otherwise, a burst, damage, etc. may occur.
- Ensure that polarity (+/-) is correct. Otherwise, a burst, damage, etc. may occur.
- The surge absorbing diode installed to the DC relay for control output should be fitted in the specified direction. Otherwise, the emergency stop and other protective circuits may not operate.

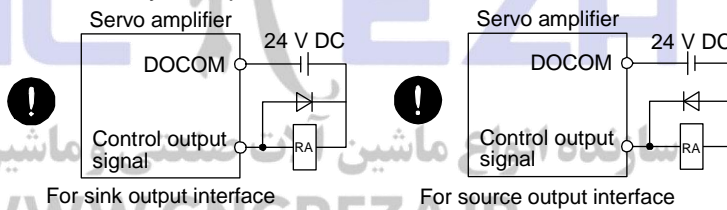


- Use a noise filter, etc. to minimize the influence of electromagnetic interference.



#### CAUTION

Electromagnetic interference may be given to the electronic equipment used near the servo amplifier.

- Do not install a power capacitor, surge killer or radio noise filter (optional FR-BIF) with the power line of the servo motor.
- When using the regenerative resistor, switch power off with the alarm signal. Otherwise, a transistor fault or the like may overheat the regenerative resistor, causing a fire.
- Do not modify the equipment.
- Connect the servo amplifier power output (U, V, and W) to the servo motor power input (U, V, and W) directly. Do not let a magnetic contactor, etc. intervene. Otherwise, it may cause a malfunction.

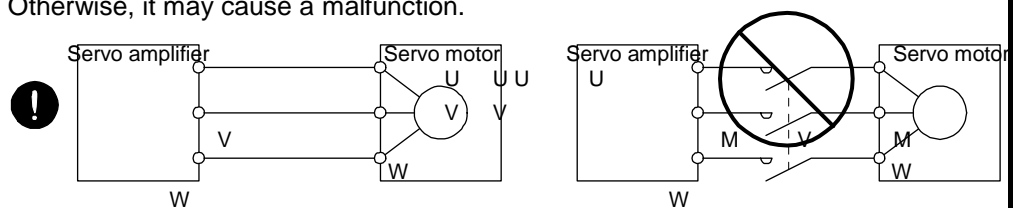

Connecting a servo motor of the wrong axis to U, V, W, or CN2 of the servo

### 3. SIGNALS AND WIRING

amplifier may cause a malfunction.

#### 3.1 Input power supply circuit

#### ! CAUTION

- Always connect a magnetic contactor between the power supply and the power supply (L1, L2, and L3) of the servo amplifier, in order to configure a circuit that shuts down the power supply on the side of the servo amplifier's power supply. If a magnetic contactor is not connected, continuous flow of a large current may cause a fire when the servo amplifier malfunctions.  
Use ALM (Malfunction) to switch power off. Not doing so may cause a fire when a
- regenerative transistor malfunctions or the like may overheat the regenerative resistor.  
Before removing the CNP1 connector from MR-JE-40A to MR-JE-100A,
- disconnect the lead wires of the regenerative resistor from the CNP1 connector. Not doing so may break the lead wires of the regenerative resistor.  
Check the servo amplifier model, and then input proper voltage to the servo
- amplifier power supply. If input voltage exceeds the upper limit of the specification, the servo amplifier will break down.  
The servo amplifier has a built-in surge absorber (varistor) to reduce noise and to suppress lightning surge. The varistor can break down due to its aged
- deterioration. To prevent a fire, use a molded-case circuit breaker or fuse for input power supply.  
Connecting a servo motor of the wrong axis to U, V, W, or CN2 of the servo amplifier may cause a malfunction.


#### POINT

- same function as EM1 in the torque control mode.
- 1-phase 200 V AC to 240 V AC power supply to L1 and L3. One of the destinations is different from MR-E Super Series Servo  
When using MR-JE as a replacement for MR-E Super, be careful not to connect power to L2.

Configure the wirings so that the power supply is shut off and SON (Servo-on) is turned off after deceleration to a stop due to an alarm occurring, enabled servo forced stop, etc. A molded-case circuit breaker (MCCB) must be used with the input cables of the main circuit power supply.

(1) For 3-phase 200 V AC to 240 V AC power supply of MR-JE-10A to MR-JE-100A

### 3. SIGNALS AND WIRING

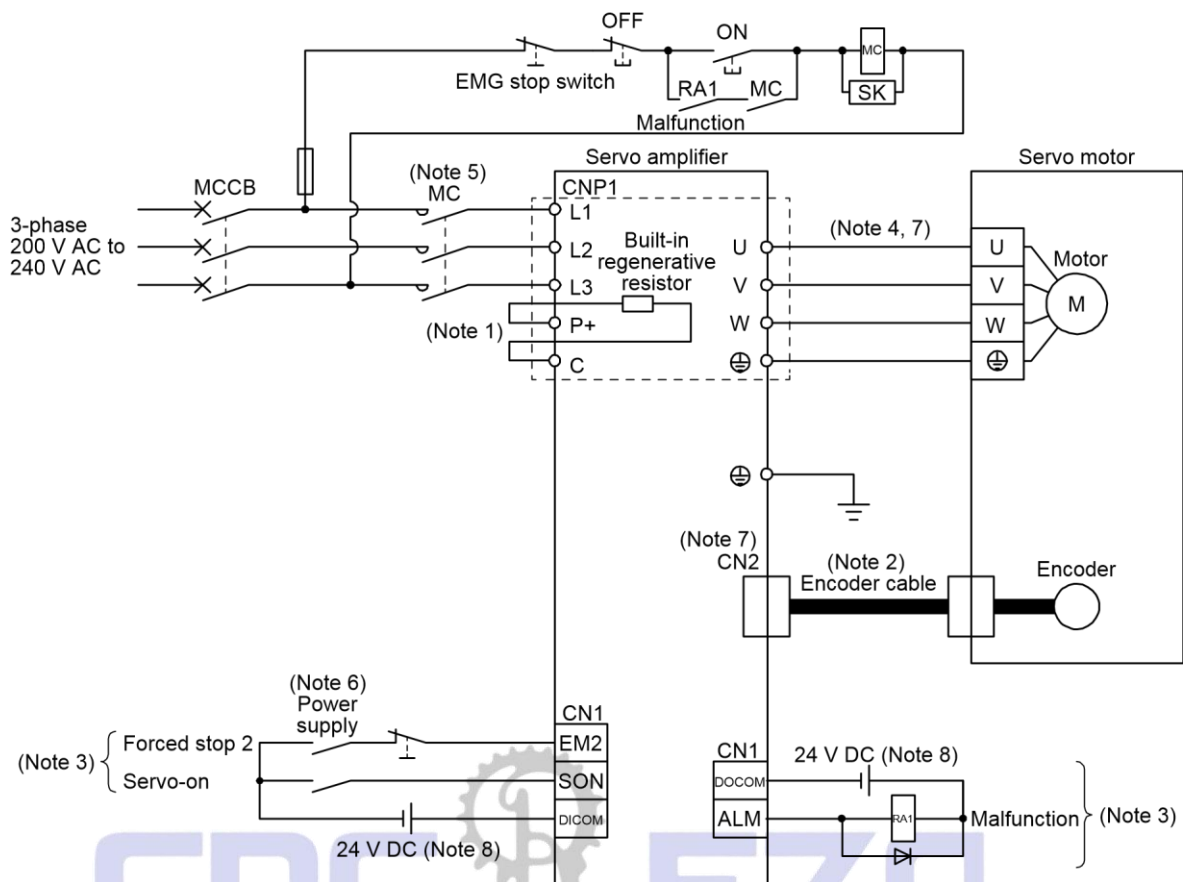


- Note 1. MR-JE-40A to MR-JE-100A have a built-in regenerative resistor. (factory-wired) When using the regenerative option, refer to section 11.2.
2. For the encoder cable, use of the option cable is recommended. For selecting cables, refer to "HF-KN/HF-SN Servo Motor Instruction Manual".
3. This diagram shows sink I/O interface. For source I/O interface, refer to section 3.9.3.
4. For connecting servo motor power wires, refer to "HF-KN/HF-SN Servo Motor Instruction Manual".
5. Use a magnetic contactor with an operation delay time (interval between current being applied to the coil until closure of contacts) of 80 ms or less. Depending on the power supply voltage and operation pattern, bus voltage can decrease. This can shift the mode to the dynamic brake deceleration during forced stop deceleration. When dynamic brake deceleration is not required, slow the time to turn off the magnetic contactor.
6. Configure a circuit to turn off EM2 when the power is turned off to prevent an unexpected restart of the servo amplifier.
7. Connecting a servo motor of the wrong axis to U, V, W, or CN2 of the servo amplifier may cause a malfunction.
8. The illustration of the 24 V DC power supply is divided between input signal and output signal for convenience. However, they can be configured by one.

(2) For 1-phase 200 V AC to 240 V AC power supply of MR-JE-10A to MR-JE-70A

POINT	
●	1-phase 200 V AC to 240 V AC power supply to L1 and L3. One of ng destinations is different from MR-E Super Series Servo When using MR-JE as a replacement for MR-E Super, be careful not re power to L2.



### 3. SIGNALS AND WIRING

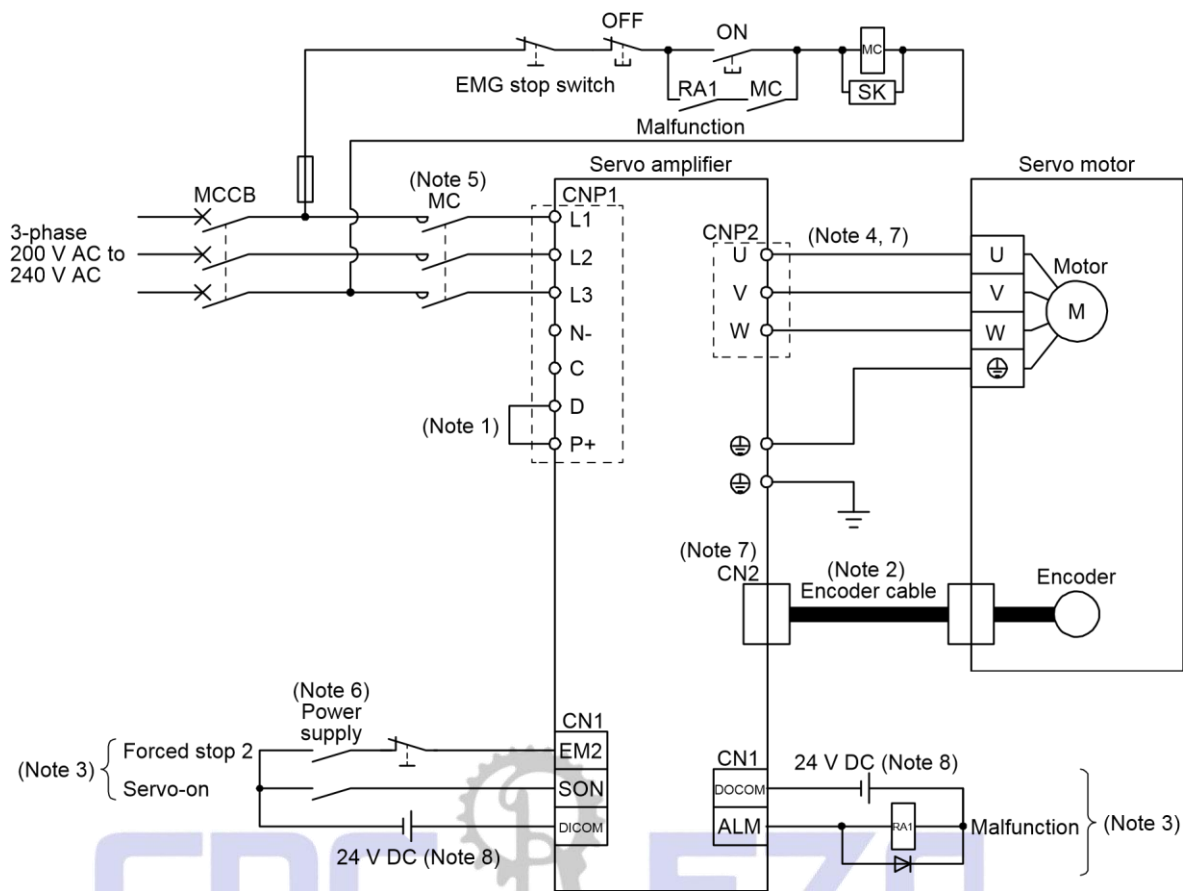


- Note 1. Always connect between P+ and D terminals. (factory-wired) When using the regenerative option, refer to section 11.2.
- Note 2. For the encoder cable, use of the option cable is recommended. For selecting cables, refer to "HF-KN/HF-SN Servo Motor Instruction Manual".
- Note 3. This diagram shows sink I/O interface. For source I/O interface, refer to section 3.9.3.
- Note 4. For connecting servo motor power wires, refer to "HF-KN/HF-SN Servo Motor Instruction Manual".
- Note 5. Use a magnetic contactor with an operation delay time (interval between current being applied to the coil until closure of contacts) of 80 ms or less. Depending on the power supply voltage and operation pattern, bus voltage can decrease. This can shift the mode to the dynamic brake deceleration during forced stop deceleration. When dynamic brake deceleration is not required, slow the time to turn off the magnetic contactor.
- Note 6. Configure a circuit to turn off EM2 when the power is turned off to prevent an unexpected restart of the servo amplifier.
- Note 7. Connecting a servo motor of the wrong axis to U, V, W, or CN2 of the servo amplifier may cause a malfunction.
- Note 8. The illustration of the 24 V DC power supply is divided between input signal and output signal for convenience. However, they can be configured by one.

#### 3.2 I/O signal connection example

##### 3.2.1 Position control mode

- (1) When you use a positioning module LD75D/QD75D  
 (a) For sink I/O interface

### 3. SIGNALS AND WIRING

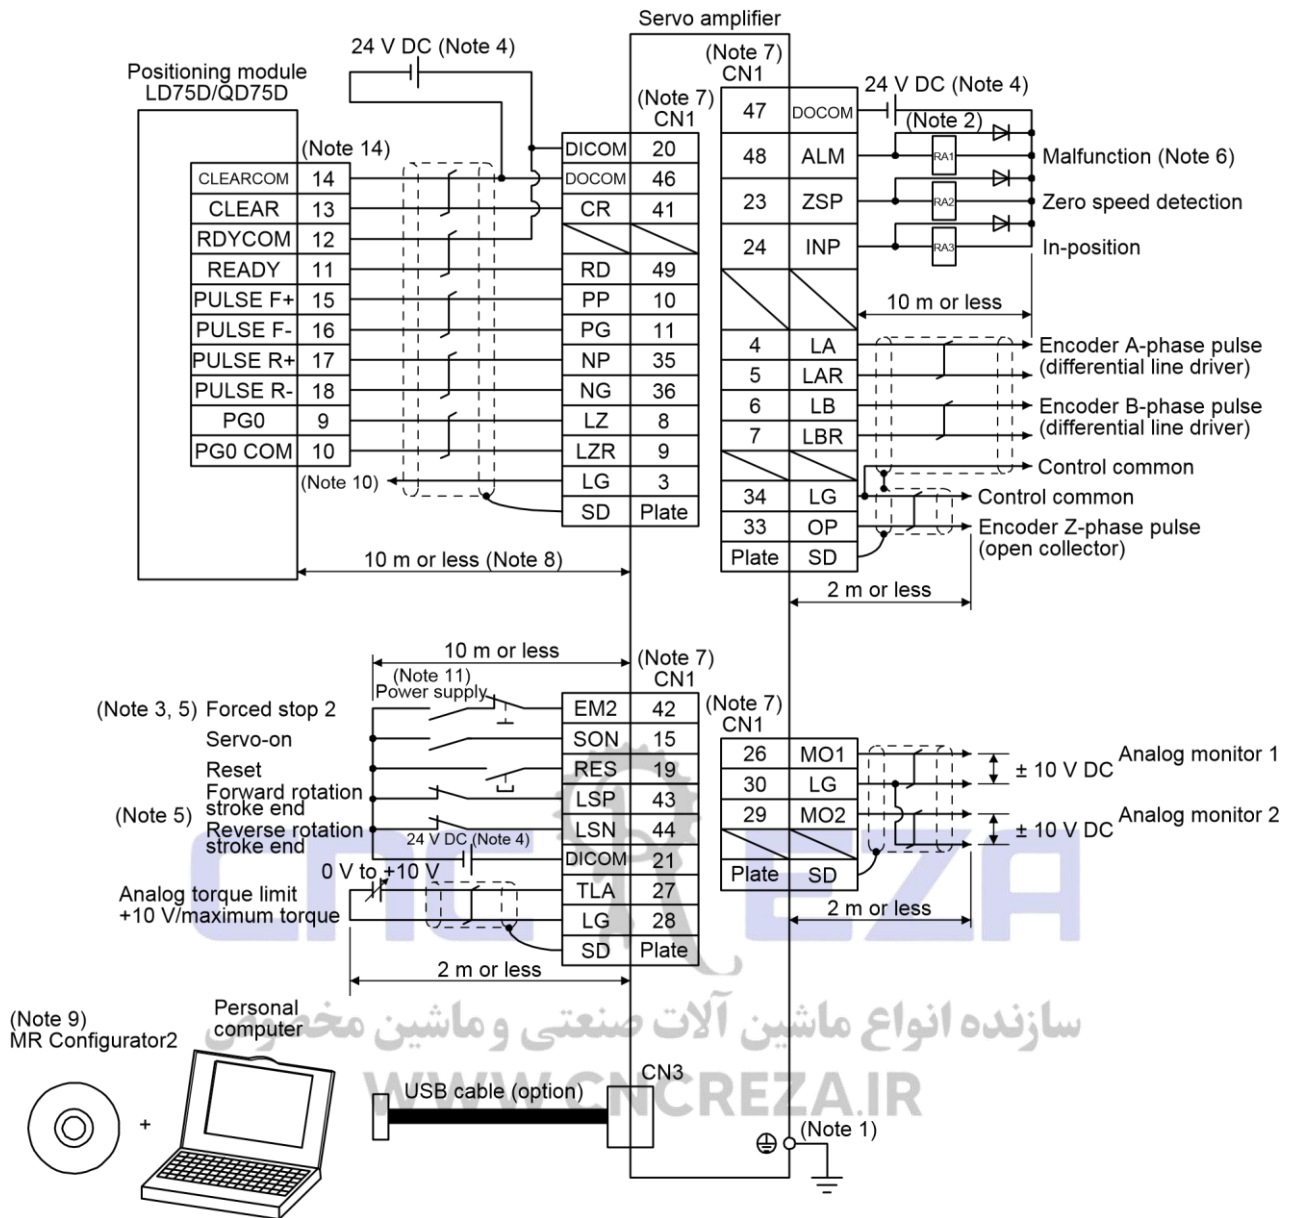

- Note 1. To prevent an electric shock, always connect the protective earth (PE) terminal (marked  $\oplus$ ) of the servo amplifier to the protective earth (PE) of the cabinet.
2. Connect the diode in the correct direction. If it is connected reversely, the servo amplifier will malfunction and will not output signals, disabling EM2 (Forced stop 2) and other protective circuits.
  3. The forced stop switch (normally closed contact) must be installed.
  4. Supply 24 V DC  $\pm$  10% to interfaces from outside. The total current capacity is up to 300 mA. 300 mA is the value applicable when all I/O signals are used. The current capacity can be decreased by reducing the number of I/O points. Refer to section 3.9.2 (1) that gives the current value necessary for the interface. The illustration of the 24 V DC power supply is divided between input signal and output signal for convenience. However, they can be configured by one.
  5. When starting operation, always turn on EM2 (Forced stop 2), LSP (Forward rotation stroke end) and LSN (Reverse rotation stroke end) (normally closed contact).
  6. ALM (Malfunction) turns on in normal alarm-free condition (normally closed contact). When this signal is switched off (at occurrence of an alarm), the output of the programmable controller should be stopped by the sequence program.
  7. The pins with the same signal name are connected in the servo amplifier.
  8. This length applies to the command pulse train input in the differential line driver type. It is 2 m or less in the open-collector type.

### 3. SIGNALS AND WIRING

---

9. Use SW1DNC-MRC2-E. (Refer to section 11.4.)
10. This connection is not necessary for LD75D and QD75D. However, to enhance noise immunity, it is recommended to connect LG of servo amplifier and control common depending on the positioning module.
11. Configure a circuit to turn off EM2 when the power is turned off to prevent an unexpected restart of the servo amplifier.
12. Plus and minus of the power of source interface are the opposite of those of sink interface.
13. CLEAR and CLEARCOM of source interface are interchanged to sink interface.
14. When a command cable malfunctions due to disconnection or noise, a position mismatch can occur. To avoid position mismatch, it is recommended that Encoder A-phase pulse and Encoder B-phase pulse be checked.




### 3. SIGNALS AND WIRING

(b) For source I/O interface

**POINT**


Refer to (1) (a) in this section.

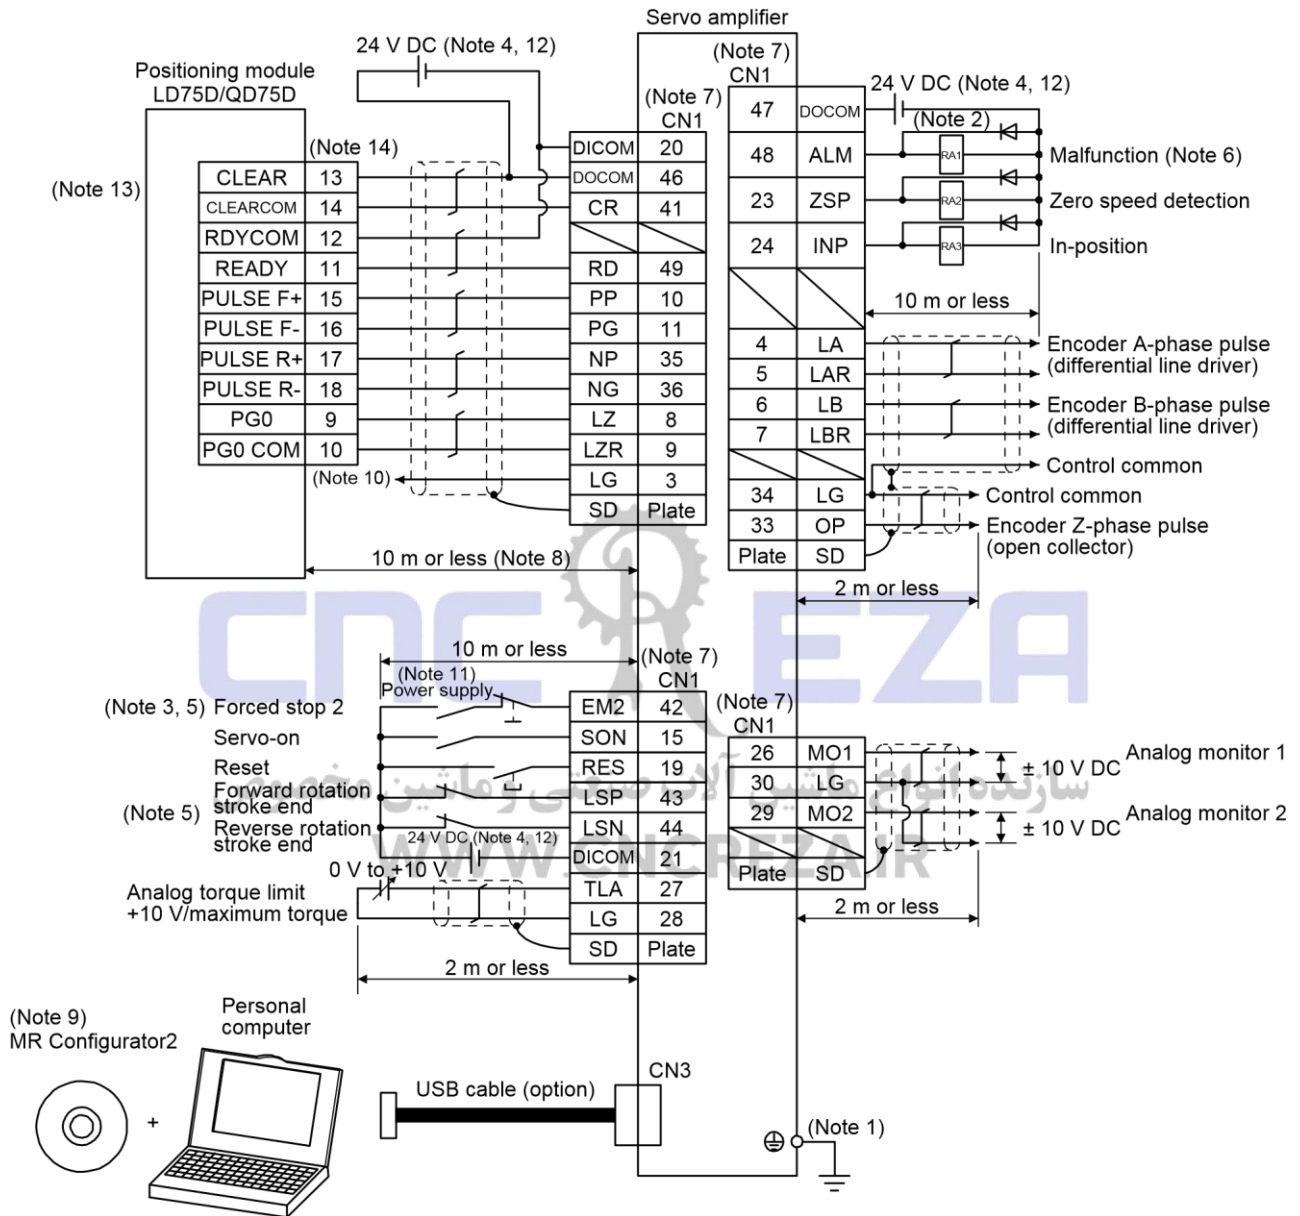

(2) When you use a positioning module FX3U-\_\_MT/ES (For sink I/O interface)



### 3. SIGNALS AND WIRING

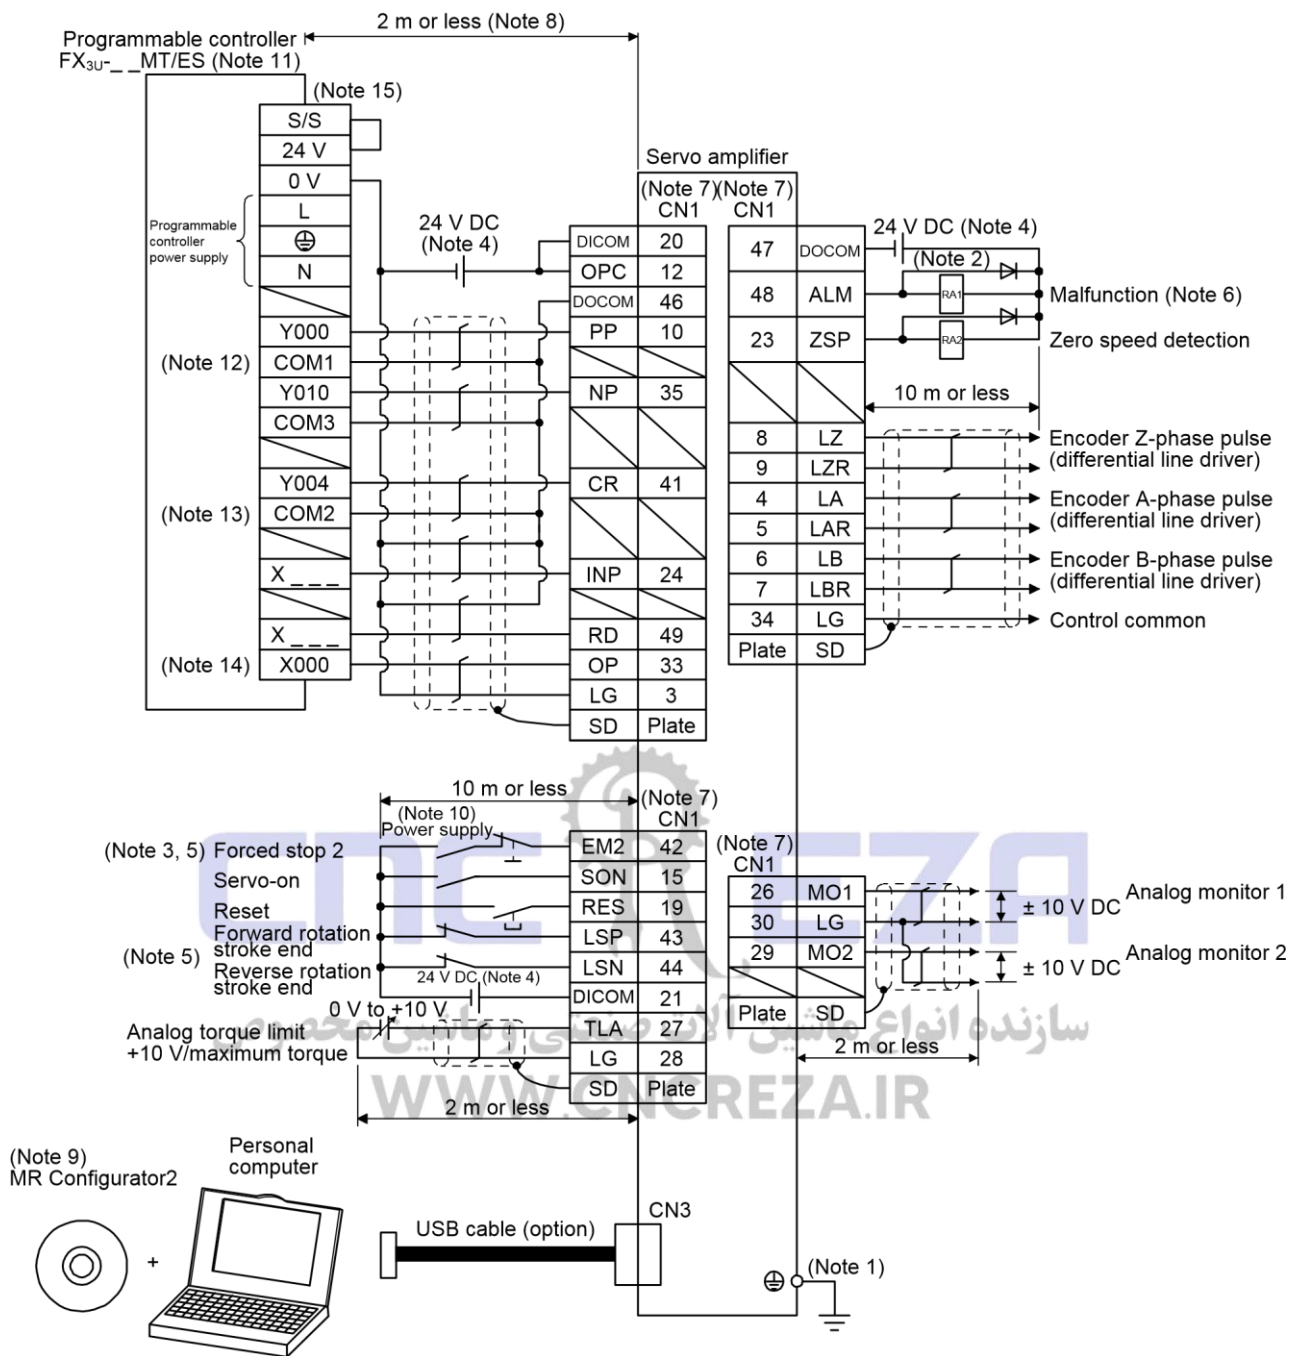

- Note 1. To prevent an electric shock, always connect the protective earth (PE) terminal (marked ⊕) of the servo amplifier to the protective earth (PE) of the cabinet.
2. Connect the diode in the correct direction. If it is connected reversely, the servo amplifier will malfunction and will not output signals, disabling EM2 (Forced stop 2) and other protective circuits.
  3. The forced stop switch (normally closed contact) must be installed.
  4. Supply 24 V DC ± 10% to interfaces from outside. The total current capacity is up to 300 mA. 300 mA is the value applicable when all I/O signals are used. The current capacity can be decreased by reducing the number of I/O points. Refer to section 3.9.2 (1) that gives the current value necessary for the interface. The illustration of the 24 V DC power supply is divided between input signal and output signal for convenience. However, they can be configured by one.
  5. When starting operation, always turn on EM2 (Forced stop 2), LSP (Forward rotation stroke end) and LSN (Reverse rotation stroke end) (normally closed contact).

### 3. SIGNALS AND WIRING

---


6. ALM (Malfunction) turns on in normal alarm-free condition (normally closed contact). When this signal is switched off (at occurrence of an alarm), the output of the programmable controller should be stopped by the sequence program.
7. The pins with the same signal name are connected in the servo amplifier.
8. Connect them within 2 m because of open-collector type.
9. Use SW1DNC-MRC2-E. (Refer to section 11.4.)
10. Configure a circuit to turn off EM2 when the power is turned off to prevent an unexpected restart of the servo amplifier.
11. Select the number of I/O points of the programmable controller depending on your system.
12. It will be COM0 for FX<sub>3U</sub>-16MT/ES. 13. It will be COM4 for FX<sub>3U</sub>-16MT/ES.
14. Select it within X000 to X007.
15. When a command cable malfunctions due to disconnection or noise, a position mismatch can occur. To avoid position mismatch, it is recommended that Encoder A-phase pulse and Encoder B-phase pulse be checked.



### 3. SIGNALS AND WIRING

#### 3.2.2 Speed control mode

##### (1) For sink I/O interface

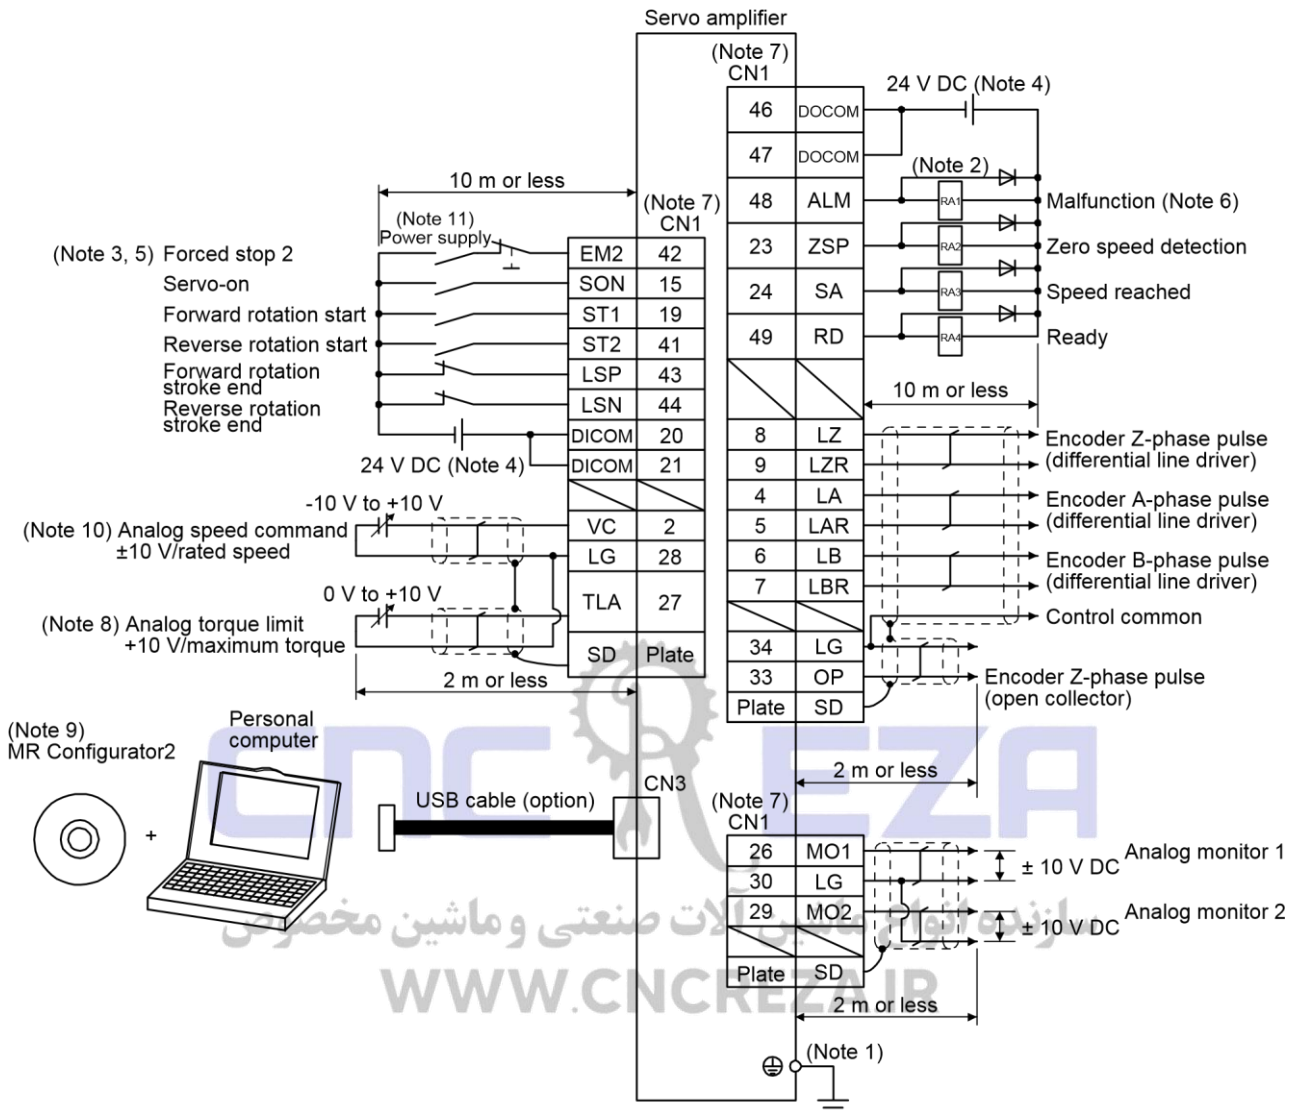

(Note 5)

Note 1. To prevent an electric shock, always connect the protective earth (PE) terminal (marked with a ground symbol) of the servo amplifier to the protective earth (PE) of the cabinet.

2. Connect the diode in the correct direction. If it is connected reversely, the servo amplifier will malfunction and will not output signals, disabling EM2 (Forced stop 2) and other protective circuits.
3. The forced stop switch (normally closed contact) must be installed.
4. Supply 24 V DC  $\pm$  10% to interfaces from outside. The total current capacity is up to 300 mA. 300 mA is the value applicable

when all I/O signals are used. The current capacity can be decreased by reducing the number of I/O points. Refer to section 3.9.2 (1) that gives the current value necessary for the interface. The illustration of the 24 V DC power supply is divided between input signal and output signal for convenience. However, they can be configured by one.


5. When starting operation, always turn on EM2 (Forced stop 2), LSP (Forward rotation stroke end) and LSN (Reverse rotation stroke end) (normally closed contact).
6. ALM (Malfunction) turns on in normal alarm-free condition (normally closed contact).
7. The pins with the same signal name are connected in the servo amplifier.
8. TLA will be available when TL (External torque limit selection) is enabled with [Pr. PD03], [Pr. PD11], [Pr. PD13], [Pr. PD17], and [Pr. PD19]. (Refer to section 3.6.1 (5).)
9. Use SW1DNC-MRC2-E. (Refer to section 11.4.)
10. Use an external power supply when inputting a negative voltage.

### 3. SIGNALS AND WIRING

11. Configure a circuit to turn off EM2 when the power is turned off to prevent an unexpected restart of the servo amplifier.
12. Plus and minus of the power of source interface are the opposite of those of sink interface.

(2) For source I/O interface

POINT	
●	Refer to (1) in this section.

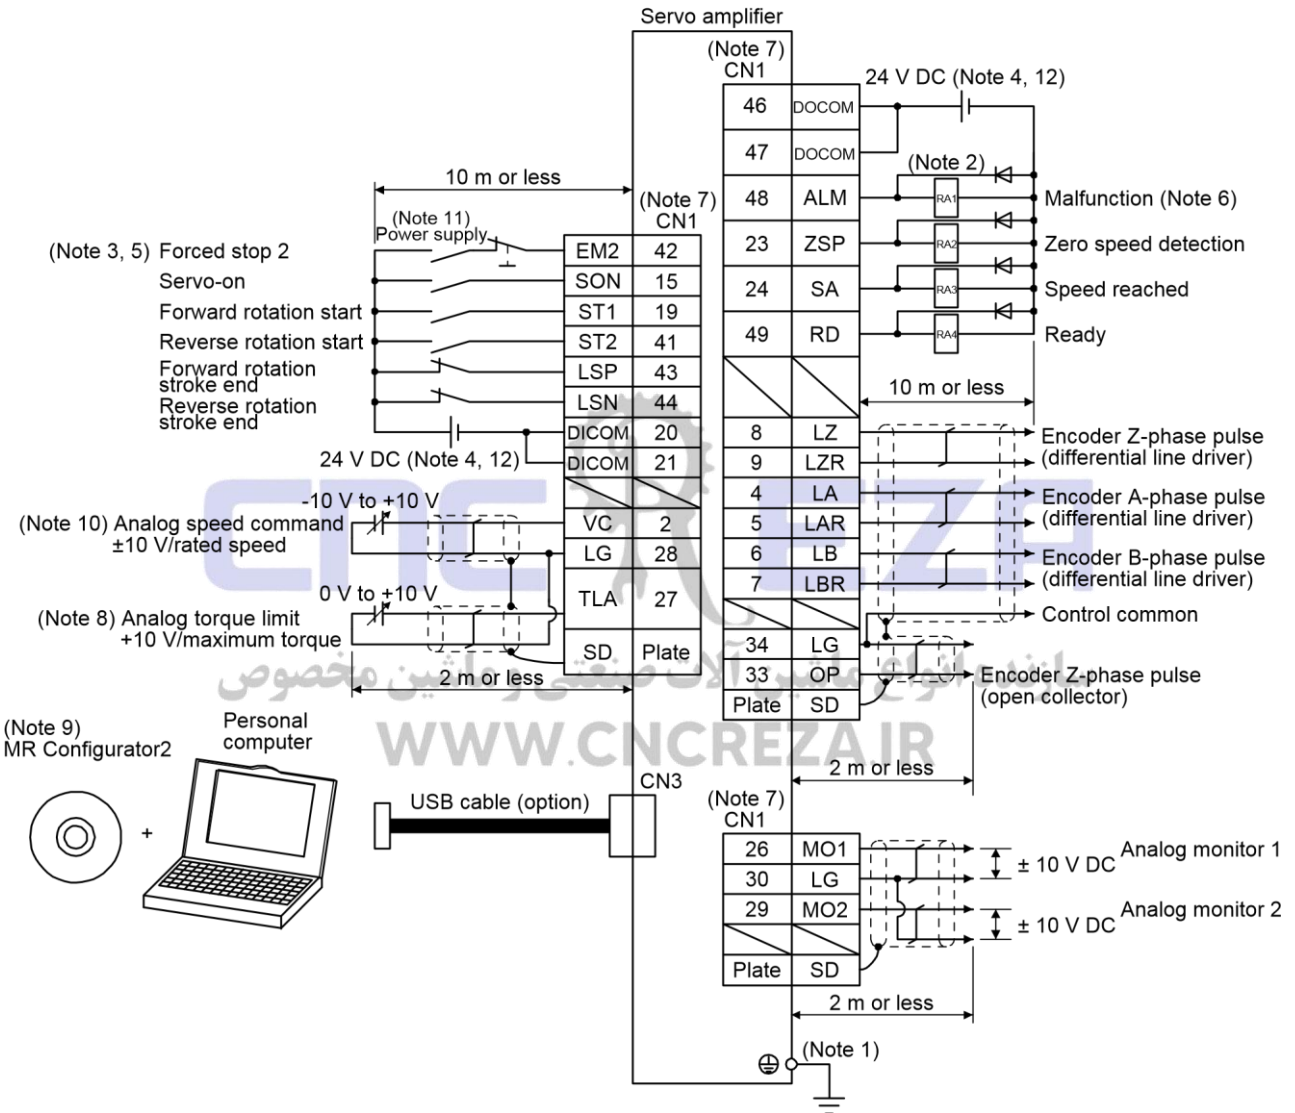


(Note 5)

#### 3.2.3 Torque control mode

POINT	
●	Same function as EM1 in the torque control mode.

(1) For sink I/O interface

### 3. SIGNALS AND WIRING

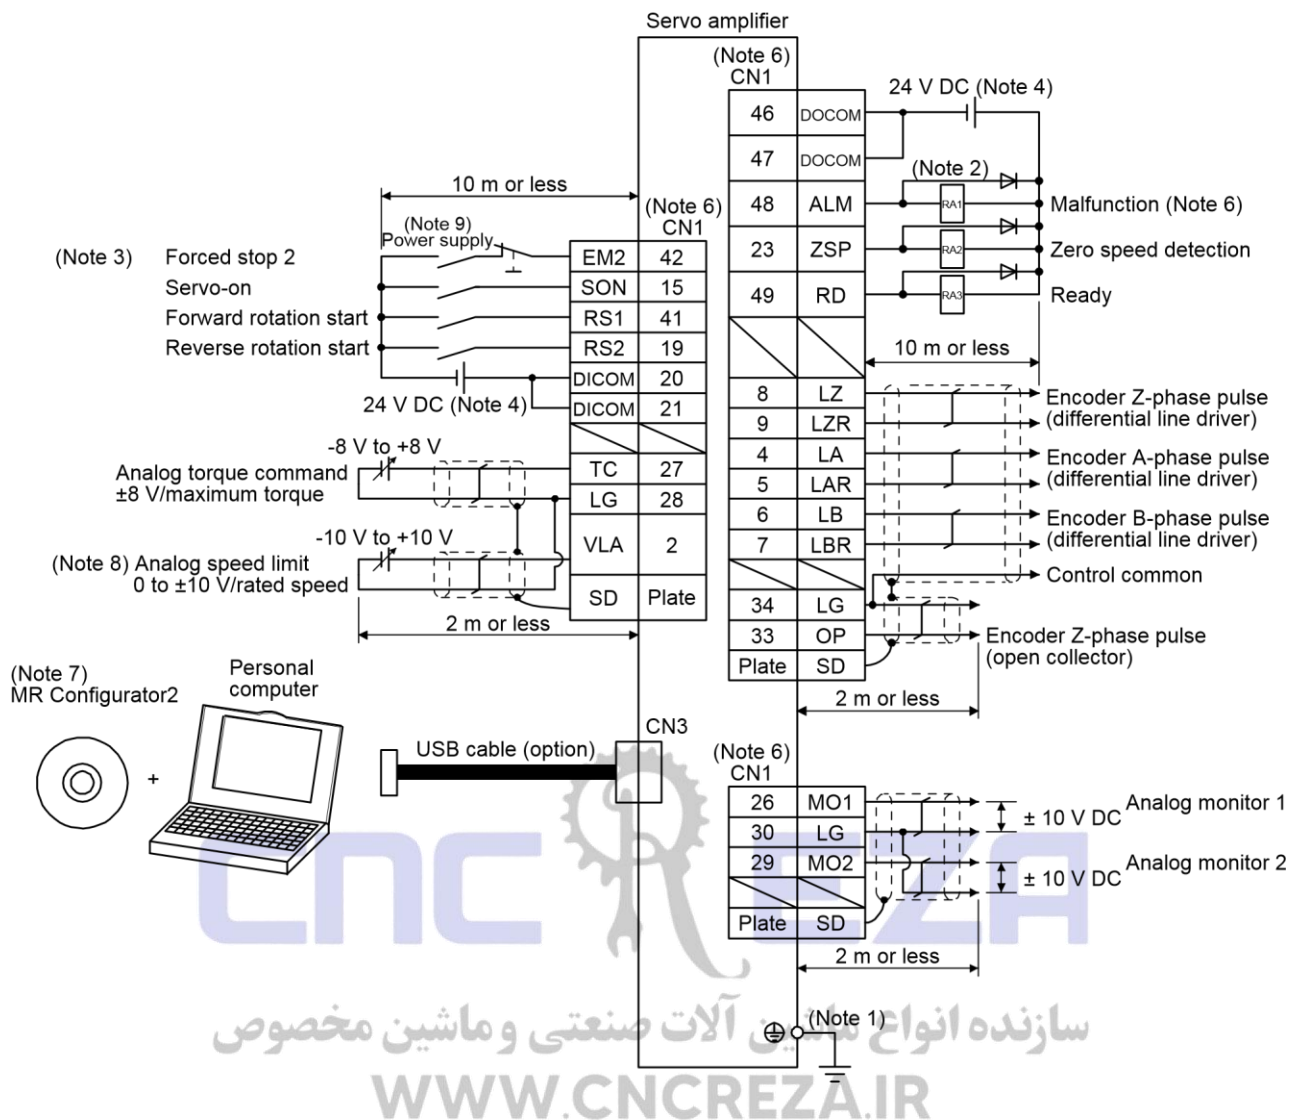

Note 1. To prevent an electric shock, always connect the protective earth (PE) terminal (marked  $\oplus$ ) of the servo amplifier to the protective earth (PE) of the cabinet.


2. Connect the diode in the correct direction. If it is connected reversely, the servo amplifier will malfunction and will not output signals, disabling EM2 (Forced stop 2) and other protective circuits.
3. The forced stop switch (normally closed contact) must be installed.
4. Supply 24 V DC  $\pm 10\%$  to interfaces from outside. The total current capacity is up to 300 mA. 300 mA is the value applicable when all I/O signals are used. The current capacity can be decreased by reducing the number of I/O points. Refer to section 3.9.2 (1) that gives the current value necessary for the interface. The illustration of the 24 V DC power supply is divided between input signal and output signal for convenience. However, they can be configured by one.
5. ALM (Malfunction) turns on in normal alarm-free condition (normally closed contact).
6. The pins with the same signal name are connected in the servo amplifier.
7. Use SW1DNC-MRC2-E. (Refer to section 11.4.)
8. Use an external power supply when inputting a negative voltage.
9. Configure a circuit to turn off EM2 when the power is turned off to prevent an unexpected restart of the servo amplifier.
10. Plus and minus of the power of source interface are the opposite of those of sink interface.

(2) For source I/O interface

POINT	

### 3. SIGNALS AND WIRING

Refer to (1) in this section.

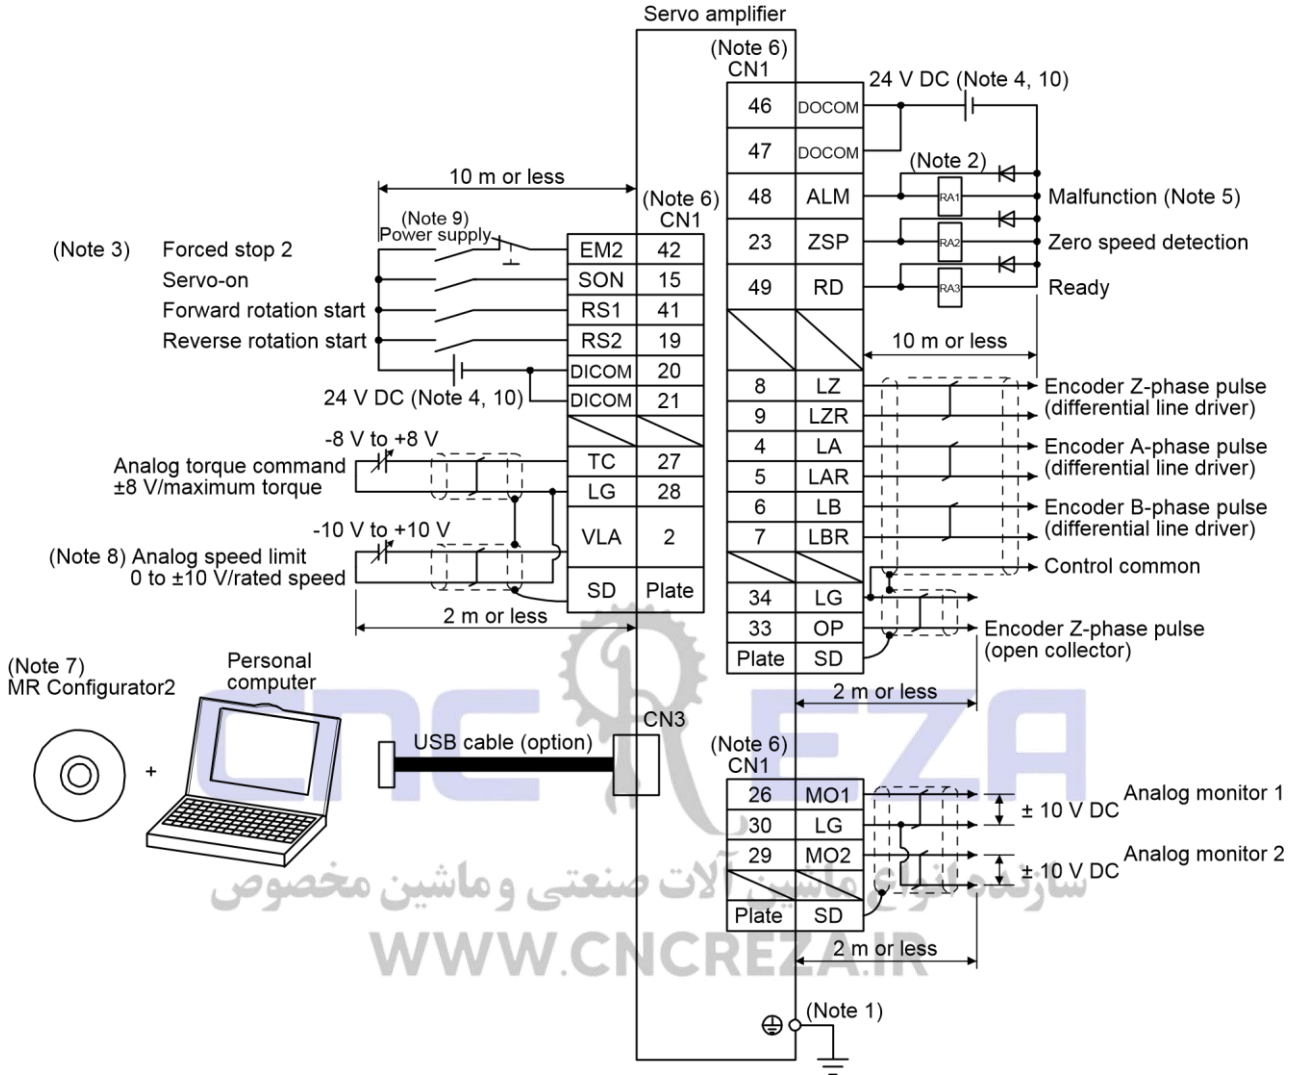


#### 3.3 Explanation of power supply system

##### 3.3.1 Signal explanations

POINT  
 Location of connector and terminal block, refer to chapter 9 DIMENSIONS.

Symbol	Connection target (application)	Description
	Power supply	Supply the following power to L1, L2, and L3. For 1-phase 200 V AC to 240 V AC, connect the power supply to L1 and L3. Leave L2 open.
	Servo amplifier	MR-JE-10A to MR-JE-70A
		MR-JE-100A to MR-JE-300A

### 3. SIGNALS AND WIRING

L1/L2/L3	Power supply	<table border="1"> <tr> <td>3-phase 200 V AC to 240 V AC, 50 Hz/60 Hz</td> <td>L1/L2/L3</td> </tr> <tr> <td>1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz</td> <td>L1/L3</td> </tr> <tr> <td>1) MR-JE-100A or less</td> <td></td> </tr> </table> <p>MR-JE-10A to MR-JE-100A do not have D.</p>	3-phase 200 V AC to 240 V AC, 50 Hz/60 Hz	L1/L2/L3	1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz	L1/L3	1) MR-JE-100A or less	
3-phase 200 V AC to 240 V AC, 50 Hz/60 Hz	L1/L2/L3							
1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz	L1/L3							
1) MR-JE-100A or less								
P+/C/D	Regenerative option	<p>When using a servo amplifier built-in regenerative resistor, connect P+ and C. (factory-wired)</p> <p>MR-JE-10A and MR-JE-20A do not have a built-in regenerative resistor.</p> <p>When using a regenerative option, disconnect wires of P+ and C for the built-in regenerative resistor. And then connect wires of the regenerative option to P+ and C.</p> <p>2) MR-JE-200A or more</p> <p>When using a servo amplifier built-in regenerative resistor, connect P+ and D. (factory-wired)</p> <p>When using a regenerative option, disconnect P+ and D, and connect the regenerative option to P+ and C.</p> <p>Refer to section 11.2 for details.</p>						
U/V/W	Servo motor power output directly.	<p>Connect them to the servo motor power supply (U, V, and W). Connect the servo amplifier power output (U, V, and W) to the servo motor power input (U, V, and W) Do not let a magnetic contactor, etc. intervene. Otherwise, it may cause a malfunction.</p>						
N-		<p>This is for manufacturer adjustment.</p> <p>Leave this open.</p> <p>MR-JE-10A to MR-JE-100A do not have N-.</p>						
	Protective earth (PE)	<p>Connect it to the grounding terminal of the servo motor and to the protective earth (PE) of the cabinet for grounding.</p>						

#### 3.3.2 Power-on sequence


POINT	of analog monitor output, output signal, etc. may be unstable at power-on.
-------	--

#### (1) Power-on procedure

- 1) Always wire the power supply as shown in above section 3.1 using the magnetic contactor with the power supply (3-phase: L1, L2, and L3, 1-phase: L1 and L3). Configure an external sequence to switch off the magnetic contactor as soon as an alarm occurs.
- 2) The servo amplifier receives the SON (Servo-on) 2.5 s to 3.5 s after the power supply is switched on. Therefore, when SON (Servo-on) is switched on simultaneously with the power supply, the base circuit will switch on in about 2.5 s to 3.5 s, and the RD (Ready) will switch on in further about 5 ms, making the servo amplifier ready to operate. (Refer to (2) of this section.)
- 3) When RES (Reset) is switched on, the base circuit is shut off and the servo motor shaft coasts.

#### (2) Timing chart

### 3. SIGNALS AND WIRING

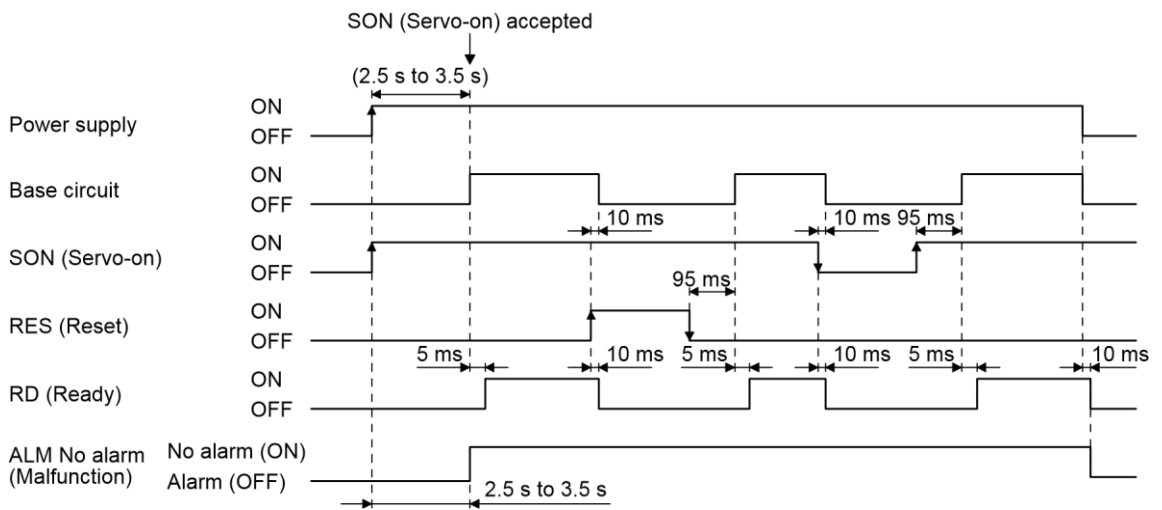

#### 3.3.3 Wiring CNP1 and CNP2

POINT	
●	sizes used for wiring, refer to section 11.5.

To wire to CNP1 and CNP2, use servo amplifier power connectors packed with the amplifier or optional connectors (refer to section 11.1.1).

#### (1) Connector

(a) MR-JE-10A to MR-JE-100A

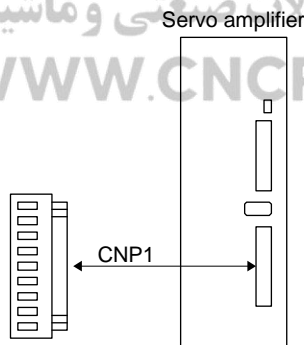


Table 3.1 Connector and applicable wire

Connector	Receptacle assembly	Applicable wire		Stripped length [mm]	Open tool	Manufacturer
		Size	Insulator OD			
CNP1	09JFAT-SAXGDK-H5.0	AWG 18 to 14	3.9 mm or shorter	9	J-FAT-OT	JST

(b) MR-JE-200A/MR-JE-300A



### 3. SIGNALS AND WIRING

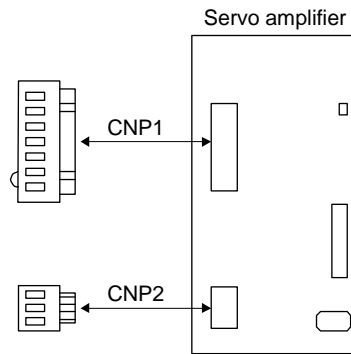



Table 3.2 Connector and applicable wire

Connector	Receptacle assembly	Applicable wire		Stripped length [mm]	Open tool	Manufacturer
		Size	Insulator OD			
CNP1	07JFAT-SAXGFK-XL	AWG 16 to 10	4.7 mm or shorter	11.5	J-FAT-OT-EXL	JST
CNP2	03JFAT-SAXGFK-XL					


(2) Cable connection procedure

(a) Fabrication on cable insulator

Refer to table 3.1 and 3.2 for stripped length of cable insulator. The appropriate stripped length of cables depends on their type, etc. Set the length considering their status.

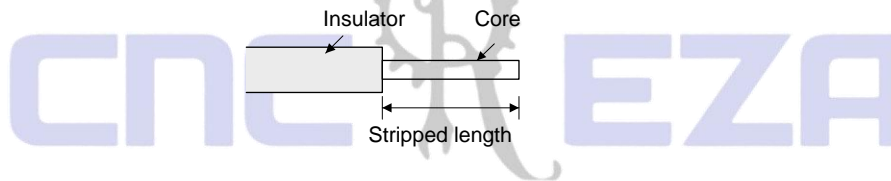

Twist strands lightly and straighten them as follows.

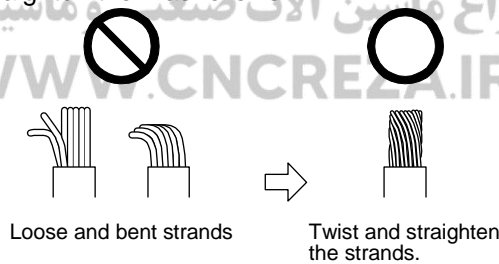

You can also use a ferrule to connect with the connectors. The following shows references to select ferrules according to wire sizes.


Servo amplifier	Wire size	Ferrule model (Phoenix Contact)		Crimp terminal (Phoenix Contact)
		For one	For two	
MR-JE-10A to MR-JE-100A	AWG 16	AI1.5-10BK	AI-TWIN2×1.5-10BK	CRIMPFOX-ZA3
	AWG 14	AI2.5-10BU		
MR-JE-200A to MR-JE-300A	AWG 16	AI1.5-10BK	AI-TWIN2×1.5-10BK	
	AWG 14	AI2.5-10BU	AI-TWIN2×2.5-10BU	
	AWG 12	AI4-10GY		

(b) Inserting wire

### 3. SIGNALS AND WIRING

Insert the open tool as follows and push down it to open the spring. While the open tool is pushed down, insert the stripped wire into the wire insertion hole. Check the insertion depth so that the wire insulator does not get caught by the spring.

Release the open tool to fix the wire. Pull the wire lightly to confirm that the wire is surely connected. The following shows a connection example of the CNP2 connector for 2 kW and 3 kW.

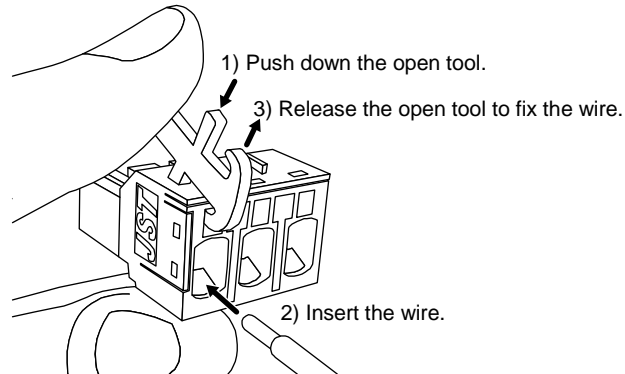


#### 3.4 Connectors and pin assignment

POINT	
●	The pin assignment of the connectors are as viewed from the cable connector
●	In the wiring section connector, securely connect the external conductor of the shielded ground plate and fix it to the connector shell.

The diagram shows a cable being connected to a ground plate. A screw is used to secure the cable's external conductor to the ground plate. The ground plate is also secured to the connector shell with another screw. Labels include 'Screw', 'Cable', and 'Ground plate'. There is a watermark for 'CNC CREZA' and Persian text 'سازندگان انواع ماشین ابزار صنعتی و ماشین مخصوص' and the website 'WWW.CNCREZA.IR'.

The servo amplifier front view shown is that of the MR-JE-40A or less. Refer to chapter 9 DIMENSIONS for the appearances and connector layouts of the other servo amplifiers.

### 3. SIGNALS AND WIRING

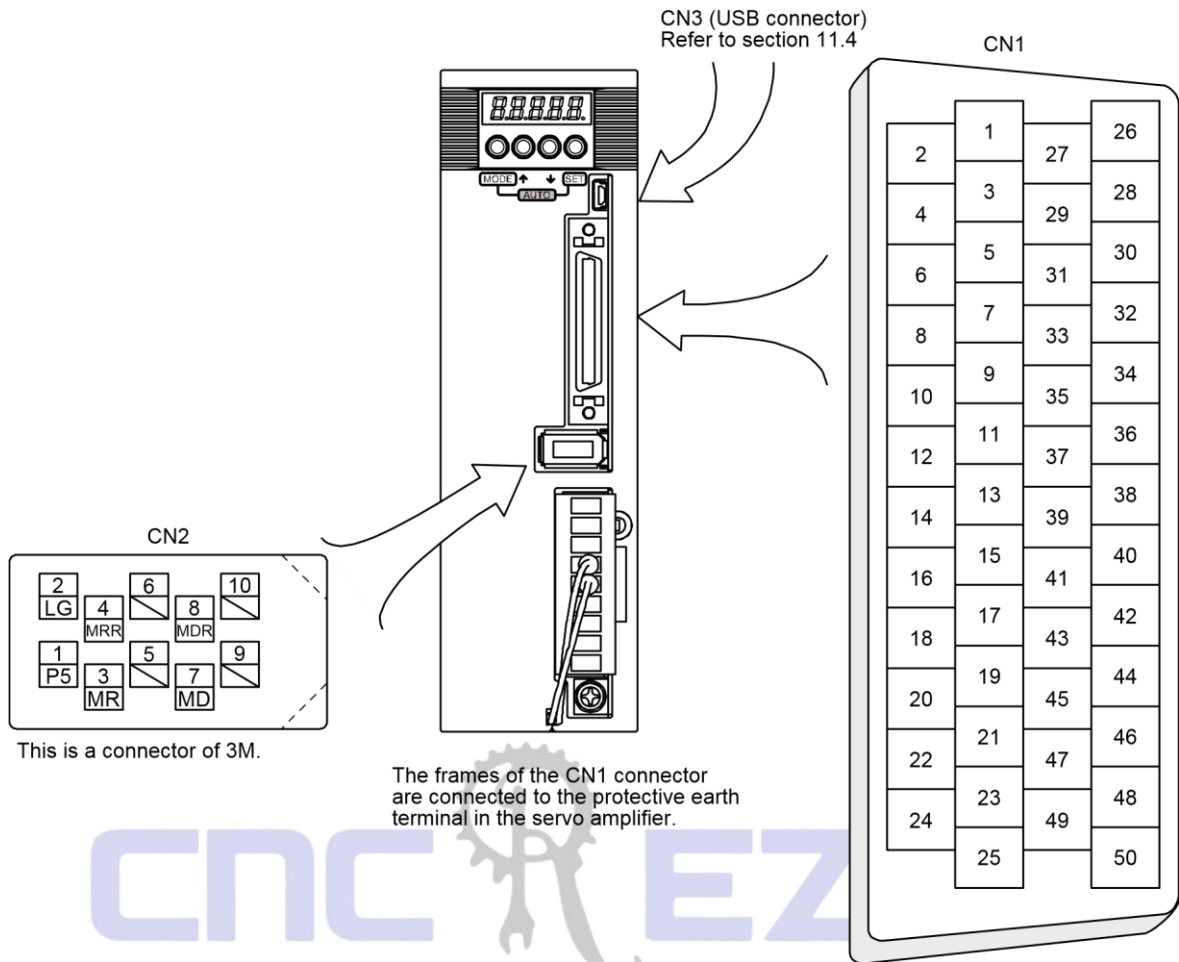

سازنده انواع ماشین آلات صنعتی و ماشین مخصوص

The device assignment of CN1 connector pins changes depending on the control mode. For the pins which are given parameters in the related parameter column, their devices will be changed using those parameters.

### 3. SIGNALS AND WIRING

Pin No.	(Note 1) I/O	(Note 2) I/O signals in control modes						Related parameter
		P	P/S	S	S/T	T	T/P	
1								
2	I		-/VC	VC	VC/VLA	VLA	VLA/-	
3		LG	LG	LG	LG	LG	LG	
4	O	LA	LA	LA	LA	LA	LA	
5	O	LAR	LAR	LAR	LAR	LAR	LAR	
6	O	LB	LB	LB	LB	LB	LB	
7	O	LBR	LBR	LBR	LBR	LBR	LBR	
8	O	LZ	LZ	LZ	LZ	LZ	LZ	
9	O	LZR	LZR	LZR	LZR	LZR	LZR	
10	I	PP	PP/-				-/PP	
11	I	PG	PG/-				-/PG	
12		OPC	OPC/-				-/OPC	
13								
14								
15	I	SON	SON	SON	SON	SON	SON	Pr. PD03/Pr. PD04
16								
17								
18								
19	I	RES	RES/ST1	ST1	ST1/RS2	RS2	RS2/RES	Pr. PD11/Pr. PD12
20		DICOM	DICOM	DICOM	DICOM	DICOM	DICOM	
21		DICOM	DICOM	DICOM	DICOM	DICOM	DICOM	
22								
23	O	ZSP	ZSP	ZSP	ZSP	ZSP	ZSP	Pr. PD24
24	O	INP	INP/SA	SA	SA/-		-/INP	Pr. PD25
25								
26	O	MO1	MO1	MO1	MO1	MO1	MO1	Pr. PC14
27	I	TLA	(Note 3) TLA	(Note 3) TLA	(Note 3) TLA/TC	TC	(Note 3) TC/TLA	
28		LG	LG	LG	LG	LG	LG	
29	O	MO2	MO2	MO2	MO2	MO2	MO2	Pr. PC15
30		LG	LG	LG	LG	LG	LG	
31								
32								
33	O	OP	OP	OP	OP	OP	OP	
34		LG	LG	LG	LG	LG	LG	
35	I	NP	NP/-				-/NP	
36	I	NG	NG/-				-/NG	
37								
38								
39								
40								
41	I	CR	CR/ST2	ST2	ST2/RS1	RS1	RS1/CR	Pr. PD13/Pr. PD14
42	I	EM2	EM2	EM2	EM2	EM2	EM2	
43	I	LSP	LSP	LSP	LSP/-		-/LSP	Pr. PD17/Pr. PD18
44	I	LSN	LSN	LSN	LSN/-		-/LSN	Pr. PD19/Pr. PD20
45								

Pin No.	(Note 1) I/O	(Note 2) I/O signals in control modes						Related parameter
		P	P/S	S	S/T	T	T/P	
46		DOCOM	DOCOM	DOCOM	DOCOM	DOCOM	DOCOM	
47		DOCOM	DOCOM	DOCOM	DOCOM	DOCOM	DOCOM	
48	O	ALM	ALM	ALM	ALM	ALM	ALM	
49	O	RD	RD	RD	RD	RD	RD	Pr. PD28
50								

### 3. SIGNALS AND WIRING

Note 1. I: input signal, O: output signal

2. P: position control mode, S: speed control mode, T: torque control mode, P/S: position/speed control switching mode, S/T: speed/torque control switching mode, T/P: torque/position control switching mode

3. TLA will be available when TL (External torque limit selection) is enabled with [Pr. PD03], [Pr. PD11], [Pr. PD13], [Pr. PD17], and [Pr. PD19].

#### 3.5 Signal (device) explanations

For the I/O interfaces (symbols in I/O division column in the table), refer to section 3.9.2. In the control mode field of the table

P: position control mode, S: speed control mode, T: torque control mode Torque control mode **O**: devices used with initial setting status, **Δ**: devices used by setting [Pr. PA04] and [Pr. PD03] to [Pr. PD28]

The pin numbers in the connector pin No. column are those in the initial status.

(1) I/O device

(a) Input device

Device	Symbol	Connector pin No.	Function and application	I/O division	Control mode																
					P	S	T														
Forced stop 2	EM2	CN1-42	<p>Turn off EM2 (open between commons) to decelerate the servo motor to a stop with commands.</p> <p>Turn EM2 on (short between commons) in the forced stop state to reset that state. The following shows the setting of [Pr. PA04].</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">[Pr. PA04] setting</th> <th rowspan="2">EM2/EM1</th> <th colspan="2">Deceleration method</th> </tr> <tr> <th>EM2 or EM1 is off</th> <th>Alarm occurred</th> </tr> </thead> <tbody> <tr> <td>0 _ _ _</td> <td>EM1</td> <td>MBR (Electromagnetic brake interlock) turns off without the forced stop deceleration.</td> <td>MBR (Electromagnetic brake interlock) turns off without the forced stop deceleration.</td> </tr> <tr> <td>2 _ _ _</td> <td>EM2</td> <td>MBR (Electromagnetic brake interlock) turns off after the forced stop deceleration.</td> <td>MBR (Electromagnetic brake interlock) turns off after the forced stop deceleration.</td> </tr> </tbody> </table> <p>EM2 and EM1 are mutually exclusive. EM2 has the same function as EM1 in the torque control mode.</p>	[Pr. PA04] setting	EM2/EM1	Deceleration method		EM2 or EM1 is off	Alarm occurred	0 _ _ _	EM1	MBR (Electromagnetic brake interlock) turns off without the forced stop deceleration.	MBR (Electromagnetic brake interlock) turns off without the forced stop deceleration.	2 _ _ _	EM2	MBR (Electromagnetic brake interlock) turns off after the forced stop deceleration.	MBR (Electromagnetic brake interlock) turns off after the forced stop deceleration.	DI-1	○	○	○
[Pr. PA04] setting	EM2/EM1	Deceleration method																			
		EM2 or EM1 is off	Alarm occurred																		
0 _ _ _	EM1	MBR (Electromagnetic brake interlock) turns off without the forced stop deceleration.	MBR (Electromagnetic brake interlock) turns off without the forced stop deceleration.																		
2 _ _ _	EM2	MBR (Electromagnetic brake interlock) turns off after the forced stop deceleration.	MBR (Electromagnetic brake interlock) turns off after the forced stop deceleration.																		
Forced stop 1	EM1	(CN1-42)	<p>When using EM1, set [Pr. PA04] to "0 _ _ _" to enable EM1.</p> <p>Turn EM1 off (open between commons) to bring the motor to a forced stop state. The base circuit is shut off, the dynamic brake is operated and decelerate the servo motor to a stop.</p> <p>Turn EM1 on (short between commons) in the forced stop state to reset that state.</p>	DI-1	Δ	Δ	Δ														
Servo-on	SON	CN1-15	<p>Turn SON on to power on the base circuit and make the servo amplifier ready to operate. (servo-on status)</p> <p>Turn it off to shut off the base circuit and coast the servo motor.</p> <p>Set " _ _ _ 4" in [Pr. PD01] to switch this signal on (keep terminals connected) automatically in the servo amplifier.</p>	DI-1	○	○	○														

### 3. SIGNALS AND WIRING

Device	Symbol	Connector pin No.	Function and application	I/O division	Control mode																																								
					P	S	T																																						
Reset	RES	CN1-19	Turn on RES for more than 50 ms to reset the alarm. Some alarms cannot be deactivated by RES (Reset). Refer to section 8.1. Turning RES on in an alarm-free status shuts off the base circuit. The base circuit is not shut off when " __ 1 _ " is set in [Pr. PD30]. This device is not designed to make a stop. Do not turn it on during operation.	DI-1		○	○	○																																					
Forward rotation stroke end	LSP	CN1-43	To start operation, turn on LSP and LSN. Turn it off to bring the motor to a sudden stop and make it servo-locked. Setting [Pr. PD30] to " ___ 1 " will enable a slow stop.	DI-1	○	○																																							
Reverse rotation stroke end	LSN	CN1-44	<table border="1" data-bbox="587 775 1078 999"> <thead> <tr> <th colspan="2">(Note) Input device</th> <th colspan="2">Operation</th> </tr> <tr> <th>LSP</th> <th>LSN</th> <th>CCW direction</th> <th>CW direction</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> <td>○</td> <td>○</td> </tr> <tr> <td>0</td> <td>1</td> <td>—</td> <td>○</td> </tr> <tr> <td>1</td> <td>0</td> <td>○</td> <td>—</td> </tr> <tr> <td>0</td> <td>0</td> <td>—</td> <td>—</td> </tr> </tbody> </table> <p>Note. 0: Off 1: On</p> <p>Set [Pr. PD01] as indicated below to switch on the signals (keep terminals connected) automatically in the servo amplifier.</p> <table border="1" data-bbox="587 1173 1078 1420"> <thead> <tr> <th rowspan="2">[Pr. PD01]</th> <th colspan="2">Status</th> </tr> <tr> <th>LSP</th> <th>LSN</th> </tr> </thead> <tbody> <tr> <td>_ 4 _ _</td> <td>Automatic on</td> <td>—</td> </tr> <tr> <td>_ 8 _ _</td> <td>—</td> <td>Automatic on</td> </tr> <tr> <td>_ C _ _</td> <td>Automatic on</td> <td>Automatic on</td> </tr> </tbody> </table> <p>When LSP or LSN turns off, [AL. 99 Stroke limit warning] occurs, and WNG (Warning) turns on. When using WNG, enable it by setting [Pr. PD24], [Pr. PD25] and [Pr. PD28].</p>	(Note) Input device		Operation		LSP	LSN	CCW direction	CW direction	1	1	○	○	0	1	—	○	1	0	○	—	0	0	—	—	[Pr. PD01]	Status		LSP	LSN	_ 4 _ _	Automatic on	—	_ 8 _ _	—	Automatic on	_ C _ _	Automatic on	Automatic on	DI-1			
(Note) Input device		Operation																																											
LSP	LSN	CCW direction	CW direction																																										
1	1	○	○																																										
0	1	—	○																																										
1	0	○	—																																										
0	0	—	—																																										
[Pr. PD01]	Status																																												
	LSP	LSN																																											
_ 4 _ _	Automatic on	—																																											
_ 8 _ _	—	Automatic on																																											
_ C _ _	Automatic on	Automatic on																																											
External torque limit selection	TL		Turning off TL will enable [Pr. PA11 Forward torque limit] and [Pr. PA12 Reverse torque limit], and turning on it will enable TLA (Analog torque limit). For details, refer to section 3.6.1 (5).	DI-1	△	△																																							
Internal torque limit selection	TL1		To select [Pr. PC35 Internal torque limit 2], enable TL1 with [Pr. PD03] to [Pr. PD20]. For details, refer to section 3.6.1 (5).	DI-1	△	△																																							
Forward rotation start	ST1		This is used to start the servo motor. The following shows the directions.	DI-1		△																																							
			<table border="1" data-bbox="587 1756 1139 1957"> <thead> <tr> <th colspan="2">(Note) Input device</th> <th rowspan="2">Servo motor starting direction</th> </tr> <tr> <th>ST2</th> <th>ST1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>Stop (servo-lock)</td> </tr> <tr> <td>0</td> <td>1</td> <td>CCW</td> </tr> <tr> <td>1</td> <td>0</td> <td>CW</td> </tr> <tr> <td>1</td> <td>1</td> <td>Stop (servo-lock)</td> </tr> </tbody> </table> <p>Note. 0: Off 1: On</p>	(Note) Input device		Servo motor starting direction	ST2	ST1	0	0	Stop (servo-lock)	0	1	CCW	1	0	CW	1	1	Stop (servo-lock)																									
(Note) Input device		Servo motor starting direction																																											
ST2	ST1																																												
0	0	Stop (servo-lock)																																											
0	1	CCW																																											
1	0	CW																																											
1	1	Stop (servo-lock)																																											
Reverse rotation start	ST2		If both ST1 and ST2 are switched on or off during operation, the servo motor will be decelerated to a stop according to the [Pr. PC02] setting and servo-locked. When " ___ 1 " is set in [Pr. PD23], the servo motor is not servo-locked after deceleration to a stop.																																										

### 3. SIGNALS AND WIRING

---

Device	Symbol	Connector pin No.	Function and application	I/O division	Control mode		
					P	S	T

DI-1



### 3. SIGNALS AND WIRING

Device	Symbol	Connector pin No.	Function and application	I/O division	Control mode																																									
					P	S	T																																							
Forward rotation selection	RS1		This is used to select a servo motor torque generation directions. The following shows the torque generation directions. <table border="1" style="margin: 10px auto;"> <thead> <tr> <th colspan="2">(Note) Input device</th> <th rowspan="2">Torque generation direction</th> </tr> <tr> <th>RS2</th> <th>RS1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>Torque is not generated.</td> </tr> <tr> <td>0</td> <td>1</td> <td>Forward rotation in power running mode/reverse rotation in regenerative mode</td> </tr> <tr> <td>1</td> <td>0</td> <td>Reverse rotation in power running mode/forward rotation in regenerative mode</td> </tr> <tr> <td>1</td> <td>1</td> <td>Torque is not generated.</td> </tr> </tbody> </table> Note. 0: Off 1: On	(Note) Input device		Torque generation direction	RS2	RS1	0	0	Torque is not generated.	0	1	Forward rotation in power running mode/reverse rotation in regenerative mode	1	0	Reverse rotation in power running mode/forward rotation in regenerative mode	1	1	Torque is not generated.																										
(Note) Input device		Torque generation direction																																												
RS2	RS1																																													
0	0	Torque is not generated.																																												
0	1	Forward rotation in power running mode/reverse rotation in regenerative mode																																												
1	0	Reverse rotation in power running mode/forward rotation in regenerative mode																																												
1	1	Torque is not generated.																																												
Reverse rotation selection	RS2																																													
Speed selection 1	SP1		1. For speed control mode This is used to select the command speed for operation. <table border="1" style="margin: 10px auto;"> <thead> <tr> <th colspan="3">(Note) Input device</th> <th rowspan="2">Speed command</th> </tr> <tr> <th>SP3</th> <th>SP2</th> <th>SP1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> <td>VC (Analog speed command)</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>Pr. PC05 Internal speed command 1</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>Pr. PC06 Internal speed command 2</td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> <td>Pr. PC07 Internal speed command 3</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>Pr. PC08 Internal speed command 4</td> </tr> <tr> <td>1</td> <td>0</td> <td>1</td> <td>Pr. PC09 Internal speed command 5</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> <td>Pr. PC10 Internal speed command 6</td> </tr> <tr> <td>1</td> <td>1</td> <td>1</td> <td>Pr. PC11 Internal speed command 7</td> </tr> </tbody> </table> Note. 0: Off 1: On	(Note) Input device			Speed command	SP3	SP2	SP1	0	0	0	VC (Analog speed command)	0	0	1	Pr. PC05 Internal speed command 1	0	1	0	Pr. PC06 Internal speed command 2	0	1	1	Pr. PC07 Internal speed command 3	1	0	0	Pr. PC08 Internal speed command 4	1	0	1	Pr. PC09 Internal speed command 5	1	1	0	Pr. PC10 Internal speed command 6	1	1	1	Pr. PC11 Internal speed command 7	DI-1		Δ	Δ
(Note) Input device				Speed command																																										
SP3	SP2	SP1																																												
0	0	0	VC (Analog speed command)																																											
0	0	1	Pr. PC05 Internal speed command 1																																											
0	1	0	Pr. PC06 Internal speed command 2																																											
0	1	1	Pr. PC07 Internal speed command 3																																											
1	0	0	Pr. PC08 Internal speed command 4																																											
1	0	1	Pr. PC09 Internal speed command 5																																											
1	1	0	Pr. PC10 Internal speed command 6																																											
1	1	1	Pr. PC11 Internal speed command 7																																											
Speed selection 2	SP2			DI-1		Δ	Δ																																							
Speed selection 3	SP3			DI-1		Δ	Δ																																							
			2. For the torque control mode This is used to select the limited speed for operation. <table border="1" style="margin: 10px auto;"> <thead> <tr> <th colspan="3">(Note) Input device</th> <th rowspan="2">Speed limit</th> </tr> <tr> <th>SP3</th> <th>SP2</th> <th>SP1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> <td>VLA (Analog speed limit)</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>Pr. PC05 Internal speed limit 1</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>Pr. PC06 Internal speed limit 2</td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> <td>Pr. PC07 Internal speed limit 3</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>Pr. PC08 Internal speed limit 4</td> </tr> <tr> <td>1</td> <td>0</td> <td>1</td> <td>Pr. PC09 Internal speed limit 5</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> <td>Pr. PC10 Internal speed limit 6</td> </tr> <tr> <td>1</td> <td>1</td> <td>1</td> <td>Pr. PC11 Internal speed limit 7</td> </tr> </tbody> </table> Note. 0: Off 1: On	(Note) Input device			Speed limit	SP3	SP2	SP1	0	0	0	VLA (Analog speed limit)	0	0	1	Pr. PC05 Internal speed limit 1	0	1	0	Pr. PC06 Internal speed limit 2	0	1	1	Pr. PC07 Internal speed limit 3	1	0	0	Pr. PC08 Internal speed limit 4	1	0	1	Pr. PC09 Internal speed limit 5	1	1	0	Pr. PC10 Internal speed limit 6	1	1	1	Pr. PC11 Internal speed limit 7				
(Note) Input device			Speed limit																																											
SP3	SP2	SP1																																												
0	0	0	VLA (Analog speed limit)																																											
0	0	1	Pr. PC05 Internal speed limit 1																																											
0	1	0	Pr. PC06 Internal speed limit 2																																											
0	1	1	Pr. PC07 Internal speed limit 3																																											
1	0	0	Pr. PC08 Internal speed limit 4																																											
1	0	1	Pr. PC09 Internal speed limit 5																																											
1	1	0	Pr. PC10 Internal speed limit 6																																											
1	1	1	Pr. PC11 Internal speed limit 7																																											



### 3. SIGNALS AND WIRING

Device	Symbol	Connector pin No.	Function and application	I/O division	Control mode		
					P	S	T

DI-1

Proportion control      PC  
to the proportional type.

Turn PC on to switch the speed amplifier from the proportional integral type

If the servo motor at a stop is rotated even one pulse due to any external factor, it generates torque to compensate for a position shift. When the servo motor shaft is to be locked mechanically after positioning completion (stop), switching on the PC (Proportion control) upon positioning completion will suppress the unnecessary torque generated to compensate for a position shift.

When the shaft is to be locked for a long time, switch on the PC (Proportion control) and TL (External torque limit selection) at the same time to make the torque less than the rated by TLA (Analog torque limit).

Clear                      CR      CN1-41      Turn CR on to clear the position control counter droop pulse on its leading      DI-1

edge. The pulse width should be 10 ms or longer.  
The delay amount set in [Pr. PB03 Position command acceleration/deceleration time constant] is also cleared. When " \_\_ \_1 " is set to [Pr. PD32], the pulses are always cleared while CR is on.

Electronic gear selection 1      CM1      The combination of CM1 and CM2 enables you to select four different      DI-1  
electronic gear numerators set in the parameters.

(Note) Input device

Electronic gear numerator

CM2      CM1

0      0      Pr. PA06



سازنده انواع ماشین آلات صنعتی و ماشین مخصوص

WWW.CNCREZA.IR

### 3. SIGNALS AND WIRING

Device	Symbol	Connector pin No.	Function and application	I/O division	Control mode														
					P	S	T												
					○														
					△														
Electronic gear	CM2		<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>0</td> <td>1</td> <td>Pr. PC32</td> <td>DI-1</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> </table>					0	1	Pr. PC32	DI-1					DI-1 selection		△	
0	1	Pr. PC32	DI-1																
						△	△												



### 3. SIGNALS AND WIRING

Device	Symbol	Connector pin No.	Function and application	I/O division	Control mode		
					P	S	T

2		1	0	Pr. PC33				DI-1
1	1	Pr. PC34						

Note. 0: Off  
1: On

Gain switching                      CDP                      Turn on CDP to use the values of [Pr. PB29] to [Pr. PB36] and [Pr. PB56] DI-1 to [Pr. PB60] as the load to motor inertia ratio and gain values.




### 3. SIGNALS AND WIRING

Device	Symbol	Connector pin No.	Function and application	I/O division	Control mode																			
					P	S	T																	
Control switching	LOP		<p>«Position/speed control switching mode» This is used to select the control mode in the position/speed control switching mode.</p> <table border="1"> <thead> <tr> <th>(Note) LOP</th> <th>Control mode</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Position</td> </tr> <tr> <td>1</td> <td>Speed</td> </tr> </tbody> </table> <p>Note. 0: Off 1: On</p> <p>«Speed/torque control switch mode» This is used to select the control mode in the speed/torque control switching mode.</p> <table border="1"> <thead> <tr> <th>(Note) LOP</th> <th>Control mode</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Speed</td> </tr> <tr> <td>1</td> <td>Torque</td> </tr> </tbody> </table> <p>Note. 0: Off 1: On</p> <p>«Torque/position control switch mode» This is used to select the control mode in the torque/position control switching mode.</p> <table border="1"> <thead> <tr> <th>(Note) LOP</th> <th>Control mode</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Torque</td> </tr> <tr> <td>1</td> <td>Position</td> </tr> </tbody> </table> <p>Note. 0: Off 1: On</p>	(Note) LOP	Control mode	0	Position	1	Speed	(Note) LOP	Control mode	0	Speed	1	Torque	(Note) LOP	Control mode	0	Torque	1	Position	DI-1		Refer to Function and application.
(Note) LOP	Control mode																							
0	Position																							
1	Speed																							
(Note) LOP	Control mode																							
0	Speed																							
1	Torque																							
(Note) LOP	Control mode																							
0	Torque																							
1	Position																							
Second acceleration/ deceleration selection	STAB2		<p>The device allows selection of the acceleration/deceleration time constant at servo motor rotation in the speed control mode or torque control mode. The s-pattern acceleration/deceleration time constant is always uniform.</p> <table border="1"> <thead> <tr> <th>(Note) STAB2</th> <th>Acceleration/deceleration time constant</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Pr. PC01 Acceleration time constant Pr. PC02 Deceleration time constant</td> </tr> <tr> <td>1</td> <td>Pr. PC30 Acceleration time constant 2 Pr. PC31 Deceleration time constant 2</td> </tr> </tbody> </table> <p>Note. 0: Off 1: On</p>	(Note) STAB2	Acceleration/deceleration time constant	0	Pr. PC01 Acceleration time constant Pr. PC02 Deceleration time constant	1	Pr. PC30 Acceleration time constant 2 Pr. PC31 Deceleration time constant 2	DI-1	△	△												
(Note) STAB2	Acceleration/deceleration time constant																							
0	Pr. PC01 Acceleration time constant Pr. PC02 Deceleration time constant																							
1	Pr. PC30 Acceleration time constant 2 Pr. PC31 Deceleration time constant 2																							

### 3. SIGNALS AND WIRING

(b) Output device

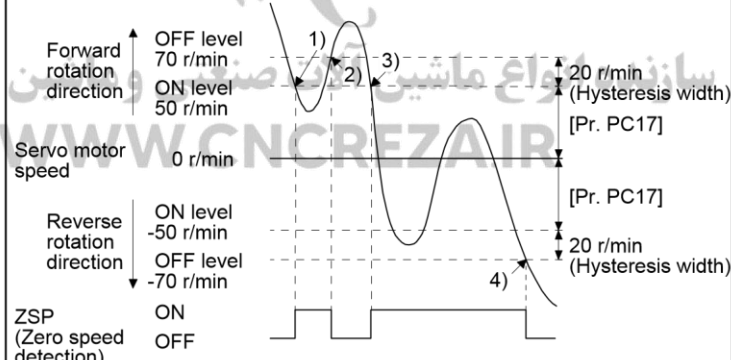
Device	Symbol	Connector pin No.	Function and application	I/O division	Control mode		
					P	S	T
Malfunction	ALM	CN1-48	When an alarm occurs, ALM will turn off. When an alarm does not occur, ALM will turn on after 2.5 s to 3.5 s after power-on. When [Pr. PD34] is " _ _ 1 _ ", an alarming or warning will turn off ALM.	DO-1	○	○	○
Ready	RD	CN1-49	Enabling servo-on to make the servo amplifier ready to operate will turn on RD.	DO-1	○	○	○
In-position	INP	CN1-24	When the number of droop pulses is in the preset in-position range, INP will turn on. The in-position range can be changed using [Pr. PA10]. When the in-position range is increased, INP may be on during low-speed rotation. INP turns on when servo-on turns on.	DO-1	○	△	△
Speed reached	SA		When the servo motor speed reaches the following range, SA will turn on. Set speed ± ((Set speed × 0.05) + 20) r/min When the preset speed is 20 r/min or less, SA always turns on. SA does not turn on even when the SON (Servo-on) is turned off or the servo motor speed by the external force reaches the preset speed while both ST1 (Forward rotation start) and ST2 (reverse rotation start) are off.	DO-1	○	○	○
Limiting speed	VLC		VLC turns on when speed reaches a value limited with any of [Pr. PC05 Internal speed limit 1] to [Pr. PC11 Internal speed limit 7] or VLA (Analog speed limit). This turns off when SON (Servo-on) turns off.	DO-1	△	△	△
Limiting torque	TLC		TLC turns on when a generated torque reaches a value set with any of [Pr. PA11 Forward torque limit], [Pr. PA12 Reverse torque limit], or TLA (Analog torque limit).	DO-1	△	△	△
Zero speed detection	ZSP	CN1-23	ZSP turns on when the servo motor speed is zero speed (50r/min) or less. Zero speed can be changed with [Pr. PC17].   <p>Forward rotation direction: OFF level 70 r/min, ON level 50 r/min Reverse rotation direction: ON level -50 r/min, OFF level -70 r/min Servo motor speed: 0 r/min ZSP (Zero speed detection): ON, OFF Hysteresis width: 20 r/min [Pr. PC17]</p> <p>ZSP will turn on when the servo motor is decelerated to 50 r/min (at 1)), and will turn off when the servo motor is accelerated to 70 r/min again (at 2)). ZSP will turn on when the servo motor is decelerated again to 50 r/min (at 3)), and will turn off when the servo motor speed has reached -70 r/min (at 4)). The range from the point when the servo motor speed has reached on level, and ZSP turns on, to the point when it is accelerated again and has reached off level is called hysteresis width. Hysteresis width is 20 r/min for this servo amplifier.</p>	DO-1	○	○	○
Electromagnetic brake interlock	MBR		When using the device, set operation delay time of the electromagnetic brake in [Pr. PC16]. When a servo-off status or alarm occurs, MBR will turn off.	DO-1	△	△	△
Warning	WNG		When warning has occurred, WNG turns on. When a warning is not occurring, turning on the power will turn off WNG after 2.5 s to 3.5 s.	DO-1	△	△	△

### 3. SIGNALS AND WIRING

Device	Connector		mode pin No.	division	I/O	Control		
	Symbol	Function and application				P	S	T
Alarm code	ACD0	(CN1-24) To use these signals, set " _ _ _ 1" in [Pr. PD34]. This signal is outputted when an alarm occurs.			DI-1			
	ACD1	(CN1-23) When an alarm is not occurring, respective ordinary signals are outputted. For details of the alarm codes, refer to chapter 8.						
	ACD2	(CN1-49) When you select alarm code output while MBR or ALM is selected for CN1-23, CN1-24, or CN1-49 pin, [AL. 37 Parameter error] will occur.						
Variable gain	CDPS	CDPS turns on during gain switching.			DO-1 selection			
During tough drive	MTTR	When a tough drive is enabled in [Pr. PA20], activating the instantaneous power failure tough drive will turn on MTTR.			DO-1			

#### (2) Input signal


Device	Connector		mode pin No.	division	I/O	Control		
	Symbol	Function and application				P	S	T
Analog torque limit	TLA	CN1-27 To use the signal, enable TL (External torque limit selection) with [Pr. PD03] to [Pr. PD20]. When TLA is enabled, torque is limited in the full servo motor output torque range. Apply 0 V to +10 V DC between TLA and LG. Connect the positive terminal of the power supply to TLA. The maximum torque is generated at +10 V. (Refer to section 3.6.1 (5).) If a value equal to or larger than the maximum torque is inputted to TLA, the value is clamped at the maximum torque. Resolution: 10 bits			Analog input			

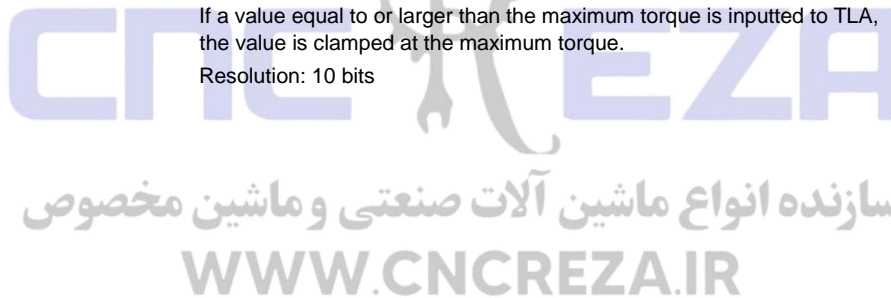

						△	△	△
						△	△	△
						△	△	△

### 3. SIGNALS AND WIRING

				△	△
Analog torque	TC		This is used to control torque in the full servo motor output torque range.	Analog	○
					○
					○
				○	

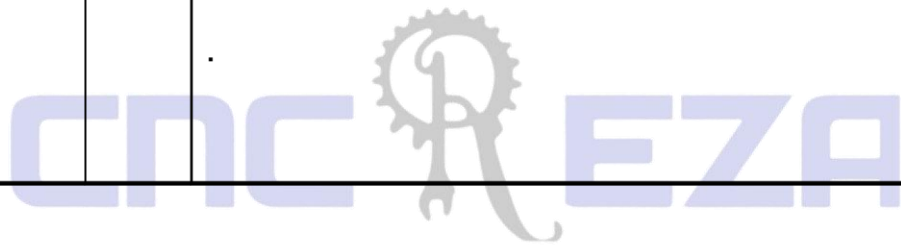

سازنده انواع ماشین آلات صنعتی و ماشین مخصوص

WWW.CNCREZA.IR

### 3. SIGNALS AND WIRING

command			Apply 0 V to $\pm 8$ V DC between TC and LG. The maximum torque is input generated at $\pm 8$ V. (Refer to section 3.6.3 (1).) The speed at $\pm 8$ V can be changed with [Pr. PC13]. If a value equal to or larger than the maximum torque is inputted to TC, the value is clamped at the maximum torque.	
Analog speed command	VC	CN1-2	Apply 0 V to $\pm 10$ V DC between VC and LG. Speed set in [Pr. PC12] is provided at $\pm 10$ V. (Refer to section 3.6.2 (1).) If a value equal to or larger than the permissible speed is inputted to VC, the value is clamped at the permissible speed. Resolution: 14 bits or equivalent	Analog input
Analog speed limit	VLA		Apply 0 V to $\pm 10$ V DC between VLA and LG. Speed set in [Pr. PC12] is provided at $\pm 10$ V. (Refer to section 3.6.3 (3).) If a limited value equal to or larger than the permissible speed is inputted to VLA, the value is clamped at the permissible speed.	Analog input
Forward rotation pulse train	PP	CN1-10	This is used to enter a command pulse train.	DI-2
Reverse rotation pulse train	NP	CN1-35	The command input pulse train form, pulse train logic, and command input	Reverse
rotation pulse train	PG	CN1-11	pulse train filter are changed in [Pr. PA13].	
rotation pulse train	NG	CN1-36	For open-collector type, set [Pr. PA13] to "_ 3 _ _". For differential receiver type, set [Pr. PA13] depending on the maximum input frequency. For open-collector type (sink input interface) The maximum input frequency is 200 kpulses/s. For A-phase/B-phase pulse train, 200 kpulses/s will be the frequency after multiplication by four. Input the forward rotation pulse train between PP and DOCOM. Input the reverse rotation pulse train between NP and DOCOM. For differential receiver type The maximum input frequency is 4 Mpulses/s. For A-phase/B-phase pulse train, 4 Mpulses/s will be the frequency after multiplication by four. Input the forward rotation pulse train between PG and PP. Input the reverse rotation pulse train between NG and NP.	

#### (3) Output signal

Device	Symbol	Connector pin No.	Function and application	I/O division	Control mode		
					P	S	T
Encoder Aphase pulse (differential line driver)	LA LAR	CN1-4 CN1-5	These devices output pulses of encoder output pulse set in [Pr. PA15] in the differential line driver type. In CCW rotation of the servo motor, the encoder B-phase pulse lags the encoder A-phase pulse by a phase angle of $\sqrt{2}$ .	DO-2	○	○	○
Encoder Bphase pulse (differential line driver)	LB LBR	CN1-6 CN1-7	The relation between rotation direction and phase difference of the Aphase and B-phase pulses can be changed with [Pr. PC19].				
Encoder Zphase pulse (differential line driver)	LZ LZR	CN1-8 CN1-9	The encoder zero-point signal is outputted in the differential line driver type. One pulse is outputted per servo motor revolution. This turns on when the zero-point position is reached. (negative logic) The minimum pulse width is about 400 $\mu$ s. For home position return using this pulse, set the creep speed to 100 r/min. or less.	DO-2	○	○	○
Encoder Zphase pulse (open-collector)	OP	CN1-33	The encoder zero-point signal is outputted in the open-collector type.	DO-2	○	○	○
Analog monitor 1	MO1	CN1-26	This is used to output the data set in [Pr. PC14] to between MO1 and LG in terms of voltage. Resolution: 10 bits or equivalent	Analog output	○	○	○



### 3. SIGNALS AND WIRING

Analog monitor 2	MO2	CN1-29	This signal outputs the data set in [Pr. PC15] to between MO2 and LG in terms of voltage. Resolution: 10 bits or equivalent	Analog output	○	○	○
------------------	-----	--------	--	---------------	---	---	---

#### (4) Power supply

Device	Connector Symbol	Function and application	mode pin No.	division	Control		
					I/O	P	S
Digital I/F power supply input	DICOM CN1-21	Input 24 V DC (24 V DC $\pm$ 10% 300 mA) for I/O interface. The power supply capacity changes depending on the number of I/O interface points to be used. For sink interface, connect + of 24 V DC external power supply. For source interface, connect - of 24 V DC external power supply.					



3. SIGNALS AND WIRING							
Open-collector	OPC	CN1-12	When inputting a pulse train in the open-collector type with sink interface,		○		
					○	○	○
					○	○	○
					○	○	○



### 3. SIGNALS AND WIRING

input	sink interface	supply this terminal with the positive (+) power of 24 V DC. power supply
Digital I/F DOCOM CN1-46	Common terminal of input signal such as EM2 of the servo amplifier. This	common
CN1-47	is separated from LG.	
		For sink interface, connect - of 24 V DC external power supply.
		For source interface, connect + of 24 V DC external power supply.
Control common	LG CN1-3	This is a common terminal for TLA, TC, VC, VLA, OP, MO1, and MO2.
	CN1-28	Pins are connected internally.
	CN1-30	
	CN1-34	
Shield	SD Plate	Connect the external conductor of the shielded wire.

#### 3.6 Detailed explanation of signals

##### 3.6.1 Position control mode

POINT		
●	Logic of a positioning module and command pulse as follows. Q series positioning module	
-	Signal type	Command pulse logic setting
		Q series/L series positioning module Pr. 23 setting
	Differential line driver type	MR-JE-_A servo amplifier [Pr. PA13] setting
		Positive logic
		Negative logic
Positive logic (Note)		
Negative logic (Note)		
For Q series and L series, the logic means N-side waveform. Therefore, reverse the input pulse logic of servo amplifier.		
●	Open-collector positioning module	
-	Signal type	Command pulse logic setting
		F series positioning module (fixed)
	Differential line driver type	MR-JE-_A servo amplifier [Pr. PA13] setting
Negative logic		
Note.	Negative logic	
-		
Open-collector		


(1) Pulse train input

### 3. SIGNALS AND WIRING

(a) Input pulse waveform selection

You can input command pulses in any of three different forms, and can choose positive or negative logic. Set the command pulse train form in [Pr. PA13]. Refer to section 5.2.1 for details.


(b) Connection and waveform 1) Open-collector type Connect as follows.

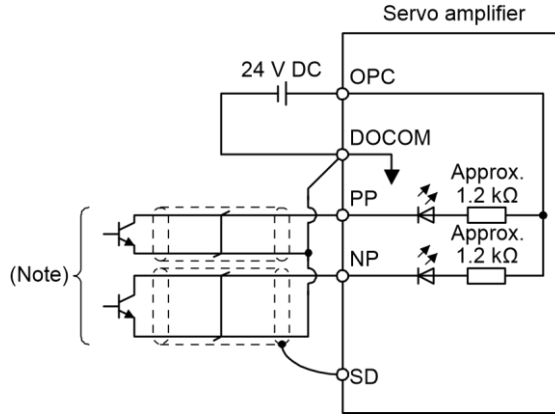


Note. Pulse train input interface is comprised of a photocoupler.

If a resistor is connected to the pulse train signal line, it may malfunction due to reduction in current.

The following section explains about the case where the negative logic and the forward/reverse rotation pulse trains are set to " \_ 1 0" in [Pr. PA13].

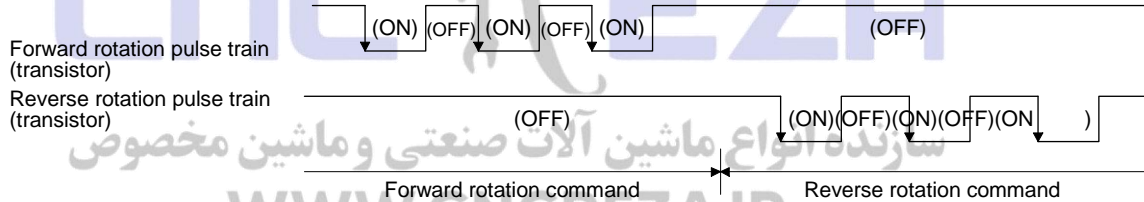

2) Differential line driver type Connect as follows.

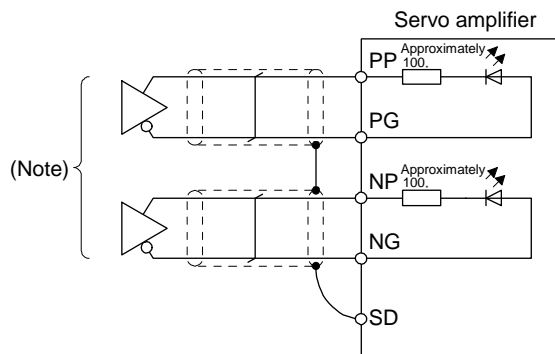


Note. Pulse train input interface is comprised of a photocoupler.

If a resistor is connected to the pulse train signal line, it may malfunction due to reduction in current.


### 3. SIGNALS AND WIRING

The following example shows that an input waveform has been set to the negative logic and forward/reverse rotation pulse trains by setting " \_\_ 1 0" in [Pr. PA13]. The waveforms of PP, PG, NP, and NG are based on LG.

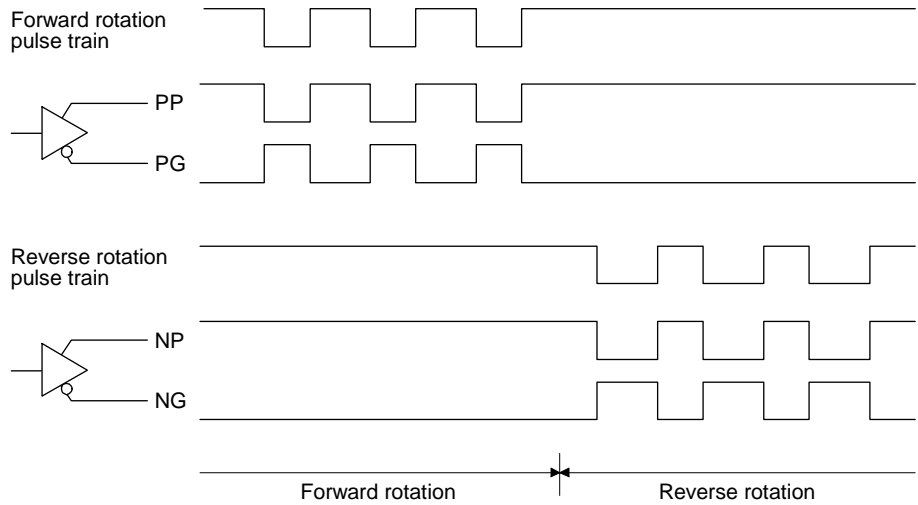


#### (2) INP (In-position)

INP turns on when the number of droop pulses in the deviation counter falls within the preset in-position range ([Pr. PA10]). INP may turn on continuously during a low-speed operation with a large value set as the in-position range.

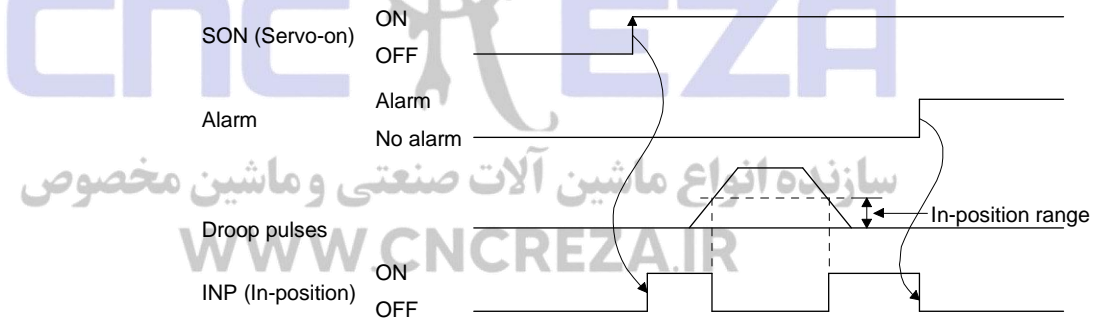

#### (3) RD (Ready)

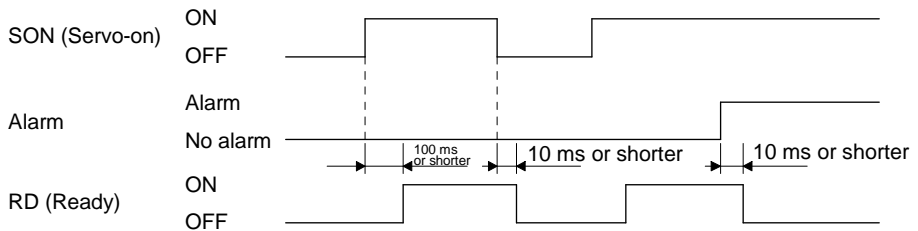

#### (4) Electronic gear switching

The combination of CM1 and CM2 enables you to select four different electronic gear numerators set in the parameters.

As soon as CM1/CM2 is turned on or off, the numerator of the electronic gear changes. Therefore, if a shock occurs at switching, use the position smoothing ([Pr. PB03]) to relieve the shock.

(Note) Input device		Electronic gear numerator
CM2	CM1	

### 3. SIGNALS AND WIRING

0	0	Pr. PA06
0	1	Pr. PC32
1	0	Pr. PC33
1	1	Pr. PC34


Note. 0: Off  
1: On

#### (5) Torque limit



**CAUTION** If the torque limit is canceled during servo-lock, the servo motor may suddenly rotate according to position deviation in respect to the command position.

##### (a) Torque limit and torque

By setting [Pr. PA11 Forward rotation torque limit] or [Pr. PA12 Reverse rotation torque limit], torque is always limited to the maximum value during operation. A relation between the limit value and servo motor torque is as follows.

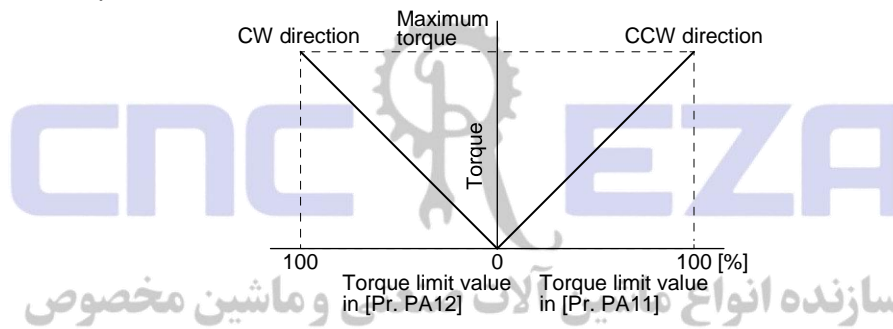

A relation between the applied voltage of TLA (Analog torque limit) and the torque limit value of the servo motor is as follows. Torque limit values will vary about 5% relative to the voltage depending on products. At the voltage of less than 0.05 V, torque may vary as it may not be limited sufficiently. Therefore, use this function at the voltage of 0.05 V or more.

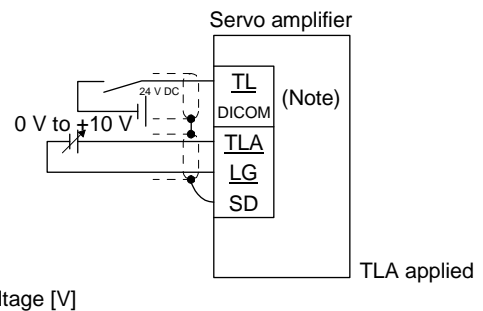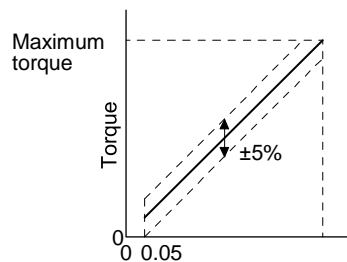

TLA applied voltage vs. torque limit value

Connection example

Note. This diagram shows sink I/O interface. For source I/O interface, refer to section 3.9.3.

##### (b) Torque limit value selection

The following shows how to select a torque limit using TL (External torque limit selection) from [Pr.

### 3. SIGNALS AND WIRING

PA11 Forward torque limit] or [Pr. PA12 Reverse torque limit] and TLA (Analog torque limit). When TL1 (Internal torque limit selection) is enabled with [Pr. PD03] to [Pr. PD22], you can select [Pr. PC35 Internal torque limit 2].

However, if [Pr. PA11] and [Pr. PA12] value is less than the limit value selected by TL/TL1, [Pr. PA11] and [Pr. PA12] value will be enabled.

(Note) Input device		Limit value status	Enabled torque limit value	
TL1	TL		CCW power running/CW regeneration	CW power running/CCW regeneration
0	0		Pr. PA11	Pr. PA12
0	1	TLA > Pr. PA11 Pr. PA12	Pr. PA11	Pr. PA12
		TLA < Pr. PA11 Pr. PA12	TLA	TLA
1	0	Pr. PC35 > Pr. PA11 Pr. PA12	Pr. PA11	Pr. PA12
		Pr. PC35 < Pr. PA11 Pr. PA12	Pr. PC35	Pr. PC35
1	1	TLA > Pr. PC35	Pr. PC35	Pr. PC35
		TLA < Pr. PC35	TLA	TLA

Note. 0: Off

1: On

(c) TLC (Limiting torque)

TLC turns on when the servo motor torque reaches the torque limited using the forward rotation torque limit, reverse rotation torque limit or analog torque limit.



### 3. SIGNALS AND WIRING


#### 3.6.2 Speed control mode

##### (1) Speed setting

##### (a) Speed command and speed

The servo motor is run at the speeds set in the parameters or at the speed set in the applied voltage of VC (Analog speed command). A relation between VC (Analog speed command) applied voltage and the servo motor speed is as follows.

Rated speed is achieved at  $\pm 10$  V with initial setting. The speed at  $\pm 10$  V can be changed with [Pr. PC12].

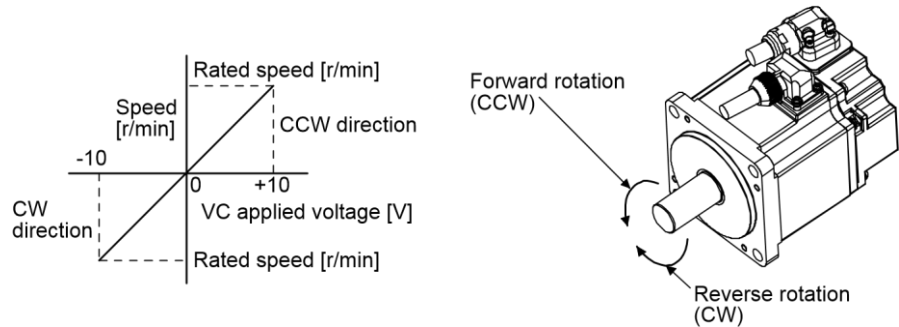

The following table indicates the rotation direction according to ST1 (Forward rotation start) and ST2 (Reverse rotation start) combination.


(Note 1) Input device		(Note 2) Rotation direction			
ST2	ST1	/C (Analog speed command)			Internal speed command
		Polarity: +	0 V	Polarity: -	
0	0	Stop (servo-lock)	Stop (servo-lock)	Stop (servo-lock)	Stop (servo-lock)
0	1	CCW	Stop (no servo-lock)	CW	CCW
1	0	CW	Stop (no servo-lock)	CCW	CW
1	1	Stop (servo-lock)	Stop (servo-lock)	Stop (servo-lock)	Stop (servo-lock)

Note 1. 0: Off

1: On

2. If the torque limit is canceled during servo-lock, the servo motor may suddenly rotate according to position deviation in respect to the command position.

Normally, connect as follows.

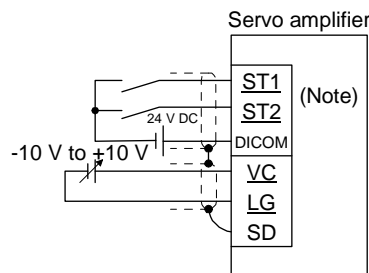

Note. This diagram shows sink I/O interface. For source I/O interface, refer to section 3.9.3.



### 3. SIGNALS AND WIRING

(b) Speed command value selection

To select VC (Analog speed command) and a speed command value of internal speed commands 1 to 7, enable SP1 (Speed selection 1), SP2 (Speed selection 2), and SP3 (Speed selection 3) with [Pr. PD03] to [Pr. PD20].

(Note) Input device			Speed command value
SP3	SP2	SP1	
0	0	0	VC (Analog speed command)
0	0	1	Pr. PC05 Internal speed command 1
0	1	0	Pr. PC06 Internal speed command 2
0	1	1	Pr. PC07 Internal speed command 3
1	0	0	Pr. PC08 Internal speed command 4
1	0	1	Pr. PC09 Internal speed command 5
1	1	0	Pr. PC10 Internal speed command 6
1	1	1	Pr. PC11 Internal speed command 7


Note. 0: Off  
1: On

You can change the speed during rotation. To accelerate/decelerate, set acceleration/deceleration time constant in [Pr. PC01] or [Pr. PC02].

When the internal speed commands are used to command a speed, the speed does not vary with the ambient temperature.

(2) SA (Speed reached)

SA turns on when the servo motor speed has nearly reached the speed set to the internal speed command or analog speed command.

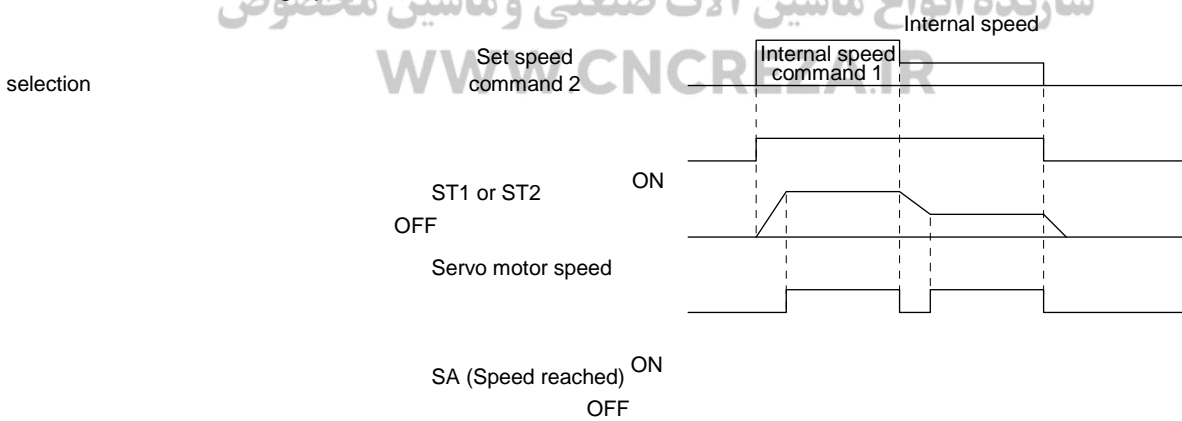

(3) Torque limit

As in section 3.6.1 (5)

#### 3.6.3 Torque control mode


(1) Torque limit

(a) Torque command and torque

The following shows a relation between the applied voltage of TC (Analog torque command) and the torque by the servo motor.

### 3. SIGNALS AND WIRING

The maximum torque is generated at  $\pm 8$  V. The speed at  $\pm 8$  V can be changed with [Pr. PC13].

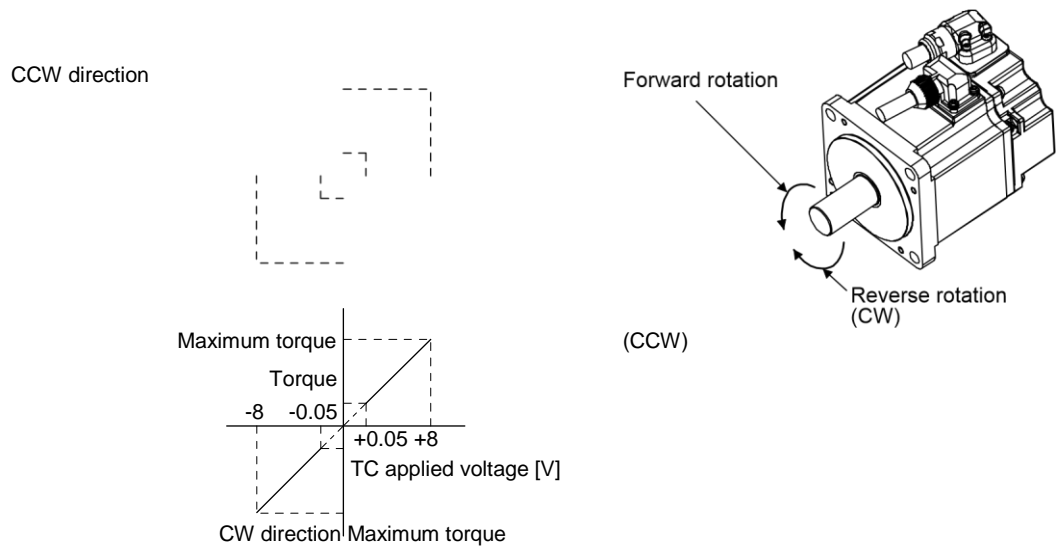

Generated torque command values will vary about 5% relative to the voltage depending on products. The torque may vary if the voltage is low (-0.05 V to 0.05 V) and the actual speed is close to the limit value. In such a case, increase the speed limit value.

The following table indicates the torque generation directions determined by RS1 (Forward rotation selection) and RS2 (Reverse rotation selection) when TC (Analog torque command) is used.


(Note) Input device		Rotation direction		
RS2	RS1	TC (Analog torque command)		
		Polarity: +	0 V	Polarity: -
0	0	Torque is not generated.	Torque is not generated.	Torque is not generated.
0	1	CCW (Forward rotation in power running mode/reverse rotation in regenerative mode)		CW (Reverse rotation in power running mode/forward rotation in regenerative mode)
1	0	CW (Reverse rotation in power running mode/forward rotation in regenerative mode)		CCW (Forward rotation in power running mode/reverse rotation in regenerative mode)
1	1	Torque is not generated.		Torque is not generated.

Note. 0: Off

1: On

Normally, connect as follows.


### 3. SIGNALS AND WIRING

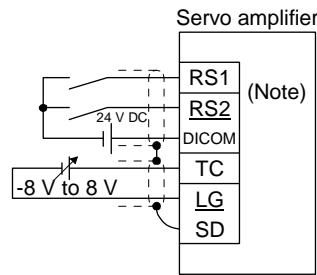

Note. This diagram shows sink I/O interface. For source I/O interface, refer to section 3.9.3.

(b) Analog torque command offset

Using [Pr. PC38], the offset voltage of -9999 mV to 9999 mV can be added to the TC applied voltage as follows.

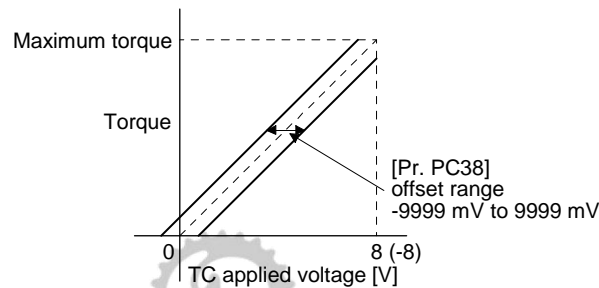

(2) Torque limit

By setting [Pr. PA11 Forward rotation torque limit] or [Pr. PA12 Reverse rotation torque limit], torque is always limited to the maximum value during operation. A relation between limit value and servo motor torque is as in section 3.6.1 (5).



Note that TLA (Analog torque limit) is unavailable.

(3) Speed limit

(a) Speed limit value and speed

The speed is limited to the values set with [Pr. PC05 Internal speed limit 0] to [Pr. PC11 Internal speed limit 7] or the value set in the applied voltage of VLA (Analog speed limit). A relation between VLA (Analog speed limit) applied voltage and the servo motor speed is as follows.

When the servo motor speed reaches the speed limit value, torque control may become unstable. Make the set value more than 100 r/min greater than the desired speed limit value.

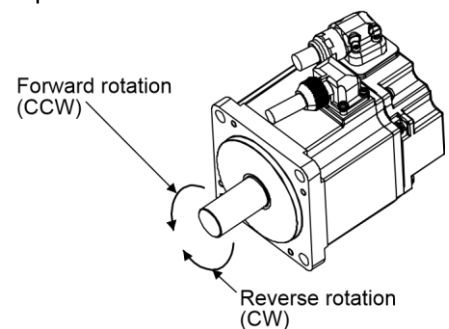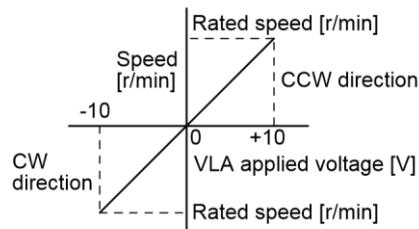


The following table indicates the limit direction according to RS1 (Forward rotation selection) and RS2 (Reverse rotation selection) combination.

### 3. SIGNALS AND WIRING

(Note) Input device		Speed limit direction		
RS1	RS2	VLA (Analog speed limit)		Internal speed command
		Polarity: +	Polarity: -	
1	0	CCW	CW	CCW
0	1	CW	CCW	CW

Note. 0: Off  
1: On

Normally, connect as follows.

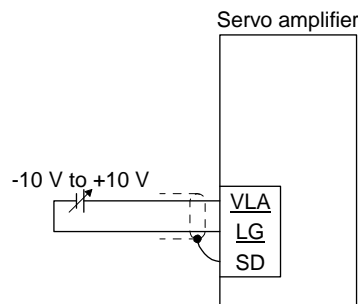

#### (b) Speed limit value selection

To select VLA (Analog speed limit) and a speed limit value of internal speed limit 1 to 7, enable SP1 (Speed selection 1), SP2 (Speed selection 2), and SP3 (Speed selection 3) with [Pr. PD03] to [Pr. PD20].

(Note) Input device			Speed limit
SP3	SP2	SP1	
0	0	0	VLA (Analog speed limit)
0	0	1	Pr. PC05 Internal speed limit 1
0	1	0	Pr. PC06 Internal speed limit 2
0	1	1	Pr. PC07 Internal speed limit 3
1	0	0	Pr. PC08 Internal speed limit 4
1	0	1	Pr. PC09 Internal speed limit 5
1	1	0	Pr. PC10 Internal speed limit 6
1	1	1	Pr. PC11 Internal speed limit 7

Note. 0: Off  
1: On

When the internal speed limits 1 to 7 are used to limit a speed, the speed does not vary with the ambient temperature.

#### (c) VLC (Limiting speed)

VLC turns on when the servo motor speed reaches a speed limited with internal speed limits 1 to 7 or analog speed limit.

#### 3.6.4 Position/speed control switching mode

Set " \_ \_ \_ 1" in [Pr. PA01] to switch to the position/speed control switching mode.

### 3. SIGNALS AND WIRING

#### (1) LOP (control switching)


Use LOP (Control switching) to switch between the position control mode and the speed control mode with an external contact. The following shows a relation between LOP and control modes.

(Note) LOP	Control mode
0	Position control mode
1	Speed control mode

Note. 0: Off  
1: On

You can switch the control mode in the zero speed status. To ensure safety, switch modes after the servo motor has stopped. When position control mode is switched to speed control mode, droop pulses will be reset.

If LOP is switched on/off at the speed higher than the zero speed, the control mode cannot be changed regardless of the speed. The following shows a switching timing chart.

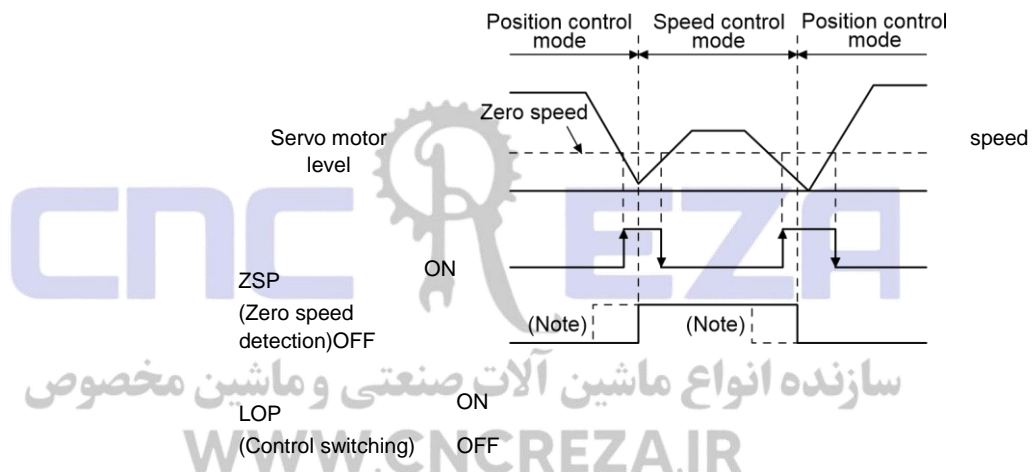

Note. When ZSP is not turned on, the control mode is not switched even if LOP is turned on/off. After LOP is turned on/off, even if ZSP is turned on, the control mode is not switched.

#### (2) Torque limit in position control mode As in section 3.6.1 (5)


#### (3) Speed setting in speed control mode

##### (a) Speed command and speed

The servo motor is run at the speeds set in the parameters or at the speed set in the applied voltage of VC (Analog speed command). The relation between an applied voltage of VC (Analog speed command) and servo motor speed, and the rotation direction with turning on ST1/ST2 are the same as section 3.6.2 (1) (a).

Normally, connect as follows.

### 3. SIGNALS AND WIRING

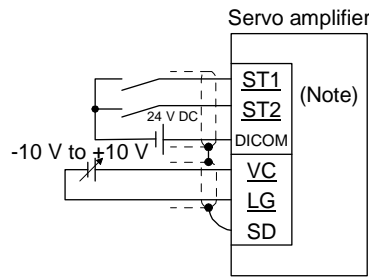

Note. This diagram shows sink I/O interface. For source I/O interface, refer to section 3.9.3.

#### (b) Speed command value selection

To select VC (Analog speed command) and a speed command value of internal speed commands 1 to 7, enable SP1 (Speed selection 1), SP2 (Speed selection 2), and SP3 (Speed selection 3) with [Pr. PD03] to [Pr. PD20].

(Note) Input device			Speed command value
SP3	SP2	SP1	
0	0	0	VC (Analog speed command)
0	0	1	Pr. PC05 Internal speed command 1
0	1	0	Pr. PC06 Internal speed command 2
0	1	1	Pr. PC07 Internal speed command 3
1	0	0	Pr. PC08 Internal speed command 4
1	0	1	Pr. PC09 Internal speed command 5
1	1	0	Pr. PC10 Internal speed command 6
1	1	1	Pr. PC11 Internal speed command 7

سازنده انواع ماشین آلات صنعتی و ماشین مخصوص  
 Note. 0: Off  
 1: On  
 WWW.CNCREZA.IR

You can change the speed during rotation. Acceleration/deceleration is performed with the setting values of [Pr. PC01] and [Pr. PC02].

When the internal speed commands 1 to 7 are used to command a speed, the speed does not vary with the ambient temperature.

#### (c) SA (Speed reached) As in section 3.6.2 (2)

#### 3.6.5 Speed/torque control switching mode

Set " \_\_\_ 3" in [Pr. PA01] to switch to the speed/torque control switching mode.

#### (1) LOP (control switching)


Use LOP (Control switching) to switch between the speed control mode and the torque control mode with an external contact. The following shows a relation between LOP and control modes.

(Note) LOP	Control mode
0	Speed control mode
1	Torque control mode

### 3. SIGNALS AND WIRING

Note. 0: Off  
1: On

The control mode may be switched at any time. The following shows a switching timing chart.

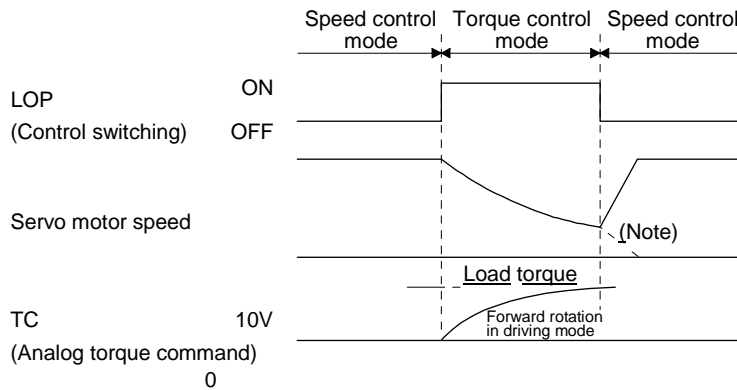

Note. When ST1 (Forward rotation start) and ST2 (Reverse rotation start) are switched off as soon as a mode is switched to the speed control, the servo motor comes to a stop according to the deceleration time constant. A shock may occur at switching control modes.

(2) Speed setting in speed control mode  
As in section 3.6.2 (1)


(3) Torque limit in speed control mode As  
in section 3.6.1 (5)

(4) Speed limit in torque control mode (a)  
Speed limit value and speed

The speed is limited to the limit value of the parameter or the value set in the applied voltage of VLA (Analog speed limit).

A relation between the VLA (Analog speed limit) applied voltage and the limit value is as in section 3.6.3 (3) (a).

Normally, connect as follows.

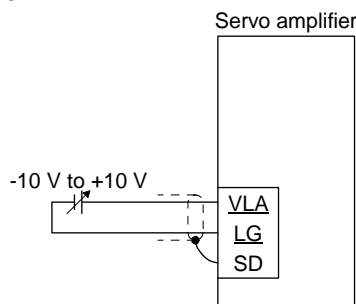

(b) Speed limit value selection

To select VLA (Analog speed limit) and a speed limit value of internal speed limit 1 to 7, enable SP1 (Speed selection 1), SP2 (Speed selection 2), and SP3 (Speed selection 3) with [Pr. PD03] to [Pr. PD20].

### 3. SIGNALS AND WIRING

(Note) Input device			Speed limit
SP3	SP2	SP1	
0	0	0	VLA (Analog speed limit)
0	0	1	Pr. PC05 Internal speed limit 1
0	1	0	Pr. PC06 Internal speed limit 2
0	1	1	Pr. PC07 Internal speed limit 3
1	0	0	Pr. PC08 Internal speed limit 4
1	0	1	Pr. PC09 Internal speed limit 5
1	1	0	Pr. PC10 Internal speed limit 6
1	1	1	Pr. PC11 Internal speed limit 7

Note. 0: Off  
1: On

When the internal speed command 1 is used to command a speed, the speed does not vary with the ambient temperature.

(c) VLC (Limiting speed) As in section 3.6.3 (3) (c)

(5) Torque control in torque control mode  
As in section 3.6.3 (1)

(6) Torque limit in torque control mode As  
in section 3.6.3 (2)

#### 3.6.6 Torque/position control switching mode

Set " \_ \_ \_ 5" in [Pr. PA01] to switch to the torque/position control switching mode.

(1) LOP (control switching)

Use LOP (Control switching) to switch between the torque control mode and the position control mode with an external contact. The following shows a relation between LOP and control modes.

(Note) LOP	Control mode
0	Torque control mode
1	Position control mode

Note. 0: Off  
1: On


You can switch the control mode in the zero speed status. To ensure safety, switch modes after the servo motor has stopped. When position control mode is switched to torque control mode, droop pulses will be reset.

If LOP is switched on/off at the speed higher than the zero speed, the control mode cannot be changed regardless of the speed. The following shows a switching timing chart.

Position control Torque control Position control



### 3. SIGNALS AND WIRING

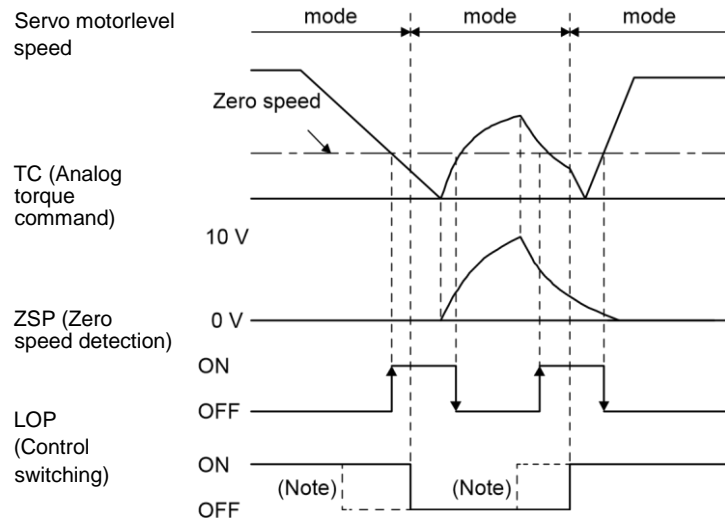

Note. When ZSP is not turned on, the control mode is not switched even if LOP is turned on/off. After LOP is turned on/off, even if ZSP is turned on, the control mode is not switched.

- (2) Speed limit in torque control mode As in section 3.6.3 (3)
- (3) Torque control in torque control mode As in section 3.6.3 (1)
- (4) Torque limit in torque control mode As in section 3.6.3 (2)
- (5) Torque limit in position control mode As in section 3.6.1 (5)



#### 3.7 Forced stop deceleration function

POINT	
●	s not related to the forced stop function occur, control of motor can not be guaranteed. (Refer to chapter 8.)
●	control mode, the forced stop deceleration function is not available.


##### 3.7.1 Forced stop deceleration function

When EM2 is turned off, dynamic brake will start to stop the servo motor after forced stop deceleration. During this sequence, the display shows [AL. E6 Servo forced stop warning].

During normal operation, do not use EM2 (Forced stop 2) to alternate stop and drive. The the servo amplifier life may be shortened.


- (1) Connection diagram

### 3. SIGNALS AND WIRING

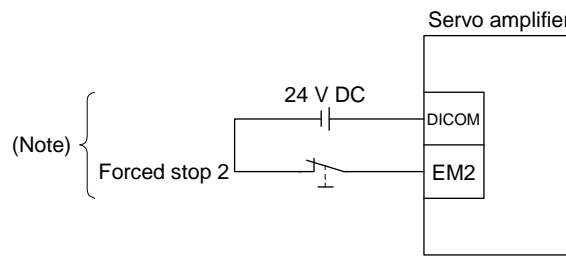


Note. This diagram shows sink I/O interface. For source I/O interface, refer to section 3.9.3.

#### (2) Timing chart

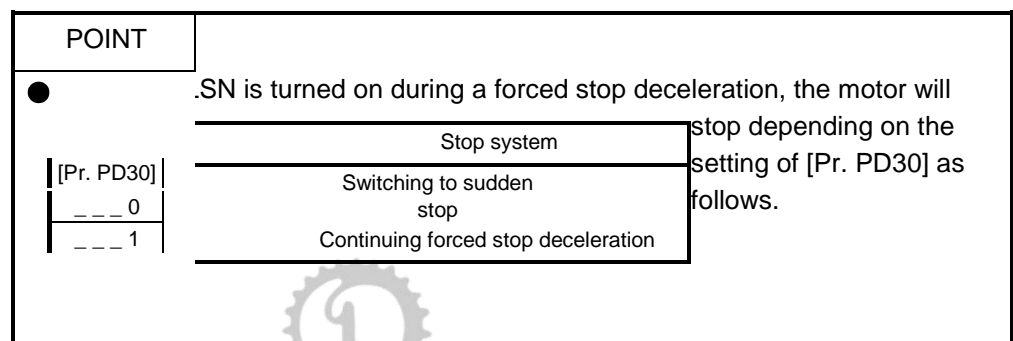

When EM2 (Forced stop 2) turns off, the motor will decelerate according to [Pr. PC51 Forced stop deceleration time constant]. Once the motor speed is below [Pr. PC17 Zero speed] after completion of the deceleration command, base power is cut and the dynamic brake activates.

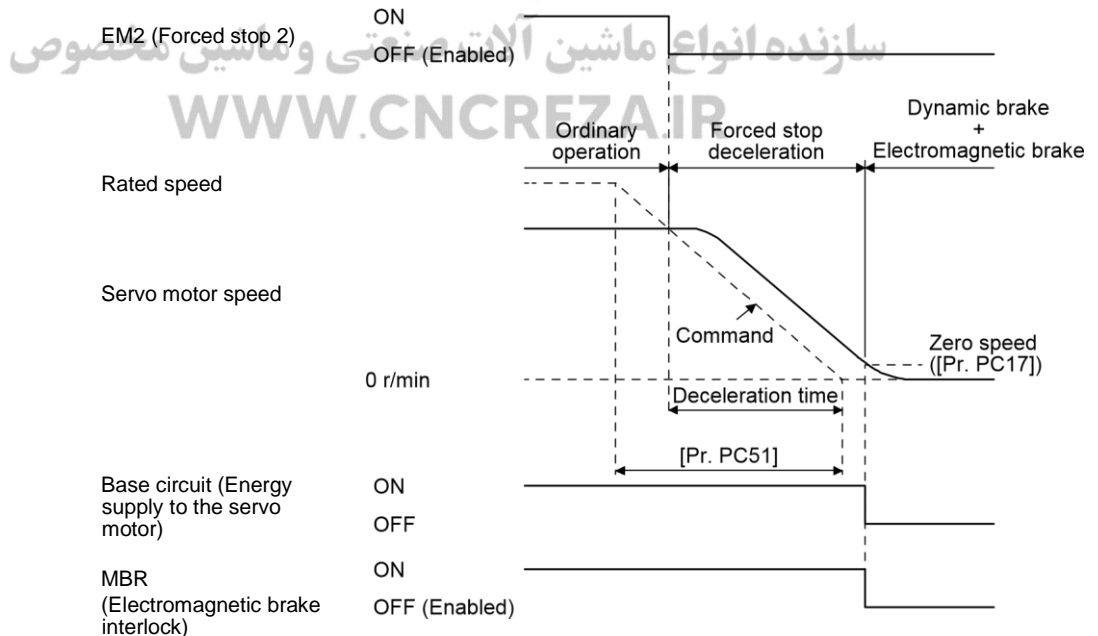


#### 3.7.2 Base circuit shut-off delay time function

The base circuit shut-off delay time function is used to prevent vertical axis from dropping at a forced stop (EM2 goes off) or alarm occurrence due to delay time of the electromagnetic brake. Use [Pr. PC16] to set the

### 3. SIGNALS AND WIRING

delay time between completion of EM2 (Forced stop 2) or activation of MBR (Electromagnetic brake interlock) due to an alarm occurrence, and shut-off of the base circuit.

#### (1) Timing chart

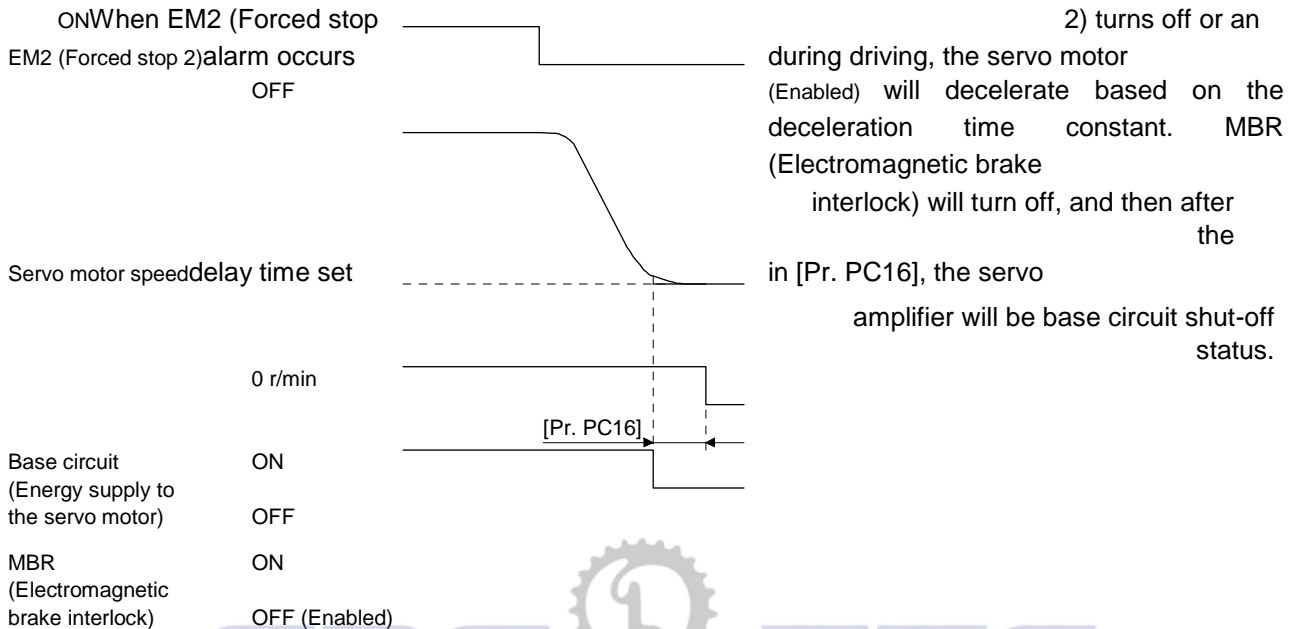

#### (2) Adjustment

While the servo motor is stopped, turn off EM2 (Forced stop 2), adjust the base circuit shut-off delay time in [Pr. PC16], and set the value to approximately 1.5 times of the smallest delay time in which the servo motor shaft does not freefall.

#### 3.7.3 Vertical axis freefall prevention function

The vertical axis freefall prevention function avoids machine damage by pulling up the shaft slightly like the following case.


When the servo motor is used for operating vertical axis, the servo motor electromagnetic brake and the base circuit shut-off delay time function avoid dropping axis at forced stop. However, the functions may not avoid dropping axis a few  $\mu\text{m}$  due to the backlash of the servo motor electromagnetic brake.

The vertical axis freefall prevention function is enabled with the following conditions.

- Other than "0" is set to [Pr. PC54 Vertical axis freefall prevention compensation amount].
- The servo motor speed decelerates lower than the value of zero speed by turning off EM2 (Forced stop 2) or by an alarm occurrence.
- The base circuit shut-off delay time function is enabled.
- EM2 (Forced stop 2) turned off or an alarm occurred while the servo motor speed is zero speed or less.

#### (1) Timing chart

### 3. SIGNALS AND WIRING

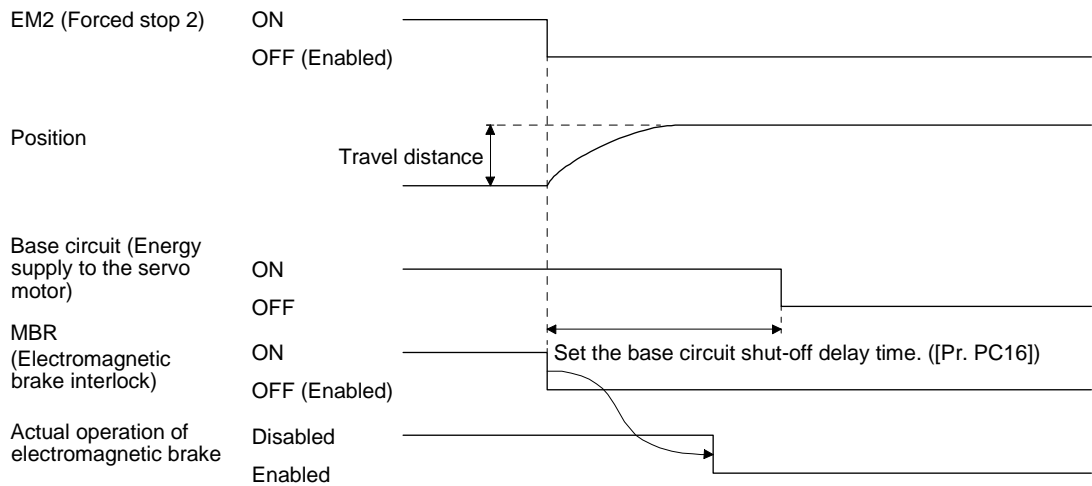

#### (2) Adjustment

- Set the freefall prevention compensation amount in [Pr. PC54].
- While the servo motor is stopped, turn off the EM2 (Forced stop 2). Adjust the base circuit shut-off delay time in [Pr. PC16] in accordance with the travel distance ([Pr. PC54]). Adjust it considering the freefall prevention compensation amount by checking the servo motor speed, torque ripple, etc.

#### 3.7.4 Residual risks of the forced stop function (EM2)

- (1) The forced stop function is not available for alarms that activate the dynamic brake when the alarms occur.
- (2) When an alarm that activates the dynamic brake during forced stop deceleration occurs, the braking distance until the servo motor stops will be longer than that of normal forced stop deceleration without the dynamic brake.

#### 3.8 Alarm occurrence timing chart

**CAUTION** When an alarm has occurred, remove its cause, make sure that the operation signal is not being input, ensure safety, and reset the alarm before restarting operation.

**POINT**

- In manual control mode, the forced stop deceleration function is not available.

To deactivate an alarm, cycle the power, push the "SET" button in the current alarm window, or cycle the RES (Reset) However, the alarm cannot be deactivated unless its cause is removed.


#### 3.8.1 When you use the forced stop deceleration function

**POINT**

- To use the forced stop deceleration function, set "2 \_ \_ \_ (initial value)" in [Pr. PA04].


### 3. SIGNALS AND WIRING

(1) When the forced stop deceleration function is enabled

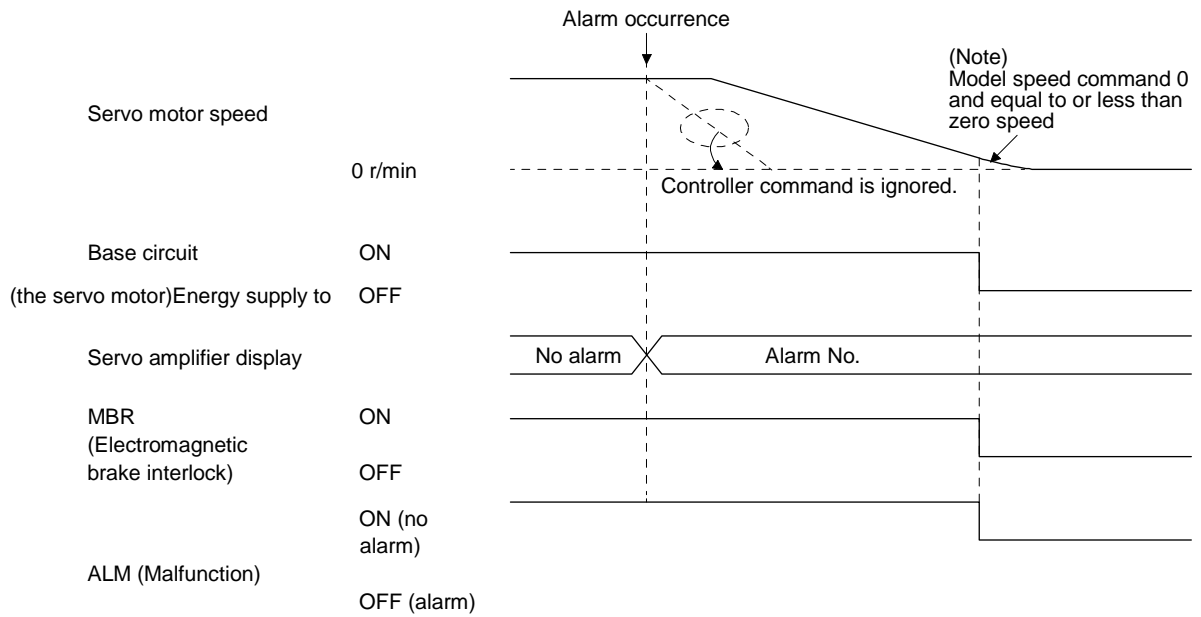

Note. The model speed command is a speed command generated in the servo amplifier for forced stop deceleration of the servo motor.

(2) When the forced stop deceleration function is not enabled

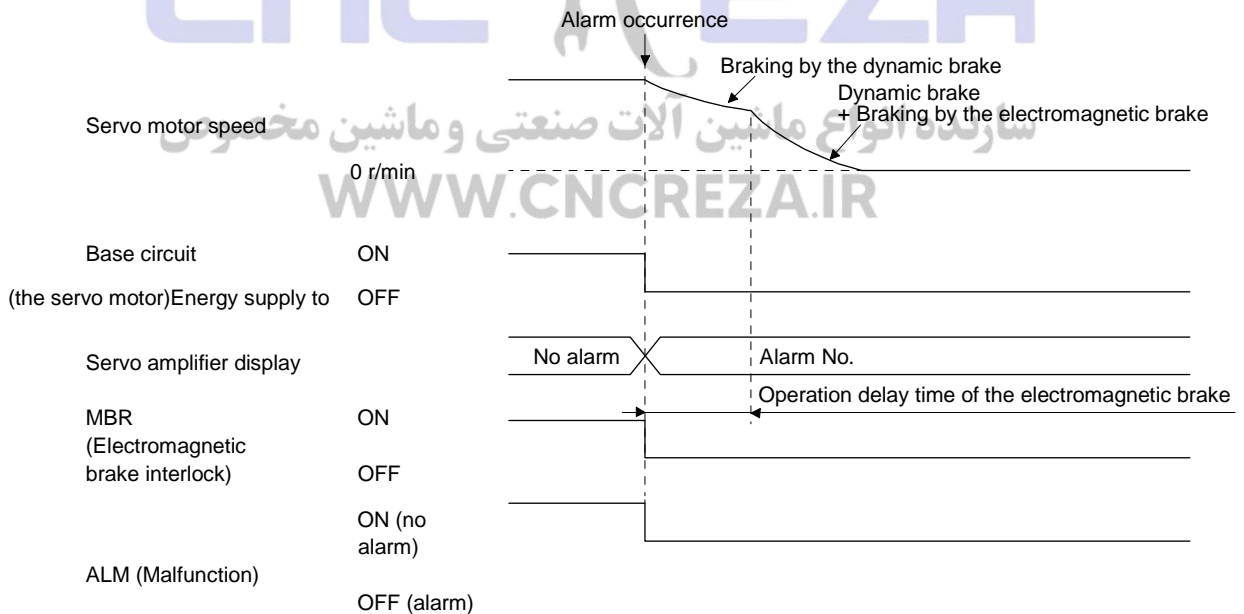

3.8.2 When you do not use the forced stop deceleration function

POINT	
●	When you do not use the forced stop deceleration function, set "0 _ _ _" in [Pr. PA04].


### 3. SIGNALS AND WIRING

The operation status during an alarm is the same as section 3.8.1 (2).

#### 3.9 Interfaces

##### 3.9.1 Internal connection diagram

The following diagram is for sink I/O interface when command pulse train input is differential line driver type.

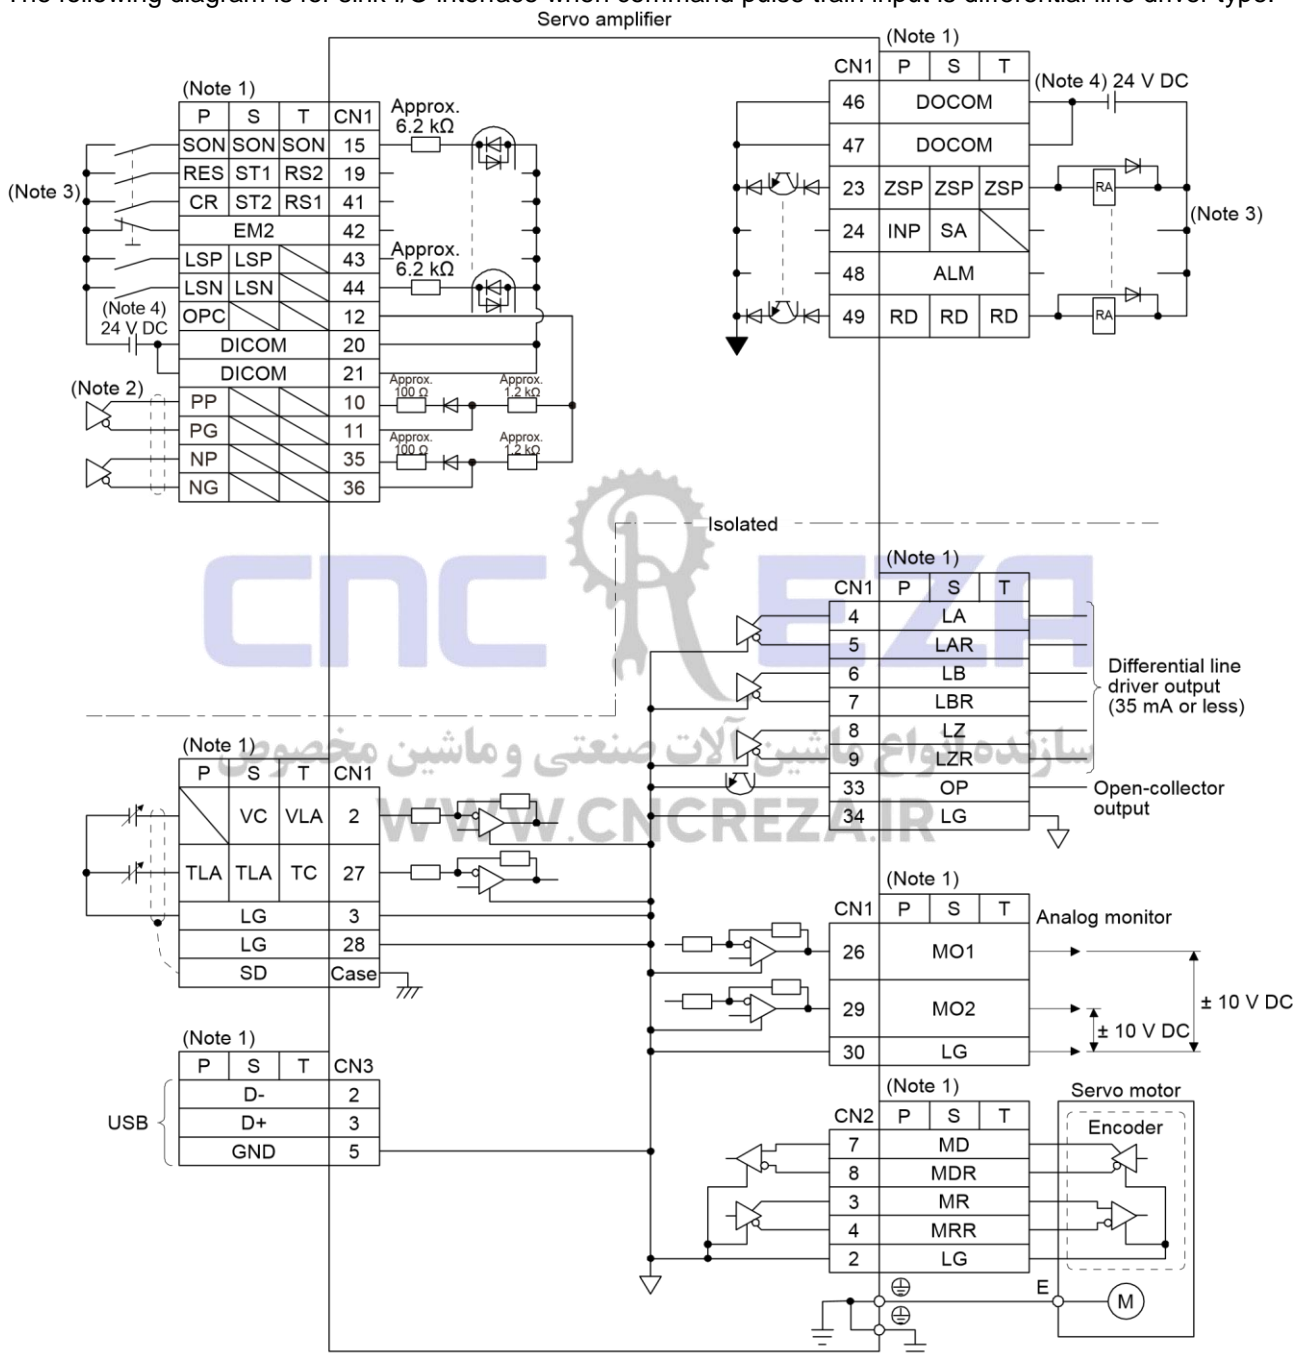


Note 1. P: position control mode, S: speed control mode, T: torque control mode

2. This is for the differential line driver pulse train input. For the open-collector pulse train input, connect as follows.

### 3. SIGNALS AND WIRING

---

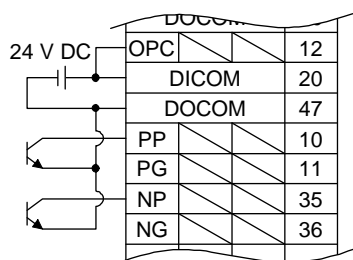

3. This diagram shows sink I/O interface. For source I/O interface, refer to section 3.9.3.
4. The illustration of the 24 V DC power supply is divided between input signal and output signal for convenience. However, they can be configured by one.




### 3. SIGNALS AND WIRING

#### 3.9.2 Detailed explanation of interfaces

This section provides the details of the I/O signal interfaces (refer to the I/O division in the table) given in section 3.5. Refer to this section and make connection with the external device.

##### (1) Digital input interface DI-1

This is an input circuit whose photocoupler cathode side is input terminal. Transmit signals from sink (open-collector) type transistor output, relay switch, etc. The following is a connection diagram for sink input. Refer to section 3.9.3 for source input.

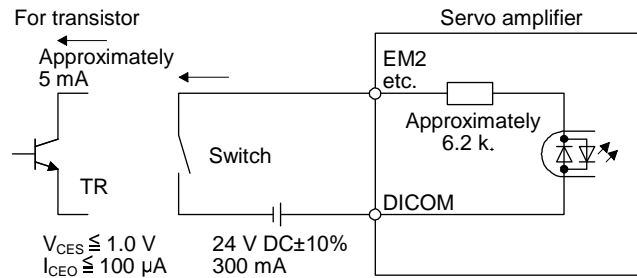


##### (2) Digital output interface DO-1

This is a circuit in which the collector side of the output transistor is the output terminal. When the output transistor is turned on, the current flows from the collector terminal.

A lamp, relay or photocoupler can be driven. Install a diode (D) for an inductive load, or install an inrush current suppressing resistor (R) for a lamp load.

(Rated current: 40 mA or less, maximum current: 50 mA or less, inrush current: 100 mA or less) A maximum of 2.6 V voltage drop occurs in the servo amplifier.

The following shows a connection diagram for sink output. Refer to section 3.9.3 for source output.

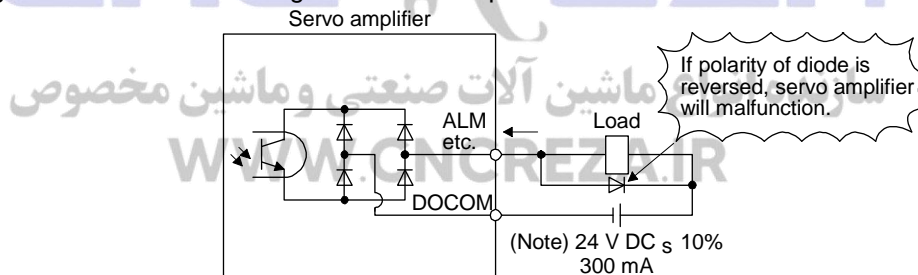

Note. If the voltage drop (maximum of 2.6 V) interferes with the relay operation, apply high voltage (maximum of 26.4 V) from external source.

##### (3) Pulse train input interface DI-2


Give a pulse train signal in the differential line driver type or open-collector type.

###### (a) Differential line driver type

###### 1) Interface




### 3. SIGNALS AND WIRING

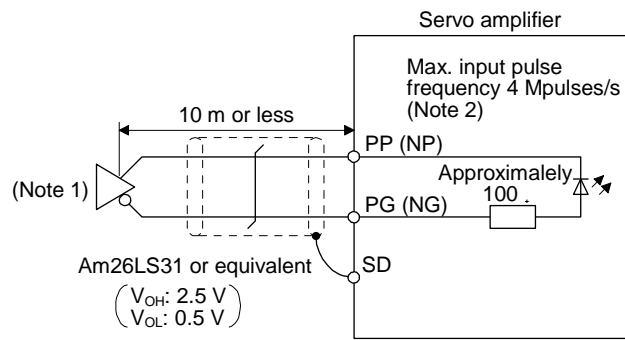


- Note 1. Pulse train input interface is comprised of a photocopier.  
 If a resistor is connected to the pulse train signal line, it may malfunction due to reduction in current.
2. When the input pulse frequency is 4 Mpulses/s, set [Pr. PA13] to "\_ 0 \_ \_".

#### 2) Input pulse condition

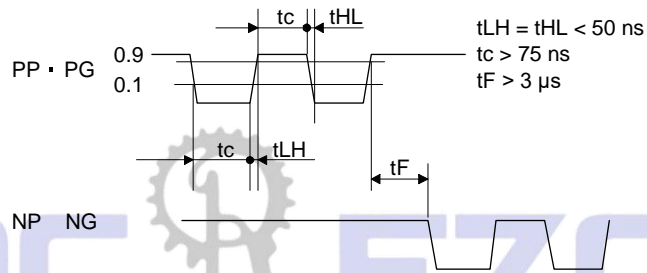


- (b) Open-collector type  
 1) Interface

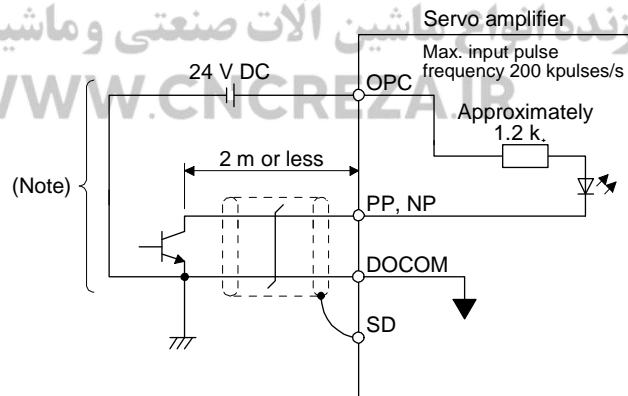

- Note. Pulse train input interface is comprised of a photocopier.  
 If a resistor is connected to the pulse train signal line, it may malfunction due to reduction in current.

#### 2) Input pulse condition

### 3. SIGNALS AND WIRING

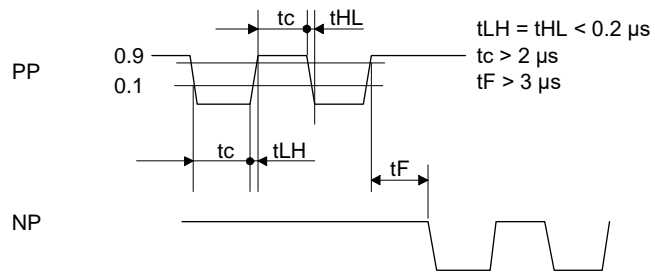


#### (4) Encoder output pulse DO-2

##### (a) Open-collector type


Interface

Maximum sink current: 35 mA

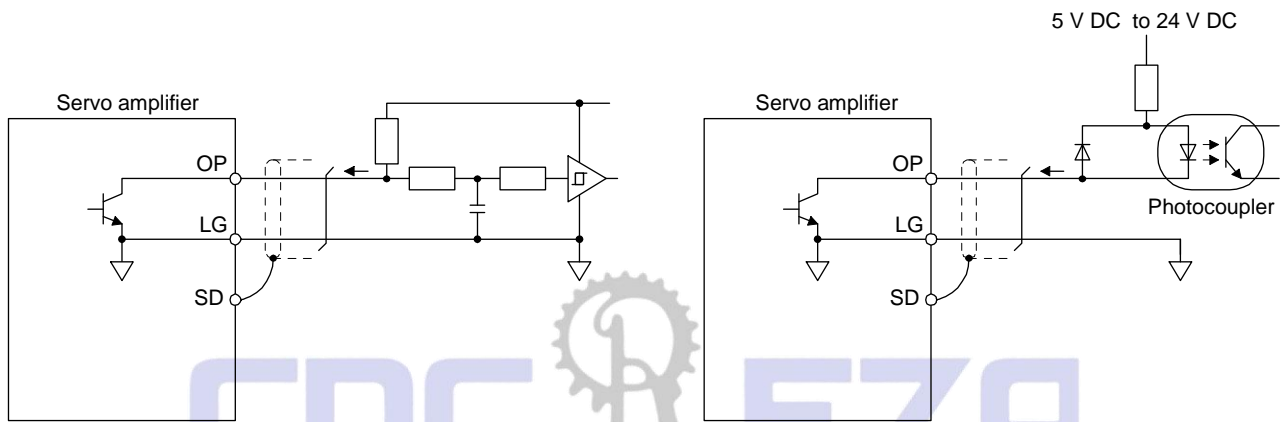

##### (b) Differential line driver type 1) Interface


Maximum output current: 35 mA

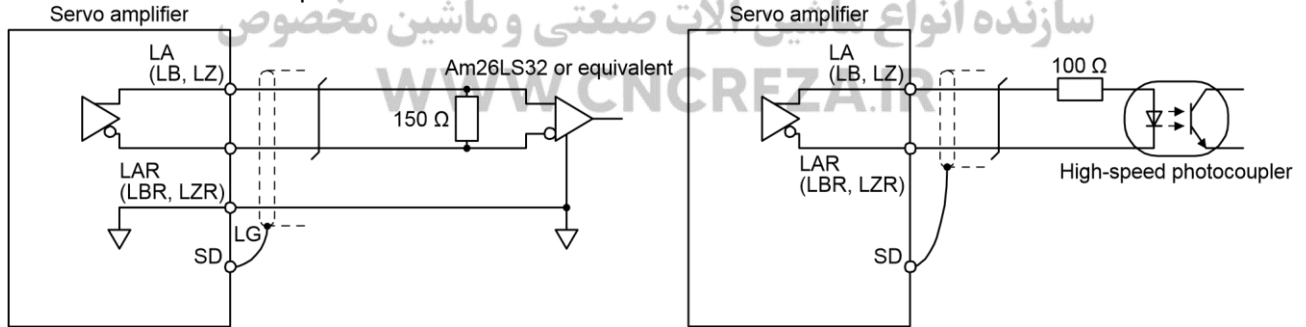


#### 2) Output pulse

Servo motor CCW rotation


### 3. SIGNALS AND WIRING

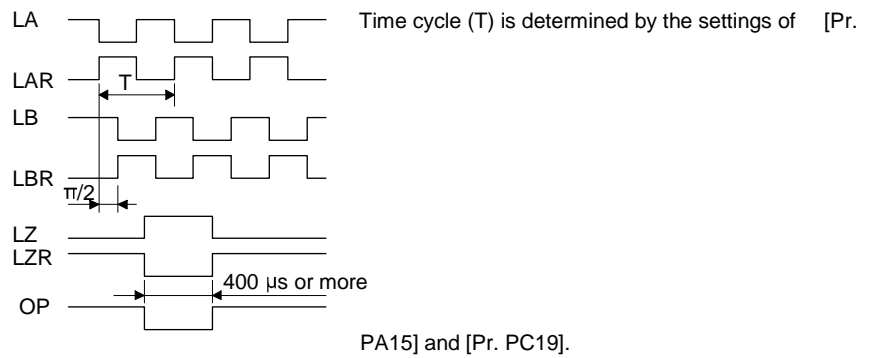

(5) Analog input Input impedance 10 k $\Omega$  to 12 k $\Omega$

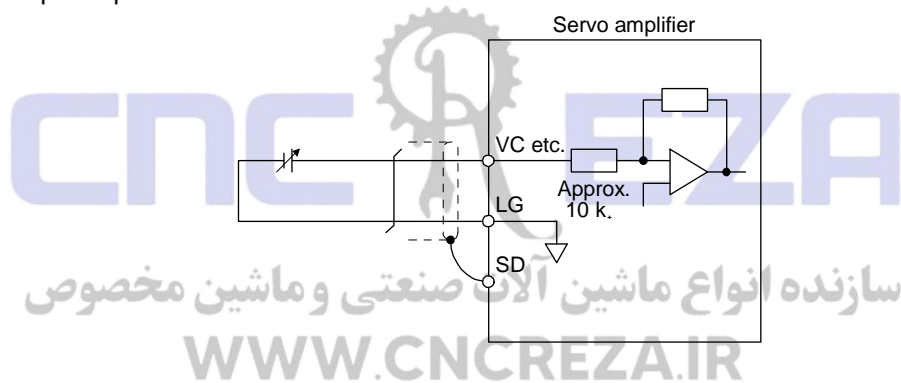

(6) Analog output

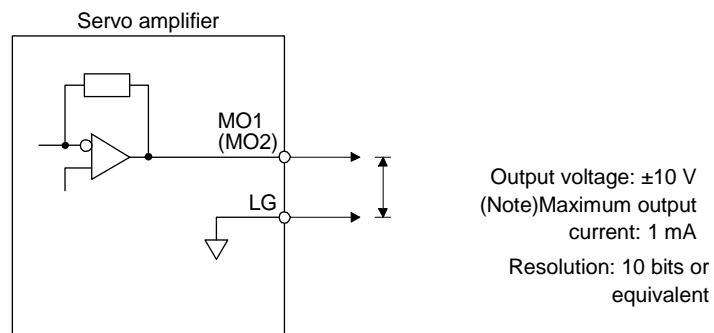

Note. Output voltage range varies depending on the monitored signal.


#### 3.9.3 Source I/O interfaces

In this servo amplifier, source type I/O interfaces can be used.

### 3. SIGNALS AND WIRING


#### (1) Digital input interface DI-1

This is an input circuit whose photocoupler anode side is the input terminal. Transmit signals from source (open-collector) type transistor output, relay switch, etc.

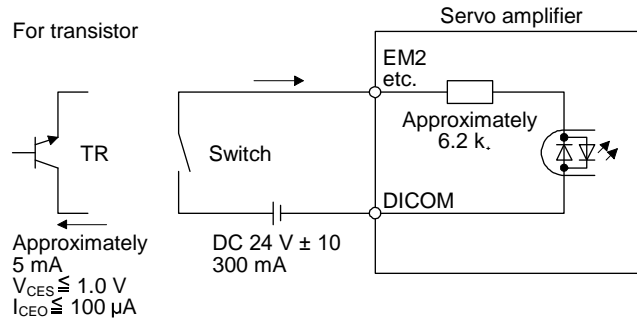

#### (2) Digital output interface DO-1

This is a circuit in which the emitter side of the output transistor is the output terminal. When the output transistor is turned on, the current flows from the output terminal to a load. A maximum of 2.6 V voltage drop occurs in the servo amplifier.

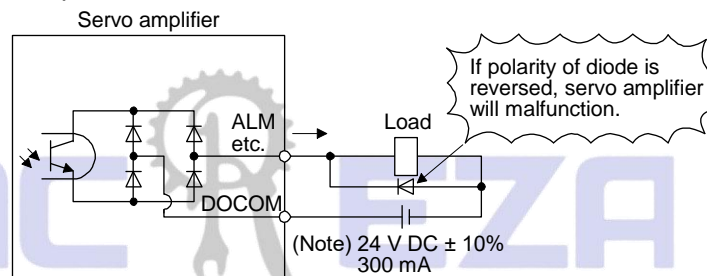

Note. If the voltage drop (maximum of 2.6 V) interferes with the relay operation, apply high voltage (maximum of 26.4 V) from external source.

#### 3.10 Servo motor with an electromagnetic brake


##### 3.10.1 Safety precautions

### 3. SIGNALS AND WIRING

- Configure an electromagnetic brake circuit so that it is activated also by an external EMG stop switch.

Contacts must be opened when ALM (Malfunction) or MBR (Electromagnetic brake interlock) turns off.

Contacts must be opened with the EMG stop switch.

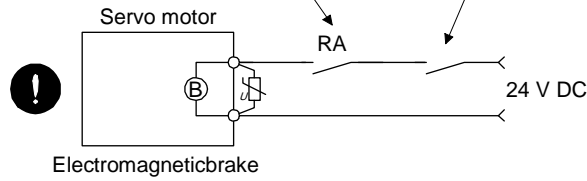

#### CAUTION

- The electromagnetic brake is provided for holding purpose and must not be used for ordinary braking.
- Before operating the servo motor, be sure to confirm that the electromagnetic brake operates properly.
- Do not use the 24 V DC interface power supply for the electromagnetic brake. Always use the power supply designed exclusively for the electromagnetic brake. Otherwise, it may cause a malfunction.


#### POINT

- Refer to the "KN/HF-SN Servo Motor Instruction Manual" for specifications such as supply capacity and operation delay time of the electromagnetic brake.
- Refer to the "KN/HF-SN Servo Motor Instruction Manual" for the selection of a model for the electromagnetic brake.

Note the following when the servo motor with an electromagnetic brake is used.

- 1) The brake will operate when the power (24 V DC) turns off.
- 2) The status is base circuit shut-off during RES (Reset) on. When you use the motor in vertical axis system, use MBR (Electromagnetic brake interlock).
- 3) Turn off SON (Servo-on) after the servo motor stopped.

#### (1) Connection diagram

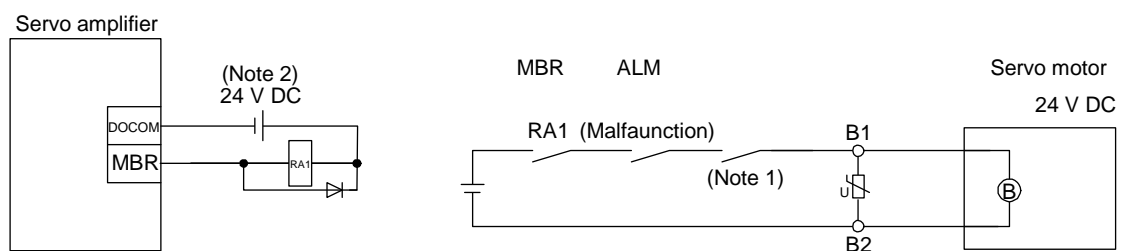

Note 1. Create the circuit in order to shut off by interlocking with the emergency stop switch.

2. Do not use the 24 V DC interface power supply for the electromagnetic brake.

### 3. SIGNALS AND WIRING

#### (2) Setting

(a) Enable MBR (Electromagnetic brake interlock) with [Pr. PD03] to [Pr. PD20].

(b) In [Pr. PC16 Electromagnetic brake sequence output], set the time delay (Tb) from electromagnetic brake operation to base circuit shut-off at a servo-off as in the timing chart in section 3.10.2 (1).


#### 3.10.2 Timing chart

(1) When you use the forced stop deceleration function

POINT
● When you use the forced stop deceleration function, set "2 _ _ _ (initial value)" in [Pr. PA04].

#### (a) SON (Servo-on) on/off

When SON (Servo-on) is turned off, the servo lock will be released after Tb [ms], and the servo motor will coast. If the electromagnetic brake is enabled during servo-lock, the brake life may be shorter. Therefore, set Tb about 1.5 times of the minimum delay time where the moving part will not drop down for a vertical axis system, etc.

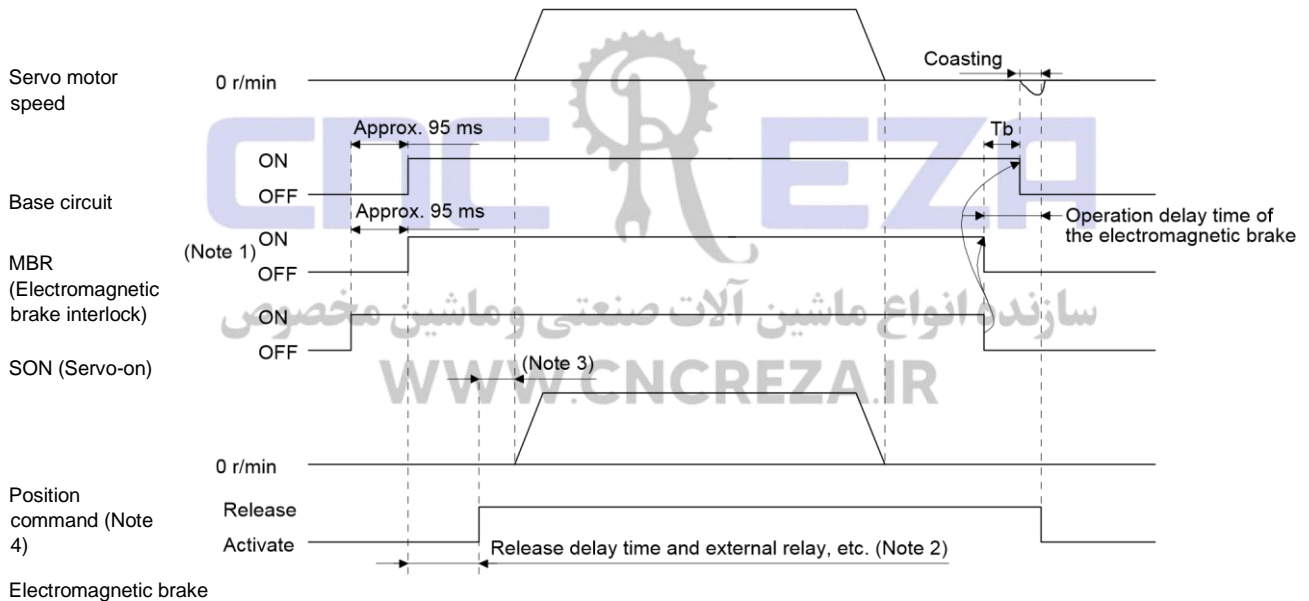

Note 1. ON: Electromagnetic brake is not activated.

OFF: Electromagnetic brake has been activated.

2. Electromagnetic brake is released after the release delay time of electromagnetic brake and operation time of external circuit relay, etc. For the release delay time of electromagnetic brake, refer to "HF-KN/HF-SN Servo Motor Instruction Manual".


3. Give a position command after the electromagnetic brake is released.

4. This is in position control mode.

#### (b) Forced stop 2 on/off

POINT
● In position control mode, the forced stop deceleration function is not available.

### 3. SIGNALS AND WIRING

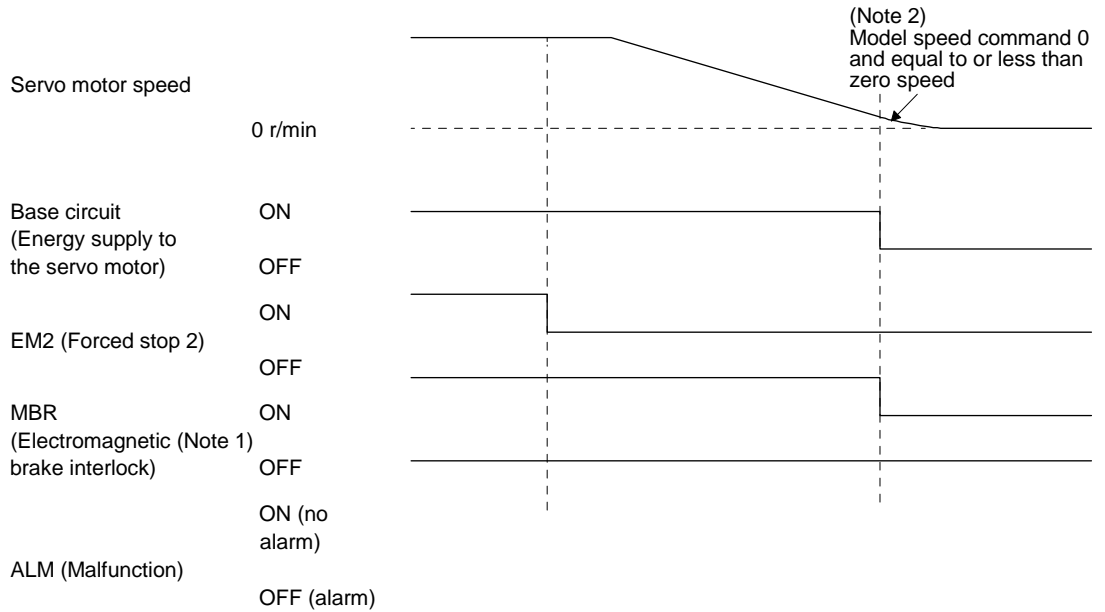

Note 1. ON: Electromagnetic brake is not activated.

OFF: Electromagnetic brake has been activated.


2. The model speed command is a speed command generated in the servo amplifier for forced stop deceleration of the servo motor.

(c) Alarm occurrence

The operation status during an alarm is the same as section 3.8.

(d) Power off

Dynamic brake  
Dynamic brake  
+ Electromagnetic  
brake

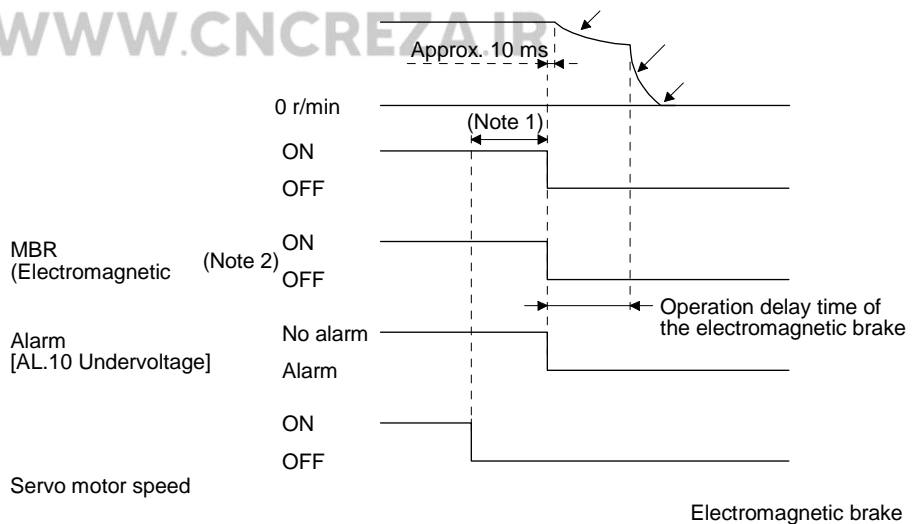

Base circuit

brake interlock)

### 3. SIGNALS AND WIRING

Power supply


- Note 1. Variable according to the operation status.  
 2. ON: Electromagnetic brake is not activated.  
 OFF: Electromagnetic brake has been activated.

(2) When you do not use the forced stop deceleration function

POINT	
●	When you do not use the forced stop deceleration function, set "0 _ _ _" in [Pr. PA04].

(a) SON (Servo-on) on/off  
 It is the same as (1) (a) in this section.

(b) EM1 (Forced stop 1) on/off

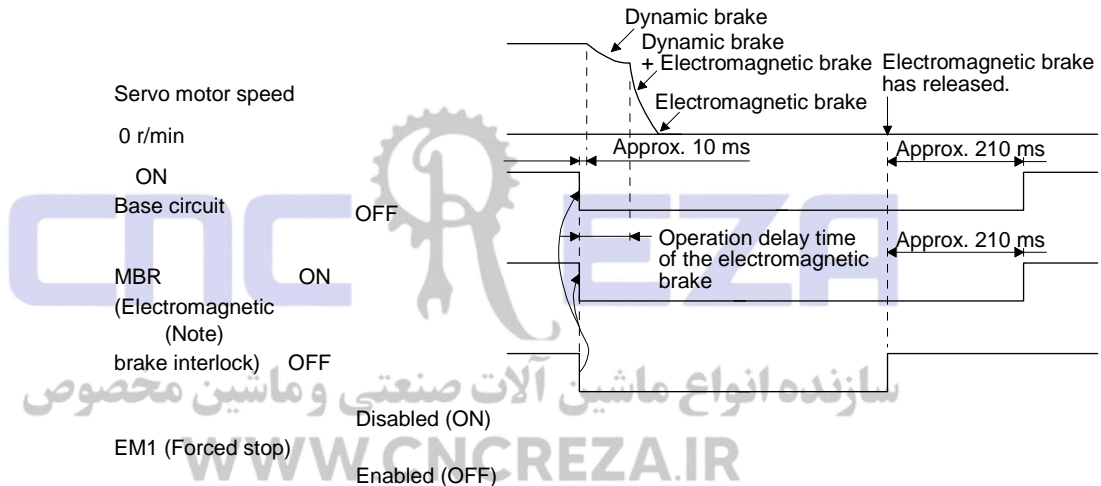

- Note. ON: Electromagnetic brake is not activated.  
 OFF: Electromagnetic brake has been activated.

(c) Alarm occurrence  
 The operation status during an alarm is the same as section 3.8.

(d) Power off  
 It is the same as (1) (d) of this section.

#### 3.11 Grounding


<b>WARNING</b>	<ul style="list-style-type: none"> <li>● Ground the servo amplifier and servo motor securely.</li> <li>● To prevent an electric shock, always connect the protective earth (PE) terminal (marked ⊕) of the servo amplifier to the protective earth (PE) of the cabinet.</li> </ul>
----------------	--

The servo amplifier switches the power transistor on-off to supply power to the servo motor. Depending on the wiring and ground cable routing, the servo amplifier may be affected by the switching noise (due to di/dt



### 3. SIGNALS AND WIRING

and dv/dt) of the transistor. To prevent such a fault, refer to the following diagram and always ground. To conform to the EMC Directive, refer to the EMC Installation Guidelines (IB(NA)67310).

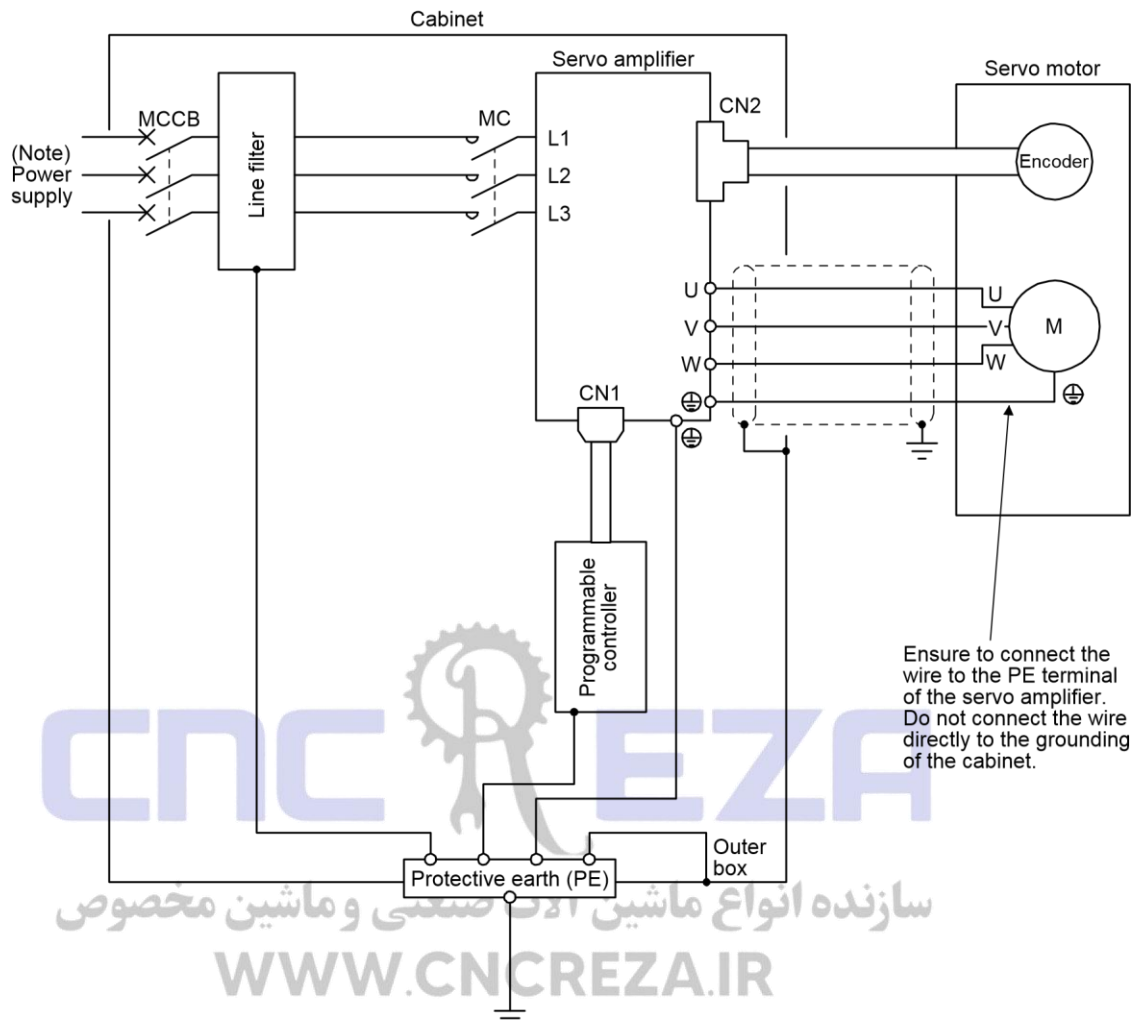

Note. For 1-phase 200 V AC to 240 V AC, connect the power supply to L1 and L3. Leave L2 open. For the power supply specifications, refer to section 1.3.

## MEMO

---

---

---

---







## 4. STARTUP

### 4. STARTUP



**WARNING** Do not operate the switches with wet hands. Otherwise, it may cause an electric shock.



### CAUTION


Before starting operation, check the parameters. Improper settings may cause some machines to operate unexpectedly.

- The servo amplifier heat sink, regenerative resistor, servo motor, etc. may be hot while power is on or for some time after power-off. Take safety measures, e.g. provide covers, to avoid accidentally touching the parts (cables, etc.) by hand.
- During operation, never touch the rotor of the servo motor. Otherwise, it may cause injury.

#### 4.1 Switching power on for the first time

When switching power on for the first time, follow this section to make a startup.

##### 4.1.1 Startup procedure

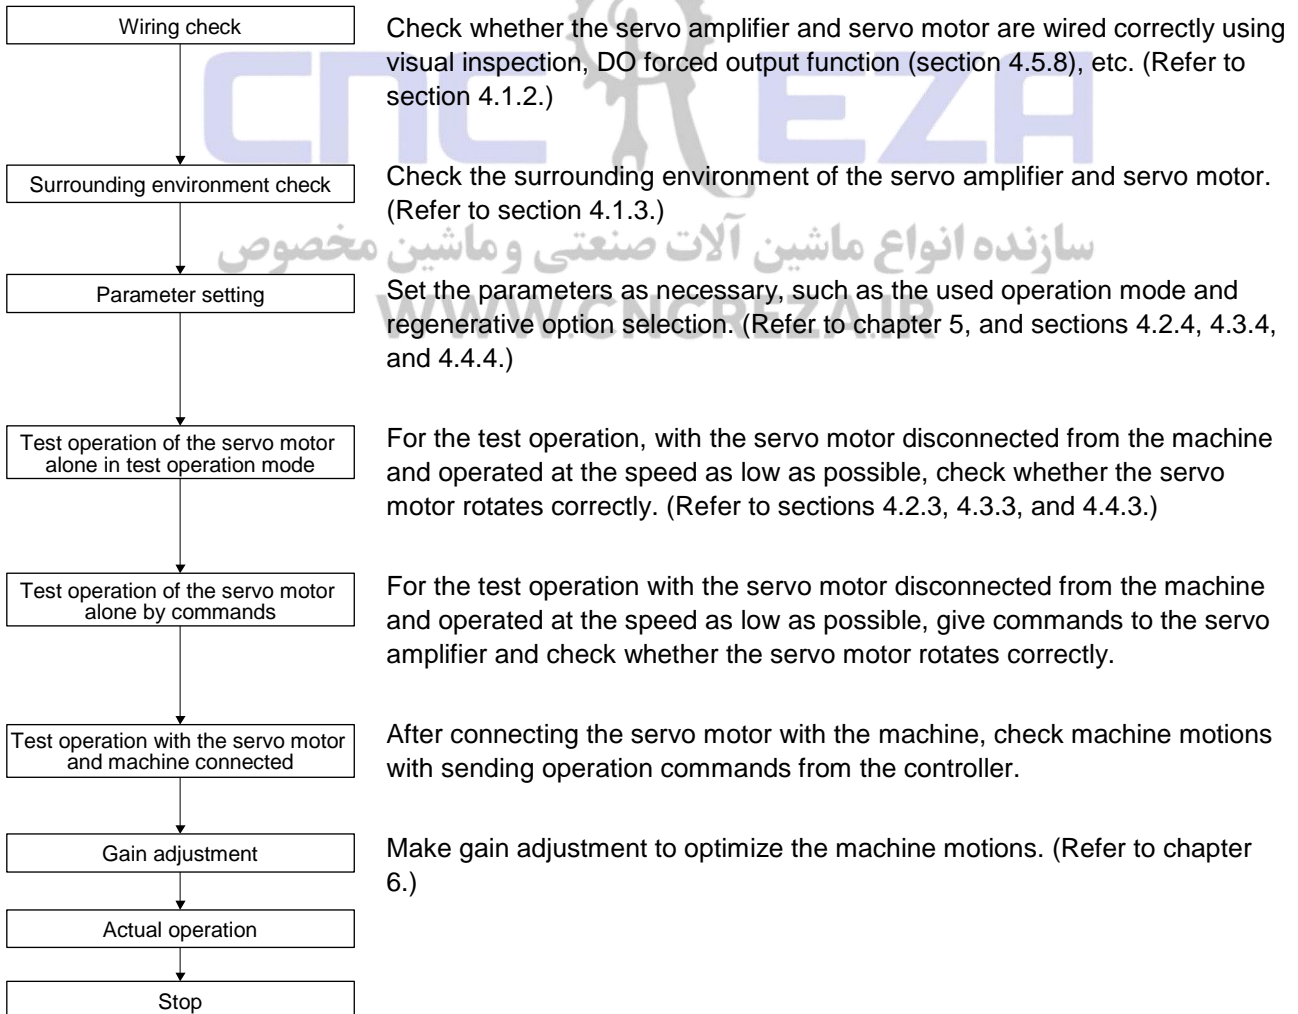

## 4. STARTUP

Stop giving commands and stop operation. Other conditions that stop the servo motor are mentioned in sections 4.2.2, 4.3.2, and 4.4.2.

### 4.1.2 Wiring check

#### (1) Power supply system wiring


Before switching on the power supply, check the following items.

##### (a) Power supply system wiring


The power supplied to the power input terminals (L1, L2, and L3) of the servo amplifier should satisfy the defined specifications. (Refer to section 1.3.)

##### (b) Connection of servo amplifier and servo motor


- 1) The servo amplifier power output (U, V, and W) should match in phase with the servo motor power input terminals (U, V, and W).

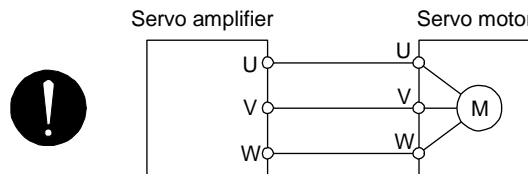

- 2) The power supplied to the servo amplifier should not be connected to the power outputs (U, V, and W). Doing so will fail the connected servo amplifier and servo motor.

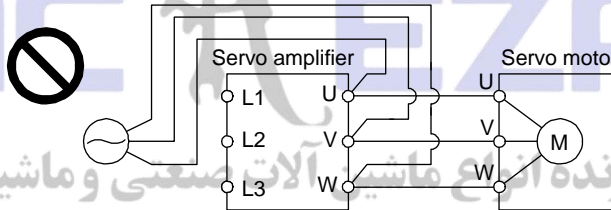

- 3) The grounding terminal of the servo motor is connected to the PE terminal of the servo amplifier.

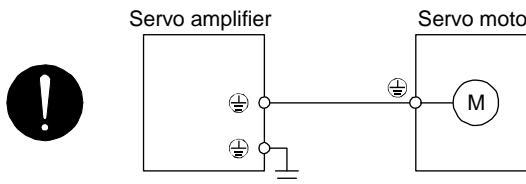

- 4) The CN2 connector of the servo amplifier should be connected to the encoder of the servo motor securely using the encoder cable.

##### (c) When you use an option and peripheral equipment

- 1) When you use a regenerative option for 1 kW or less servo amplifiers

- The built-in regenerative resistor and wirings should be removed from the servo amplifier.
- The lead wire of built-in regenerative resistor connected to P+ terminal and C terminal should not be connected.
- The regenerative option should be connected to P+ terminal and C terminal.
- A twisted cable should be used. (Refer to section 11.2.4.)

## 4. STARTUP

---

- 2) When you use a regenerative option for 2 kW or more servo amplifiers The lead wire
  - between P+ terminal and D terminal should not be connected.
  - The regenerative option should be connected to P+ terminal and C terminal.
  - A twisted cable should be used. (Refer to section 11.2.4.)


### (2) I/O signal wiring

- (a) The I/O signals should be connected correctly.

Use DO forced output to forcibly turn on/off the pins of the CN1 connector. This function can be used to perform a wiring check. Switch off SON (Servo-on) to enable the function. Refer to section 3.2 for details of I/O signal connection.

- (b) A voltage exceeding 24 V DC is not applied to the pins of the CN1 connector.

- (c) Between SD and DOCOM of the CN1 connector should not be shorted.

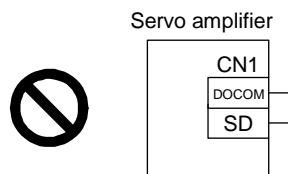

### 4.1.3 Surrounding environment

#### (1) Cable routing

- (a) The wiring cables should not be stressed.
- (b) The encoder cable should not be used in excess of its bending life. (Refer to section 10.4.)
- (c) The connector of the servo motor should not be stressed.

#### (2) Environment

Signal cables and power cables are not shorted by wire offcuts, metallic dust or the like.

## 4.2 Startup in position control mode

Make a startup in accordance with section 4.1. This section provides descriptions specific to the position control mode.

### 4.2.1 Power on and off procedures


#### (1) Power-on

Switch power on in the following procedure. Always follow this procedure at power-on.

- 1) Switch off SON (Servo-on).
- 2) Make sure that a command pulse train is not input.
- 3) Turn on the power.  
When main circuit power/control circuit power is switched on, the display shows "C (Cumulative feedback pulses)", and in 2 s later, shows data.

## 4. STARTUP

---



### (2) Power-off

- 1) Make sure that a command pulse train is not input.
- 2) Switch off SON (Servo-on).
- 3) Shut off the power.

### 4.2.2 Stop

If any of the following situations occurs, the servo amplifier suspends the running of the servo motor and brings it to a stop. Refer to section 3.10 for the servo motor with an electromagnetic brake.

Operation/command	Stopping condition
Switch off SON (Servo-on).	The base circuit is shut off and the servo motor coasts.
Alarm occurrence	The servo motor decelerates to a stop with the command. With some alarms, however, the dynamic brake operates to bring the servo motor to a stop. (Refer to chapter 8.)
EM2 (Forced stop 2) off	The servo motor decelerates to a stop with the command. [AL. E6 Servo forced stop warning] occurs. EM2 has the same function as EM1 in the torque control mode. Refer to section 3.5 for EM1.
LSP (Forward rotation stroke end) off, LSN (Reverse rotation stroke end) off	It will bring the motor to a sudden stop and make it servo-locked. It can be run in the opposite direction.

### 4.2.3 Test operation

Before starting actual operation, perform test operation to make sure that the machine operates normally. Refer to section 4.2.1 for how to power on and off the servo amplifier.



## 4. STARTUP

---

Test operation of the servo motor alone in JOG operation of test operation mode

In this step, confirm that the servo amplifier and servo motor operate normally.

With the servo motor disconnected from the machine, use the test operation mode and check whether the servo motor correctly rotates at the slowest speed. Refer to section 4.5.9 for the test operation mode.

Test operation of the servo motor alone by commands

In this step, confirm that the servo motor correctly rotates at the slowest speed under the commands from the controller.

Make sure that the servo motor rotates in the following procedure.

- 1) Switch on EM2 (Forced stop 2) and SON (Servo-on). When the servo amplifier is put in a servo-on status, RD (Ready) switches on.
- 2) Switch on LSP (Forward rotation stroke end) and LSN (Reverse rotation stroke end).
- 3) When a pulse train is input from the controller, the servo motor starts rotating. Give a low speed command at first and check the rotation direction, etc. of the servo motor. If the machine does not operate in the intended direction, check the input signal.

Test operation with the servo motor and machine connected

In this step, connect the servo motor with the machine and confirm that the machine operates normally under the commands from the controller. Make sure that the servo motor rotates in the following procedure.

- 1) Switch on EM2 (Forced stop 2) and SON (Servo-on). When the servo amplifier is put in a servo-on status, RD (Ready) switches on.
- 2) Switch on LSP (Forward rotation stroke end) and LSN (Reverse rotation stroke end).
- 3) When a pulse train is input from the controller, the servo motor starts rotating. Give a low speed command at first and check the operation direction, etc. of the machine. If the machine does not operate in the intended direction, check the input signal. In the status display, check for any problems of the servo motor speed, command pulse frequency, load ratio, etc.
- 4) Then, check automatic operation with the program of the controller.

### 4.2.4 Parameter setting

POINT	
-------	--

## 4. STARTUP

---

- All encoder cables are of four-wire type. When using any of these cables, set [Pr. PC22] to "1 \_ \_ \_" to select the four-wire type. Incorrect settings result in [AL. 16 Encoder initial communication error 1].
- |             |   |
|-------------|---|
| MR-EKCBL30I | L |
| MR-EKCBL30I | H |
| MR-EKCBL40I | H |
| MR-EKCBL50I | H |

In the position control mode, the servo amplifier can be used by merely changing the basic setting parameters ([Pr. PA \_ \_ ]) mainly.  
As necessary, set other parameters.

### 4.2.5 Actual operation

Start actual operation after confirmation of normal operation by test operation and completion of the corresponding parameter settings. Perform a home position return as necessary.



## 4. STARTUP

---

### 4.2.6 Trouble at start-up



#### CAUTION

Never make a drastic adjustment or change to the parameter values as doing so will make the operation unstable.



POINT
● Optional MR Configurator2, you can refer to reason for rotation failure, etc.



The following faults may occur at start-up. If any of such faults occurs, take the corresponding action.


#### (1) Troubleshooting



## 4. STARTUP

No.	Start-up sequence	Fault	Investigation	Possible cause	Reference
1	Power on	<ul style="list-style-type: none"> <li>• LED is not lit.</li> <li>• LED flickers.</li> </ul>	Not improved even if CN1 and CN2 connectors are disconnected.	<ol style="list-style-type: none"> <li>1. Power supply voltage fault</li> <li>2. The servo amplifier is malfunctioning.</li> </ol>	/
			Improved when CN1 connector is disconnected.	Power supply of CN1 cabling is shorted.	
			Improved when CN2 connector is disconnected.	<ol style="list-style-type: none"> <li>1. Power supply of encoder cabling is shorted.</li> <li>2. Encoder is malfunctioning.</li> </ol>	
		Alarm occurs.	Refer to chapter 8 and remove cause.	Chapter 8	
2	Switch on SON (Servo-on).	Alarm occurs.	Refer to chapter 8 and remove cause.		Chapter 8
		Servo motor shaft is not servo-locked. (Servo motor shaft is free.)	<ol style="list-style-type: none"> <li>1. Check the display to see if the servo amplifier is ready to operate.</li> <li>2. Check the external I/O signal indication (section 4.5.7) to see if SON (Servo-on) is on.</li> </ol>	<ol style="list-style-type: none"> <li>1. SON (Servo-on) is not input. (wiring mistake)</li> <li>2. 24 V DC power is not supplied to DICOM.</li> </ol>	Section 4.5.7
3	Input command pulse (test operation).	Servo motor does not rotate.	Check the cumulative command pulse on the status display (section 4.5.3).	<ol style="list-style-type: none"> <li>1. Wiring mistake                             <ol style="list-style-type: none"> <li>(a) For open collector pulse train input, 24 V DC power is not supplied to OPC.</li> <li>(b) LSP and LSN are not on.</li> </ol> </li> <li>2. Pulse is not input from the controller.</li> </ol>	Section 4.5.3
		Servo motor run in reverse direction.		Mistake in setting of [Pr. PA13]. <ol style="list-style-type: none"> <li>1. Mistake in wiring to controller.</li> <li>2. Mistake in setting of [Pr. PA14].</li> </ol>	Chapter 5
4	Gain adjustment	Rotation ripples (speed fluctuations) are large at low speed.	Make gain adjustment in the following procedure. <ol style="list-style-type: none"> <li>1. Increase the auto tuning response level.</li> <li>2. Repeat acceleration and deceleration several times to complete auto tuning.</li> </ol>	Gain adjustment fault	Chapter 6
		Large load inertia moment causes the servo motor shaft to oscillate side to side.	If the servo motor may be driven with safety, repeat acceleration and deceleration several times to complete auto tuning.	Gain adjustment fault	Chapter 6
5	Cyclic operation	Position shift occurs	Confirm the cumulative command pulses, cumulative feedback pulses and actual servo motor position.	Pulse counting error, etc. due to noise.	(2) of this section

### (2) How to find the cause of position shift

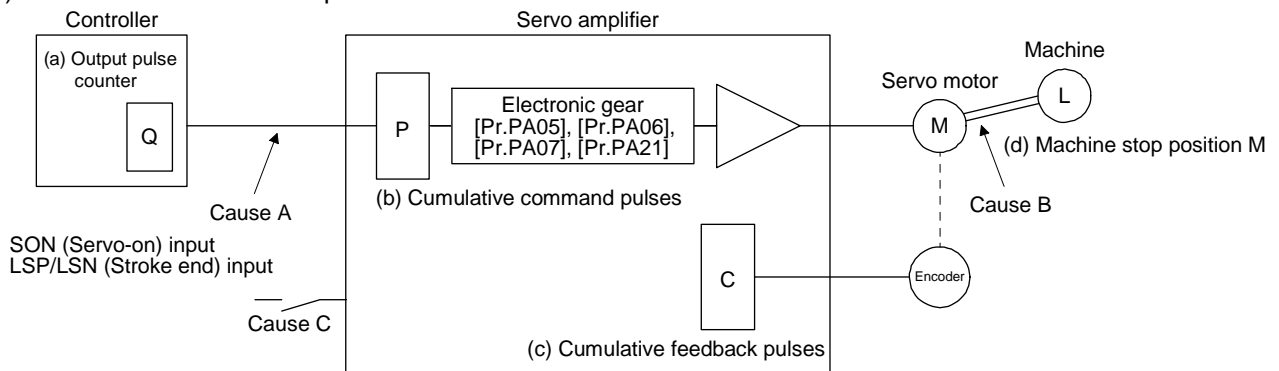

## 4. STARTUP

---

When a position shift occurs, check (a) output pulse counter Q, (b) cumulative command pulse P, (c) cumulative feedback pulse C, and (d) machine stop position M in the above diagram.

Also, Causes A, B, and C indicate the causes of position mismatch. For example, Cause A indicates that noise entered the wiring between the controller and servo amplifier, causing command input pulses to be miscounted.

In a normal status without position shift, there are the following relationships.

1)  $Q = P$  (Output counter = Cumulative command pulses)

2) When [Pr. PA21] is "0 \_ \_ \_"

$$P \cdot \frac{CMX [Pr. PA06]}{PA07} = C$$
 (Cumulative command pulses  $\times$  Electronic gear = Cumulative feedback CDV [Pr. PA07] pulses)

3) When [Pr. PA21] is "1 \_ \_ \_"

$$P \cdot \frac{131072}{FBP [Pr. PA05]} = C$$

4)  $C \cdot \Delta \varepsilon = M$  (Cumulative feedback pulses  $\times$  Travel distance per pulse = Machine position)

Check for a position mismatch in the following sequence.

- 1) When  $Q \neq P$   
Noise entered the pulse train signal wiring between the controller and servo amplifier, causing command input pulses to be miscounted. (Cause A)  
Make the following check or take the following measures.
- Check how the shielding is done.
  - Change the open collector type to the differential line driver type.
  - Run wiring away from the power circuit.
  - Install a data line filter. (Refer to section 11.9 (2) (a).)
  - Change the [Pr. PA13 Command pulse input form] setting.

2) When  $P \cdot \frac{CMX}{PA07} \neq C$   
During operation, SON (Servo-on), LSP (Forward rotation stroke end), or LSN (Reverse rotation stroke end) was switched off; or CR (Clear) or RES (Reset) was switched on. (Cause C)

3) When  $C \cdot \Delta \varepsilon \neq M$   
Mechanical slip occurred between the servo motor and machine. (Cause B)

### 4.3 Startup in speed control mode

Make a startup in accordance with section 4.1. This section provides the methods specific to the speed control mode.

## 4. STARTUP

---

### 4.3.1 Power on and off procedures

#### (1) Power-on

Switch power on in the following procedure. Always follow this procedure at power-on.

- 1) Switch off SON (Servo-on).
- 2) Make sure that ST1 (Forward rotation start) and ST2 (Reverse rotation start) are off.
- 3) Turn on the power.

When main circuit power/control circuit power is switched on, the display shows "r (Servo motor speed)", and in 2 s later, shows data.



#### (2) Power-off

- 1) Switch off ST1 (Forward rotation start) and ST2 (Reverse rotation start).
- 2) Switch off SON (Servo-on).
- 3) Shut off the power.

### 4.3.2 Stop

If any of the following situations occurs, the servo amplifier suspends the running of the servo motor and brings it to a stop.


Refer to section 3.10 for the servo motor with an electromagnetic brake.

Operation/command	Stopping condition
Switch off SON (Servo-on).	The base circuit is shut off and the servo motor coasts.
Alarm occurrence	The servo motor decelerates to a stop with the command. With some alarms, however, the dynamic brake operates to bring the servo motor to a stop. (Refer to chapter 8.)
EM2 (Forced stop 2) off	The servo motor decelerates to a stop with the command. [AL. E6 Servo forced stop warning] occurs. EM2 has the same function as EM1 in the torque control mode. Refer to section 3.5 for EM1.
LSP (Forward rotation stroke end) off, LSN (Reverse rotation stroke end) off	It will bring the motor to a sudden stop and make it servo-locked. It can be run in the opposite direction.
Simultaneous on or off of ST1 (Forward rotation start) and ST2 (Reverse rotation start)	The servo motor is decelerated to a stop.

### 4.3.3 Test operation

Before starting actual operation, perform test operation to make sure that the machine operates normally. Refer to section 4.3.1 for how to power on and off the servo amplifier.

## 4. STARTUP

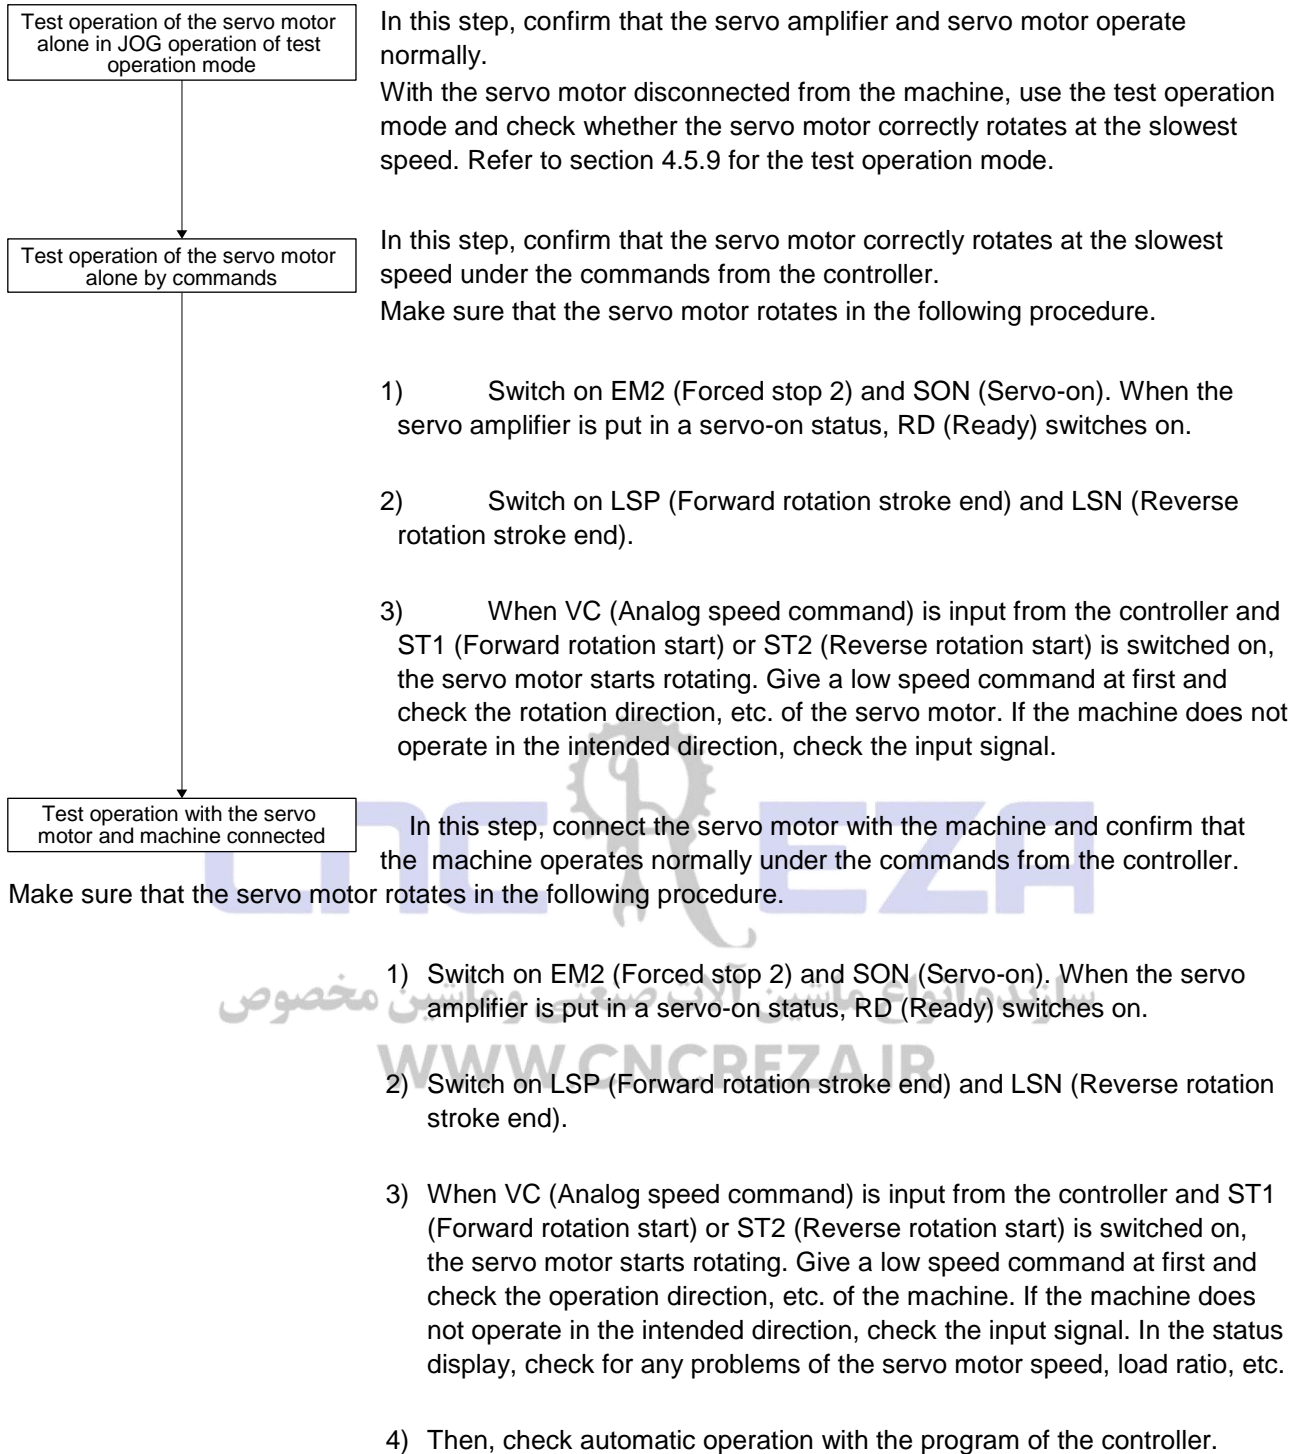

### 4.3.4 Parameter setting

POINT	
-------	--

## 4. STARTUP

---

- If encoder cables are of four-wire type. When using any of these cables, set [Pr. PC22] to "1 \_ \_ \_" to select the four-wire type. Incorrect results in [AL. 16 Encoder initial communication error 1].  
MR-EKCBL30I  
L  
MR-EKCBL30I  
H  
MR-EKCBL40I  
H  
MR-EKCBL50I  
H

When using this servo in the speed control mode, change [Pr. PA01] setting to select the speed control mode. In the speed control mode, the servo can be used by merely changing the basic setting parameters ([Pr. PA \_ \_ ]) and extension setting parameters ([Pr. PC \_ \_ ]) mainly. As necessary, set other parameters.






## 4. STARTUP

### 4.3.5 Actual operation

Start actual operation after confirmation of normal operation by test operation and completion of the corresponding parameter settings.

### 4.3.6 Trouble at start-up

POINT	
●	ptional MR Configurator2, you can refer to reason for rotation failure, etc.



**CAUTION** Never make a drastic adjustment or change to the parameter values as doing so will make the operation unstable.

●

The following faults may occur at start-up. If any of such faults occurs, take the corresponding action.

No.	Start-up sequence	Fault	Investigation	Possible cause	Reference
	1	Power on LED flickers.	LED is not lit. CN2 connectors are malfunctioning.	Not improved even if CN1 and CN2 connectors are malfunctioning.	1. Power supply voltage fault 2. The servo amplifier is disconnected.
			Improved when CN1 connector is shorted.	Power supply of CN1 cabling is disconnected.	
			Improved when CN2 connector is cabling is shorted.	1. Power supply of encoder disconnected. 2. Encoder is malfunctioning.	
		Alarm occurs.	Refer to chapter 8 and remove cause.		Chapter 8
	2	Switch on SON	Alarm occurs.	Refer to chapter 8 and remove cause.	Chapter 8
(Servo-on).		Servo motor shaft is not servo-locked. (Servo motor shaft is signal to DICOM.	1. Check the display to see if the servo amplifier is ready to operate. 2. 24 V DC power is not supplied free.)	1. SON (Servo-on) is not input. (wiring mistake) 2. Check the external I/O	Section 4.5.7
	3	Switch on ST1	Servo motor does not rotate.	Call the status display (section 4.5.3) and check the input voltage of VC (Analog speed (Reverse rotation	Analog speed command is 0 V. Section 4.5.3
(Forward rotation start) or ST2 command).			Call the external I/O signal display (section 4.5.7) and check the internal speed PC05] to 5.2.3 [Pr. PC11]).	LSP, LSN, ST1, and ST2 are off. 4.5.7 the on/off status of the input signal. Set value is 0. Section commands 1 to 7 ([Pr. PC05] to 5.2.3 [Pr. PC11]).	Section 4.5.7

## 4. STARTUP

			Check the forward rotation Torque limit level is too low as compared to the load torque. Section 5.2.1	
			When TLA (Analog torque limit) Torque limit level is too low as	
			Section is usable, check the input voltage compared to the load torque. 4.5.3 on the status display.	

No.	Start-up sequence	Fault	Investigation	Possible cause	Reference
4	Gain adjustment	Rotation ripples (speed fluctuations) are large at low speed.	Make gain adjustment in the following procedure. 1. Increase the auto tuning response level. 2. Repeat acceleration and deceleration several times to complete auto tuning.	Gain adjustment fault	Chapter 6
		Large load inertia moment causes the servo motor shaft to oscillate side to side.	If the servo motor may be driven with safety, repeat acceleration and deceleration several times to complete auto tuning.	Gain adjustment fault	Chapter 6

### 4.4 Startup in torque control mode

Make a startup in accordance with section 4.1. This section provides the methods specific to the torque control mode.

#### 4.4.1 Power on and off procedures

##### (1) Power-on

Switch power on in the following procedure. Always follow this procedure at power-on.

- 1) Switch off SON (Servo-on).
- 2) Make sure that RS1 (Forward rotation selection) and RS2 (Reverse rotation selection) are off.
- 3) Turn on the power.  
Data is displayed in 2 s after "U" (Analog torque command) is displayed.



##### (2) Power-off

- 1) Switch off RS1 (Forward rotation selection) or RS2 (Reverse rotation selection).
- 2) Switch off SON (Servo-on).
- 3) Shut off the power.

#### 4.4.2 Stop

If any of the following situations occurs, the servo amplifier suspends the running of the servo motor and brings it to a stop. Refer to section 3.10 for the servo motor with an electromagnetic brake.


Operation/command	Stopping condition
-------------------	--------------------

## 4. STARTUP

Switch off SON (Servo-on).	The base circuit is shut off and the servo motor coasts.
Alarm occurrence	The servo motor decelerates to a stop with the command. With some alarms, however, the dynamic brake operates to bring the servo motor to a stop. (Refer to chapter 8.)
EM2 (Forced stop 2) off	This stops the servo motor with the dynamic brake. [AL. E6 Servo forced stop warning] occurs. EM2 has the same function as EM1 in the torque control mode. Refer to section 3.5 for EM1.
Simultaneous on or off of RS1 (Forward rotation selection) and RS2 (Reverse rotation selection)	The servo motor coasts.

### 4.4.3 Test operation

Before starting actual operation, perform test operation to make sure that the machine operates normally. Refer to section 4.4.1 for how to power on and off the servo amplifier.

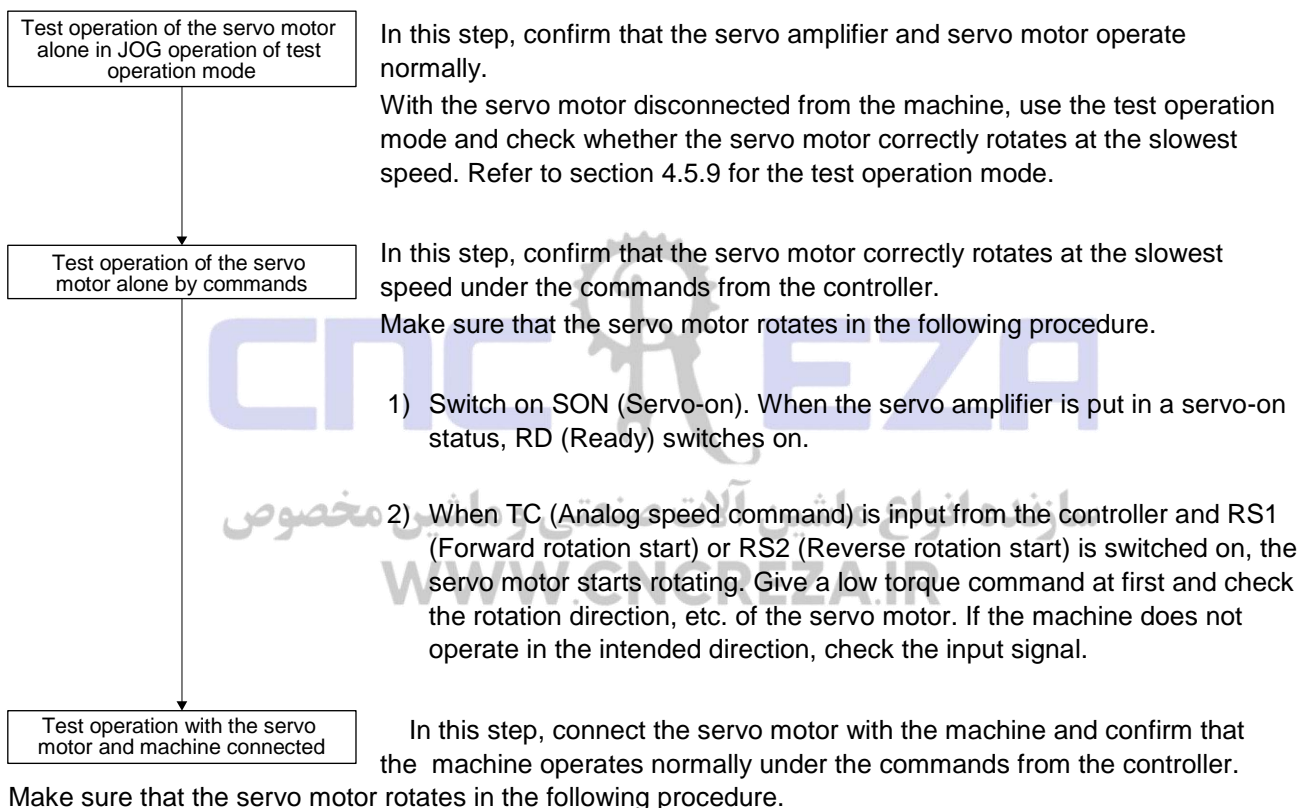

- 1) Switch on SON (Servo-on). When the servo amplifier is put in a servo-on status, RD (Ready) switches on.
- 2) When TC (Analog speed command) is input from the controller and RS1 (Forward rotation start) or RS2 (Reverse rotation start) is switched on, the servo motor starts rotating. Give a low torque command at first and check the operation direction, etc. of the machine. If the machine does not operate in the intended direction, check the input signal. In the status display, check for any problems of the servo motor speed, load ratio, etc.
- 3) Then, check automatic operation with the program of the controller.

### 4.4.4 Parameter setting

## 4. STARTUP

---

POINT	
●	g encoder cables are of four-wire type. When using any of these les, set [Pr. PC22] to "1 _ _ _" to select the four-wire type. Incorrect result in [AL. 16 Encoder initial communication error 1].
	MR-EKCBL30I L
	MR-EKCBL30I H
	MR-EKCBL40I H
	MR-EKCBL50I H

When using this servo in the torque control mode, change [Pr. PA01] setting to select the torque control mode. In the torque control mode, the servo can be used by merely changing the basic setting parameters ([Pr. PA \_ \_ ]) and extension setting parameters ([Pr. PC \_ \_ ]) mainly. As necessary, set other parameters.

### 4.4.5 Actual operation

Start actual operation after confirmation of normal operation by test operation and completion of the corresponding parameter settings.



## 4. STARTUP

### 4.4.6 Trouble at start-up



**CAUTION** Never make a drastic adjustment or change to the parameter values as doing so will make the motion unstable.



#### POINT

Additional MR Configurator2, you can refer to reason for rotation failure, etc.

The following faults may occur at start-up. If any of such faults occurs, take the corresponding action.


No.	Start-up sequence	Fault	Investigation	Possible cause	Reference
1	Power on	<ul style="list-style-type: none"> <li>• LED is not lit.</li> <li>• LED flickers.</li> </ul>	Not improved even if CN1 and CN2 connectors are disconnected.	1. Power supply voltage fault 2. The servo amplifier is malfunctioning.	
			Improved when CN1 connector is disconnected.	Power supply of CN1 cabling is shorted.	
			Improved when CN2 connector is disconnected.	1. Power supply of encoder cabling is shorted. 2. Encoder is malfunctioning.	
		Alarm occurs.	Refer to chapter 8 and remove cause.	Chapter 8	
2	Switch on SON (Servo-on).	Alarm occurs.	Refer to chapter 8 and remove cause.		Chapter 8
		Servo motor shaft is free.	Call the external I/O signal display (section 4.5.7) and check the on/off status of the input signal.	1. SON (Servo-on) is not input. (wiring mistake) 2. 24 V DC power is not supplied to DICOM.	Section 4.5.7
3	Switch on RS1 (Forward rotation start) or RS2 (Reverse rotation start).	Servo motor does not rotate.	Call the status display (section 4.5.3) and check the input voltage of TC (Analog torque command).	Analog torque command is 0 V.	Section 4.5.3
			Call the external I/O signal display (section 4.5.7) and check the on/off status of the input signal.	RS1 and RS2 are off.	Section 4.5.7
			Check the internal speed limit 1 to 7 ([Pr. PC05] to [Pr. PC11]).	Set value is 0.	Section 5.2.3
			Check the analog torque command maximum output ([Pr. PC13]) value.	Torque command level is too low as compared to the load torque.	Section 5.2.3
			Check the forward rotation torque limit ([Pr. PA11]) and the reverse rotation torque limit ([Pr. PA12]).	Set value is 0.	Section 5.2.1

### 4.5 Display and operation sections

#### 4.5.1 Summary

The MR-JE-A servo amplifier has the display section (5-digit, 7-segment LED) and operation section (4 pushbuttons) for servo amplifier status display, alarm display, parameter setting, etc. Push the "MODE" and "SET" buttons at the same time for 3 s or more to switch to the one-touch tuning mode. The operation section and display data are described below.

## 4. STARTUP

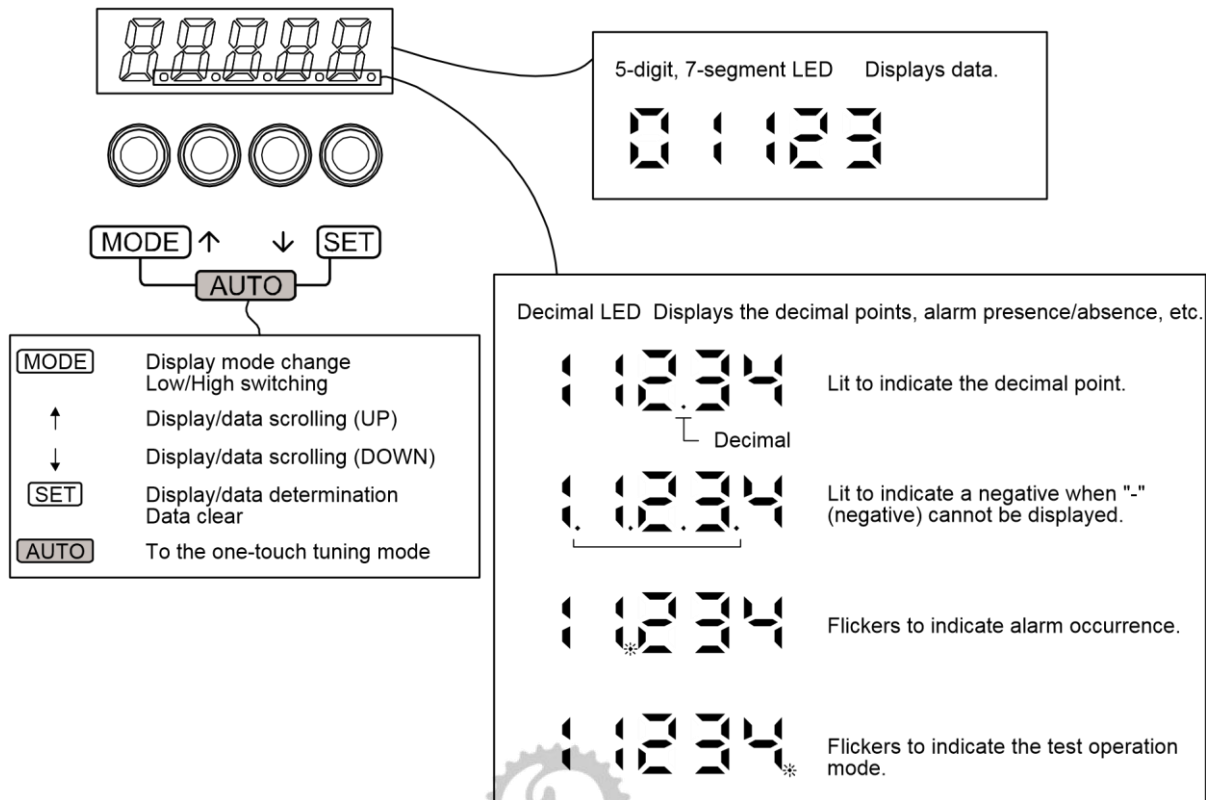


### 4.5.2 Display flowchart

Press the "MODE" button once to shift to the next display mode. Refer to section 4.5.3 and later for the description of the corresponding display mode.

To refer to and set the gain/filter parameters, extension setting parameters and I/O setting parameters, enable them with [Pr. PA19 Parameter writing inhibit].

Display mode transition	Initial screen	Function	Reference
		Servo status display.   appears at power-on. (Note)	Section 4.5.3
		One-touch tuning Select this when performing the one-touch tuning.	Section 6.2
		Sequence display, external signal display, output signal (DO) forced output, test operation, software version display, VC automatic offset, servo motor series ID display, servo motor type ID display, servo motor encoder ID display, drive recorder enabled/disabled display.	Section 4.5.4
		Current alarm display, alarm history display, parameter error number display.	Section 4.5.5

## 4. STARTUP

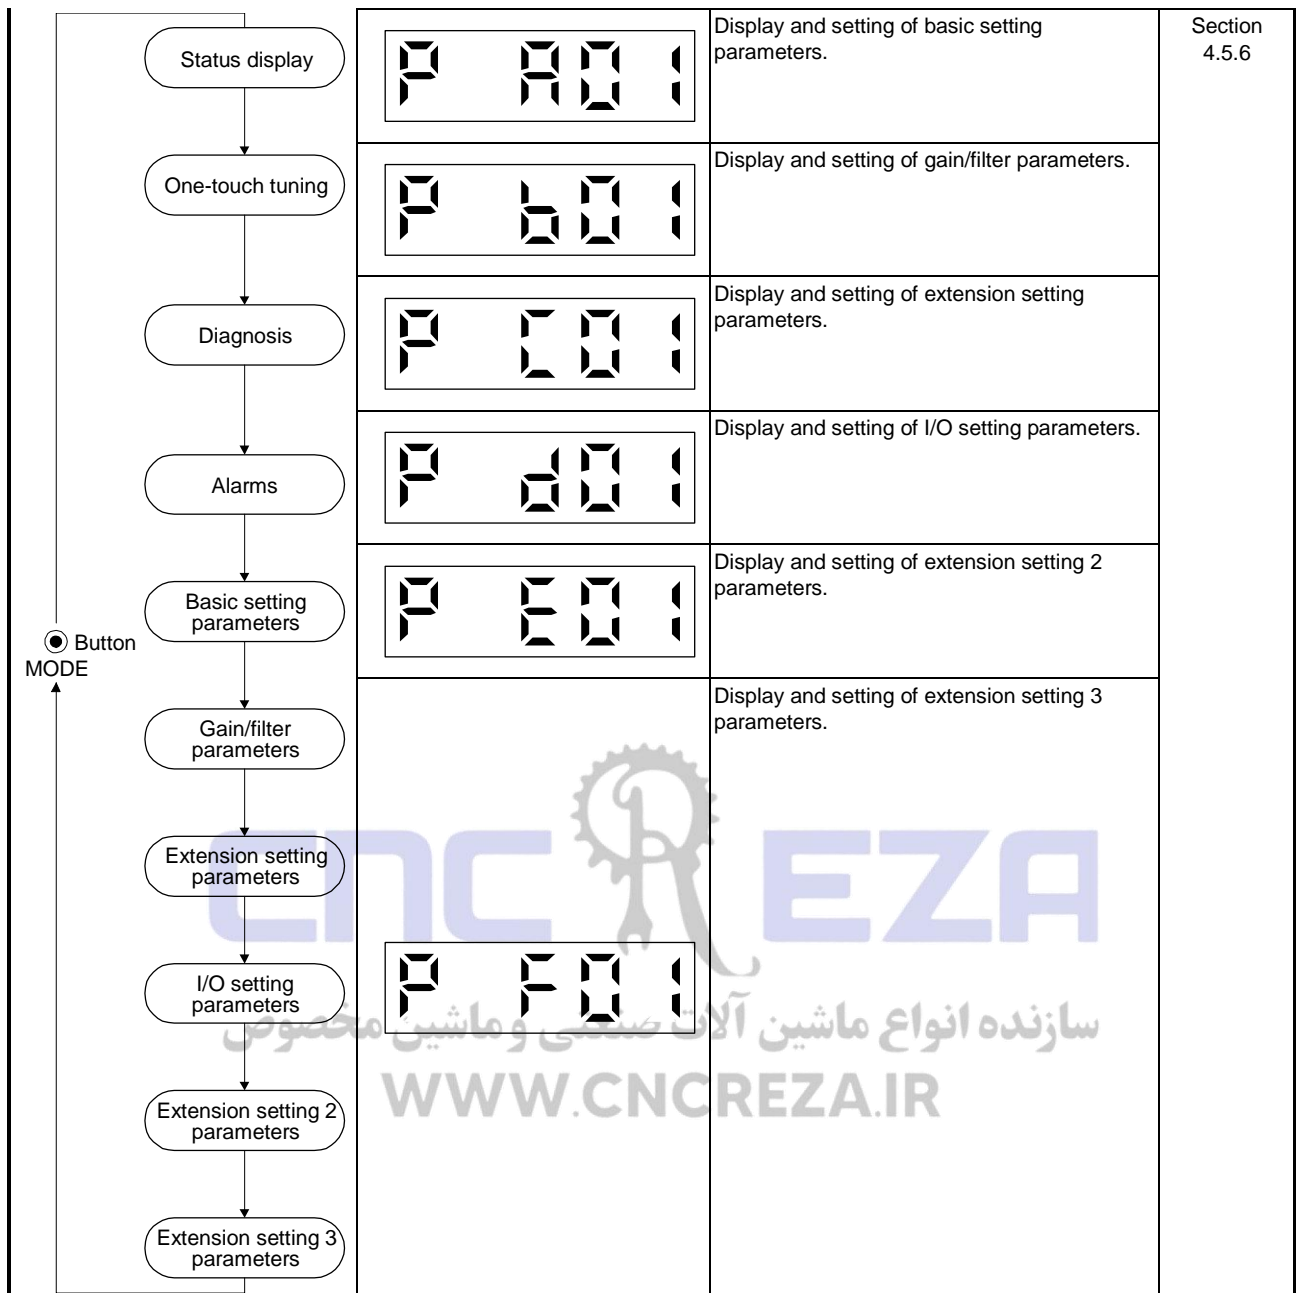

Note. When the axis name is set to the servo amplifier using MR Configurator2, the axis name is displayed and the servo status is then displayed.


### 4.5.3 Status display mode

The servo status during operation is shown on the 5-digit, 7-segment LED display. Press the "UP" or "DOWN" button to change display data as desired. When the required data is selected, the corresponding symbol is displayed. Press the "SET" button to display that data. At only power-on, however, data appears after the symbol of the status display selected in [Pr. PC36] has been shown for 2 s.

#### (1) Display transition

After selecting the status display mode with the "MODE" button, pressing the "UP" or "DOWN" button changes the display as shown below.

## 4. STARTUP

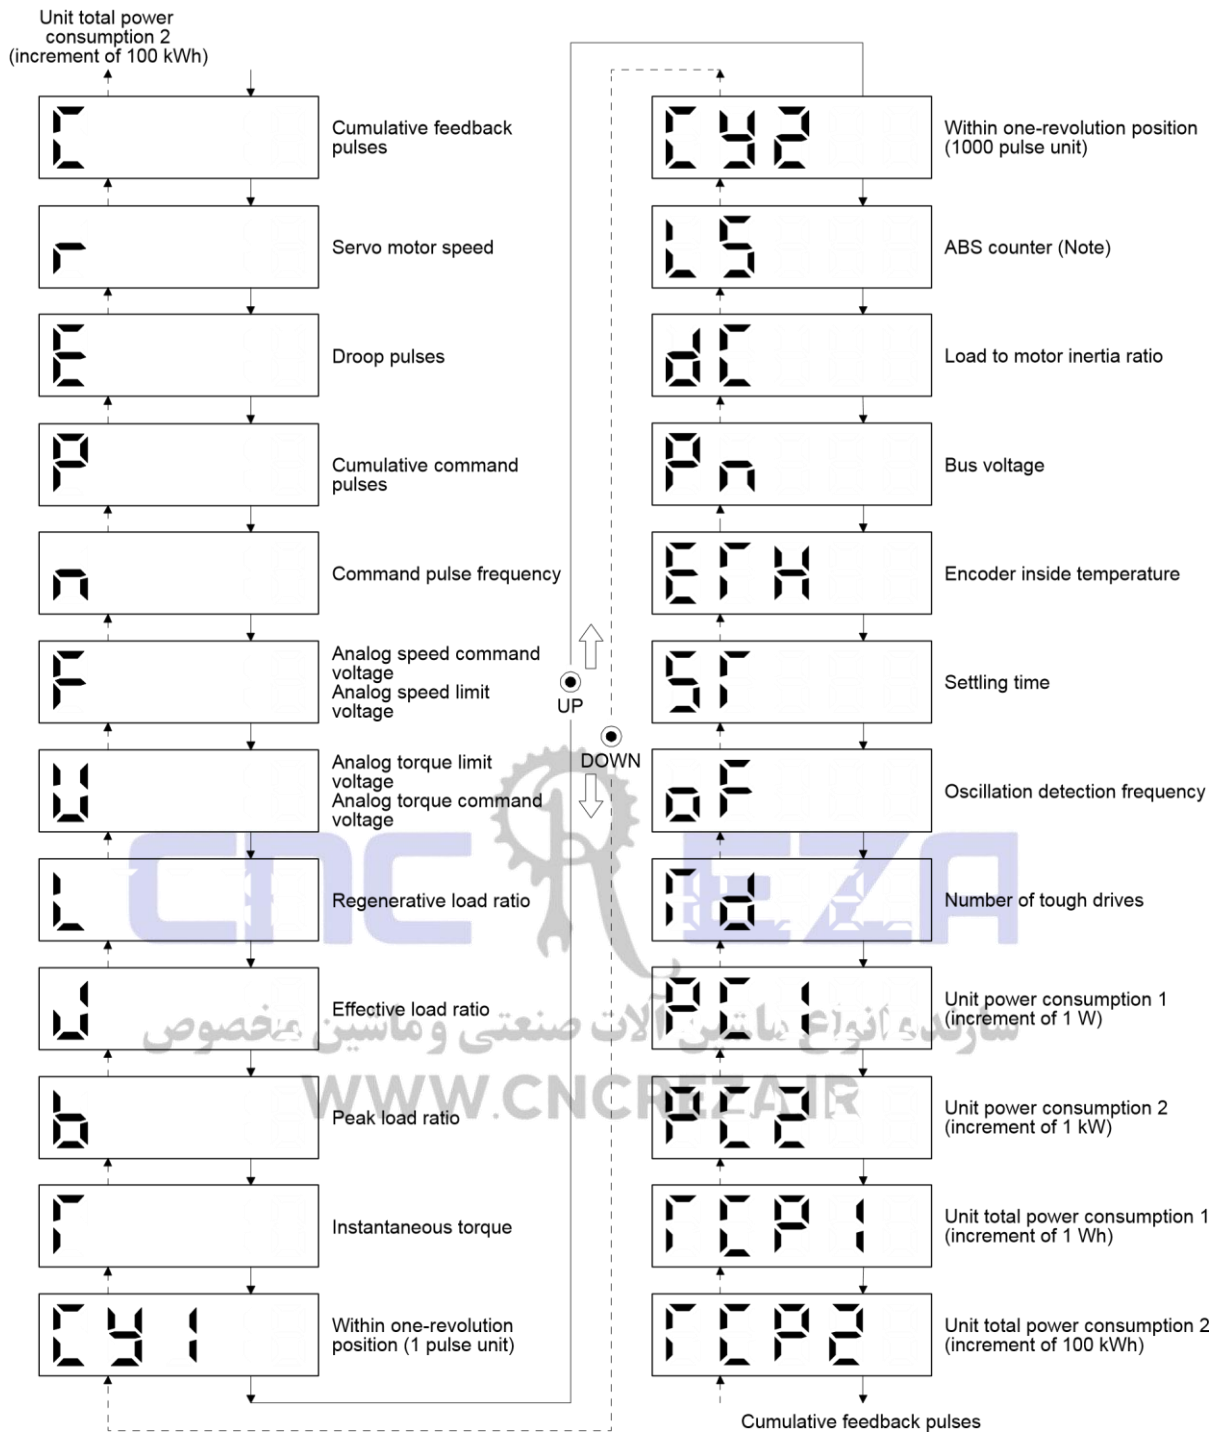

Note. Travel distance from power on is displayed by counter value.





### (2) Display examples

The following table shows the display examples.

Item	Status	Displayed data			
		Servo amplifier display			
Servo motor speed	Forward rotation at 2500 r/min	2	5	0	0



## 4. STARTUP

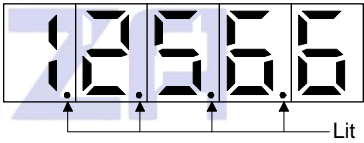	Reverse rotation at 3000 r/min	 <p>Reverse rotation is indicated by "-".</p>
Load to motor inertia ratio	7.00 times	
	11252 pulses	
Cumulative feedback pulses	-12566 pulses	 <p>Negative value is indicated by the lit decimal points in the upper four digits.</p>

### (3) Status display list

The following table lists the servo statuses that may be shown. Refer to appendix 4 for the measurement point.

Status display	Symbol	Unit	Description
Cumulative feedback pulses	C	pulse	Feedback pulses from the servo motor encoder are counted and displayed. The values in excess of $\pm 99999$ can be counted. However, the counter shows only the lower five digits of the actual value since the servo amplifier display is five digits. Press the "SET" button to reset the display value to zero. The value of minus is indicated by the lit decimal points in the upper four digits.
Servo motor speed	r	r/min	The servo motor speed is displayed. It is displayed rounding off 0.1 r/min unit.
Droop pulses	E	pulse	The number of droop pulses in the deviation counter are displayed. The decimal points in the upper four digits are lit for reverse rotation pulses. The values in excess of $\pm 99999$ can be counted. However, the counter shows only the lower five digits of the actual value since the servo amplifier display is five digits. The number of pulses displayed is in the encoder pulse unit.

## 4. STARTUP

Cumulative command pulses	P	pulse	Position command input pulses are counted and displayed. As the value displayed is not yet multiplied by the electronic gear (CMX/CDV), it may not match the indication of the cumulative feedback pulses. The values in excess of $\pm 99999$ can be counted. However, the counter shows only the lower five digits of the actual value since the servo amplifier display is five digits. Press the "SET" button to reset the display value to zero. When the servo motor is rotating in the reverse direction, the decimal points in the upper four digits are lit.
Command pulse frequency	n	kpulse/s	The frequency of position command input pulses is counted and displayed. The value displayed is not multiplied by the electronic gear (CMX/CDV).
Analog speed command voltage Analog speed limit voltage	F	V	1) Torque control mode Input voltage of VLA (Analog speed limit) voltage is displayed. 2) Speed control mode Input voltage of VC (Analog speed command) voltage is displayed
Analog torque command voltage Analog torque limit voltage	U	V	1) Position control mode and speed control mode Voltage of TLA (Analog torque limit) voltage is displayed. 2) Torque control mode Voltage of TC (Analog torque command) voltage is displayed.
Regenerative load ratio	L	%	The ratio of regenerative power to permissible regenerative power is displayed in %.
Effective load ratio	J	%	The continuous effective load current is displayed. The effective value in the past 15 s is displayed relative to the rated current of 100 %.
Peak load ratio	b	%	The maximum occurrence torque is displayed. The highest value in the past 15 s is displayed relative to the rated current of 100 %.
Instantaneous torque	T	%	The instantaneous occurrence torque is displayed. The value of torque being occurred is displayed in real time considering a rated torque as 100%.
Within one-revolution position (1 pulse unit)	Cy1	pulse	Position within one revolution is displayed in encoder pulses. The values in excess of $\pm 99999$ can be counted. However, the counter shows only the lower five digits of the actual value since the servo amplifier display is five digits. When the servo motor rotates in the CCW direction, the value is added.
Within one-revolution position (1000 pulses unit)	Cy2	1000 pulses	The within one-revolution position is displayed in 1000 pulse increments of the encoder. When the servo motor rotates in the CCW direction, the value is added.
ABS counter	LS	rev	Travel distance from power on is displayed by counter value.
Load to motor inertia ratio	dC	Multiplier	The estimated ratio of the load inertia moment to the servo motor shaft inertia moment is displayed.

Status display	Symbol	Unit	Description
Bus voltage	Pn	V	The voltage of main circuit converter (between P+ and N-) is displayed.
Encoder inside temperature	ETH	°C	Inside temperature of encoder detected by the encoder is displayed.
Settling time	ST	ms	Settling time is displayed. When it exceeds 1000 ms, "1000" will be displayed.
Oscillation detection frequency	oF	Hz	Frequency at the time of oscillation detection is displayed.
Number of tough drive operations	Td	times	The number of tough drive functions activated is displayed.
Unit power consumption 1 (increment of 1 W)	PC1	W	Unit power consumption is displayed by increment of 1 W. Positive value indicate power running, and negative value indicate regeneration. The values in excess of $\pm 99999$ can be counted. However, the counter shows only the lower five digits of the actual value since the servo amplifier display is five digits.
Unit power consumption 2 (increment of 1 kW)	PC2	kW	Unit power consumption is displayed by increment of 1 kW. Positive value indicate power running, and negative value indicate regeneration.

## 4. STARTUP







Unit total power consumption 1 (increment of 1 Wh)	TPC1	Wh	Unit total power consumption is displayed by increment of 1 Wh. Positive value is cumulated during power running and negative value during regeneration. The values in excess of $\pm 99999$ can be counted. However, the counter shows only the lower five digits of the actual value since the servo amplifier display is five digits.
Unit total power consumption 2 (increment of 100 kWh)	TPC2	100 kWh	Unit total power consumption is displayed by increment of 100 kWh. Positive value is cumulated during power running and negative value during regeneration.

### (4) Changing the status display screen





The status display item of the servo amplifier display shown at power-on can be changed by changing [Pr. PC36] settings. The item displayed in the initial status changes with the control mode as follows.






Control mode	Status display
Position	Cumulative feedback pulses
Position/speed	Cumulative feedback pulses/servo motor speed
Speed	Servo motor speed
Speed/torque	Servo motor speed/analog torque command voltage
Torque	Analog torque command voltage
Torque/position	Analog torque command voltage/cumulative feedback pulses

### 4.5.4 Diagnostic mode




Name	Display	Description	
Sequence		Not ready Indicates that the servo amplifier is being initialized or an alarm has occurred.	
		Ready Indicates that the servo was switched on after completion of initialization and the servo amplifier is ready to operate.	
Drive recorder enabled/disabled display		Drive recorder enabled When an alarm occurs in the status, the drive recorder will operate and write the status of occurrence.	
		Drive recorder disabled The drive recorder will not operate on the following conditions. 1. You are using the graph function of MR Configurator2. 2. You are using the machine analyzer function. 3. [Pr. PF21] is set to "-1".	
External I/O signal display	Refer to section 4.5.7.	This Indicates the on/off status of external I/O signal. The upper segments correspond to the input signals and the lower segments to the output signals.	
Output signal (DO) forced output		This allows digital output signal to be switched on/off forcibly. For details, refer to section 4.5.8.	
Test operation mode	JOG operation		JOG operation can be performed when there is no command from an external controller. For details, refer to section 4.5.9 (2).

## 4. STARTUP

Positioning operation		Positioning operation can be performed when there is no command from an external controller. MR Configurator2 is required to perform positioning operation. For details, refer to section 4.5.9 (3).
Motor-less operation		Without connecting the servo motor, output signals or status display monitoring can be provided in response to the input device as if the servo motor is actually running. For details, refer to section 4.5.9 (4).
Machine analyzer operation		Merely connecting the servo amplifier allows the resonance point of the mechanical system to be measured. MR Configurator2 is required to perform machine analyzer operation. Refer to section 11.4 for details.
For manufacturer adjustment		This is for manufacturer adjustment.

Name	Display	Description
Software version - Lower		Indicates the version of the software.
Software version - Upper		Indicates the system number of the software.
Automatic VC offset		If offset voltages in the analog circuits inside and outside the servo amplifier cause the servo motor to rotate slowly at VC (Analog speed command) or VLA (Analog speed limit) of 0 V, this function automatically makes zeroadjustment of offset voltages. When using this function, enable the function in the following procedure. When it is enabled, [Pr. PC37] value changes to the automatically adjusted offset voltage. 1) Push "SET" once. 2) Set the number in the first digit to 1 with "UP"/"DOWN". 3) Push "SET". This function cannot be used if the input voltage of VC or VLA is - +0.4 V or less, or + 0.4 V or more. (Note)
Servo motor series ID		Push the "SET" button to show the series ID of the servo motor currently connected. For indication details, refer to appendix 1 of "HF-KN/HF-SN servo Motor Instruction Manual".
Servo motor type ID		Push the "SET" button to show the type ID of the servo motor currently connected. For indication details, refer to appendix 1 of "HF-KN/HF-SN servo Motor Instruction Manual".






## 4. STARTUP

Servo motor encoder ID		Push the "SET" button to show the encoder ID of the servo motor currently connected. For indication details, refer to appendix 1 of "HF-KN/HF-SN servo Motor Instruction Manual".
For manufacturer adjustment		This is for manufacturer adjustment.
For manufacturer adjustment		This is for manufacturer adjustment.







Note. Even if Automatic VC offset is performed and 0 V is input, the servo motor may not completely stop due to an internal error. To completely stop the servo motor, switch off ST1 or ST2.

### 4.5.5 Alarm mode

The current alarm, past alarm history and parameter error are displayed. The lower 2 digits on the display indicate the alarm number that has occurred or the parameter number in error.

Name	Display	Description
Current alarm		Indicates no occurrence of an alarm.
		Indicates the occurrence of [AL. 33.1 Main circuit voltage error]. Flickers at alarm occurrence.
Alarm history		Indicates that the last alarm is [AL. 50.1 Thermal overload error 1 during operation].
		Indicates the second last alarm is [AL. 33.1 Main circuit voltage error].
		Indicates the third last alarm is [AL. 10.1 Voltage drop in the power].

## 4. STARTUP

	   	<p>Indicates that there is no tenth alarm in the past.</p> <p>Indicates that there is no eleventh alarm in the past.</p> <p>Indicates that there is no twelfth alarm in the past.</p> <p>Indicates that there is no sixteenth alarm in the past.</p>
Parameter error No.		This indicates no occurrence of [AL. 37 Parameter error].
		The data content error of [Pr. PA12 Reverse rotation torque limit].

### Functions at occurrence of an alarm


- (1) Any mode screen displays the current alarm.
- (2) Even during alarm occurrence, the other screen can be viewed by pressing the button in the operation area. At this time, the decimal point in the fourth digit remains flickering.
- (3) For any alarm, remove its cause and clear it in any of the following methods. (Refer to chapter 8 for the alarms that can be cleared.)
  - (a) Switch power off, then on.
  - (b) Push the "SET" button on the current alarm screen.
  - (c) Turn on RES (Reset).
- (4) Use [Pr. PC18] to clear the alarm history.
- (5) Push "UP" or "DOWN" to move to the next history.

### 4.5.6 Parameter mode

#### (1) Parameter mode transition

After selecting the corresponding parameter mode with the "MODE" button, pushing the "UP" or "DOWN" button changes the display as shown below.

## 4. STARTUP

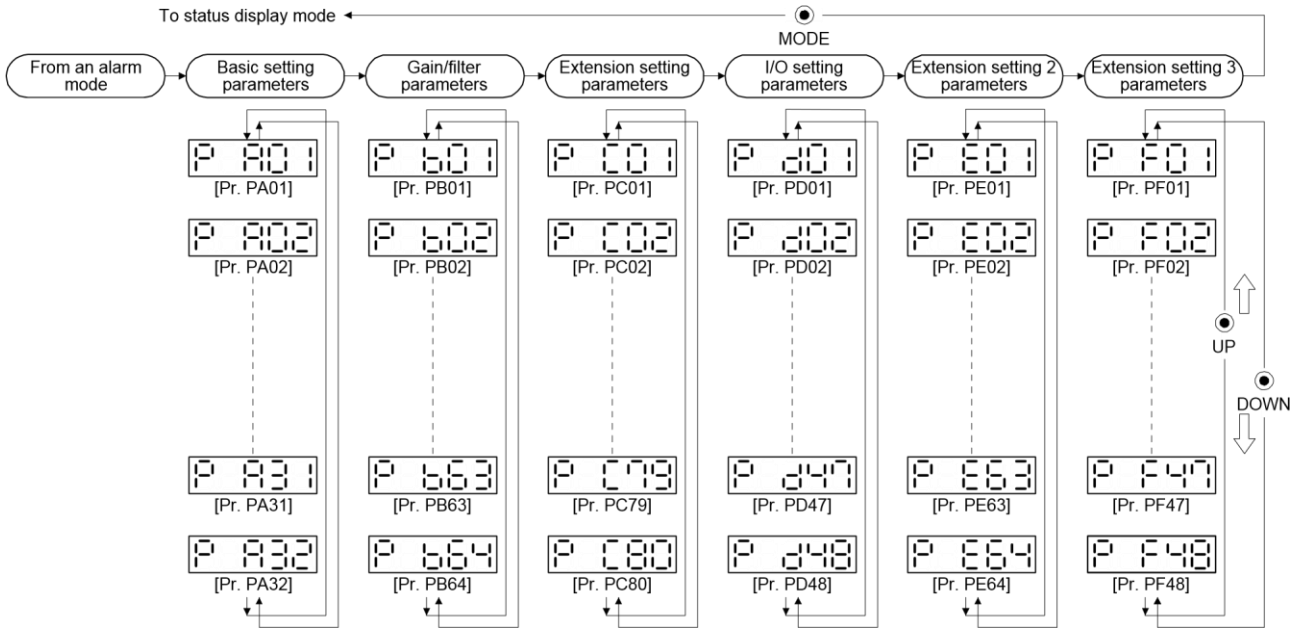

### (2) Operation example

#### (a) Parameters of 5 or less digits

The following example shows the operation procedure performed after power-on to change the control mode to the speed control mode with [Pr. PA01 Operation mode]. Press "MODE" to switch to the basic setting parameter screen.



.....The parameter number is displayed.  
Press "UP" or "DOWN" to change the number.



Press "SET" twice.

.....The set value of the specified parameter number flickers.



Press "UP" twice.

.....During flickering, the set value can be changed.

Use "UP" or "DOWN".

( \_ \_ \_ 2: Speed control mode) Press "SET" to enter.


To shift to the next parameter, press the "UP" or "DOWN" button.

When changing the [Pr. PA01] setting, change its set value, then switch power off once and switch it on again to enable the new value.

#### (b) Parameters of 6 or more digits

The following example gives the operation procedure to change the electronic gear numerator to "123456" with [Pr. PA06 Electronic gear numerator].

## 4. STARTUP

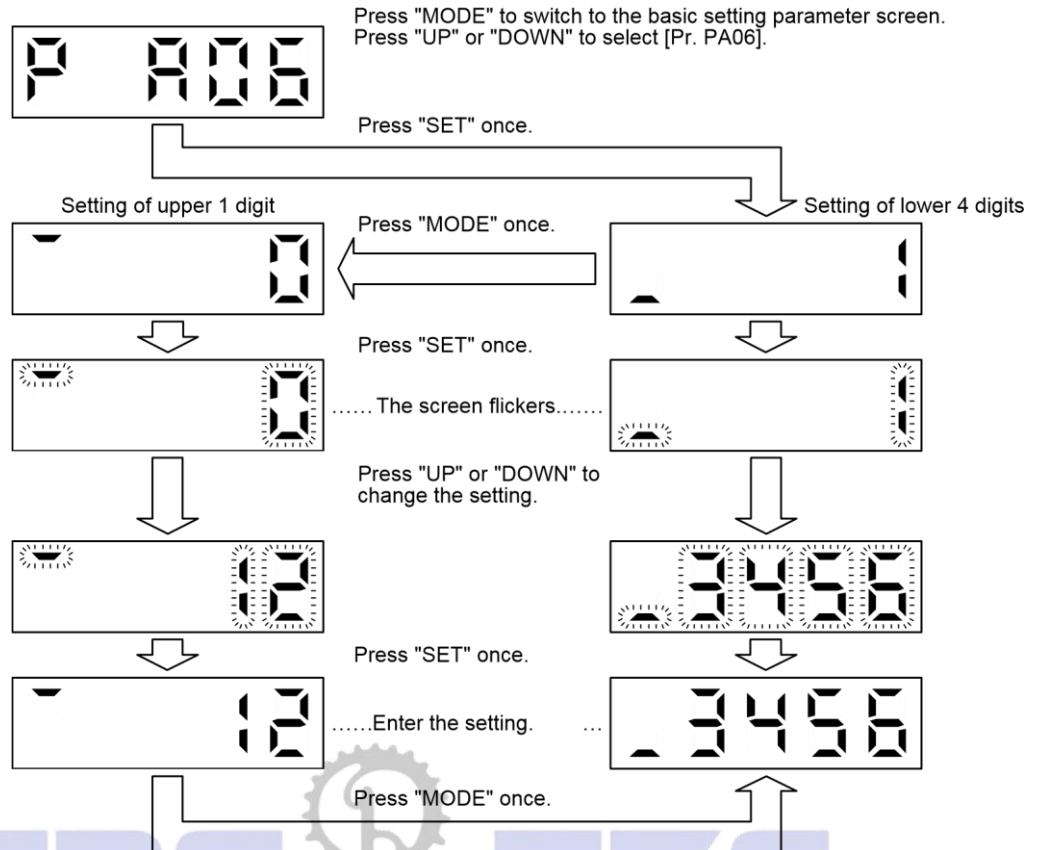

### 4.5.7 External I/O signal display


POINT

● All settings can be changed using the I/O setting parameters [Pr. PD03] to [Pr. PD28].

The on/off states of the digital I/O signals connected to the servo amplifier can be confirmed.

#### (1) Operation

The display screen at power-on. Using the "MODE" button, display the diagnostic screen.

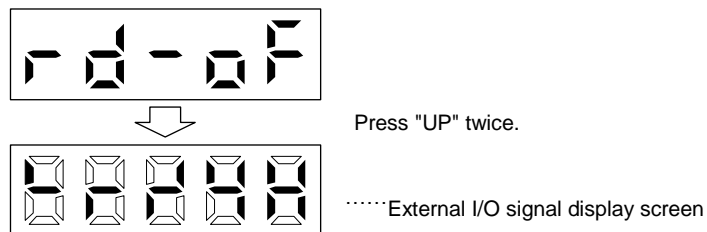


#### (2) Display definition

The 7-segment LED segments and CN1 connector pins correspond as shown below.

CN1	CN1	CN1	CN1	CN1
42	41	19	15	44
				43



## 4. STARTUP

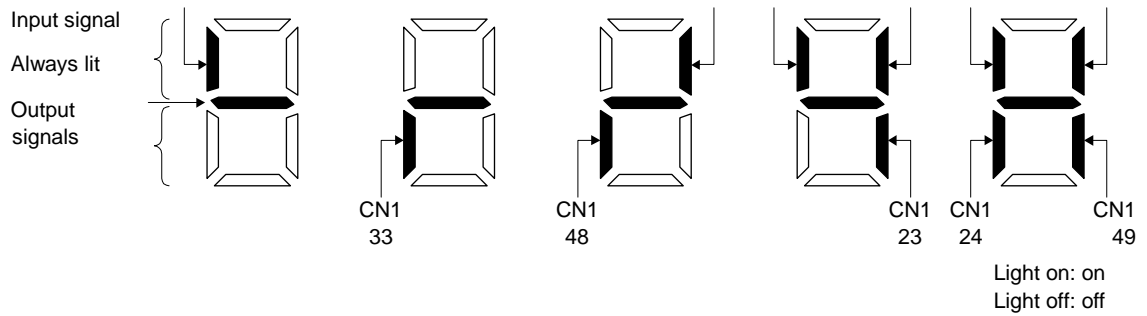

The LED segment corresponding to the pin is lit to indicate on, and is extinguished to indicate off. The signals corresponding to the pins in the respective control modes are indicated below.

### (a) Control modes and I/O signals

Connector	Pin No.	Signal input/output (Note 1) I/O	(Note 2) Symbols of I/O signals in control modes						Related parameter
			P	P/S	S	S/T	T	T/P	
CN1	15	I	SON	SON	SON	SON	SON	SON	Pr. PD03/Pr. PD04
	16								
	17								
	18								
	19	I	RES	RES/ST1	ST1	ST1/RS2	RS2	RS2/RES	Pr. PD11/Pr. PD12
	22								
	23	O	ZSP	ZSP	ZSP	ZSP	ZSP	ZSP	Pr. PD24
	24	O	INP	INP/SA	SA	SA/-		-/INP	Pr. PD25
	25								
	33	O	OP	OP	OP	OP	OP	OP	
	41	I	CR	CR/ST2	ST2	ST2/RS1	RS1	RS1/CR	Pr. PD13/Pr. PD14
	42	I	EM2	EM2	EM2	EM2	EM2	EM2	
	43	I	LSP	LSP	LSP	LSP/-		-/LSP	Pr. PD17/Pr. PD18
	44	I	LSN	LSN	LSN	LSN/-		-/LSN	Pr. PD19/Pr. PD20
45									
48	O	ALM	ALM	ALM	ALM	ALM	ALM		
49	O	RD	RD	RD	RD	RD	RD	Pr. PD28	

Note 1. I: input signal, O: output signal

2. P: position control mode, S: speed control mode, T: torque control mode


P/S: position/speed control switching mode, S/T: speed/torque control switching mode, T/P: torque/position switching mode

### (b) Symbol and signal names


Symbol	Signal name	Symbol	Signal name
SON	Servo-on	RES	Reset
LSP	Forward rotation stroke end	EM2	Forced stop 2
LSN	Reverse rotation stroke end	LOP	Control switching
CR	Clear	TLC	Limiting torque
SP1	Speed selection 1	VLC	Limiting speed
SP2	Speed selection 2	RD	Ready
PC	Proportion control	ZSP	Zero speed detection
ST1	Forward rotation start	INP	In-position
ST2	Reverse rotation start	SA	Speed reached
RS1	Forward rotation selection	ALM	Malfunction
RS2	Reverse rotation selection	OP	Encoder Z-phase pulse (open collector)
TL	External torque limit selection		

## 4. STARTUP


### (3) Display data at initial values (a) Position control mode

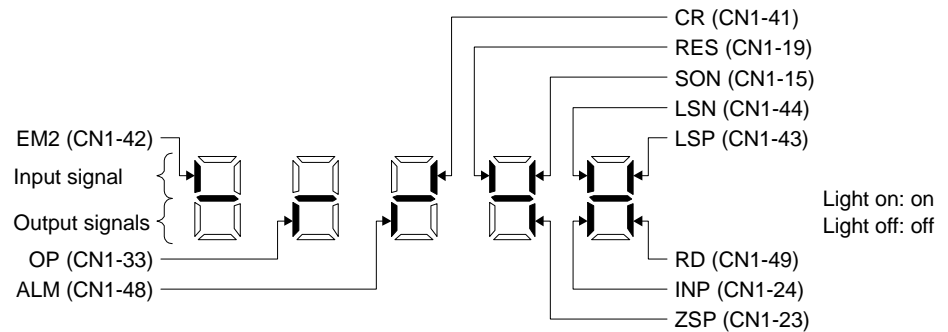

### (b) Speed control mode

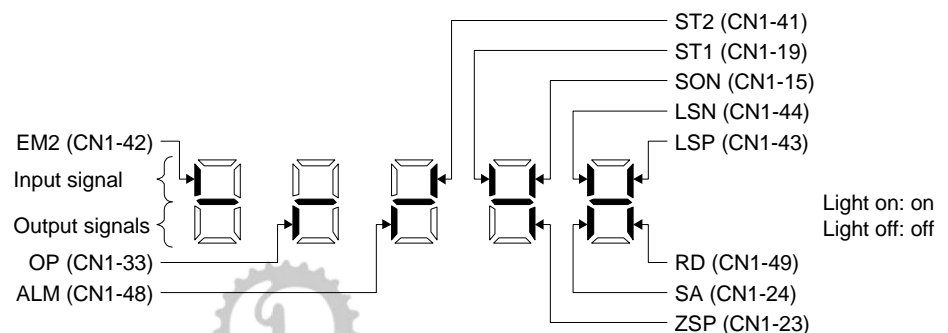

### (c) Torque control mode

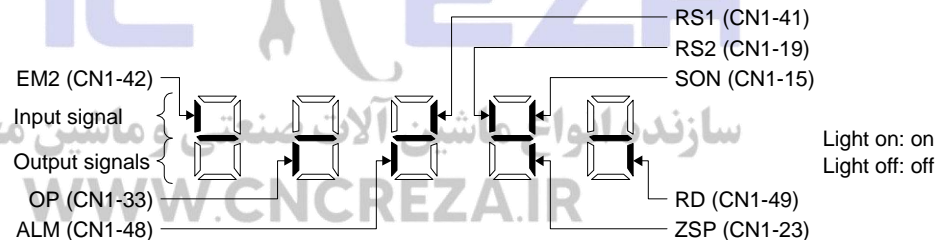

#### 4.5.8 Output signal (DO) forced output


POINT	
● (	ervo system is used in a vertical lift application, turning on MBR netic brake interlock) by the DO forced output after assigning it to N1 will release the electromagnetic brake, causing a drop. Take live measures on the machine side.

Output signals can be switched on/off forcibly independently of the servo status. This function is used for output signal wiring check, etc. This operation must be performed in the servo off state by turning off SON (Servo-on).

#### Operation

The display screen at power-on. Using the "MODE" button, display the diagnostic screen.

## 4. STARTUP

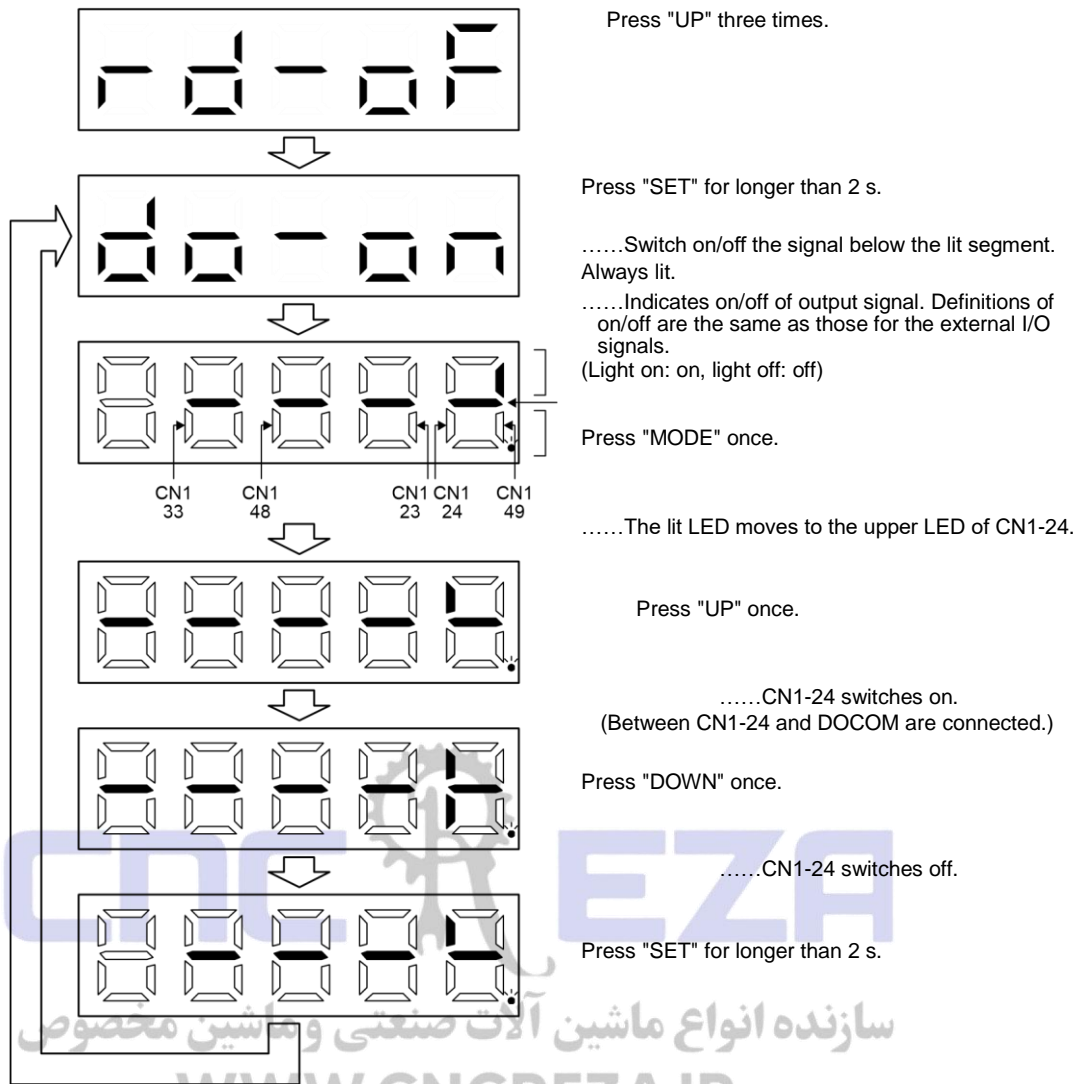

### 4.5.9 Test

operation mode

### ! CAUTION

- The test operation mode is designed for checking servo operation. Do not use it for actual operation.
- If the servo motor operates unexpectedly, use EM2 (Forced stop 2) to stop it.


### POINT

- Motor2 is required to perform positioning operation.
- Positioning operation cannot be performed if SON (Servo-on) is not turned off.

### (1) Mode switching

The display screen at power-on. Select JOG operation or motor-less operation in the following procedure. Using the "MODE" button, display the diagnostic screen.

## 4. STARTUP

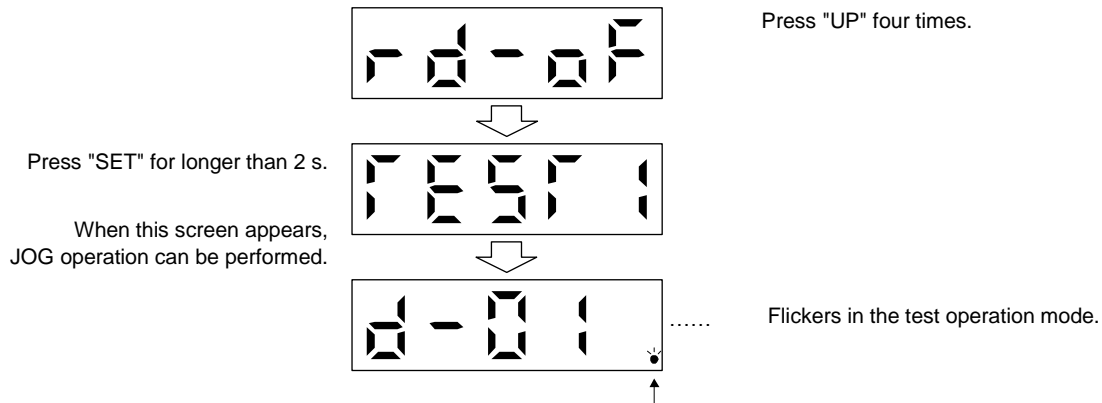

### (2) JOG operation

POINT	
●	During JOG operation, turn on EM2, LSP and LSN. LSP and LSN can be turned on automatically by setting [Pr. PD01] to "_ C _ _".

JOG operation can be performed when there is no command from the controller.

#### (a) Operation

The servo motor rotates while holding down the "UP" or the "DOWN" button. The servo motor stops rotating by releasing the button. The operation condition can be changed using MR Configurator2. The initial operation condition and setting range for operation are listed below.

Item	Initial setting	Setting range
Speed [r/min]	200	0 to permissible instantaneous speed
Acceleration/deceleration time constant [ms]	1000	0 to 50000

The following table shows how to use the buttons.

Button	Description
"UP"	Press to start CCW rotation. Release to stop.
"DOWN"	Press to start CW rotation. Release to stop.

If the USB cable is disconnected during JOG operation using the MR Configurator2, the servo motor decelerates to a stop.


#### (b) Status display

Press the "MODE" button in the JOG operation-ready status to call the status display screen. When the JOG operation is performed using the "UP" or "DOWN" button, the servo status is displayed during the JOG operation. Every time the "MODE" button is pressed, the next status display screen appears. When one cycle of the screen display is complete, it returns to the JOG operation-ready status screen. Refer to section 4.5.3 for details of status display. Note that the status display screen cannot be changed by the "UP" or "DOWN" button during the JOG operation.

## 4. STARTUP

### (c) Termination of JOG operation

To end the JOG operation, shut the power off once, or press the "MODE" button to switch to the next screen, and then hold down the "SET" button for 2 s or longer.




### (3) Positioning operation

POINT	
●	Motor2 is required to perform positioning operation.
●	2 (forced stop 2) when performing positioning operation.

Positioning operation can be performed when there is no command from the controller.

#### (a) Operation

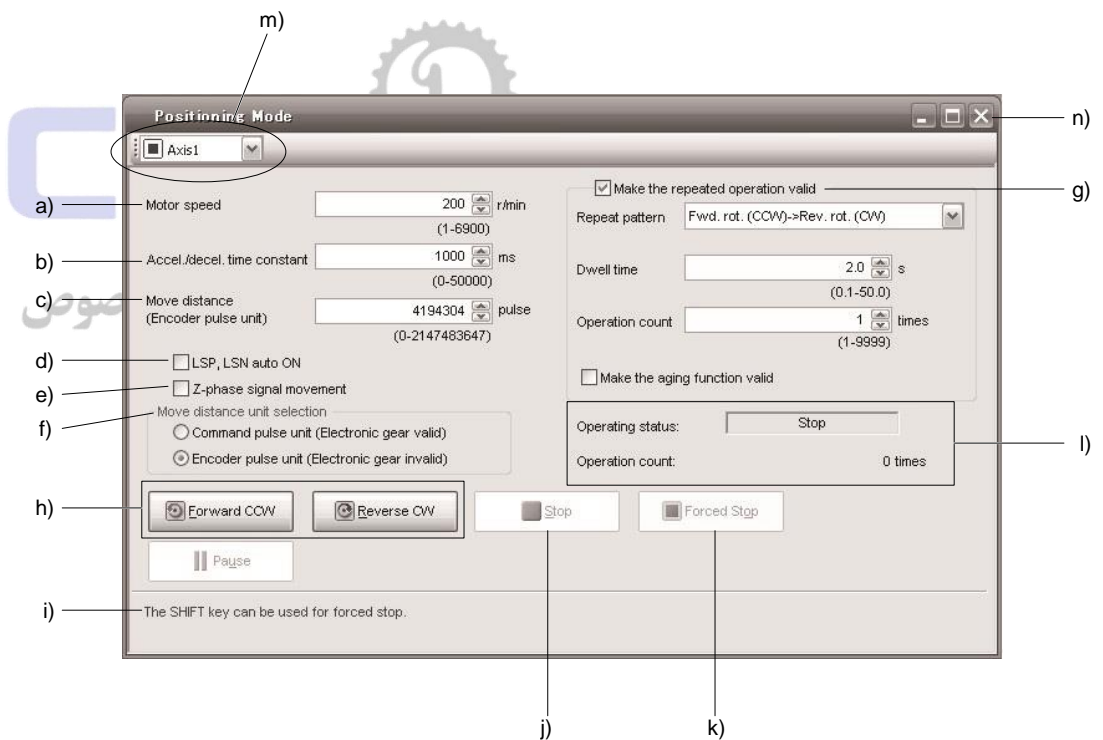

#### a) Motor speed [r/min]

Enter the servo motor speed into the "Motor speed" input field.

#### b) Acceleration/deceleration time constant [ms]

Enter the acceleration/deceleration time constant into the "Accel./decel time" input field.

#### c) Travel distance [pulse]

Enter the travel distance into the "Travel distance" input field.

## 4. STARTUP

d) LSP/LSN are automatically turned on

When setting the external stroke signal to automatic on, click the check box to enable it. When it is not selected, turn on LSP and LSN externally.

e) Move till Z-phase signal

Travel is made until the travel distance is reached and the first Z-phase signal in the travelling direction turns on.

f) Travel distance unit selection

Select with the option buttons whether the travel distance set in c) is in the command pulse unit or in the encoder pulse unit.

When the command input pulse unit is selected, the value, which is the set travel distance multiplied by the electronic gear, will be the command value. When the encoder pulse unit is selected, the travel distance is not multiplied by the electronic gear.

g) Enable repeat operation

To perform repeat operation, click the check. The initial setting and setting range for the repeat operation are listed below.

Item	Initial setting	Setting range
Repeat pattern	Fwd. rot. (CCW) to rev. rot. (CW)	Fwd. rot. (CCW) to rev. rot. (CW) Fwd. rot. (CCW) to fwd. rot. (CCW) Rev. rot. (CW) to fwd. rot. (CCW) Rev. rot. (CW) to rev. rot. (CW)
Dwell time [s]	2.0	0.1 to 50.0
Number of operations [times]	1	1 to 9999

To perform continuous operation with the repeat pattern and dwell time settings, which are set by referring to the above table, click the check box of "Make the aging function enabled".

h) Forward/reverse the servo motor

Click the "Forward CCW" button to rotate the servo motor in the forward rotation direction. Click the "Reverse CW" button to rotate the servo motor in the reverse rotation direction.

i) Pause the servo motor

Click the "Pause" button during servo motor rotation to temporarily stop the servo motor. This button is enabled during servo motor rotation.

h) Stop the servo motor

Click the "Stop" button during servo motor rotation to stop the servo motor.

k) Forced stop

Click the "Forced stop" button during servo motor rotation to make a sudden stop. This button is enabled during servo motor rotation.

l) Operation status

## 4. STARTUP

---

The operation status during the repeat operation, and the number of operations are displayed

m) Axis No.

Axis No. in operation is displayed.

n) Termination of positioning operation window

Click the close button to cancel the positioning operation mode and close the window.

(b) Status display

The status display can be monitored during positioning operation.

(4) Motor-less operation

Without connecting the servo motor, output signals or status display can be provided in response to the input device as if the servo motor is actually running. This operation can be used to check the sequence of a controller or the like.

(a) Start of motor-less operation

After setting "\_\_\_ 1" in [Pr. PC60], cycle the power. After that, perform external operation as in ordinary operation.

(b) Termination of motor-less operation

To terminate the motor-less operation, set [Pr. PC60] to "\_\_\_ 0" and then turn the power off.

(5) Program operation

Positioning operation can be performed in two or more operation patterns combined, without using a controller. Use this operation with the forced stop reset. This operation may be used independently of whether servo-on or servo-off and whether a controller is connected or not.

Exercise control on the program operation screen of MR Configurator2. For full information, refer to the MR Configurator2 Installation Guide.

Operation	Screen control
Start	Click the "Operation start" button.
Stop	Click the "Stop" button.
Forced stop	Click the "Forced Stop" button.

(6) Output signal (DO) forced output

Output signals can be switched on/off forcibly independently of the servo status. This function is used for output signal wiring check, etc. Exercise control on the DO forced output screen of MR Configurator2.





## 5. PARAMETERS

---

### 5. PARAMETERS

#### CAUTION

- Never make a drastic adjustment or change to the parameter values as doing so will make the operation unstable.
- If fixed values are written in the digits of a parameter, do not change these values.
- Do not change parameters for manufacturer setting.
- Do not set a value other than the described values to each parameter.

#### 5.1 Parameter list

POINT	
●	parameter whose symbol is preceded by *, turn off the power for 1 s r setting and turn it on again. However, the time will be longer n a setting value of [Pr. PF25 SEMI-F47 function - Instantaneous e detection time (instantaneous power failure tough drive - detection "SEMI-F47 function selection (instantaneous power failure tough on)" is enabled in [Pr. PA20]. s in the control mode column mean as follows.
●	control mode
	S: Speed c <sup>ontrol</sup> mode mode

#### 5.1.1 Basic setting parameters ([Pr. PA\_ \_ ])

## 5. PARAMETERS

No.	Symbol	Name	Initial value	Unit	Control mode		
					P	S	T
PA01	*STY	Operation mode	1000h		○	○	○
PA02	*REG	Regenerative option	0000h		○	○	○
PA03		For manufacturer setting	0000h				
PA04	*AOP1	Function selection A-1	2000h		○	○	
PA05	*FBP	Number of command input pulses per revolution	10000		○		
PA06	CMX	Electronic gear numerator (command pulse multiplication numerator)	1		○		
PA07	CDV	Electronic gear denominator (command pulse multiplication denominator)	1		○		
PA08	ATU	Auto tuning mode	0001h		○	○	
PA09	RSP	Auto tuning response	16		○	○	
PA10	INP	In-position range	100	[pulse]	○		
PA11	TLP	Forward rotation torque limit	100.0	[%]	○	○	○
PA12	TLN	Reverse rotation torque limit	100.0	[%]	○	○	○
PA13	*PLSS	Command pulse input form	0100h		○		
PA14	*POL	Rotation direction selection	0		○		
PA15	*ENR	Encoder output pulses	4000	[pulse/rev]	○	○	○
PA16	*ENR2	Encoder output pulses 2	1		○	○	○
PA17		For manufacturer setting	0000h				
PA18			0000h				
PA19	*BLK	Parameter writing inhibit	00AAh		○	○	○
PA20	*TDS	Tough drive setting	0000h		○	○	○
PA21	*AOP3	Function selection A-3	0001h		○	○	
PA22		For manufacturer setting	0000h				
PA23	DRAT	Drive recorder arbitrary alarm trigger setting	0000h		○	○	○
PA24	AOP4	Function selection A-4	0000h		○	○	
PA25	OTHOV	One-touch tuning - Overshoot permissible level	0	[%]	○	○	
PA26	*AOP5	Function selection A-5	0000h		○	○	
PA27		For manufacturer setting	0000h				
PA28			0000h				

PA29	For manufacturer setting	0000h				
PA30		0000h				
PA31		0000h				
PA32		0000h				

### 5.1.2 Gain/filter setting parameters ([Pr. PB\_ \_])

--	--	--	--	--	--	--

## 5. PARAMETERS

No.	Symbol	Name	Initial value	Unit	Control mode		
					P	S	T
			0000h				
No.	Symbol	Name	Initial value	Unit	P	S	T
PB01	FILT	Adaptive tuning mode (adaptive filter II)	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB02	VRFT	Vibration suppression control tuning mode (advanced vibration suppression control II)	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB03	PST	Position command acceleration/deceleration time constant (position smoothing)	0	[ms]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB04	FFC	Feed forward gain	0	[%]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB05		For manufacturer setting	500		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB06	GD2	Load to motor inertia ratio	7.00	[Multiplier]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB07	PG1	Model loop gain	15.0	[rad/s]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB08	PG2	Position loop gain	37.0	[rad/s]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB09	VG2	Speed loop gain	823	[rad/s]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB10	VIC	Speed integral compensation	33.7	[ms]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB11	VDC	Speed differential compensation	980		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB12	OVA	Overshoot amount compensation	0	[%]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB13	NH1	Machine resonance suppression filter 1	4500	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB14	NHQ1	Notch shape selection 1	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB15	NH2	Machine resonance suppression filter 2	4500	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB16	NHQ2	Notch shape selection 2	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB17	NHF	Shaft resonance suppression filter	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB18	LPF	Low-pass filter setting	3141	[rad/s]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB19	VRF11	Vibration suppression control 1 - Vibration frequency	100.0	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB20	VRF12	Vibration suppression control 1 - Resonance frequency	100.0	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB21	VRF13	Vibration suppression control 1 - Vibration frequency damping	0.00		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB22	VRF14	Vibration suppression control 1 - Resonance frequency damping	0.00		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB23	VFBF	Low-pass filter selection	0100h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB24	*MVS	Slight vibration suppression control	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB25	*BOP1	Function selection B-1	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB26	*CDP	Gain switching function	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB27	CDL	Gain switching condition	10	[kpulse/s]/ [pulse]/ [r/min]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB28	CDT	Gain switching time constant	1	[ms]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB29	GD2B	Load to motor inertia ratio after gain switching	7.00	[Multiplier]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB30	PG2B	Gain switching position loop gain	0.0	[rad/s]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB31	VG2B	Gain switching speed loop gain	0	[rad/s]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB32	VICB	Speed integral compensation after gain switching	0.0	[ms]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB33	VRF1B	Vibration suppression control 1 - Vibration frequency after gain switching	0.0	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB34	VRF2B	Vibration suppression control 1 - Resonance frequency after gain switching	0.0	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB35	VRF3B	Vibration suppression control 1 - Vibration frequency damping after gain switching	0.00		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB36	VRF4B	Vibration suppression control 1 - Resonance frequency damping after gain switching	0.00		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB37		For manufacturer setting	1600		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB38			0.00		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB39			0.00		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB40			0.00		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

## 5. PARAMETERS

No.	Symbol	Name	Initial value	Unit	Control mode		
					P	S	T
PB41		For manufacturer setting	0000h				
PB42			0000h				
PB43			0000h				
PB44			0.00				
PB45			CNHF				
PB46	NH3	Machine resonance suppression filter 3	4500	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB47	NHQ3	Notch shape selection 3	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB48	NH4	Machine resonance suppression filter 4	4500	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB49	NHQ4	Notch shape selection 4	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB50	NH5	Machine resonance suppression filter 5	4500	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB51	NHQ5	Notch shape selection 5	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB52	VRF21	Vibration suppression control 2 - Vibration frequency	100.0	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB53	VRF22	Vibration suppression control 2 - Resonance frequency	100.0	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB54	VRF23	Vibration suppression control 2 - Vibration frequency damping	0.00		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB55	VRF24	Vibration suppression control 2 - Resonance frequency damping	0.00		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB56	VRF21B	Vibration suppression control 2 - Vibration frequency after gain switching	0.0	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB57	VRF22B	Vibration suppression control 2 - Resonance frequency after gain switching	0.0	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB58	VRF23B	Vibration suppression control 2 - Vibration frequency damping after gain switching	0.00		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB59	VRF24B	Vibration suppression control 2 - Resonance frequency damping after gain switching	0.00		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB60	PG1B	Model loop gain after gain switching	0.0	[rad/s]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB61		For manufacturer setting	0.0				
PB62			0000h				
PB63			0000h				
PB64			0000h				

### 5.1.3 Extension setting parameters ([Pr. PC\_ \_])

--	--	--	--	--	--	--	--	--

## 5. PARAMETERS

No.	Symbol	Name	Initial value	Unit	Control mode		
					P	S	T
			0000h				
No.	Symbol	Name	Initial value	Unit	P	S	T
PC01	STA	Acceleration time constant	0	[ms]	/	○	○
PC02	STB	Deceleration time constant	0	[ms]	/	○	○
PC03	STC	S-pattern acceleration/deceleration time constant	0	[ms]	/	○	○
PC04	TQC	Torque command time constant	0	[ms]	/	/	○
PC05	SC1	Internal speed command 1	100	[r/min]	/	○	/
		Internal speed limit 1			/	/	○
PC06	SC2	Internal speed command 2	500	[r/min]	/	○	/
		Internal speed limit 2			/	/	○
PC07	SC3	Internal speed command 3	1000	[r/min]	/	○	/
		Internal speed limit 3			/	/	○
PC08	SC4	Internal speed command 4	200	[r/min]	/	○	/
		Internal speed limit 4			/	/	○
PC09	SC5	Internal speed command 5	300	[r/min]	/	○	/
		Internal speed limit 5			/	/	○
PC10	SC6	Internal speed command 6	500	[r/min]	/	○	/
		Internal speed limit 6			/	/	○
PC11	SC7	Internal speed command 7	800	[r/min]	/	○	/
		Internal speed limit 7			/	/	○
PC12	VCM	Analog speed command - Maximum speed	0	[r/min]	/	○	/
		Analog speed limit - Maximum speed			/	/	○
PC13	TLC	Analog torque command maximum output	100.0	[%]	/	/	○
PC14	MOD1	Analog monitor 1 output	0000h		/	○	○
PC15	MOD2	Analog monitor 2 output	0001h		/	○	○

## 5. PARAMETERS

No.	Symbol	Name	Initial value	Unit	Control mode		
					P	S	T
			0				
PC16	MBR	Electromagnetic brake sequence output	0	[ms]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PC17	ZSP	Zero speed	50	[r/min]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PC18	*BPS	Alarm history clear	0000h		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PC19	*ENRS	Encoder output pulse selection	0000h		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PC20		For manufacturer setting	0				
PC21			0000h				
PC22	*COP1	Function selection C-1	0020h		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PC23	*COP2	Function selection C-2	0000h			<input type="checkbox"/>	<input type="checkbox"/>
PC24	*COP3	Function selection C-3	0000h		<input type="checkbox"/>		
PC25		For manufacturer setting	0000h				
PC26	*COP5	Function selection C-5	0000h		<input type="checkbox"/>	<input type="checkbox"/>	
PC27		For manufacturer setting	0000h				
PC28		For manufacturer setting	0000h				
PC29			0000h				
PC30	STA2	Acceleration time constant 2	0	[ms]		<input type="checkbox"/>	<input type="checkbox"/>
PC31	STB2	Deceleration time constant 2	0	[ms]		<input type="checkbox"/>	<input type="checkbox"/>
PC32	CMX2	Command input pulse multiplication numerator 2	1		<input type="checkbox"/>		
PC33	CMX3	Command input pulse multiplication numerator 3	1		<input type="checkbox"/>		
PC34	CMX4	Command input pulse multiplication numerator 4	1		<input type="checkbox"/>		
PC35	TL2	Internal torque limit 2	100.0	[%]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PC36	*DMD	Status display selection	0000h		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PC37	VCO	Analog speed command offset	0	[mV]		<input type="checkbox"/>	
		Analog speed limit offset					<input type="checkbox"/>
PC38	TPO	Analog torque command offset	0	[mV]			<input type="checkbox"/>
		Analog torque limit offset				<input type="checkbox"/>	
PC39	MO1	Analog monitor 1 offset	0	[mV]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PC40	MO2	Analog monitor 2 offset	0	[mV]	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PC41		For manufacturer setting	0				
PC42			0				
PC43	ERZ	Error excessive alarm level	0	[rev]	<input type="checkbox"/>		
PC44		For manufacturer setting	0000h				
PC45			0000h				
PC46			0				
PC47			0				
PC48			0				
PC49			0				
PC50			0000h				
PC51	RSBR	Forced stop deceleration time constant	100	[ms]	<input type="checkbox"/>	<input type="checkbox"/>	
PC52		For manufacturer setting	0				
PC53			0				
PC54	RSUP1	Vertical axis freefall prevention compensation amount	0	[0.0001rev]	<input type="checkbox"/>		
PC55		For manufacturer setting	0				
PC56			100				
PC57			0000h				
PC58			0				
PC59			0000h				
PC60	*COPD	Function selection C-D	0000h		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PC61		For manufacturer setting	0000h				
PC62			0000h				
PC63			0000h				
PC64			0000h				
PC65			0000h				
PC66			0000h				
PC67			0000h				
PC68			0000h				

## 5. PARAMETERS

No.	Symbol	Name	Initial value	Unit	Control mode		
					P	S	T
			0000h				
PC69	For manufacturer setting		0000h				
PC70			0000h				
PC71			0000h				
PC72			0000h				
PC73			0000h				
PC74			0000h				
PC75			0000h				
PC76			0000h				
PC77			0000h				
PC78			0000h				
PC79			0000h				
PC80			0000h				

5.1.4 I/O setting parameters ([Pr.  
PD\_ \_])



--	--	--	--	--	--	--	--

## 5. PARAMETERS

No.	Symbol	Name	Initial value	Unit	Control mode		
					P	S	T
			0				
No.	Symbol	Name	Initial value	Unit	P	S	T
PD01	*DIA1	Input signal automatic on selection 1	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PD02		For manufacturer setting	0000h				
PD03	*DI1L	Input device selection 1L	0202h		<input type="radio"/>	<input type="radio"/>	
PD04	*DI1H	Input device selection 1H	0002h				<input type="radio"/>
PD05		For manufacturer setting	2100h				
PD06			0021h				
PD07			0704h				
PD08			0007h				
PD09			0805h				
PD10			0008h				
PD11	*DI5L	Input device selection 5L	0703h		<input type="radio"/>	<input type="radio"/>	
PD12	*DI5H	Input device selection 5H	0007h				<input type="radio"/>
PD13	*DI6L	Input device selection 6L	0806h		<input type="radio"/>	<input type="radio"/>	
PD14	*DI6H	Input device selection 6H	0008h				<input type="radio"/>
PD15		For manufacturer setting	0000h				
PD16			0000h				
PD17	*DI8L	Input device selection 8L	0A0Ah		<input type="radio"/>	<input type="radio"/>	
PD18	*DI8H	Input device selection 8H	0000h				<input type="radio"/>
PD19	*DI9L	Input device selection 9L	0B0Bh		<input type="radio"/>	<input type="radio"/>	
PD20	*DI9H	Input device selection 9H	0000h				<input type="radio"/>
PD21		For manufacturer setting	2323h				
PD22			0023h				
PD23			0004h				
PD24	*DO2	Output device selection 2	000Ch		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PD25	*DO3	Output device selection 3	0004h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PD26		For manufacturer setting	0007h				
PD27			0003h				
PD28	*DO6	Output device selection 6	0002h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PD29	*DIF	Input filter setting	0004h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PD30	*DOP1	Function selection D-1	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PD31		For manufacturer setting	0000h				
PD32	*DOP3	Function selection D-3	0000h		<input type="radio"/>		
PD33		For manufacturer setting	0000h				
PD34	DOP5	Function selection D-5	0000h		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PD35		For manufacturer setting	0000h				
PD36			0000h				
PD37			0000h				
PD38			0				



## 5. PARAMETERS

No.	Symbol	Name	Initial value	Unit	Control mode		
					P	S	T
			0000h				
PD39		For manufacturer setting	0				
PD40			0				
PD41			0000h				
PD42			0000h				
PD43			0000h				
PD44			0000h				
PD45			0000h				
PD46			0000h				
PD47			0000h				
PD48			0000h				

5.1.5 Extension setting 2 parameters ([Pr. PE\_ \_])



--	--	--	--	--	--	--	--	--	--

## 5. PARAMETERS

No.	Symbol	Name	Initial value	Unit	Control mode		
					P	S	T
			0				
No.	Symbol	Name	Initial value	Unit	Control mode		
					P	S	T
PE01		For manufacturer setting	0000h				
PE02			0000h				
PE03			0003h				
PE04			1				
PE05			1				
PE06			400				
PE07			100				
PE08			10				
PE09			0000h				
PE10			0000h				
PE11			0000h				
PE12			0000h				
PE13			0000h				
PE14			0111h				
PE15			20				
PE16			0000h				
PE17			0000h				
PE18			0000h				
PE19			0000h				
PE20			0000h				
PE21			0000h				
PE22			0000h				
PE23			0000h				
PE24			0000h				
PE25			0000h				
PE26			0000h				
PE27			0000h				
PE28			0000h				
PE29			0000h				
PE30			0000h				
PE31			0000h				
PE32			0000h				
PE33			0000h				
PE34			1				
PE35			1				
PE36			0.0				
PE37			0.00				
PE38			0.00				
PE39			20				
PE40			0000h				

## 5. PARAMETERS

No.	Symbol	Name	Initial value	Unit	Control mode		
					P	S	T
			0000h				
			0000h				
PE41	EOP3	Function selection E-3	0000h		○	○	○
PE42		For manufacturer setting	0				
PE43			0.0				
PE44							
PE45			0000h				
PE46			0000h				
PE47			0000h				
PE48			0000h				
PE49			0000h				
PE50			0000h				
PE51			0000h				
PE52			0000h				
PE53			0000h				
PE54			0000h				
PE55			0000h				
PE56			0000h				
PE57			0000h				
PE58			0000h				
PE59			0000h				
PE60			0000h				
PE61			0.00				
PE62			0.00				
PE63			0.00				
PE64			0.00				

5.1.6 Extension setting 3  
parameters ([Pr. PF\_ \_])

## 5. PARAMETERS

No.	Symbol	Name	Initial value	Unit	Control mode		
					P	S	T
			0				
			0000h				
No.	Symbol	Name	Initial value	Unit	P	S	T
PF01		For manufacturer setting	0000h				
PF02			0000h				
PF03			0000h				
PF04			0				
PF05			0				
PF06			0000h				
PF07			1				
PF08			1				
PF09			0000h				
PF10			0000h				
PF11			0000h				
PF12			10000				
PF13			100				
PF14			100				
PF15			2000				
PF16			0000h				
PF17			10				
PF18			0000h				
PF19			0000h				
PF20			0000h				
PF21	DRT	Drive recorder switching time setting	0	[s]	○	○	○
PF22		For manufacturer setting	200				
PF23	OSCL1	Vibration tough drive - Oscillation detection level	50	[%]	○	○	
PF24	*OSCL2	Vibration tough drive function selection	0000h		○	○	
PF25	CVAT	SEMI-F47 function - Instantaneous power failure detection time (instantaneous power failure tough drive - detection time)	200	[ms]	○	○	○

### 5.2 Detailed list of parameters

POINT	
●	to each "x" in the "Setting digit" columns.

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PF26		For manufacturer setting	0			
PF27			0			
PF28			0			
PF29						
PF30			0			
PF31	FRIC	Machine diagnosis function - Friction judgement speed	0 [r/min]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PF32		For manufacturer setting	50			
PF33			0000h			
PF34			0000h			
PF35			0000h			
PF36			0000h			
PF37			0000h			
PF38			0000h			
PF39			0000h			
PF40			0000h			
PF41			0000h			
PF42			0000h			
PF43			0000h			
PF44			0000h			
PF45			0000h			
PF46			0000h			
PF47			0000h			
PF48			0000h			

5.2.1 Basic setting parameters  
([Pr. PA\_ \_])

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PA01 *STY Operation mode	___x	Control mode selection Select a control mode: 0: Position control mode 1: Position control mode and speed control mode 2: Speed control mode 3: Speed control mode and torque control mode 4: Torque control mode 5: Torque control mode and position control mode	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	__x_	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	_x__		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	x___		1h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

## 5. PARAMETERS

No.	Symbol	Name	Initial value	Unit	Control mode																
					P	S	T														
			0																		
			0000h																		
PA02	__ x x	Regenerative option Used to select the regenerative option. Incorrect setting may cause the regenerative option to burn. If a selected regenerative option is not for use with the servo amplifier, [AL. 37 Parameter error] occurs.  00: Regenerative option is not used. • For servo amplifier of 200 W or less, regenerative resistor is not used. • For servo amplifier of 0.4 kW to 3 kW, built-in regenerative resistor is used. 02: MR-RB032 03: MR-RB12 04: MR-RB32 05: MR-RB30 06: MR-RB50 (Cooling fan is required.)		00h		○	○														
	_ x _ _	For manufacturer setting		0h																	
	x _ _ _			0h																	
PA04	_ _ _ x	For manufacturer setting		0h																	
*AOP1	_ _ x _			0h																	
Function selection A-1	_ x _ _			0h																	
	x _ _ _	Forced stop deceleration function selection 0: Forced stop deceleration function disabled (EM1) 2: Forced stop deceleration function enabled (EM2) Refer to table 5.1 for details.		2h	○	○															
<b>Table 5.1 Deceleration method</b>																					
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">Setting value</th> <th rowspan="2">EM2/EM1</th> <th colspan="2">Deceleration method</th> </tr> <tr> <th>EM2 or EM1 is off</th> <th>Alarm occurred</th> </tr> </thead> <tbody> <tr> <td>0 _ _ _</td> <td>EM1</td> <td>MBR (Electromagnetic brake interlock) turns off without the forced stop deceleration.</td> <td>MBR (Electromagnetic brake interlock) turns off without the forced stop deceleration.</td> </tr> <tr> <td>2 _ _ _</td> <td>EM2</td> <td>MBR (Electromagnetic brake interlock) turns off after the forced stop deceleration.</td> <td>MBR (Electromagnetic brake interlock) turns off after the forced stop deceleration.</td> </tr> </tbody> </table>								Setting value	EM2/EM1	Deceleration method		EM2 or EM1 is off	Alarm occurred	0 _ _ _	EM1	MBR (Electromagnetic brake interlock) turns off without the forced stop deceleration.	MBR (Electromagnetic brake interlock) turns off without the forced stop deceleration.	2 _ _ _	EM2	MBR (Electromagnetic brake interlock) turns off after the forced stop deceleration.	MBR (Electromagnetic brake interlock) turns off after the forced stop deceleration.
Setting value	EM2/EM1	Deceleration method																			
		EM2 or EM1 is off	Alarm occurred																		
0 _ _ _	EM1	MBR (Electromagnetic brake interlock) turns off without the forced stop deceleration.	MBR (Electromagnetic brake interlock) turns off without the forced stop deceleration.																		
2 _ _ _	EM2	MBR (Electromagnetic brake interlock) turns off after the forced stop deceleration.	MBR (Electromagnetic brake interlock) turns off after the forced stop deceleration.																		
PA05		The servo motor rotates based on set command input pulses. To enable the parameter value, select "Number of command input pulses per revolution (1 _ _ _)" of "Electronic gear selection" in [Pr. PA21].  Setting range: 1000 to 1000000		10000	○																
*FBP		Number of command input pulses per revolution																			

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PA06 CMX Electronic gear numerator (command pulse multiplication numerator)		<p>Set the numerator of the electronic gear.</p> <p>To enable the parameter, select "Electronic gear (0 __ _)" of "Electronic gear selection" in [Pr. PA21].</p> <p>The following shows a standard of the setting range of the electronic gear.</p> $\frac{1}{10} < \frac{CMX}{CDV} < 4000$ <p>If the set value is outside this range, noise may be generated during acceleration/deceleration or operation may not be performed at the preset speed and/or acceleration/deceleration time constants.</p> <p>Number of command input pulses per revolution ([Pr. PA05] "1000" to "1000000")</p> <p>Electronic gear selection (x __ _) ([Pr. PA21])</p> <p>Electronic gear (Pr. PA06) • [Pr. PA07]</p> <p>CMX CDV</p> <p>Command pulse train</p> <p>"0" (initial value)</p> <p>"1"</p> <p>Pt FBP</p> <p>Deviation counter</p> <p>Servo motor M</p> <p>Encoder</p> <p>Pt (servo motor resolution): 131072 pulses/rev</p> <p>Always set the electronic gear with servo-off state to prevent unexpected operation due to improper setting.</p> <p>Setting range: 1 to 16777215</p>	1			
PA07 CDV Electronic gear denominator (command pulse multiplication denominator)		<p>Set the denominator of the electronic gear.</p> <p>To enable the parameter, select "Electronic gear (0 __ _)" of "Electronic gear selection" in [Pr. PA21].</p> <p>Setting range: 1 to 16777215</p>	1			

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode																				
				P	S	T																		
PA08 ATU Auto tuning mode	___x	Gain adjustment mode selection Select the gain adjustment mode. 0: 2 gain adjustment mode 1 (interpolation mode) 1: Auto tuning mode 1 2: Auto tuning mode 2 3: Manual mode 4: 2 gain adjustment mode 2 Refer to table 5.2 for details.	1h		○																			
	__x_	For manufacturer setting	0h																					
	_x__		0h																					
	x___		0h																					
<p>Table 5.2 Gain adjustment mode selection</p> <table border="1"> <thead> <tr> <th>Setting value</th> <th>Gain adjustment mode</th> <th>Automatically adjusted parameter</th> </tr> </thead> <tbody> <tr> <td>___0</td> <td>2 gain adjustment mode 1 (interpolation mode)</td> <td>[Pr. PB06 Load to motor inertia ratio] [Pr. PB08 Position loop gain] [Pr. PB09 Speed loop gain] [Pr. PB10 Speed integral compensation]</td> </tr> <tr> <td>___1</td> <td>Auto tuning mode 1</td> <td>[Pr. PB06 Load to motor inertia ratio] [Pr. PB07 Model loop gain] [Pr. PB08 Position loop gain] [Pr. PB09 Speed loop gain] [Pr. PB10 Speed integral compensation]</td> </tr> <tr> <td>___2</td> <td>Auto tuning mode 2</td> <td>[Pr. PB07 Model loop gain] [Pr. PB08 Position loop gain] [Pr. PB09 Speed loop gain] [Pr. PB10 Speed integral compensation]</td> </tr> <tr> <td>___3</td> <td>Manual mode</td> <td></td> </tr> <tr> <td>___4</td> <td>2 gain adjustment mode 2</td> <td>[Pr. PB08 Position loop gain] [Pr. PB09 Speed loop gain] [Pr. PB10 Speed integral compensation]</td> </tr> </tbody> </table>							Setting value	Gain adjustment mode	Automatically adjusted parameter	___0	2 gain adjustment mode 1 (interpolation mode)	[Pr. PB06 Load to motor inertia ratio] [Pr. PB08 Position loop gain] [Pr. PB09 Speed loop gain] [Pr. PB10 Speed integral compensation]	___1	Auto tuning mode 1	[Pr. PB06 Load to motor inertia ratio] [Pr. PB07 Model loop gain] [Pr. PB08 Position loop gain] [Pr. PB09 Speed loop gain] [Pr. PB10 Speed integral compensation]	___2	Auto tuning mode 2	[Pr. PB07 Model loop gain] [Pr. PB08 Position loop gain] [Pr. PB09 Speed loop gain] [Pr. PB10 Speed integral compensation]	___3	Manual mode		___4	2 gain adjustment mode 2	[Pr. PB08 Position loop gain] [Pr. PB09 Speed loop gain] [Pr. PB10 Speed integral compensation]
Setting value	Gain adjustment mode	Automatically adjusted parameter																						
___0	2 gain adjustment mode 1 (interpolation mode)	[Pr. PB06 Load to motor inertia ratio] [Pr. PB08 Position loop gain] [Pr. PB09 Speed loop gain] [Pr. PB10 Speed integral compensation]																						
___1	Auto tuning mode 1	[Pr. PB06 Load to motor inertia ratio] [Pr. PB07 Model loop gain] [Pr. PB08 Position loop gain] [Pr. PB09 Speed loop gain] [Pr. PB10 Speed integral compensation]																						
___2	Auto tuning mode 2	[Pr. PB07 Model loop gain] [Pr. PB08 Position loop gain] [Pr. PB09 Speed loop gain] [Pr. PB10 Speed integral compensation]																						
___3	Manual mode																							
___4	2 gain adjustment mode 2	[Pr. PB08 Position loop gain] [Pr. PB09 Speed loop gain] [Pr. PB10 Speed integral compensation]																						



## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode																																																																																														
				P	S	T																																																																																												
PA09 RSP Auto tuning response		<p>Set a response of the auto tuning.</p> <table border="1"> <thead> <tr> <th rowspan="2">Setting value</th> <th colspan="2">Machine characteristic</th> <th rowspan="2">Setting value</th> <th colspan="2">Machine characteristic</th> </tr> <tr> <th>Response</th> <th>Guideline for machine resonance frequency [Hz]</th> <th>Response</th> <th>Guideline for machine resonance frequency [Hz]</th> </tr> </thead> <tbody> <tr> <td>1</td> <td rowspan="19">Low respon se  ↑  ↓  Middle respon se</td> <td>2.7</td> <td>21</td> <td rowspan="19">Middle respon se  ↑  ↓  High respon se</td> <td>67.1</td> </tr> <tr><td>2</td><td>3.6</td><td>22</td><td>75.6</td></tr> <tr><td>3</td><td>4.9</td><td>23</td><td>85.2</td></tr> <tr><td>4</td><td>6.6</td><td>24</td><td>95.9</td></tr> <tr><td>5</td><td>10.0</td><td>25</td><td>108.0</td></tr> <tr><td>6</td><td>11.3</td><td>26</td><td>121.7</td></tr> <tr><td>7</td><td>12.7</td><td>27</td><td>137.1</td></tr> <tr><td>8</td><td>14.3</td><td>28</td><td>154.4</td></tr> <tr><td>9</td><td>16.1</td><td>29</td><td>173.9</td></tr> <tr><td>10</td><td>18.1</td><td>30</td><td>195.9</td></tr> <tr><td>11</td><td>20.4</td><td>31</td><td>220.6</td></tr> <tr><td>12</td><td>23.0</td><td>32</td><td>248.5</td></tr> <tr><td>13</td><td>25.9</td><td>33</td><td>279.9</td></tr> <tr><td>14</td><td>29.2</td><td>34</td><td>315.3</td></tr> <tr><td>15</td><td>32.9</td><td>35</td><td>355.1</td></tr> <tr><td>16</td><td>37.0</td><td>36</td><td>400.0</td></tr> <tr><td>17</td><td>41.7</td><td>37</td><td>446.6</td></tr> <tr><td>18</td><td>47.0</td><td>38</td><td>501.2</td></tr> <tr><td>19</td><td>52.9</td><td>39</td><td>571.5</td></tr> <tr> <td>20</td> <td>59.6</td> <td>40</td> <td>642.7</td> </tr> </tbody> </table> <p>Setting range: 1 to 40</p>	Setting value	Machine characteristic		Setting value	Machine characteristic		Response	Guideline for machine resonance frequency [Hz]	Response	Guideline for machine resonance frequency [Hz]	1	Low respon se  ↑  ↓  Middle respon se	2.7	21	Middle respon se  ↑  ↓  High respon se	67.1	2	3.6	22	75.6	3	4.9	23	85.2	4	6.6	24	95.9	5	10.0	25	108.0	6	11.3	26	121.7	7	12.7	27	137.1	8	14.3	28	154.4	9	16.1	29	173.9	10	18.1	30	195.9	11	20.4	31	220.6	12	23.0	32	248.5	13	25.9	33	279.9	14	29.2	34	315.3	15	32.9	35	355.1	16	37.0	36	400.0	17	41.7	37	446.6	18	47.0	38	501.2	19	52.9	39	571.5	20	59.6	40	642.7	16		<input type="radio"/>	
Setting value	Machine characteristic			Setting value	Machine characteristic																																																																																													
	Response	Guideline for machine resonance frequency [Hz]	Response		Guideline for machine resonance frequency [Hz]																																																																																													
1	Low respon se  ↑  ↓  Middle respon se	2.7	21	Middle respon se  ↑  ↓  High respon se	67.1																																																																																													
2		3.6	22		75.6																																																																																													
3		4.9	23		85.2																																																																																													
4		6.6	24		95.9																																																																																													
5		10.0	25		108.0																																																																																													
6		11.3	26		121.7																																																																																													
7		12.7	27		137.1																																																																																													
8		14.3	28		154.4																																																																																													
9		16.1	29		173.9																																																																																													
10		18.1	30		195.9																																																																																													
11		20.4	31		220.6																																																																																													
12		23.0	32		248.5																																																																																													
13		25.9	33		279.9																																																																																													
14		29.2	34		315.3																																																																																													
15		32.9	35		355.1																																																																																													
16		37.0	36		400.0																																																																																													
17		41.7	37		446.6																																																																																													
18		47.0	38		501.2																																																																																													
19		52.9	39		571.5																																																																																													
20	59.6	40	642.7																																																																																															
PA10 INP In-position range		<p>Set an in-position range per command pulse. To change it to the servo motor encoder pulse unit, set [Pr. PC24].</p> <p>Setting range: 0 to 65535</p>	100 [pulse]		<input type="radio"/>																																																																																													
PA11 TLP Forward rotation torque limit		<p>You can limit the torque generated by the servo motor. Set the parameter referring section 3.6.1 (5). The larger value of [Pr. PA11 Forward rotation torque limit] or [Pr. PA12 Reverse rotation torque limit] will be the maximum output voltage (8 V). Set the parameter on the assumption that the maximum torque is 100 [%]. The parameter is for limiting the torque of the servo motor in the CCW power running or CW regeneration. Set this parameter to "0.0" to generate no torque.</p> <p>Setting range: 0.0 to 100.0</p>	100.0 [%]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																																																																																												
PA12 TLN Reverse rotation torque limit		<p>You can limit the torque generated by the servo motor. Set the parameter referring section 3.6.1 (5). The larger value of [Pr. PA11 Forward rotation torque limit] or [Pr. PA12 Reverse rotation torque limit] will be the maximum output voltage (8 V). Set the parameter on the assumption that the maximum torque is 100 [%]. The parameter is for limiting the torque of the servo motor in the CW power running or CCW regeneration. Set this parameter to "0.0" to generate no torque.</p> <p>Setting range: 0.0 to 100.0</p>	100.0 [%]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																																																																																												

## 5. PARAMETERS

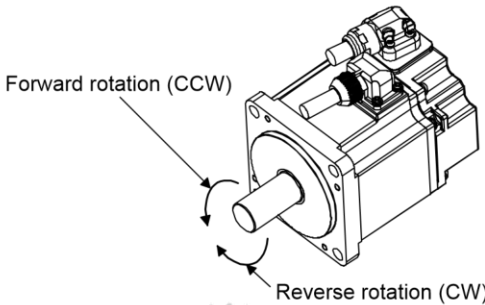
No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PA13 *PLSS Command pulse input form	___ x	Command input pulse train form selection 0: Forward/reverse rotation pulse train 1: Signed pulse train 2: A-phase/B-phase pulse train (The servo amplifier imports input pulses after multiplying by four.) Refer to table 5.3 for settings.	0h			
	__ x _	Pulse train logic selection 0: Positive logic 1: Negative logic Refer to table 5.3 for settings.	0h	○		
	_ x __	Command input pulse train filter selection Selecting proper filter enables to enhance noise immunity. 0: Command input pulse train is 4 Mpulses/s or less. 1: Command input pulse train is 1 Mpulse/s or less. 2: Command input pulse train is 500 kpulses/s or less. 3: Command input pulse train is 200 kpulses/s or less. 1 Mpulse/s or lower commands are supported by "1". When inputting commands over 1 Mpulse/s and 4 Mpulses/s or lower, set "0". Setting a value not according to the command pulse frequency may cause the following malfunctions. • Setting a value higher than actual command will lower noise immunity. • Setting a value lower than actual command will cause a position mismatch.	1h	○		
	x ___	For manufacturer setting	0h			

Table 5.3 Command input pulse train form selection

Setting value	Pulse train form	Forward rotation command	Reverse rotation command
__ 1 0h	Forward rotation pulse train	PP	Reverse rotation pulse train
	Reverse rotation pulse train	NP	
__ 1 1h	Signed pulse train	PP	NP
		NP	NP
__ 1 2h	A-phase pulse train	PP	Reverse rotation command
	B-phase pulse train	NP	
__ 0 0h	Forward rotation pulse train	PP	Reverse rotation pulse train
	Reverse rotation pulse train	NP	
__ 0 1h	Signed pulse train	PP	NP
		NP	NP
__ 0 2h	A-phase pulse train	PP	Reverse rotation command
	B-phase pulse train	NP	

Arrows in the table indicate the timing of importing pulse trains. A-phase pulse train and B-phase pulse train are imported after they have been multiplied by 4.

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode													
				P	S	T											
PA14 *POL Rotation direction selection		<p>Select servo motor rotation direction relative to the input pulse train.</p> <table border="1"> <thead> <tr> <th rowspan="2">Setting value</th> <th colspan="2">Servo motor rotation direction</th> </tr> <tr> <th>When forward rotation pulse is input</th> <th>When reverse rotation pulse is input</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>CCW</td> <td>CW</td> </tr> <tr> <td>1</td> <td>CW</td> <td>CCW</td> </tr> </tbody> </table> <p>The following shows the servo motor rotation directions.</p>  <p>Setting range: 0, 1</p>	Setting value	Servo motor rotation direction		When forward rotation pulse is input	When reverse rotation pulse is input	0	CCW	CW	1	CW	CCW	0			
Setting value	Servo motor rotation direction																
	When forward rotation pulse is input	When reverse rotation pulse is input															
0	CCW	CW															
1	CW	CCW															
PA15 *ENR Encoder output pulses		<p>Set the encoder output pulses from the servo amplifier by using the number of output pulses per revolution, dividing ratio, or electronic gear ratio. (after multiplication by 4)</p> <p>To set a numerator of the electronic gear, select "A-phase/B-phase pulse electronic gear setting ( _ _ 3 _ )" of "Encoder output pulse setting selection" in [Pr. PC19].</p> <p>The maximum output frequency is 4.6 Mpulses/s. Set the parameter within this range.</p> <p>Setting range: 1 to 4194304</p>	4000 [pulse/ rev]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>											
PA16 *ENR2 Encoder output pulses 2		<p>Set a denominator of the electronic gear for the A/B-phase pulse output.</p> <p>To set a denominator of the electronic gear, select "A-phase/B-phase pulse electronic gear setting ( _ _ 3 _ )" of "Encoder output pulse setting selection" in [Pr. PC19].</p> <p>Setting range: 1 to 4194304</p>	1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>											

## 5. PARAMETERS



No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode																																																																																																																																	
				P	S	T																																																																																																																															
PA19 *BLK Parameter writing inhibit		Select a reference range and writing range of the parameter. Refer to table 5.4 for settings.	00AAh		○	○																																																																																																																															
	<p style="text-align: center;"><b>Table 5.4 [Pr. PA19] setting value and reading/writing range</b></p> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th>PA19</th> <th>Setting operation</th> <th>PA</th> <th>PB</th> <th>PC</th> <th>PD</th> <th>PE</th> <th>PF</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Other than below</td> <td>Reading</td> <td>○</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> </tr> <tr> <td>Writing</td> <td>○</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> </tr> <tr> <td rowspan="2">000Ah</td> <td>Reading</td> <td>Only 19</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> </tr> <tr> <td>Writing</td> <td>Only 19</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> </tr> <tr> <td rowspan="2">000Bh</td> <td>Reading</td> <td>○</td> <td>○</td> <td>○</td> <td>/</td> <td>/</td> <td>/</td> </tr> <tr> <td>Writing</td> <td>○</td> <td>○</td> <td>○</td> <td>/</td> <td>/</td> <td>/</td> </tr> <tr> <td rowspan="2">000Ch</td> <td>Reading</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>/</td> <td>/</td> </tr> <tr> <td>Writing</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>/</td> <td>/</td> </tr> <tr> <td rowspan="2">00AAh (initial value)</td> <td>Reading</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>Writing</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td rowspan="2">100Bh</td> <td>Reading</td> <td>○</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> </tr> <tr> <td>Writing</td> <td>Only 19</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> </tr> <tr> <td rowspan="2">100Ch</td> <td>Reading</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>/</td> <td>/</td> </tr> <tr> <td>Writing</td> <td>Only 19</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> </tr> <tr> <td rowspan="2">10AAh</td> <td>Reading</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>Writing</td> <td>Only 19</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> <td>/</td> </tr> </tbody> </table>						PA19	Setting operation	PA	PB	PC	PD	PE	PF	Other than below	Reading	○	/	/	/	/	/	Writing	○	/	/	/	/	/	000Ah	Reading	Only 19	/	/	/	/	/	Writing	Only 19	/	/	/	/	/	000Bh	Reading	○	○	○	/	/	/	Writing	○	○	○	/	/	/	000Ch	Reading	○	○	○	○	/	/	Writing	○	○	○	○	/	/	00AAh (initial value)	Reading	○	○	○	○	○	○	Writing	○	○	○	○	○	○	100Bh	Reading	○	/	/	/	/	/	Writing	Only 19	/	/	/	/	/	100Ch	Reading	○	○	○	○	/	/	Writing	Only 19	/	/	/	/	/	10AAh	Reading	○	○	○	○	○	○	Writing	Only 19	/	/	/	/
PA19	Setting operation	PA	PB	PC	PD	PE	PF																																																																																																																														
Other than below	Reading	○	/	/	/	/	/																																																																																																																														
	Writing	○	/	/	/	/	/																																																																																																																														
000Ah	Reading	Only 19	/	/	/	/	/																																																																																																																														
	Writing	Only 19	/	/	/	/	/																																																																																																																														
000Bh	Reading	○	○	○	/	/	/																																																																																																																														
	Writing	○	○	○	/	/	/																																																																																																																														
000Ch	Reading	○	○	○	○	/	/																																																																																																																														
	Writing	○	○	○	○	/	/																																																																																																																														
00AAh (initial value)	Reading	○	○	○	○	○	○																																																																																																																														
	Writing	○	○	○	○	○	○																																																																																																																														
100Bh	Reading	○	/	/	/	/	/																																																																																																																														
	Writing	Only 19	/	/	/	/	/																																																																																																																														
100Ch	Reading	○	○	○	○	/	/																																																																																																																														
	Writing	Only 19	/	/	/	/	/																																																																																																																														
10AAh	Reading	○	○	○	○	○	○																																																																																																																														
	Writing	Only 19	/	/	/	/	/																																																																																																																														
PA20 *TDS Tough drive setting		Alarms may not be avoided with the tough drive function depending on the situations of the power supply and load fluctuation. You can assign MTTR (During tough drive) to pins CN1-23, CN1-24, and CN1-49 with [Pr. PD24], [Pr. PD25], and [Pr. PD28].																																																																																																																																			
	__ _ x	For manufacturer setting	0h	/	/	/																																																																																																																															
	__ _ x _	Vibration tough drive selection 0: Disabled 1: Enabled  Selecting "1" enables to suppress vibrations by automatically changing setting values of [Pr. PB13 Machine resonance suppression filter 1] and [Pr. PB15 Machine resonance suppression filter 2] in case that the vibration exceed the value of the oscillation level set in [Pr. PF23]. To output the oscillation detection alarm as a warning, set [Pr. PF24 Vibration tough drive function selection]. Refer to section 7.3 for details.	0h	○	○	/																																																																																																																															
	_ x _ _	SEMI-F47 function selection (instantaneous power failure tough drive selection) 0: Disabled 1: Enabled  Selecting "1" enables to avoid occurring [AL. 10 Undervoltage] using the electrical energy charged in the capacitor in the servo amplifier in case that an instantaneous power failure occurs during operation. In [Pr. PF25 SEMI-F47 function - Instantaneous power failure detection time (instantaneous power failure tough drive - detection time)], set the time until the occurrence of [AL. 10.1 Voltage drop in the power]. When the parameter is enabled, the power should be off for the setting value of [Pr. PF25] + 1.5 s or more before cycling the power to enable a parameter whose symbol is preceded by "**".	0h	○	○	○																																																																																																																															
x _ _ _	For manufacturer setting	0h	/	/	/																																																																																																																																

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PA21 *AOP3 Function selection A-3	___x	One-touch tuning function selection 0: Disabled 1: Enabled  When the digit is "0", the one-touch tuning is not available.	1h		<input type="radio"/>	
	__x_	For manufacturer setting	0h			
	_x__		0h			
	x___	Electronic gear selection 0: Electronic gear ([Pr. PA06] and [Pr. PA07]) 1: Number of command input pulses per revolution ([Pr. PA05])	0h	<input type="radio"/>		
PA23 DRAT Drive recorder arbitrary alarm trigger setting	__xx	Alarm detail No. setting Set the digits when you execute the trigger with arbitrary alarm detail No. for the drive recorder function. When these digits are "0 0", only the arbitrary alarm No. setting will be enabled.	00h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	xx__	Alarm No. setting Set the digits when you execute the trigger with arbitrary alarm No. for the drive recorder function. When "0 0" are set, arbitrary alarm trigger of the drive recorder will be disabled.	00h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Setting example: To activate the drive recorder when [AL. 50 Overload 1] occurs, set "5 0 0 0". To activate the drive recorder when [AL. 50.3 Thermal overload error 4 during operation] occurs, set "5 0 0 3".					
PA24 AOP4 Function selection A-4	___x	Vibration suppression mode selection 0: Standard mode 1: 3 inertia mode 2: Low response mode  When you select the standard mode or low response mode, "Vibration suppression control 2" is not available. When you select the 3 inertia mode, the feed forward gain is not available. Before changing the control mode during the 3 inertia mode or low response mode, stop the motor.	0h	<input type="radio"/>	<input type="radio"/>	
	__x_	For manufacturer setting	0h			
	_x__		0h			
	x___		0h			
PA25 OTHOV One-touch tuning - Overshoot permissible level		Set a permissible value of overshoot amount for one-touch tuning as a percentage of the in-position range. However, setting "0" will be 50%.	0 [%]	<input type="radio"/>	<input type="radio"/>	
PA26 *AOP5 Function selection A-5	___x	Torque limit function selection at instantaneous power failure 0: Disabled 1: Enabled Selecting "1" for this digit will limit torques to save electric energy when an instantaneous power failure occurs during operation and will make [AL. 10 Undervoltage] less likely to occur. The torque limit function at instantaneous power failure is enabled when "SEMI-F47 function selection (instantaneous power failure tough drive selection)" in [Pr. PA20] is "Enabled (_ 1 _)".	0h	<input type="radio"/>	<input type="radio"/>	
	__x_	For manufacturer setting	0h			
	_x__		0h			
	x___		0h			

## 5. PARAMETERS

### 5.2.2 Gain/filter setting parameters ([Pr. PB\_ \_])

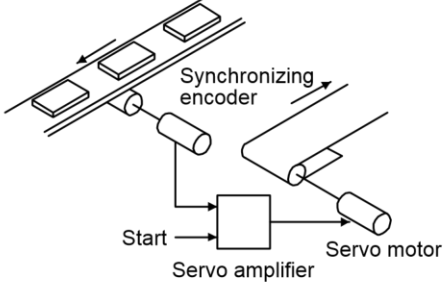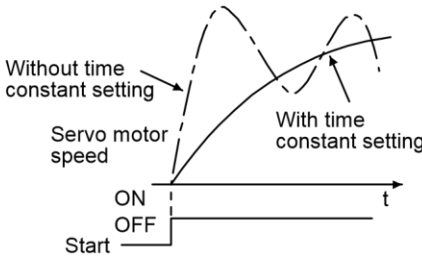No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PB01 FILT Adaptive tuning mode (adaptive filter II)	___x	Filter tuning mode selection Set the adaptive filter tuning. Select the adjustment mode of the machine resonance suppression filter 1. Refer to section 7.1.2 for details. 0: Disabled 1: Automatic setting (Do not use this in the torque control mode.) 2: Manual setting	0h	○	○	○
	__x_	For manufacturer setting	0h			
	_x__		0h			
	x___		0h			
PB02 VRFT Vibration suppression control tuning mode (advanced vibration suppression control II)	___x	Vibration suppression control 1 tuning mode selection Select the tuning mode of the vibration suppression control 1. Refer to section 7.1.5 for details. 0: Disabled 1: Automatic setting 2: Manual setting	0h	○		
	__x_	Vibration suppression control 2 tuning mode selection Select the tuning mode of the vibration suppression control 2. To enable the digit, select "3 inertia mode (___1)" of "Vibration suppression mode selection" in [Pr. PA24]. Refer to section 7.1.5 for details. 0: Disabled 1: Automatic setting 2: Manual setting	0h	○		
	_x__		0h			
	x___		0h			
PB03 PST Position command acceleration/d eceleration time constant (position smoothing)		<p>This is used to set the constant of a primary delay to the position command. You can select a control method from "Primary delay" or "Linear acceleration/deceleration" in [Pr. PB25 Function selection B-1]. The setting range of "Linear acceleration/deceleration" is 0 ms to 10 ms. Setting of longer than 10 ms will be recognized as 10 ms.</p> <p>When the linear acceleration/deceleration is selected, do not set the "Control mode selection" ([Pr. PA01]) to the setting other than "___0". Doing so will cause the servo motor to make a sudden stop at the time of position control mode switching. (Example) When a command is given from a synchronizing encoder, synchronous operation will start smoothly even if it start during line operation.</p>   <p>Setting range: 0 to 65535</p>	0 [ms]	○		

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode												
				P	S	T										
PB04 FFC Feed forward gain		<p>Set the feed forward gain.</p> <p>When the setting is 100%, the droop pulses during operation at constant speed are nearly zero. However, sudden acceleration/deceleration will increase the overshoot. As a guideline, when the feed forward gain setting is 100%, set 1 s or more as the acceleration time constant up to the rated speed.</p> <p>Setting range: 0 to 100</p>	0 [%]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>										
PB06 GD2 Load to motor inertia ratio		<p>This is used to set the load to motor inertia ratio.</p> <p>The setting of the parameter will be the automatic setting or manual setting depending on the [Pr. PA08] setting. Refer to the following table for details. When the parameter is automatic setting, the value will vary between 0.00 and 100.00.</p> <p>Setting range: 0.00 to 300.00</p> <table border="1" style="margin: 10px auto;"> <thead> <tr> <th>Pr. PA08</th> <th>This parameter</th> </tr> </thead> <tbody> <tr> <td>___ 0 (2 gain adjustment mode 1 (interpolation mode))</td> <td rowspan="2">Automatic setting</td> </tr> <tr> <td>___ 1: (Auto tuning mode 1)</td> </tr> <tr> <td>___ 2: (Auto tuning mode 2)</td> <td rowspan="3">Manual setting</td> </tr> <tr> <td>___ 3: (Manual mode)</td> </tr> <tr> <td>___ 4: (2 gain adjustment mode 2)</td> </tr> </tbody> </table>	Pr. PA08	This parameter	___ 0 (2 gain adjustment mode 1 (interpolation mode))	Automatic setting	___ 1: (Auto tuning mode 1)	___ 2: (Auto tuning mode 2)	Manual setting	___ 3: (Manual mode)	___ 4: (2 gain adjustment mode 2)	7.00 [Multiplier]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
Pr. PA08	This parameter															
___ 0 (2 gain adjustment mode 1 (interpolation mode))	Automatic setting															
___ 1: (Auto tuning mode 1)																
___ 2: (Auto tuning mode 2)	Manual setting															
___ 3: (Manual mode)																
___ 4: (2 gain adjustment mode 2)																
PB07 PG1 Model loop gain		<p>Set the response gain up to the target position.</p> <p>Increasing the setting value will also increase the response level to the position command but will be liable to generate vibration and/or noise.</p> <p>The setting of the parameter will be the automatic setting or manual setting depending on the [Pr. PA08] setting. Refer to the following table for details.</p> <p>Setting range: 1.0 to 2000.0</p> <table border="1" style="margin: 10px auto;"> <thead> <tr> <th>Pr. PA08</th> <th>This parameter</th> </tr> </thead> <tbody> <tr> <td>___ 0 (2 gain adjustment mode 1 (interpolation mode))</td> <td>Manual setting</td> </tr> <tr> <td>___ 1: (Auto tuning mode 1)</td> <td rowspan="2">Automatic setting</td> </tr> <tr> <td>___ 2: (Auto tuning mode 2)</td> </tr> <tr> <td>___ 3: (Manual mode)</td> <td rowspan="2">Manual setting</td> </tr> <tr> <td>___ 4: (2 gain adjustment mode 2)</td> </tr> </tbody> </table>	Pr. PA08	This parameter	___ 0 (2 gain adjustment mode 1 (interpolation mode))	Manual setting	___ 1: (Auto tuning mode 1)	Automatic setting	___ 2: (Auto tuning mode 2)	___ 3: (Manual mode)	Manual setting	___ 4: (2 gain adjustment mode 2)	15.0 [rad/s]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Pr. PA08	This parameter															
___ 0 (2 gain adjustment mode 1 (interpolation mode))	Manual setting															
___ 1: (Auto tuning mode 1)	Automatic setting															
___ 2: (Auto tuning mode 2)																
___ 3: (Manual mode)	Manual setting															
___ 4: (2 gain adjustment mode 2)																
PB08 PG2 Position loop gain		<p>This is used to set the gain of the position loop.</p> <p>Set this parameter to increase the position response to level load disturbance. Increasing the setting value will also increase the response level to the load disturbance but will be liable to generate vibration and/or noise.</p> <p>The setting of the parameter will be the automatic setting or manual setting depending on the [Pr. PA08] setting. Refer to the following table for details.</p> <p>Setting range: 1.0 to 2000.0</p> <table border="1" style="margin: 10px auto;"> <thead> <tr> <th>Pr. PA08</th> <th>This parameter</th> </tr> </thead> <tbody> <tr> <td>___ 0 (2 gain adjustment mode 1 (interpolation mode))</td> <td rowspan="3">Automatic setting</td> </tr> <tr> <td>___ 1: (Auto tuning mode 1)</td> </tr> <tr> <td>___ 2: (Auto tuning mode 2)</td> </tr> <tr> <td>___ 3: (Manual mode)</td> <td>Manual setting</td> </tr> <tr> <td>___ 4: (2 gain adjustment mode 2)</td> <td>Automatic setting</td> </tr> </tbody> </table>	Pr. PA08	This parameter	___ 0 (2 gain adjustment mode 1 (interpolation mode))	Automatic setting	___ 1: (Auto tuning mode 1)	___ 2: (Auto tuning mode 2)	___ 3: (Manual mode)	Manual setting	___ 4: (2 gain adjustment mode 2)	Automatic setting	37.0 [rad/s]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Pr. PA08	This parameter															
___ 0 (2 gain adjustment mode 1 (interpolation mode))	Automatic setting															
___ 1: (Auto tuning mode 1)																
___ 2: (Auto tuning mode 2)																
___ 3: (Manual mode)	Manual setting															
___ 4: (2 gain adjustment mode 2)	Automatic setting															

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PB09 VG2 Speed loop gain		This is used to set the gain of the speed loop. Set this parameter when vibration occurs on machines of low rigidity or large backlash. Increasing the setting value will also increase the response level but will be liable to generate vibration and/or noise. The setting of the parameter will be the automatic setting or manual setting depending on the [Pr. PA08] setting. Refer to the table of [Pr. PB08] for details.  Setting range: 20 to 65535	823 [rad/s]	<input type="radio"/>	<input type="radio"/>	
PB10 VIC Speed integral compensation		This is used to set the integral time constant of the speed loop. Decreasing the setting value will increase the response level but will be liable to generate vibration and/or noise. The setting of the parameter will be the automatic setting or manual setting depending on the [Pr. PA08] setting. Refer to the table of [Pr. PB08] for details.  Setting range: 0.1 to 1000.0	33.7 [ms]	<input type="radio"/>	<input type="radio"/>	
PB11 VDC Speed differential compensation		This is used to set the differential compensation. To enable the setting value, turn on PC (proportional control).  Setting range: 0 to 1000	980	<input type="radio"/>	<input type="radio"/>	
PB12 OVA Overshoot amount compensation		Set a viscous friction torque per percent to the servo motor rated speed. When the response level is low, or when the torque is limited, the efficiency of the parameter can be lower.  Setting range: 0 to 100	0 [%]	<input type="radio"/>		
PB13 NH1 Machine resonance suppression filter 1		Machine resonance suppression filter 1. Set the notch frequency of the machine resonance suppression filter 1. When "Automatic setting (___ 1)" of "Filter tuning mode selection" is selected in [Pr. PB01], this parameter will be adjusted automatically. When you select "Manual setting (___ 2)" of "Filter tuning mode selection" in [Pr. PB01], the setting value will be enabled.  Setting range: 10 to 4500	4500 [Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB14 NHQ1 Notch shape selection 1		Set the shape of the machine resonance suppression filter 1. When you select "Automatic setting (___ 1)" of "Filter tuning mode selection" in [Pr. PB01], this parameter will be adjusted automatically. Set manually for the manual setting.				
	___ x	For manufacturer setting	0h			
	__ x _	Notch depth selection 0: -40 dB 1: -14 dB 2: -8 dB 3: -4 dB	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	_ x _ _	Notch width selection 0: $\alpha = 2$ 1: $\alpha = 3$ 2: $\alpha = 4$ 3: $\alpha = 5$	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	x _ _ _	For manufacturer setting	0h			
PB15 NH2 Machine resonance suppression filter 2		Set the notch frequency of the machine resonance suppression filter 2. To enable the setting value, select "Enabled (___ 1)" of "Machine resonance suppression filter 2 selection" in [Pr. PB16].  Setting range: 10 to 4500	4500 [Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>



## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode																																																																						
				P	S	T																																																																				
PB16 NHQ2 Notch shape selection 2	Set the shape of the machine resonance suppression filter 2.																																																																									
	__ _ x	Machine resonance suppression filter 2 selection 0: Disabled 1: Enabled	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																																																																				
	__ x _	Notch depth selection 0: -40 dB 1: -14 dB 2: -8 dB 3: -4 dB	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																																																																				
	_ x _ _	Notch width selection 0: $\alpha = 2$ 1: $\alpha = 3$ 2: $\alpha = 4$ 3: $\alpha = 5$	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																																																																				
x _ _ _	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																																																					
PB17 NHF Shaft resonance suppression filter	Set the shaft resonance suppression filter. This is used to suppress a low-frequency machine vibration. When you select "Automatic setting (_ _ _ 0)" of "Shaft resonance suppression filter selection" in [Pr. PB23], the value will be calculated automatically from the servo motor you use and load to motor inertia ratio. Set manually for "Manual setting (_ _ _ 1)". When "Shaft resonance suppression filter selection" is "Disabled (_ _ _ 2)" in [Pr. PB23], the setting value of this parameter will be disabled. When you select "Enabled (_ _ _ 1)" of "Machine resonance suppression filter 4 selection" in [Pr. PB49], the shaft resonance suppression filter is not available.																																																																									
	__ x x	Shaft resonance suppression filter setting frequency selection Refer to table 5.5 for settings. Set the value closest to the frequency you need.	00h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																																																																				
	_ x _ _	Notch depth selection 0: -40 dB 1: -14 dB 2: -8 dB 3: -4 dB	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																																																																				
	x _ _ _	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																																																				
<p style="text-align: center;">Table 5.5 Shaft resonance suppression filter setting frequency selection</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Setting value</th> <th>Frequency [Hz]</th> <th>Setting value</th> <th>Frequency [Hz]</th> </tr> </thead> <tbody> <tr><td>00</td><td>Disabled</td><td>10</td><td>562</td></tr> <tr><td>01</td><td>Disabled</td><td>11</td><td>529</td></tr> <tr><td>02</td><td>4500</td><td>12</td><td>500</td></tr> <tr><td>03</td><td>3000</td><td>13</td><td>473</td></tr> <tr><td>04</td><td>2250</td><td>14</td><td>450</td></tr> <tr><td>05</td><td>1800</td><td>15</td><td>428</td></tr> <tr><td>06</td><td>1500</td><td>16</td><td>409</td></tr> <tr><td>07</td><td>1285</td><td>17</td><td>391</td></tr> <tr><td>08</td><td>1125</td><td>18</td><td>375</td></tr> <tr><td>09</td><td>1000</td><td>19</td><td>360</td></tr> <tr><td>0A</td><td>900</td><td>1A</td><td>346</td></tr> <tr><td>0B</td><td>818</td><td>1B</td><td>333</td></tr> <tr><td>0C</td><td>750</td><td>1C</td><td>321</td></tr> <tr><td>0D</td><td>692</td><td>1D</td><td>310</td></tr> <tr><td>0E</td><td>642</td><td>1E</td><td>300</td></tr> <tr><td>0F</td><td>600</td><td>1F</td><td>290</td></tr> </tbody> </table>							Setting value	Frequency [Hz]	Setting value	Frequency [Hz]	00	Disabled	10	562	01	Disabled	11	529	02	4500	12	500	03	3000	13	473	04	2250	14	450	05	1800	15	428	06	1500	16	409	07	1285	17	391	08	1125	18	375	09	1000	19	360	0A	900	1A	346	0B	818	1B	333	0C	750	1C	321	0D	692	1D	310	0E	642	1E	300	0F	600	1F	290
Setting value	Frequency [Hz]	Setting value	Frequency [Hz]																																																																							
00	Disabled	10	562																																																																							
01	Disabled	11	529																																																																							
02	4500	12	500																																																																							
03	3000	13	473																																																																							
04	2250	14	450																																																																							
05	1800	15	428																																																																							
06	1500	16	409																																																																							
07	1285	17	391																																																																							
08	1125	18	375																																																																							
09	1000	19	360																																																																							
0A	900	1A	346																																																																							
0B	818	1B	333																																																																							
0C	750	1C	321																																																																							
0D	692	1D	310																																																																							
0E	642	1E	300																																																																							
0F	600	1F	290																																																																							

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode				
				P	S	T		
PB18 LPF Low-pass filter setting		Set the low-pass filter. The following shows a relation of a required parameter to this parameter.  Setting range: 100 to 18000	3141 [rad/s]	○	○			
		<table border="1"> <thead> <tr> <th>[Pr. PB23]</th> <th>[Pr. PB18]</th> </tr> </thead> <tbody> <tr> <td>__ 0 _ (Initial value)</td> <td>Automatic setting</td> </tr> <tr> <td>__ 1 _</td> <td>Setting value enabled</td> </tr> <tr> <td>__ 2 _</td> <td>Setting value disabled</td> </tr> </tbody> </table>					[Pr. PB23]	[Pr. PB18]
[Pr. PB23]	[Pr. PB18]							
__ 0 _ (Initial value)	Automatic setting							
__ 1 _	Setting value enabled							
__ 2 _	Setting value disabled							
PB19 VRF11 Vibration suppression control 1 - Vibration frequency		Set the vibration frequency for vibration suppression control 1 to suppress low-frequency machine vibration. When "Vibration suppression control 1 tuning mode selection" is "Automatic setting (__ 1)" in [Pr. PB02], this parameter will be set automatically. Set manually for "Manual setting (__ 2)". Refer to section 7.1.5 for details.  Setting range: 0.1 to 300.0	100.0 [Hz]	○				
PB20 VRF12 Vibration suppression control 1 - Resonance frequency		Set the resonance frequency for vibration suppression control 1 to suppress low-frequency machine vibration. When "Vibration suppression control 1 tuning mode selection" is "Automatic setting (__ 1)" in [Pr. PB02], this parameter will be set automatically. Set manually for "Manual setting (__ 2)". Refer to section 7.1.5 for details.  Setting range: 0.1 to 300.0	100.0 [Hz]	○				
PB21 VRF13 Vibration suppression control 1 - Vibration frequency damping		Set a damping of the vibration frequency for vibration suppression control 1 to suppress low-frequency machine vibration. When "Vibration suppression control 1 tuning mode selection" is "Automatic setting (__ 1)" in [Pr. PB02], this parameter will be set automatically. Set manually for "Manual setting (__ 2)". Refer to section 7.1.5 for details.  Setting range: 0.00 to 0.30	0.00	○				
PB22 VRF14 Vibration suppression control 1 - Resonance frequency damping		Set a damping of the resonance frequency for vibration suppression control 1 to suppress low-frequency machine vibration. When "Vibration suppression control 1 tuning mode selection" is "Automatic setting (__ 1)" in [Pr. PB02], this parameter will be set automatically. Set manually for "Manual setting (__ 2)". Refer to section 7.1.5 for details.  Setting range: 0.00 to 0.30	0.00	○				
PB23 VFBB Low-pass filter selection	___ x	Shaft resonance suppression filter selection Select the shaft resonance suppression filter. 0: Automatic setting 1: Manual setting 2: Disabled  When you select "Enabled (__ 1)" of "Machine resonance suppression filter 4 selection" in [Pr. PB49], the shaft resonance suppression filter is not available.	0h	○	○	○		
	__ x _	Low-pass filter selection Select the low-pass filter. 0: Automatic setting 1: Manual setting 2: Disabled	0h	○	○			
	_ x _ _	For manufacturer setting	1h					
	x _ _ _		0h					

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PB24 *MVS Slight vibration suppression control	___x	Slight vibration suppression control selection Select the slight vibration suppression control. 0: Disabled 1: Enabled To enable the slight vibration suppression control, select "Manual mode (___3)" of "Gain adjustment mode selection" in [Pr. PA08]. Slight vibration suppression control cannot be used in the speed control mode.	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	__x__	For manufacturer setting	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	_x__		0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	x___		0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB25 *BOP1 Function selection B-1	___x	For manufacturer setting	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	__x__	Position acceleration/deceleration filter type selection Select the position acceleration/deceleration filter type. 0: Primary delay 1: Linear acceleration/deceleration When you select "Linear acceleration/deceleration", do not switch the control mode. Doing so will cause the servo motor to make a sudden stop at the time of control mode switching.	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	_x__	For manufacturer setting	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	x___		0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB26 *CDP Gain switching function	Select the gain switching condition. Set conditions to enable the gain switching values set in [Pr. PB29] to [Pr. PB36] and [Pr. PB56] to [Pr. PB60].					
	___x	Gain switching selection 0: Disabled 1: Input device (gain switching (CDP)) 2: Command frequency 3: Droop pulses 4: Servo motor speed	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	__x__	Gain switching condition selection 0: Gain after switching is enabled with gain switching condition or more 1: Gain after switching is enabled with gain switching condition or less	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	_x__	For manufacturer setting	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB27 CDL Gain switching condition		This is used to set the value of gain switching (command frequency, droop pulses, and servo motor speed) selected in [Pr. PB26]. The set value unit differs depending on the switching condition item. (Refer to section 7.2.3.)  Setting range: 0 to 9999	10 [kpulse/s] /[pulse] /[r/min]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB28 CDT Gain switching time constant		This is used to set the time constant at which the gains will change in response to the conditions set in [Pr. PB26] and [Pr. PB27].  Setting range: 0 to 100	1 [ms]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB29 GD2B Load to motor inertia ratio after gain switching		This is used to set the load to motor inertia ratio when gain switching is enabled. This parameter is enabled only when you select "Manual mode (___3)" of "Gain adjustment mode selection" in [Pr. PA08].  Setting range: 0.00 to 300.00	7.00 [Multipli er]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB30 PG2B Gain switching position loop gain		Set the position loop gain when the gain switching is enabled. When you set a value less than 1.0 rad/s, the value will be the same as [Pr. PB08]. This parameter is enabled only when you select "Manual mode (___3)" of "Gain adjustment mode selection" in [Pr. PA08].  Setting range: 0.0 to 2000.0	0.0 [rad/s]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

PB31

Set the speed loop gain when the gain switching is enabled.

0


## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
VG2B		When you set a value less than 20 rad/s, the value will be the same as [Pr. PB09]. This parameter is enabled only when you select "Manual mode ( _ _ _ 3)" of "Gain switching adjustment mode selection" in [Pr. PA08].	[rad/s] Gain			
speed loop						
gain		Setting range: 0 to 65535				
PB32		Set the speed integral compensation when the gain changing is enabled.	0.0			
VICB		When you set a value less than 0.1 ms, the value will be the same as [Pr. PB10]. parameter is enabled only when you select "Manual mode ( _ _ _ 3)" of "Gain integral adjustment mode selection" in [Pr. PA08].	[ms] Speed This			
compensation						
after gain		Setting range: 0.0 to 5000.0 switching				
PB33		Set the vibration frequency for vibration suppression control 1 when the gain	0.0			
VRF1B		switching is enabled.	[Hz]			



## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
Vibration	When you set a value less than 0.1 Hz, the value will be the same as [Pr. PB19].					

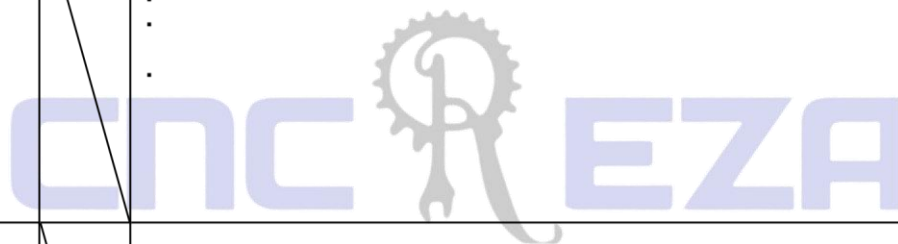

سازنده انواع ماشین آلات صنعتی و ماشین مخصوص  
WWW.CNCREZA.IR

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
suppression		This parameter will be enabled only when the following conditions are fulfilled. control 1 - "Gain adjustment mode selection" in [Pr. PA08] is "Manual mode (___ 3)". Vibration "Vibration suppression control 1 tuning mode selection" in [Pr. PB02] is "Manual frequency setting (___ 2)".				
after gain switching		"Gain switching selection" in [Pr. PB26] is "Input device (gain switching (CDP)) (___ 1)". Switching during driving may cause a shock. Be sure to switch them after the servo motor stops.				
PB34		Setting range: 0.0 to 300.0 Set the resonance frequency for vibration suppression control 1 when the gain	0.0			
VRF2B		switching is enabled.	[Hz]			
Vibration suppression		When you set a value less than 0.1 Hz, the value will be the same as [Pr. PB20]. This parameter will be enabled only when the following conditions are fulfilled. control 1 - "Gain adjustment mode selection" in [Pr. PA08] is "Manual mode (___ 3)". Resonance "Vibration suppression control 1 tuning mode selection" in [Pr. PB02] is "Manual frequency setting (___ 2)".				
after gain switching		"Gain switching selection" in [Pr. PB26] is "Input device (gain switching (CDP)) (___ 1)". Switching during driving may cause a shock. Be sure to switch them after the servo motor stops.				
PB35		Setting range: 0.0 to 300.0 Set a damping of the vibration frequency for vibration suppression control 1 when VRF3B the gain switching is enabled.	0.00			
Vibration suppression control 1 - frequency after gain		This parameter will be enabled only when the following conditions are fulfilled. "Gain adjustment mode selection" in [Pr. PA08] is "Manual mode (___ 3)". "Vibration suppression control 1 tuning mode selection" in [Pr. PB02] is "Manual Vibration setting (___ 2)". "Gain switching selection" in [Pr. PB26] is "Input device (gain switching (CDP)) (___ 1)". Switching during driving may cause a shock. Be sure to switch them after the servo switching motor stops.				
PB36		Setting range: 0.00 to 0.30 Set a damping of the resonance frequency for vibration suppression control 1 when VRF4B the gain switching is enabled.	0.00			
Vibration suppression control 1 - Resonance frequency after gain		This parameter will be enabled only when the following conditions are fulfilled. "Gain adjustment mode selection" in [Pr. PA08] is "Manual mode (___ 3)". "Vibration suppression control 1 tuning mode selection" in [Pr. PB02] is "Manual setting (___ 2)". "Gain switching selection" in [Pr. PB26] is "Input device (gain switching (CDP)) (___ 1)". Switching during driving may cause a shock. Be sure to switch them after the servo switching motor stops.				
		Setting range: 0.00 to 0.30				

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode																																																																																																																																																																																																																																												
				P	S	T																																																																																																																																																																																																																																										
PB45		Set the command notch filter.																																																																																																																																																																																																																																														
CNHF	-- x x	Command notch filter setting frequency selection Refer to table 5.6 for the relation of setting values to frequency.	00h	○	△	△																																																																																																																																																																																																																																										
Command notch filter	_ x _ _	Notch depth selection Refer to table 5.7 for details.	0h	○	△	△																																																																																																																																																																																																																																										
	x _ _ _	For manufacturer setting	0h	△	△	△																																																																																																																																																																																																																																										
<p>Table 5.6 Command notch filter setting frequency selection</p> <table border="1"> <thead> <tr> <th>Setting value</th> <th>Frequency [Hz]</th> <th>Setting value</th> <th>Frequency [Hz]</th> <th>Setting value</th> <th>Frequency [Hz]</th> </tr> </thead> <tbody> <tr><td>00</td><td>Disabled</td><td>20</td><td>70</td><td>40</td><td>17.6</td></tr> <tr><td>01</td><td>2250</td><td>21</td><td>66</td><td>41</td><td>16.5</td></tr> <tr><td>02</td><td>1125</td><td>22</td><td>62</td><td>42</td><td>15.6</td></tr> <tr><td>03</td><td>750</td><td>23</td><td>59</td><td>43</td><td>14.8</td></tr> <tr><td>04</td><td>562</td><td>24</td><td>56</td><td>44</td><td>14.1</td></tr> <tr><td>05</td><td>450</td><td>25</td><td>53</td><td>45</td><td>13.4</td></tr> <tr><td>06</td><td>375</td><td>26</td><td>51</td><td>46</td><td>12.8</td></tr> <tr><td>07</td><td>321</td><td>27</td><td>48</td><td>47</td><td>12.2</td></tr> <tr><td>08</td><td>281</td><td>28</td><td>46</td><td>48</td><td>11.7</td></tr> <tr><td>09</td><td>250</td><td>29</td><td>45</td><td>49</td><td>11.3</td></tr> <tr><td>0A</td><td>225</td><td>2A</td><td>43</td><td>4A</td><td>10.8</td></tr> <tr><td>0B</td><td>204</td><td>2B</td><td>41</td><td>4B</td><td>10.4</td></tr> <tr><td>0C</td><td>187</td><td>2C</td><td>40</td><td>4C</td><td>10</td></tr> <tr><td>0D</td><td>173</td><td>2D</td><td>38</td><td>4D</td><td>9.7</td></tr> <tr><td>0E</td><td>160</td><td>2E</td><td>37</td><td>4E</td><td>9.4</td></tr> <tr><td>0F</td><td>150</td><td>2F</td><td>36</td><td>4F</td><td>9.1</td></tr> <tr><td>10</td><td>140</td><td>30</td><td>35.2</td><td>50</td><td>8.8</td></tr> <tr><td>11</td><td>132</td><td>31</td><td>33.1</td><td>51</td><td>8.3</td></tr> <tr><td>12</td><td>125</td><td>32</td><td>31.3</td><td>52</td><td>7.8</td></tr> <tr><td>13</td><td>118</td><td>33</td><td>29.6</td><td>53</td><td>7.4</td></tr> <tr><td>14</td><td>112</td><td>34</td><td>28.1</td><td>54</td><td>7.0</td></tr> <tr><td>15</td><td>107</td><td>35</td><td>26.8</td><td>55</td><td>6.7</td></tr> <tr><td>16</td><td>102</td><td>36</td><td>25.6</td><td>56</td><td>6.4</td></tr> <tr><td>17</td><td>97</td><td>37</td><td>24.5</td><td>57</td><td>6.1</td></tr> <tr><td>18</td><td>93</td><td>38</td><td>23.4</td><td>58</td><td>5.9</td></tr> <tr><td>19</td><td>90</td><td>39</td><td>22.5</td><td>59</td><td>5.6</td></tr> <tr><td>1A</td><td>86</td><td>3A</td><td>21.6</td><td>5A</td><td>5.4</td></tr> <tr><td>1B</td><td>83</td><td>3B</td><td>20.8</td><td>5B</td><td>5.2</td></tr> <tr><td>1C</td><td>80</td><td>3C</td><td>20.1</td><td>5C</td><td>5.0</td></tr> <tr><td>1D</td><td>77</td><td>3D</td><td>19.4</td><td>5D</td><td>4.9</td></tr> <tr><td>1E</td><td>75</td><td>3E</td><td>18.8</td><td>5E</td><td>4.7</td></tr> <tr><td>1F</td><td>72</td><td>3F</td><td>18.2</td><td>5F</td><td>4.5</td></tr> </tbody> </table> <p>Table 5.7 Notch depth selection</p> <table border="1"> <thead> <tr> <th>Setting value</th> <th>Depth [dB]</th> <th>Setting value</th> <th>Depth [dB]</th> </tr> </thead> <tbody> <tr><td>0</td><td>-40.0</td><td>8</td><td>-6.0</td></tr> <tr><td>1</td><td>-24.1</td><td>9</td><td>-5.0</td></tr> <tr><td>2</td><td>-18.1</td><td>A</td><td>-4.1</td></tr> <tr><td>3</td><td>-14.5</td><td>B</td><td>-3.3</td></tr> <tr><td>4</td><td>-12.0</td><td>C</td><td>-2.5</td></tr> <tr><td>5</td><td>-10.1</td><td>D</td><td>-1.8</td></tr> <tr><td>6</td><td>-8.5</td><td>E</td><td>-1.2</td></tr> <tr><td>7</td><td>-7.2</td><td>F</td><td>-0.6</td></tr> </tbody> </table>							Setting value	Frequency [Hz]	Setting value	Frequency [Hz]	Setting value	Frequency [Hz]	00	Disabled	20	70	40	17.6	01	2250	21	66	41	16.5	02	1125	22	62	42	15.6	03	750	23	59	43	14.8	04	562	24	56	44	14.1	05	450	25	53	45	13.4	06	375	26	51	46	12.8	07	321	27	48	47	12.2	08	281	28	46	48	11.7	09	250	29	45	49	11.3	0A	225	2A	43	4A	10.8	0B	204	2B	41	4B	10.4	0C	187	2C	40	4C	10	0D	173	2D	38	4D	9.7	0E	160	2E	37	4E	9.4	0F	150	2F	36	4F	9.1	10	140	30	35.2	50	8.8	11	132	31	33.1	51	8.3	12	125	32	31.3	52	7.8	13	118	33	29.6	53	7.4	14	112	34	28.1	54	7.0	15	107	35	26.8	55	6.7	16	102	36	25.6	56	6.4	17	97	37	24.5	57	6.1	18	93	38	23.4	58	5.9	19	90	39	22.5	59	5.6	1A	86	3A	21.6	5A	5.4	1B	83	3B	20.8	5B	5.2	1C	80	3C	20.1	5C	5.0	1D	77	3D	19.4	5D	4.9	1E	75	3E	18.8	5E	4.7	1F	72	3F	18.2	5F	4.5	Setting value	Depth [dB]	Setting value	Depth [dB]	0	-40.0	8	-6.0	1	-24.1	9	-5.0	2	-18.1	A	-4.1	3	-14.5	B	-3.3	4	-12.0	C	-2.5	5	-10.1	D	-1.8	6	-8.5	E	-1.2	7	-7.2	F	-0.6
Setting value	Frequency [Hz]	Setting value	Frequency [Hz]	Setting value	Frequency [Hz]																																																																																																																																																																																																																																											
00	Disabled	20	70	40	17.6																																																																																																																																																																																																																																											
01	2250	21	66	41	16.5																																																																																																																																																																																																																																											
02	1125	22	62	42	15.6																																																																																																																																																																																																																																											
03	750	23	59	43	14.8																																																																																																																																																																																																																																											
04	562	24	56	44	14.1																																																																																																																																																																																																																																											
05	450	25	53	45	13.4																																																																																																																																																																																																																																											
06	375	26	51	46	12.8																																																																																																																																																																																																																																											
07	321	27	48	47	12.2																																																																																																																																																																																																																																											
08	281	28	46	48	11.7																																																																																																																																																																																																																																											
09	250	29	45	49	11.3																																																																																																																																																																																																																																											
0A	225	2A	43	4A	10.8																																																																																																																																																																																																																																											
0B	204	2B	41	4B	10.4																																																																																																																																																																																																																																											
0C	187	2C	40	4C	10																																																																																																																																																																																																																																											
0D	173	2D	38	4D	9.7																																																																																																																																																																																																																																											
0E	160	2E	37	4E	9.4																																																																																																																																																																																																																																											
0F	150	2F	36	4F	9.1																																																																																																																																																																																																																																											
10	140	30	35.2	50	8.8																																																																																																																																																																																																																																											
11	132	31	33.1	51	8.3																																																																																																																																																																																																																																											
12	125	32	31.3	52	7.8																																																																																																																																																																																																																																											
13	118	33	29.6	53	7.4																																																																																																																																																																																																																																											
14	112	34	28.1	54	7.0																																																																																																																																																																																																																																											
15	107	35	26.8	55	6.7																																																																																																																																																																																																																																											
16	102	36	25.6	56	6.4																																																																																																																																																																																																																																											
17	97	37	24.5	57	6.1																																																																																																																																																																																																																																											
18	93	38	23.4	58	5.9																																																																																																																																																																																																																																											
19	90	39	22.5	59	5.6																																																																																																																																																																																																																																											
1A	86	3A	21.6	5A	5.4																																																																																																																																																																																																																																											
1B	83	3B	20.8	5B	5.2																																																																																																																																																																																																																																											
1C	80	3C	20.1	5C	5.0																																																																																																																																																																																																																																											
1D	77	3D	19.4	5D	4.9																																																																																																																																																																																																																																											
1E	75	3E	18.8	5E	4.7																																																																																																																																																																																																																																											
1F	72	3F	18.2	5F	4.5																																																																																																																																																																																																																																											
Setting value	Depth [dB]	Setting value	Depth [dB]																																																																																																																																																																																																																																													
0	-40.0	8	-6.0																																																																																																																																																																																																																																													
1	-24.1	9	-5.0																																																																																																																																																																																																																																													
2	-18.1	A	-4.1																																																																																																																																																																																																																																													
3	-14.5	B	-3.3																																																																																																																																																																																																																																													
4	-12.0	C	-2.5																																																																																																																																																																																																																																													
5	-10.1	D	-1.8																																																																																																																																																																																																																																													
6	-8.5	E	-1.2																																																																																																																																																																																																																																													
7	-7.2	F	-0.6																																																																																																																																																																																																																																													

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PB46 NH3 Machine resonance suppression filter 3		Set the notch frequency of the machine resonance suppression filter 3. To enable the setting value, select "Enabled ( _ _ _ 1)" of "Machine resonance suppression filter 3 selection" in [Pr. PB47].  Setting range: 10 to 4500	4500 [Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB47 NHQ3 Notch shape selection 3	Set the shape of the machine resonance suppression filter 3.					
	___ x	Machine resonance suppression filter 3 selection 0: Disabled 1: Enabled	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	__ x _	Notch depth selection 0: -40 dB 1: -14 dB 2: -8 dB 3: -4 dB	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	_ x _ _	Notch width selection 0: $\alpha = 2$ 1: $\alpha = 3$ 2: $\alpha = 4$ 3: $\alpha = 5$	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	x _ _ _	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PB48 NH4 Machine resonance suppression filter 4		Set the notch frequency of the machine resonance suppression filter 4. To enable the setting value, select "Enabled ( _ _ _ 1)" of "Machine resonance suppression filter 4 selection" in [Pr. PB49].  Setting range: 10 to 4500	4500 [Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB49 NHQ4 Notch shape selection 4	Set the shape of the machine resonance suppression filter 4.					
	___ x	Machine resonance suppression filter 4 selection 0: Disabled 1: Enabled When you select "Enabled" of this digit, [Pr. PB17 Shaft resonance suppression filter] is not available.	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	__ x _	Notch depth selection 0: -40 dB 1: -14 dB 2: -8 dB 3: -4 dB	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	_ x _ _	Notch width selection 0: $\alpha = 2$ 1: $\alpha = 3$ 2: $\alpha = 4$ 3: $\alpha = 5$	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	x _ _ _	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PB50 NH5 Machine resonance suppression filter 5		Set the notch frequency of the machine resonance suppression filter 5. To enable the setting value, select "Enabled ( _ _ _ 1)" of "Machine resonance suppression filter 5 selection" in [Pr. PB51].  Setting range: 10 to 4500	4500 [Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>



## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PB51 NHQ5 Notch shape selection 5		Set the shape of the machine resonance suppression filter 5. When you select "Enabled ( _ _ _ 1)" of "Robust filter selection" in [Pr. PE41], the machine resonance suppression filter 5 is not available.				
	___ x	Machine resonance suppression filter 5 selection 0: Disabled 1: Enabled	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	__ x _	Notch depth selection 0: -40 dB 1: -14 dB 2: -8 dB 3: -4 dB	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	_ x _ _	Notch width selection 0: $\alpha = 2$ 1: $\alpha = 3$ 2: $\alpha = 4$ 3: $\alpha = 5$	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	x _ _ _	For manufacturer setting	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB52 VRF21 Vibration suppression control 2 - Vibration frequency		Set the vibration frequency for vibration suppression control 2 to suppress low-frequency machine vibration. When "Vibration suppression control 2 tuning mode selection" is "Automatic setting ( _ _ 1 _ )" in [Pr. PB02], this parameter will be set automatically. Set manually for "Manual setting ( _ _ 2 _ )". To enable the digit, select "3 inertia mode ( _ _ _ 1)" of "Vibration suppression mode selection" in [Pr. PA24].  Setting range: 0.1 to 300.0	100.0 [Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB53 VRF22 Vibration suppression control 2 - Resonance frequency		Set the resonance frequency for vibration suppression control 2 to suppress low-frequency machine vibration. When "Vibration suppression control 2 tuning mode selection" is "Automatic setting ( _ _ 1 _ )" in [Pr. PB02], this parameter will be set automatically. Set manually for "Manual setting ( _ _ 2 _ )". To enable the digit, select "3 inertia mode ( _ _ _ 1)" of "Vibration suppression mode selection" in [Pr. PA24].  Setting range: 0.1 to 300.0	100.0 [Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB54 VRF23 Vibration suppression control 2 - Vibration frequency damping		Set a damping of the vibration frequency for vibration suppression control 2 to suppress low-frequency machine vibration. When "Vibration suppression control 2 tuning mode selection" is "Automatic setting ( _ _ 1 _ )" in [Pr. PB02], this parameter will be set automatically. Set manually for "Manual setting ( _ _ 2 _ )". To enable the digit, select "3 inertia mode ( _ _ _ 1)" of "Vibration suppression mode selection" in [Pr. PA24].  Setting range: 0.00 to 0.30	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PB55 VRF24 Vibration suppression control 2 - Resonance frequency damping		Set a damping of the resonance frequency for vibration suppression control 2 to suppress low-frequency machine vibration. When "Vibration suppression control 2 tuning mode selection" is "Automatic setting ( _ _ 1 _ )" in [Pr. PB02], this parameter will be set automatically. Set manually for "Manual setting ( _ _ 2 _ )". To enable the digit, select "3 inertia mode ( _ _ _ 1)" of "Vibration suppression mode selection" in [Pr. PA24].  Setting range: 0.00 to 0.30	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

PB56

Set the vibration frequency for vibration suppression control 2 when the gain

0.0

VRF21B Vibration suppression		switching is enabled. When you set a value less than 0.1 Hz, the value will be the same as [Pr. PB52]. This parameter will be enabled only when the following conditions are fulfilled. control 2 -	[Hz]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
------------------------------------	--	---	------	-----------------------	-----------------------	-----------------------

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
		"Gain adjustment mode selection" in [Pr. PA08] is "Manual mode ( _ _ _ 3)". Vibration "Vibration suppression mode selection" in [Pr. PA24] is "3 inertia mode ( _ _ _ 1)". frequency "Vibration suppression control 2 tuning mode selection" in [Pr. PB02] is "Manual after gain setting ( _ _ 2 _ )". switching				
		"Gain switching selection" in [Pr. PB26] is "Input device (gain switching (CDP)) ( _ _ _ 1)". Switching during driving may cause a shock. Be sure to switch them after the servo motor stops.  Setting range: 0.0 to 300.0				
PB57		Set the resonance frequency for vibration suppression control 2 when the gain	0.0			
VRF22B		switching is enabled.	[Hz]			
		Vibration suppression When you set a value less than 0.1 Hz, the value will be the same as [Pr. PB53]. This parameter will be enabled only when the following conditions are fulfilled. control 2 - "Gain adjustment mode selection" in [Pr. PA08] is "Manual mode ( _ _ _ 3)". Resonance "Vibration suppression mode selection" in [Pr. PA24] is "3 inertia mode ( _ _ _ 1)". frequency "Vibration suppression control 2 tuning mode selection" in [Pr. PB02] is "Manual after gain setting ( _ _ 2 _ )". switching				
		"Gain switching selection" in [Pr. PB26] is "Input device (gain switching (CDP)) ( _ _ _ 1)". Switching during driving may cause a shock. Be sure to switch them after the servo motor stops.  Setting range: 0.0 to 300.0				
PB58		Set a damping of the vibration frequency for vibration suppression control 2 when VRF23B the gain switching is enabled.	0.00			
		Vibration suppression This parameter will be enabled only when the following conditions are fulfilled. "Gain adjustment mode selection" in [Pr. PA08] is "Manual mode ( _ _ _ 3)". control 2 - "Vibration suppression mode selection" in [Pr. PA24] is "3 inertia mode ( _ _ _ 1)". Vibration "Vibration suppression control 2 tuning mode selection" in [Pr. PB02] is "Manual frequency setting ( _ _ 2 _ )". damping after _ _ 1)". switching				
		"Gain switching selection" in [Pr. PB26] is "Input device (gain switching (CDP)) ( _ gain _ _ 1)". Switching during driving may cause a shock. Be sure to switch them after the servo motor stops.  Setting range: 0.00 to 0.30				
PB59		Set a damping of the resonance frequency for vibration suppression control 2 when VRF24B the gain switching is enabled.	0.00			
		Vibration suppression This parameter will be enabled only when the following conditions are fulfilled. "Gain adjustment mode selection" in [Pr. PA08] is "Manual mode ( _ _ _ 3)". control 2 - "Vibration suppression mode selection" in [Pr. PA24] is "3 inertia mode ( _ _ _ 1)". Resonance "Vibration suppression control 2 tuning mode selection" in [Pr. PB02] is "Manual frequency setting ( _ _ 2 _ )". damping after _ _ 1)". switching				
		"Gain switching selection" in [Pr. PB26] is "Input device (gain switching (CDP)) ( _ gain _ _ 1)". Switching during driving may cause a shock. Be sure to switch them after the servo motor stops.  Setting range: 0.00 to 0.30				



## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PB60 PG1B		<p>Set the model loop gain when the gain switching is enabled.</p> <p>When you set a value less than 1.0 rad/s, the value will be the same as [Pr. PB07]. [rad/s] Model loop gain after "Gain adjustment"</p> <p>This parameter will be enabled only when the following conditions are fulfilled. gain after "Gain adjustment" selection" in [Pr. PA08] is "Manual mode ( _ _ _ 3)".</p> <p>"Gain switching selection" in [Pr. PB26] is "Input device (gain switching (CDP)) ( _ switching _ _ 1)".</p> <p>Switching during driving may cause a shock. Be sure to switch them after the servo motor stops.</p> <p>Setting range: 0.0 to 2000.0</p>	0.0	<input type="radio"/>		

### 5.2.3 Extension setting parameters ([Pr. PC\_ \_ ])

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PC01 STA Acceleration time constant		<p>This is used to set the acceleration time required to reach the rated speed from 0 r/min in response to VC (Analog speed command) and [Pr. PC05 Internal speed command 1] to [Pr. PC11 Internal speed command 7].</p> <p>For example for the servo motor of 3000 r/min rated speed, set 3000 (3s) to increase speed from 0 r/min to 1000 r/min in 1 second.</p> <p>Setting range: 0 to 50000</p>	0 [ms]		<input type="radio"/>	<input type="radio"/>
PC02 STB Deceleration time constant		<p>This is used to set the deceleration time required to reach 0 r/min from the rated speed in response to VC (Analog speed command) and [Pr. PC05 Internal speed command 1] to [Pr. PC11 Internal speed command 7].</p> <p>Setting range: 0 to 50000</p>	0 [ms]		<input type="radio"/>	<input type="radio"/>

## 5. PARAMETERS

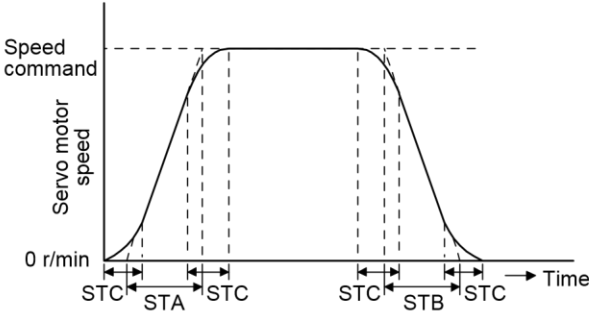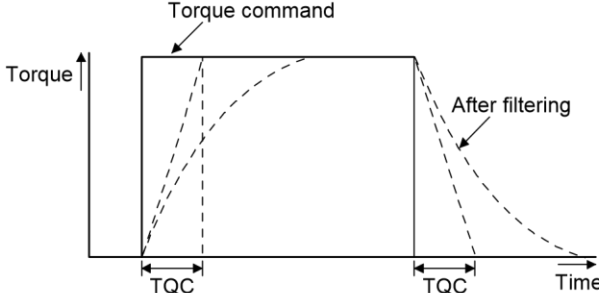No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PC03 STC S-pattern acceleration/d eceleration time constant		<p>This is used to smooth start/stop of the servo motor. Set the time of the arc part for S-pattern acceleration/deceleration.</p>  <p>STA: Acceleration time constant ([Pr. PC01]) STB: Deceleration time constant ([Pr. PC02]) STC: S-pattern acceleration/deceleration time constant ([Pr. PC03])</p> <p>Long setting of STA (acceleration time constant) or STB (deceleration time constant) may produce an error in the time of the arc part for the setting of the S-pattern acceleration/deceleration time constant. The upper limit value of the actual arc part time is limited by</p> $\frac{2000000}{STA} \text{ for acceleration or by } \frac{2000000}{STB} \text{ for deceleration.}$ <p>(Example) At the setting of STA 20000, STB 5000 and STC 200, the actual arc part times are as follows.</p> <p>During acceleration: 100 ms  <math>\frac{2000000}{20000} = 100 \text{ [ms]} &lt; 200 \text{ [ms]}</math>                      Therefore, it will be limited to 100 [ms].</p> <p>During deceleration: 200 ms  <math>\frac{2000000}{5000} = 400 \text{ [ms]} &gt; 200 \text{ [ms]}</math>                      Therefore, it will be 200 [ms] as you set.</p> <p>Setting range: 0 to 5000</p>	0 [ms]		<input type="radio"/>	<input type="radio"/>
PC04 TQC Torque command time constant		<p>This is used to set the constant of a primary delay to the torque command.</p>  <p>TQC: Torque command time constant</p> <p>Setting range: 0 to 50000</p>	0 [ms]			<input type="radio"/>

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PC05 SC1 Internal speed command 1/internal speed limit 1		This is used to set speed 1 of internal speed commands. Setting range: 0 to permissible instantaneous speed	100 [r/min]			
		This is used to set speed 1 of internal speed limits. Setting range: 0 to permissible instantaneous speed				
PC06 SC2 Internal speed command 2 Internal speed limit 2		This is used to set speed 2 of internal speed commands. Setting range: 0 to permissible instantaneous speed	500 [r/min]		○	
		This is used to set speed 2 of internal speed limits. Setting range: 0 to permissible instantaneous speed				
PC07 SC3 Internal speed command 3 Internal speed limit 3		This is used to set speed 3 of internal speed commands. Setting range: 0 to permissible instantaneous speed	1000 [r/min]		○	
		This is used to set speed 3 of internal speed limits. Setting range: 0 to permissible instantaneous speed				
PC08 SC4 Internal speed command 4 Internal speed limit 4		This is used to set speed 4 of internal speed commands. Setting range: 0 to permissible instantaneous speed	200 [r/min]		○	
		This is used to set speed 4 of internal speed limits. Setting range: 0 to permissible instantaneous speed				
PC09 SC5 Internal speed command 5 Internal speed limit 5		This is used to set speed 5 of internal speed commands. Setting range: 0 to permissible instantaneous speed	300 [r/min]		○	
		This is used to set speed 5 of internal speed limits. Setting range: 0 to permissible instantaneous speed				
PC10 SC6 Internal speed command 6 Internal speed limit 6		This is used to set speed 6 of internal speed commands. Setting range: 0 to permissible instantaneous speed	500 [r/min]		○	
		This is used to set speed 6 of internal speed limits. Setting range: 0 to permissible instantaneous speed				
PC11 SC7 Internal speed command 7 Internal speed limit 7		This is used to set speed 7 of internal speed commands. Setting range: 0 to permissible instantaneous speed	800 [r/min]		○	
		This is used to set speed 7 of internal speed limits. Setting range: 0 to permissible instantaneous speed				

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PC12 VCM		This is used to set the speed at the maximum input voltage (10 V) of VC (Analog speed command).	0 [r/min]			
Analog speed		When "0" is set, the analog speed command maximum speed would be the rated command - speed of the servo motor connected.				
Maximum speed limit - Maximum speed		If a value equal to or larger than the permissible speed is inputted to VC, the value is clamped at the permissible speed. Analog speed Setting range: 0 to 50000 This is used to set the speed at the maximum input voltage (10 V) of VLA (Analog speed limit). When "0" is set, the analog speed command maximum speed would be the rated speed of the servo motor connected. If a limited value equal to or larger than the permissible speed is inputted to VLA, the value is clamped at the permissible speed. Setting range: 0 to 50000				
PC13 TLC		This is used to set the output torque at the analog torque command voltage (TC = ±8 V) of +8 V on the assumption that the maximum torque is 100.0%.	100.0 [%]			
Analog torque maximum output		For example, set 50.0. command The maximum torque x is outputted. If a value equal to or larger than the maximum torque is inputted to TC, the value is clamped at the maximum torque. Setting range: 0.0 to 1000.0				
PC14 MOD1		__ x x Analog monitor 1 output selection Select a signal to output to MO1 (Analog monitor 1). Refer to appendix 4 (3) for Analog detection point of output selection. monitor 1 Refer to table 5.8 for settings.	00h			
output		_ x _ For manufacturer setting 0h x _ _ 0h				

Table 5.8 Analog monitor setting value

Setting  
value

Item

سازنده انواع ماشین آلات صنعتی و ماشین مخصوص

WWW.CNCREZA.IR



## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
	01	Torque ( $\pm 8$ V/max. torque) (Note 2)				
02		Servo motor speed (+8 V/max. speed)		03		
		Torque (+8 V/max. torque) (Note 2)	04			
		Current command ( $\pm 8$ V/max. current command)		05		
		The command pulse frequency ( $\pm 10$ V/4 Mpulses/s)				
06		Servo motor-side droop pulses ( $\pm 10$ V/100 pulses) (Note 1)				
	07	Servo motor-side droop pulses ( $\pm 10$ V/1000 pulses) (Note 1)				
	08	Servo motor-side droop pulses ( $\pm 10$ V/10000 pulses) (Note 1)				
	09	Servo motor-side droop pulses ( $\pm 10$ V/100000 pulses) (Note 1)				
	0D	Bus voltage (+8 V/400 V)				
	0E	Speed command 2 ( $\pm 8$ V/max. speed)				
	17	Encoder inside temperature ( $\pm 10$ V/ $\pm 128$ °C)				

























Note 1. Encoder pulse unit

2. 8 V is outputted at the maximum torque. However, when [Pr. PA11] and [Pr. PA12] are set to limit torque, 8 V is outputted at the torque highly limited.





## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode													
				P	S	T											
PC15 MOD2 Analog monitor 2 output	-- x x	Analog monitor 2 output selection Select a signal to output to MO2 (Analog monitor 2). Refer to appendix 4 (3) for detection point of output selection. Refer to [Pr. PC14] for settings.	01h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>											
	-- x --	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>											
	x ---		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>											
PC16 MBR Electromagne tic brake sequence output	/	This is used to set the delay time between MBR (Electromagnetic brake interlock) and the base drive circuit is shut-off.  Setting range: 0 to 1000	0 [ms]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>											
	/	Used to set the output range of ZSP (Zero speed detection). ZSP (Zero speed detection) has hysteresis of 20 r/min.  Setting range: 0 to 10000	50 [r/min]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>											
PC18 *BPS Alarm history clear	--- x	Alarm history clear selection Used to clear the alarm history. 0: Disabled 1: Enabled  When you select "Enabled", the alarm history will be cleared at next power-on. After the alarm history is cleared, the setting is automatically disabled.	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>											
	-- x --	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>											
	x ---		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>											
PC19 *ENRS Encoder output pulse selection	--- x	Encoder output pulse phase selection Select the encoder pulse direction. 0: Increasing A-phase 90° in CCW 1: Increasing A-phase 90° in CW  <table border="1" style="margin: 10px auto;"> <thead> <tr> <th rowspan="2">Setting value</th> <th colspan="2">Servo motor rotation direction</th> </tr> <tr> <th>CCW</th> <th>CW</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>A-phase  B-phase </td> <td>A-phase  B-phase </td> </tr> <tr> <td>1</td> <td>A-phase  B-phase </td> <td>A-phase  B-phase </td> </tr> </tbody> </table>	Setting value	Servo motor rotation direction		CCW	CW	0	A-phase  B-phase 	A-phase  B-phase 	1	A-phase  B-phase 	A-phase  B-phase 	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Setting value	Servo motor rotation direction															
		CCW	CW														
0	A-phase  B-phase 	A-phase  B-phase 															
1	A-phase  B-phase 	A-phase  B-phase 															
-- x --	Encoder output pulse setting selection 0: Output pulse setting 1: Dividing ratio setting 2: The same output pulse setting as the command pulse 3: A-phase/B-phase pulse electronic gear setting When you select "1", the settings of [Pr. PA16 Encoder output pulses 2] will be disabled. When you select "2", the settings of [Pr. PA15 Encoder output pulses] and [Pr. PA16 Encoder output pulses 2] will be disabled. When you select the setting, do not change the settings in [Pr. PA06] and [Pr. PA07] after the power-on.	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>												
x ---	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>												

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode															
				P	S	T													
PC22 *COP1 Function selection C-1	___ x	For manufacturer setting	0h																
	__ x _		0h																
	_ x _ _		2h																
	x _ _ _	Encoder cable communication method selection Select the encoder cable communication method. 0: Two-wire type 1: Four-wire type If the setting is incorrect, [AL. 16 Encoder initial communication error 1] or [AL. 20 Encoder normal communication error 1] occurs.	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>													
PC23 *COP2 Function selection C-2	___ x	Servo-lock selection at speed control stop Select the servo-lock selection at speed control stop. In the speed control mode, the servo motor shaft can be locked to prevent the shaft from being moved by an external force. 0: Enabled (servo-lock) The operation to maintain the stop position is performed. 1: Disabled (no servo-lock) The stop position is not maintained. The control to make the speed 0 r/min is performed.	0h		<input type="radio"/>														
	__ x _	For manufacturer setting	0h																
	_ x _ _	VC/VLA voltage averaging selection Select the VC/VLA voltage average. This is used to set the filtering time when VC (Analog speed command) or VLA (Analog speed limit) is imported. Set 0 to vary the speed to voltage fluctuation in real time. Increase the set value to vary the speed slower to voltage fluctuation.	0h		<input type="radio"/>	<input type="radio"/>													
		<table border="1"> <thead> <tr> <th>Setting value</th> <th>Filtering time [ms]</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>0.444</td> </tr> <tr> <td>2</td> <td>0.888</td> </tr> <tr> <td>3</td> <td>1.777</td> </tr> <tr> <td>4</td> <td>3.555</td> </tr> <tr> <td>5</td> <td>7.111</td> </tr> </tbody> </table>	Setting value	Filtering time [ms]	0	0	1	0.444	2	0.888	3	1.777	4	3.555	5	7.111			<input type="radio"/>
Setting value	Filtering time [ms]																		
0	0																		
1	0.444																		
2	0.888																		
3	1.777																		
4	3.555																		
5	7.111																		
	x _ _ _	Speed limit selection at torque control Select the speed limit selection at torque control. 0: Enabled 1: Disabled Do not use this function except when configuring an external speed loop.	0h			<input type="radio"/>													
PC24 *COP3 Function selection C-3	___ x	In-position range unit selection Select a unit of in-position range. 0: Command input pulse unit 1: Servo motor encoder pulse unit	0h	<input type="radio"/>															
	__ x _	For manufacturer setting	0h																
	_ x _ _		0h																
	x _ _ _	Error excessive alarm level unit selection Select a setting unit of the error excessive alarm level set in [Pr. PC43]. 0: 1 rev unit 1: 0.1 rev unit 2: 0.01 rev unit 3: 0.001 rev unit	0h	<input type="radio"/>															

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PC26 *COP5 Function selection C-5	___x	[AL. 99 Stroke limit warning] selection Select [AL. 99 Stroke limit warning]. 0: Enabled 1: Disabled	0h	<input type="radio"/>		
	__x_	For manufacturer setting	0h			
	_x__		0h			
	x___		0h			
PC30 STA2 Acceleration time constant 2		To enable the parameter, turn on STAB2 (Speed acceleration/deceleration selection). This is used to set the acceleration time required to reach the rated speed from 0 r/min in response to VC (Analog speed command) and [Pr. PC05 Internal speed command 1] to [Pr. PC11 Internal speed command 7].  Setting range: 0 to 50000	0 [ms]		<input type="radio"/>	<input type="radio"/>
PC31 STB2 Deceleration time constant 2		To enable the parameter, turn on STAB2 (Speed acceleration/deceleration selection). This is used to set the deceleration time required to reach 0 r/min from the rated speed in response to VC (Analog speed command) and [Pr. PC05 Internal speed command 1] to [Pr. PC11 Internal speed command 7].  Setting range: 0 to 50000	0 [ms]		<input type="radio"/>	<input type="radio"/>
PC32 CMX2 Commanded pulse multiplication numerator 2		To enable the parameter, select "Electronic gear (0 ___)" of "Electronic gear selection" in [Pr. PA21].  Setting range: 1 to 16777215	1	<input type="radio"/>		
PC33 CMX3 Commanded pulse multiplication numerator 3		To enable the parameter, select "Electronic gear (0 ___)" of "Electronic gear selection" in [Pr. PA21].  Setting range: 1 to 16777215	1	<input type="radio"/>		
PC34 CMX4 Commanded pulse multiplication numerator 4		To enable the parameter, select "Electronic gear (0 ___)" of "Electronic gear selection" in [Pr. PA21].  Setting range: 1 to 16777215	1	<input type="radio"/>		
PC35 TL2 Internal torque limit 2		Set the parameter on the assumption that the maximum torque is 100 %. The parameter is for limiting the torque of the servo motor. No torque is generated when this parameter is set to "0.0". When TL1 (Internal torque limit selection) is turned on, Internal torque limits 1 and 2 are compared and the lower value will be enabled.  Setting range: 0.0 to 100.0	100.0 [%]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>


## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode																
				P	S	T														
PC36 *DMD Status display selection	-- x x	Status display selection at power-on This is used to select a status display shown at power-on. 00: Cumulative feedback pulses 01: Servo motor speed 02: Droop pulses 03: Cumulative command pulses 04: Command pulse frequency 05: Analog speed command voltage (Note 1) 06: Analog torque command voltage (Note 2) 07: Regenerative load ratio 08: Effective load ratio 09: Peak load ratio 0A: Instantaneous torque 0B: Within one-revolution position (1 pulse unit) 0C: Within one-revolution position (100 pulses unit) 0D: ABS counter (Note 3) 0E: Load to motor inertia ratio 0F: Bus voltage 10: Encoder inside temperature 11: Settling time 12: Oscillation detection frequency 13: Number of tough operations 14: Unit power consumption (increment of 1 W) 15: Unit power consumption (increment of 1 kW) 16: Unit total power consumption (increment of 1 Wh) 17: Unit total power consumption (increment of 100 kWh)  Note 1. It is for the speed control mode. It will be the analog speed limit voltage in the torque control mode. 2. It is for the torque control mode. It will be the analog torque limit voltage in the speed control mode and position control mode. 3. Travel distance from power on is displayed by counter value.	00h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>														
	_ x _ _	Status display at power-on in corresponding control mode 0: Depends on the control mode. <table border="1" data-bbox="438 1355 1093 1635"> <thead> <tr> <th>Control mode</th> <th>Status display at power-on</th> </tr> </thead> <tbody> <tr> <td>Position</td> <td>Cumulative feedback pulses</td> </tr> <tr> <td>Position/speed</td> <td>Cumulative feedback pulses/servo motor speed</td> </tr> <tr> <td>Speed</td> <td>Servo motor speed</td> </tr> <tr> <td>Speed/torque</td> <td>Servo motor speed/analog torque command voltage</td> </tr> <tr> <td>Torque</td> <td>Analog torque command voltage</td> </tr> <tr> <td>Torque/position</td> <td>Analog torque command voltage/cumulative feedback pulses</td> </tr> </tbody> </table> 1: Depends on the last two digit setting of the parameter	Control mode	Status display at power-on	Position	Cumulative feedback pulses	Position/speed	Cumulative feedback pulses/servo motor speed	Speed	Servo motor speed	Speed/torque	Servo motor speed/analog torque command voltage	Torque	Analog torque command voltage	Torque/position	Analog torque command voltage/cumulative feedback pulses	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Control mode	Status display at power-on																		
Position	Cumulative feedback pulses																			
Position/speed	Cumulative feedback pulses/servo motor speed																			
Speed	Servo motor speed																			
Speed/torque	Servo motor speed/analog torque command voltage																			
Torque	Analog torque command voltage																			
Torque/position	Analog torque command voltage/cumulative feedback pulses																			
x _ _ _	For manufacturer setting		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>														

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PC37 VCO Analog speed command offset/Analog speed limit offset		<p>This is used to set the offset voltage of VC (Analog speed command). For example, if CCW rotation is provided by switching on ST1 (Forward rotation start) with applying 0 V to VC, set a negative value. When automatic VC offset is used, the automatically offset value is set to this parameter. (Refer to section 4.5.4.) The initial value is provided before shipment by the automatic VC offset function on condition that the voltage between VC and LG is 0 V.</p> <p>Setting range: -9999 to 9999</p>	The value differs depend ing on the servo amplifi ers. [mV]			
		<p>This is used to set the offset voltage of VLA (Analog speed limit). For example, if CCW rotation is provided by switching on RS1 (Forward rotation selection) with applying 0 V to VLA, set a negative value. When automatic VC offset is used, the automatically offset value is set to this parameter. (Refer to section 4.5.4.) The initial value is provided before shipment by the automatic VC offset function on condition that the voltage between VLA and LG is 0 V.</p> <p>Setting range: -9999 to 9999</p>				○
PC38 TPO Analog torque command offset/Analog torque limit offset		<p>This is used to set the offset voltage of TC (Analog torque command).  Setting range: -9999 to 9999</p>	0 [mV]			○
		<p>This is used to set the offset voltage of TLA (Analog torque limit).  Setting range: -9999 to 9999</p>			○	
PC39 MO1 Analog monitor 1 offset		<p>This is used to set the offset voltage of MO1 (Analog monitor 1).  Setting range: -9999 to 9999</p>	0 [mV]	○	○	○
PC40 MO2 Analog monitor 2 offset		<p>This is used to set the offset voltage of MO2 (Analog monitor 2).  Setting range: -9999 to 9999</p>	0 [mV]	○	○	○
PC43 ERZ Error excessive alarm level		<p>Set an error excessive alarm level. You can change the setting unit with "Error excessive alarm level" in [Pr. PC24]. However, setting "0" will be 3 rev. Setting over 200 rev will be clamped with 200 rev.</p> <p>Setting range: 0 to 1000</p>	0 [rev]	○		

## 5. PARAMETERS

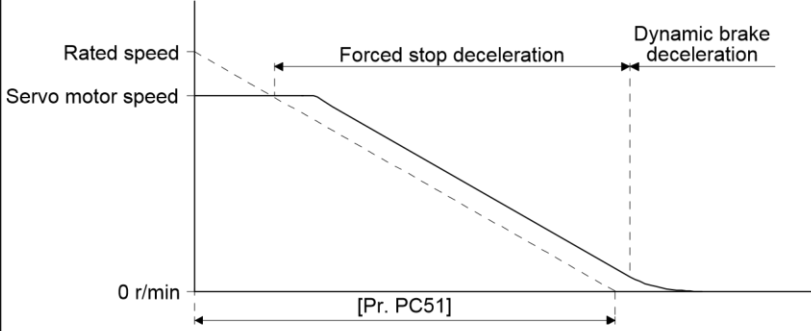No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PC51 RSBR Forced stop deceleration time constant		<p>This is used to set deceleration time constant when you use the forced stop deceleration function. Set the time per ms from the rated speed to 0 r/min.</p>  <p>[Precautions]</p> <ul style="list-style-type: none"> <li>• If the servo motor torque is saturated at the maximum torque during forced stop deceleration because the set time is too short, the time to stop will be longer than the set time constant.</li> <li>• [AL. 50 Overload alarm 1] or [AL. 51 Overload alarm 2] may occur during forced stop deceleration, depending on the set value.</li> <li>• After an alarm that leads to a forced stop deceleration, if an alarm that does not lead to a forced stop deceleration occurs or if the power supply is cut, dynamic braking will start regardless of the deceleration time constant setting.</li> </ul> <p>Setting range: 0 to 20000</p>	100 [ms]	<input type="radio"/>		<input type="radio"/>
PC54 RSUP1 Vertical axis freefall prevention compensation amount		<p>Set the compensation amount of the vertical axis freefall prevention function. Set it per servo motor rotation amount. The function will pull up an shaft per rotation amount to the servo motor rotation direction at the time of inputting forward rotation pulse for a positive number, and at the time of inputting reverse rotation pulse for a negative number. For example, if a positive compensation amount is set when the [Pr. PA14 Rotation direction selection] setting is "1", compensation will be performed to the CW direction. The vertical axis freefall prevention function is performed when all of the following conditions are met.</p> <ol style="list-style-type: none"> <li>1) Position control mode</li> <li>2) The value of the parameter is other than "0".</li> <li>3) The forced stop deceleration function is enabled.</li> <li>4) Alarm occurs or EM2 turns off when the servo motor speed is zero speed or less.</li> <li>5) MBR (Electromagnetic brake interlock) was enabled in [Pr. PD24], [Pr. PD25], and [Pr. PD28], and the base circuit shut-off delay time was set in [Pr. PC16].</li> </ol> <p>Setting range: -25000 to 25000</p>	0 [0.0001 rev]	<input type="radio"/>		
PC60 *COPD Function selection C-D	___x	<p>Motor-less operation selection This is used to select the motor-less operation. 0: Disabled 1: Enabled</p>	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	__x_	For manufacturer setting	0h			
	_x__		0h			
	x___		0h			

## 5. PARAMETERS

### 5.2.4 I/O setting parameters ([Pr. PD\_ \_])

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode																
				P	S	T														
PD01		Select input devices to turn on them automatically.																		
*DIA1 Input signal automatic on selection 1	___x (HEX)	___x (BIN): For manufacturer setting	0h																	
		__x_ (BIN): For manufacturer setting																		
		_x__ (BIN): SON (Servo-on)		○	○	○														
		0: Disabled (Use for an external input signal.) 1: Enabled (automatic on)																		
	__x_ (HEX)	x___ (BIN): For manufacturer setting	0h																	
		___x (BIN): PC (Proportional control)		○	○															
		0: Disabled (Use for an external input signal.) 1: Enabled (automatic on)																		
		__x_ (BIN): TL (External torque limit selection)		○	○															
		0: Disabled (Use for an external input signal.) 1: Enabled (automatic on)																		
		_x__ (BIN): For manufacturer setting																		
	_x__ (HEX)	x___ (BIN): For manufacturer setting	0h																	
		__x_ (BIN): For manufacturer setting																		
		_x__ (BIN): LSP (Forward rotation stroke end)		○	○															
		0: Disabled (Use for an external input signal.) 1: Enabled (automatic on)																		
	x___	x___ (BIN): LSN (Reverse rotation stroke end)	0h																	
0: Disabled (Use for an external input signal.) 1: Enabled (automatic on)																				
For manufacturer setting																				
Convert the setting value into hexadecimal as follows.																				
<table border="1"> <thead> <tr> <th rowspan="2">Signal name</th> <th colspan="2">Initial value</th> </tr> <tr> <th>BIN</th> <th>HEX</th> </tr> </thead> <tbody> <tr> <td></td> <td>0</td> <td rowspan="4">0</td> </tr> <tr> <td></td> <td>0</td> </tr> <tr> <td>SON (Servo-on)</td> <td>0</td> </tr> <tr> <td></td> <td>0</td> </tr> </tbody> </table>							Signal name	Initial value		BIN	HEX		0	0		0	SON (Servo-on)	0		0
Signal name	Initial value																			
	BIN	HEX																		
	0	0																		
	0																			
SON (Servo-on)	0																			
	0																			
<table border="1"> <thead> <tr> <th rowspan="2">Signal name</th> <th colspan="2">Initial value</th> </tr> <tr> <th>BIN</th> <th>HEX</th> </tr> </thead> <tbody> <tr> <td>PC (Proportional control)</td> <td>0</td> <td rowspan="4">0</td> </tr> <tr> <td>TL (External torque limit selection)</td> <td>0</td> </tr> <tr> <td></td> <td>0</td> </tr> <tr> <td></td> <td>0</td> </tr> </tbody> </table>							Signal name	Initial value		BIN	HEX	PC (Proportional control)	0	0	TL (External torque limit selection)	0		0		0
Signal name	Initial value																			
	BIN	HEX																		
PC (Proportional control)	0	0																		
TL (External torque limit selection)	0																			
	0																			
	0																			
<table border="1"> <thead> <tr> <th rowspan="2">Signal name</th> <th colspan="2">Initial value</th> </tr> <tr> <th>BIN</th> <th>HEX</th> </tr> </thead> <tbody> <tr> <td></td> <td>0</td> <td rowspan="4">0</td> </tr> <tr> <td></td> <td>0</td> </tr> <tr> <td>LSP (Forward rotation stroke end)</td> <td>0</td> </tr> <tr> <td>LSN (Reverse rotation stroke end)</td> <td>0</td> </tr> </tbody> </table>							Signal name	Initial value		BIN	HEX		0	0		0	LSP (Forward rotation stroke end)	0	LSN (Reverse rotation stroke end)	0
Signal name	Initial value																			
	BIN	HEX																		
	0	0																		
	0																			
LSP (Forward rotation stroke end)	0																			
LSN (Reverse rotation stroke end)	0																			
BIN 0: Use for an external input signal. BIN 1: Automatic on																				

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode																																																																																	
				P	S	T																																																																															
PD03	Any input device can be assigned to the CN1-15 pin.																																																																																				
*DI1L Input device selection 1L	-- x x	Position control mode - Device selection Refer to table 5.9 for settings.	02h	○	□	□																																																																															
	x x --	Speed control mode - Device selection Refer to table 5.9 for settings.	02h	□	○	□																																																																															
<b>Table 5.9 Selectable input devices</b> <table border="1" style="margin: auto;"> <thead> <tr> <th rowspan="2">Setting value</th> <th colspan="3">Input device (Note 1)</th> </tr> <tr> <th>P</th> <th>S</th> <th>T</th> </tr> </thead> <tbody> <tr><td>02</td><td>SON</td><td>SON</td><td>SON</td></tr> <tr><td>03</td><td>RES</td><td>RES</td><td>RES</td></tr> <tr><td>04</td><td>PC</td><td>PC</td><td>□</td></tr> <tr><td>05</td><td>TL</td><td>TL</td><td>□</td></tr> <tr><td>06</td><td>CR</td><td>□</td><td>□</td></tr> <tr><td>07</td><td>□</td><td>ST1</td><td>RS2</td></tr> <tr><td>08</td><td>□</td><td>ST2</td><td>RS1</td></tr> <tr><td>09</td><td>TL1</td><td>TL1</td><td>□</td></tr> <tr><td>0A</td><td>LSP</td><td>LSP</td><td>□</td></tr> <tr><td>0B</td><td>LSN</td><td>LSN</td><td>□</td></tr> <tr><td>0D</td><td>CDP</td><td>CDP</td><td>□</td></tr> <tr><td>20</td><td>□</td><td>SP1</td><td>SP1</td></tr> <tr><td>21</td><td>□</td><td>SP2</td><td>SP2</td></tr> <tr><td>22</td><td>□</td><td>SP3</td><td>SP3</td></tr> <tr><td>23</td><td>LOP (Note 2)</td><td>LOP (Note 2)</td><td>LOP (Note 2)</td></tr> <tr><td>24</td><td>CM1</td><td>□</td><td>□</td></tr> <tr><td>25</td><td>CM2</td><td>□</td><td>□</td></tr> <tr><td>26</td><td>□</td><td>STAB2</td><td>STAB2</td></tr> </tbody> </table> <p style="text-align: center;">           Note 1. P: position control mode, S: speed control mode, T: torque control mode.            The diagonal lines indicate manufacturer settings. Never change the setting.            2. When assigning LOP (Control switching), assign it to the same pin in all control modes.         </p>							Setting value	Input device (Note 1)			P	S	T	02	SON	SON	SON	03	RES	RES	RES	04	PC	PC	□	05	TL	TL	□	06	CR	□	□	07	□	ST1	RS2	08	□	ST2	RS1	09	TL1	TL1	□	0A	LSP	LSP	□	0B	LSN	LSN	□	0D	CDP	CDP	□	20	□	SP1	SP1	21	□	SP2	SP2	22	□	SP3	SP3	23	LOP (Note 2)	LOP (Note 2)	LOP (Note 2)	24	CM1	□	□	25	CM2	□	□	26	□	STAB2	STAB2
Setting value	Input device (Note 1)																																																																																				
	P	S	T																																																																																		
02	SON	SON	SON																																																																																		
03	RES	RES	RES																																																																																		
04	PC	PC	□																																																																																		
05	TL	TL	□																																																																																		
06	CR	□	□																																																																																		
07	□	ST1	RS2																																																																																		
08	□	ST2	RS1																																																																																		
09	TL1	TL1	□																																																																																		
0A	LSP	LSP	□																																																																																		
0B	LSN	LSN	□																																																																																		
0D	CDP	CDP	□																																																																																		
20	□	SP1	SP1																																																																																		
21	□	SP2	SP2																																																																																		
22	□	SP3	SP3																																																																																		
23	LOP (Note 2)	LOP (Note 2)	LOP (Note 2)																																																																																		
24	CM1	□	□																																																																																		
25	CM2	□	□																																																																																		
26	□	STAB2	STAB2																																																																																		
PD04	Any input device can be assigned to the CN1-15 pin.																																																																																				
*DI1H Input device selection 1H	-- x x	Torque control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	02h	□	□	○																																																																															
	_ x _ _	For manufacturer setting	0h	□	□	□																																																																															
	x _ _ _		0h	□	□	□																																																																															
PD11	Any input device can be assigned to the CN1-19 pin.																																																																																				
*DI5L Input device selection 5L	-- x x	Position control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	03h	○	□	□																																																																															
	x x _ _	Speed control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	07h	□	○	□																																																																															
PD12	Any input device can be assigned to the CN1-19 pin.																																																																																				
*DI5H Input device selection 5H	-- x x	Torque control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	07h	□	□	○																																																																															
	_ x _ _	For manufacturer setting	0h	□	□	□																																																																															
	x _ _ _		0h	□	□	□																																																																															
PD13	Any input device can be assigned to the CN1-41 pin.																																																																																				
*DI6L Input device selection 6L	-- x x	Position control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	06h	○	□	□																																																																															
	x x _ _	Speed control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	08h	□	○	□																																																																															



## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode																																																									
				P	S	T																																																							
PD14 *DI6H Input device selection 6H	Any input device can be assigned to the CN1-41 pin.																																																												
	-- x x	Torque control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	08h			○																																																							
	_ x _ _	For manufacturer setting	0h																																																										
	x _ _ _		0h																																																										
PD17 *DI8L Input device selection 8L	Any input device can be assigned to the CN1-43 pin.																																																												
	-- x x	Position control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	0Ah	○																																																									
	x x _ _	Speed control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	0Ah		○																																																								
PD18 *DI8H Input device selection 8H	Any input device can be assigned to the CN1-43 pin.																																																												
	-- x x	Torque control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	00h			○																																																							
	_ x _ _	For manufacturer setting	0h																																																										
	x _ _ _		0h																																																										
PD19 *DI9L Input device selection 9L	Any input device can be assigned to the CN1-44 pin.																																																												
	-- x x	Position control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	0Bh	○																																																									
	x x _ _	Speed control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	0Bh		○																																																								
PD20 *DI9H Input device selection 9H	Any input device can be assigned to the CN1-44 pin.																																																												
	-- x x	Torque control mode - Device selection Refer to table 5.9 in [Pr. PD03] for settings.	00h			○																																																							
	_ x _ _	For manufacturer setting	0h																																																										
	x _ _ _		0h																																																										
PD24 *DO2 Output device selection 2	-- x x	Device selection Any output device can be assigned to the CN1-23 pin. Refer to table 5.10 for settings.	0Ch	○	○	○																																																							
	_ x _ _	For manufacturer setting	0h																																																										
	x _ _ _		0h																																																										
<p>Table 5.10 Selectable output devices</p> <table border="1"> <thead> <tr> <th rowspan="2">Setting value</th> <th colspan="3">Output device (Note)</th> </tr> <tr> <th>P</th> <th>S</th> <th>T</th> </tr> </thead> <tbody> <tr><td>00</td><td>Always off</td><td>Always off</td><td>Always off</td></tr> <tr><td>02</td><td>RD</td><td>RD</td><td>RD</td></tr> <tr><td>03</td><td>ALM</td><td>ALM</td><td>ALM</td></tr> <tr><td>04</td><td>INP</td><td>SA</td><td>Always off</td></tr> <tr><td>05</td><td>MBR</td><td>MBR</td><td>MBR</td></tr> <tr><td>07</td><td>TLC</td><td>TLC</td><td>VLC</td></tr> <tr><td>08</td><td>WNG</td><td>WNG</td><td>WNG</td></tr> <tr><td>0A</td><td>Always off</td><td>SA</td><td>Always off</td></tr> <tr><td>0B</td><td>Always off</td><td>Always off</td><td>VLC</td></tr> <tr><td>0C</td><td>ZSP</td><td>ZSP</td><td>ZSP</td></tr> <tr><td>0D</td><td>MTTR</td><td>MTTR</td><td>MTTR</td></tr> <tr><td>0F</td><td>CDPS</td><td>Always off</td><td>Always off</td></tr> </tbody> </table> <p>Note. P: position control mode, S: speed control mode, T: torque control mode</p>							Setting value	Output device (Note)			P	S	T	00	Always off	Always off	Always off	02	RD	RD	RD	03	ALM	ALM	ALM	04	INP	SA	Always off	05	MBR	MBR	MBR	07	TLC	TLC	VLC	08	WNG	WNG	WNG	0A	Always off	SA	Always off	0B	Always off	Always off	VLC	0C	ZSP	ZSP	ZSP	0D	MTTR	MTTR	MTTR	0F	CDPS	Always off	Always off
Setting value	Output device (Note)																																																												
	P	S	T																																																										
00	Always off	Always off	Always off																																																										
02	RD	RD	RD																																																										
03	ALM	ALM	ALM																																																										
04	INP	SA	Always off																																																										
05	MBR	MBR	MBR																																																										
07	TLC	TLC	VLC																																																										
08	WNG	WNG	WNG																																																										
0A	Always off	SA	Always off																																																										
0B	Always off	Always off	VLC																																																										
0C	ZSP	ZSP	ZSP																																																										
0D	MTTR	MTTR	MTTR																																																										
0F	CDPS	Always off	Always off																																																										

## 5. PARAMETERS

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PD25 *DO3 Output device selection 3	-- x x	Device selection Any output device can be assigned to the CN1-24 pin. Refer to table 5.10 in [Pr. PD24] for settings.	04h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	-- x _	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	x _ _ _		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PD28 *DO6 Output device selection 6	-- x x	Device selection Any output device can be assigned to the CN1-49 pin. Refer to table 5.10 in [Pr. PD24] for settings.	02h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	-- x _	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	x _ _ _		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PD29 *DIF Input filter setting	Select a filter for the input signal.					
	--- x	Input signal filter selection If external input signal causes chattering due to noise, etc., input filter is used to suppress it. 0: None 1: 0.888 [ms] 2: 1.777 [ms] 3: 2.666 [ms] 4: 3.555 [ms]	4h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	-- x _	RES (Reset) dedicated filter selection 0: Disabled 1: Enabled (50 [ms])	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	_ x _ _	CR (Clear) dedicated filter selection 0: Disabled 1: Enabled (50 [ms])	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	x _ _ _	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PD30 *DOP1 Function selection D-1	--- x	Stop method selection for LSP (Forward rotation stroke end) off and LSN (Reverse rotation stroke end) off Select a stop method for LSP (Forward rotation stroke end) off and LSN (Reverse rotation stroke end) off 0: Quick stop 1: Slow stop	0h	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>
	-- x _	Base circuit status selection for RES (Reset) on 0: Base circuit shut-off 1: No base circuit shut-off	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	_ x _ _	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	x _ _ _		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PD32 *DOP3 Function selection D-3	--- x	CR (Clear) selection This is used to set CR (Clear). 0: Deleting droop pulses at the leading edge of turning on of CR 1: Continuous deleting of droop pulses while CR is on	0h	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
	-- x _	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	_ x _ _		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	x _ _ _		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

## 5. PARAMETERS


No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode						
				P	S	T				
PD34 *DOP5 Function selection D-5	___x	Alarm code output This is used to select if output alarm codes. Alarm codes are outputted to pins CN1-23, CN1-24, and CN1-49. 0: Disabled 1: Enabled For details of the alarm codes, refer to chapter 8. When you select alarm code output while MBR or ALM is selected for CN1-23, CN1-24, or CN1-49 pin, [AL. 37 Parameter error] will occur.	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>				
	__x_	Selection of output device at warning occurrence Select ALM (Malfunction) output status at warning occurrence.	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>				
	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">Setting value</th> <th style="width: 85%;">Device status</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">0</td> <td> </td> </tr> <tr> <td style="text-align: center;">1</td> <td> </td> </tr> </tbody> </table>	Setting value	Device status	0		1				
Setting value	Device status									
0										
1										
__x__	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>					
x__		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>					

### 5.2.5 Extension setting 2 parameters ([Pr. PE\_\_])

No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PE41 EOP3 Function selection E-3	___x	Robust filter selection 0: Disabled 1: Enabled When you select "Enabled" of this digit, the machine resonance suppression filter 5 set in [Pr. PB51] is not available.	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	__x_	For manufacturer setting	0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	_x__		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	x__		0h	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

## 5. PARAMETERS

### 5.2.6 Extension setting 3 parameters ([Pr. PF\_ \_])

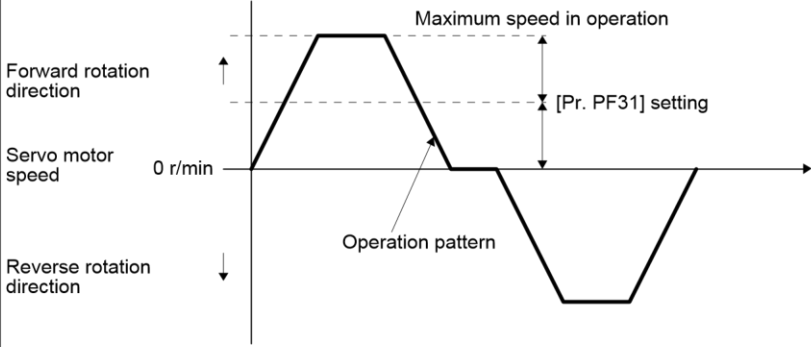No./ symbol/name	Setting digit	Function	Initial value [unit]	Control mode		
				P	S	T
PF21 DRT Drive recorder switching time setting		This is used to set a drive recorder switching time. When a USB communication is cut during using a graph function or a graph function is terminated, the function will be changed to the drive recorder function after the setting time of this parameter. When a value from "1" to "32767" is set, it will switch after the setting value. When "0" is set, it will switch after 600 s. When "-1" is set, the drive recorder function is disabled.  Setting range: -1 to 32767	0 [s]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PF23 OSCL1 Vibration tough drive - Oscillation detection level		This is used to set a filter readjustment sensitivity of [Pr. PB13 Machine resonance suppression filter 1] and [Pr. PB15 Machine resonance suppression filter 2] while the vibration tough drive is enabled. Example: When you set "50" to the parameter, the filter will be readjusted at the time of 50% or more oscillation level.  Setting range: 0 to 100	50 [%]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PF24 *OSCL2 Vibration tough drive function selection	___ x	Oscillation detection alarm selection Select alarm or warning when an oscillation continues at a filter readjustment sensitivity level of [Pr. PF23]. The digit is continuously enabled regardless of the vibration tough drive in [Pr. PA20]. 0: [AL. 54 Oscillation detection] will occur at oscillation detection. 1: [AL. F3.1 Oscillation detection warning] will occur at oscillation detection. 2: Oscillation detection function disabled	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	__ x _	For manufacturer setting	0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	_ x _ _		0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	x _ _ _		0h	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PF25 CVAT SEMI-F47 function - Instantaneous power failure detection time (instantaneous power failure tough drive - detection time)		Set the time of the [AL. 10.1 Voltage drop in the power] occurrence. To disable the parameter, select "Disabled (_ 0 _ _)" of "SEMI-F47 function selection (instantaneous power failure tough drive selection)" in [Pr. PA20]. When "Enabled (_ 1 _ _)" is selected of "SEMI-F47 function selection (instantaneous power failure tough drive selection)" in [Pr. PA20], the power should be off for the setting value of this parameter + 1.5 s or more before cycling the power to enable a parameter whose symbol is preceded by "**". Setting range: 30 to 2000	200 [ms]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PF31 FRIC Machine diagnosis function - Friction judgement speed		Set a servo motor speed to divide a friction estimation area into high and low for the friction estimation process of the machine diagnosis. However, setting "0" will be the value half of the rated speed. When your operation pattern is under rated speed, we recommend that you set half value to the maximum speed with this.   Setting range: 0 to permissible speed	0 [r/min]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>



## 5. PARAMETERS

---

---

---

---

---

---

---

---

## 6. NORMAL GAIN ADJUSTMENT

POINT	
● ●	In control mode, you do not need to make gain adjustment. When making gain adjustment, check that your machine is not being operated over the maximum torque of the servo motor. If operated over maximum torque, the motor may vibrate and may operate unexpectedly. In addition, make gain adjustment with a safety margin considering characteristic differences of each servo motor. It is recommended that generated torque during operation is under 90% of the maximum torque of the servo motor.

### 6.1 Different adjustment methods

#### 6.1.1 Adjustment on a single servo amplifier

The following table shows the gain adjustment modes that can be set on a single servo amplifier. For gain adjustment, first execute "Auto tuning mode 1". If you are not satisfied with the result of the adjustment, execute "Auto tuning mode 2" and "Manual mode" in this order.

##### (1) Gain adjustment mode explanation


## 6. NORMAL GAIN ADJUSTMENT

Gain adjustment mode	[Pr. PA08] setting	Estimation of load to motor inertia ratio	Automatically set parameters	Manually set parameters
Auto tuning mode 1 (initial value)	___ 1	Always estimated	GD2 ([Pr. PB06]) PG1 ([Pr. PB07]) PG2 ([Pr. PB08]) VG2 ([Pr. PB09]) VIC ([Pr. PB10])	RSP ([Pr. PA09])
Auto tuning mode 2	___ 2	Fixed to [Pr. PB06] value	PG1 ([Pr. PB07]) PG2 ([Pr. PB08]) VG2 ([Pr. PB09]) VIC ([Pr. PB10])	GD2 ([Pr. PB06]) RSP ([Pr. PA09])
Manual mode	___ 3			GD2 ([Pr. PB06]) PG1 ([Pr. PB07]) PG2 ([Pr. PB08]) VG2 ([Pr. PB09]) VIC ([Pr. PB10])
2 gain adjustment mode 1 (interpolation mode)	___ 0	Always estimated	GD2 ([Pr. PB06]) PG2 ([Pr. PB08]) VG2 ([Pr. PB09]) VIC ([Pr. PB10])	PG1 ([Pr. PB07]) RSP ([Pr. PA09])
2 gain adjustment mode 2	___ 4	Fixed to [Pr. PB06] value	PG2 ([Pr. PB08]) VG2 ([Pr. PB09]) VIC ([Pr. PB10])	GD2 ([Pr. PB06]) PG1 ([Pr. PB07]) RSP ([Pr. PA09])



## 6. NORMAL GAIN ADJUSTMENT

### (2) Adjustment sequence and mode usage

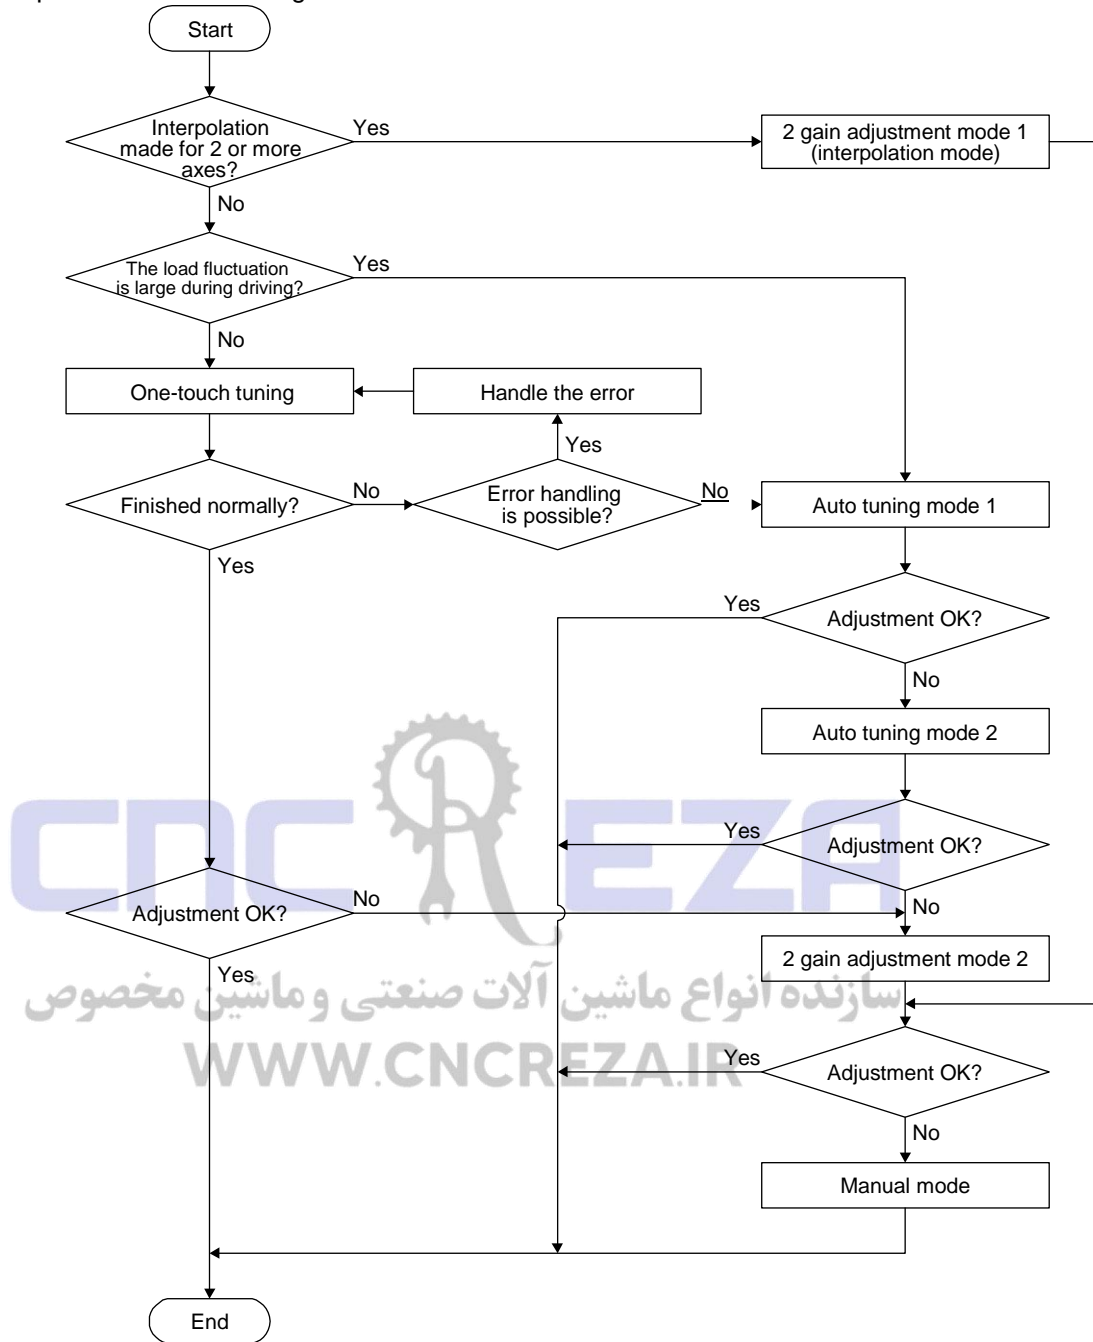

#### 6.1.2 Adjustment using MR Configurator2

This section explains the functions and adjustment using the servo amplifier with MR Configurator2.

Function	Description	Adjustment
Machine analyzer	With the machine and servo motor coupled, the characteristic of the mechanical system can be measured by giving a random vibration command from a personal computer to the servo and measuring the machine response.	You can grasp the machine resonance frequency and determine the notch frequency of the machine resonance suppression filter.

#### 6.2 One-touch tuning



## 6. NORMAL GAIN ADJUSTMENT


You can execute the one-touch tuning with MR Configurator2 or push buttons. The following parameters are set automatically with one-touch tuning.

Table 6.1 List of parameters automatically set with one-touch tuning

Parameter	Symbol	Name	Parameter	Symbol	Name
PA08	ATU	Auto tuning mo	PB14	NHQ1	Notch shape selection 1
PA09	RSP	Auto tuning res	PB15	NH2	Machine resonance suppression filter 2
PB01	FILT	Adaptive tuning II)	PB16	NHQ2	Notch shape selection 2
PB02	VRFT	Vibration suppr. mode (advance control II)	PB18	LPF	Low-pass filter setting
			PB19	VRF11	Vibration suppression control 1 - Vibration frequency
PB03	PST	Position comm: acceleration/de constant (positi	PB20	VRF12	Vibration suppression control 1 - Resonance frequency
			PB21	VRF13	Vibration suppression control 1 - Vibration frequency damping
PB06	GD2	Load to motor i	PB22	VRF14	Vibration suppression control 1 - Resonance frequency damping
PB07	PG1	Model loop gair	PB23	VFBF	Low-pass filter selection
PB08	PG2	Position loop ga	PB47	NHQ3	Notch shape selection 3
PB09	VG2	Speed loop gair	PB48	NH4	Machine resonance suppression filter 4
PB10	VIC	Speed integral	PB49	NHQ4	Notch shape selection 4
PB12	OVA	Overshoot amo	PB51	NHQ5	Notch shape selection 5
PB13	NH1	Machine resonanc 1	PE41	EOP3	Function selection E-3


### 6.2.1 One-touch tuning flowchart

- (1) When you use MR Configurator2  
Make one-touch tuning as follows.

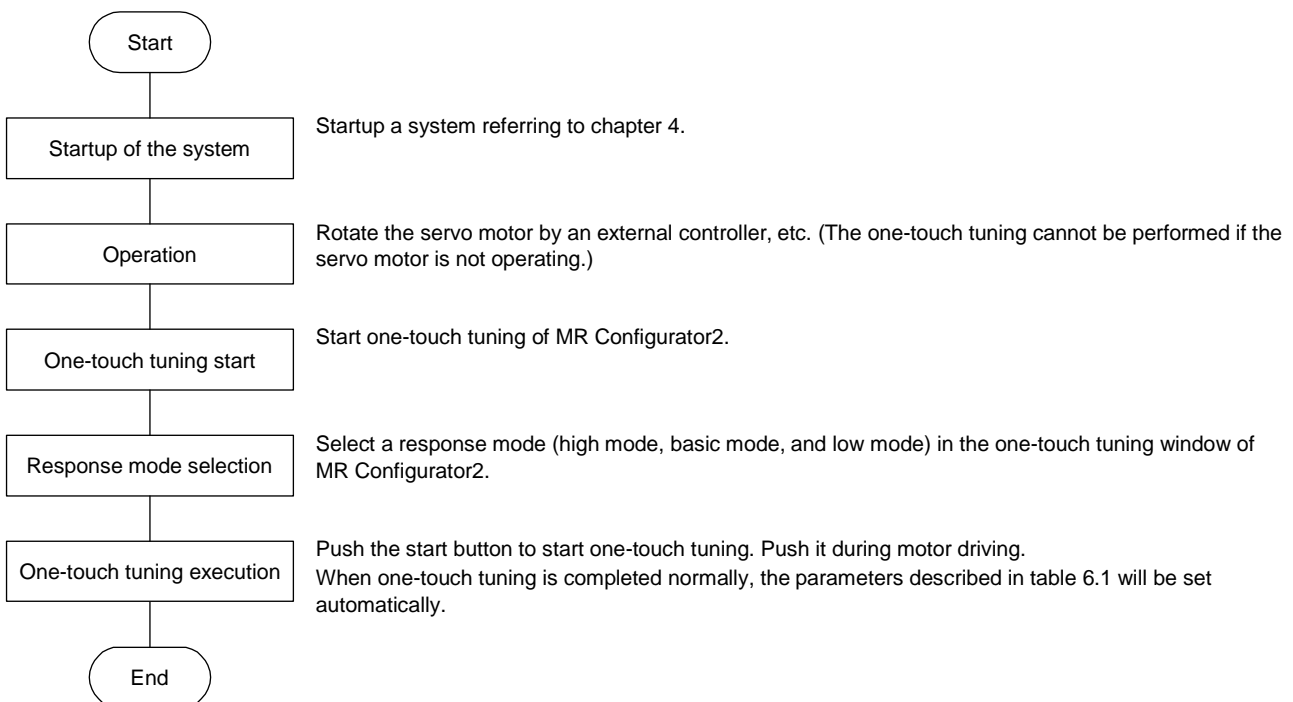

## 6. NORMAL GAIN ADJUSTMENT

(2) When you use push buttons Make one-touch tuning as follows.

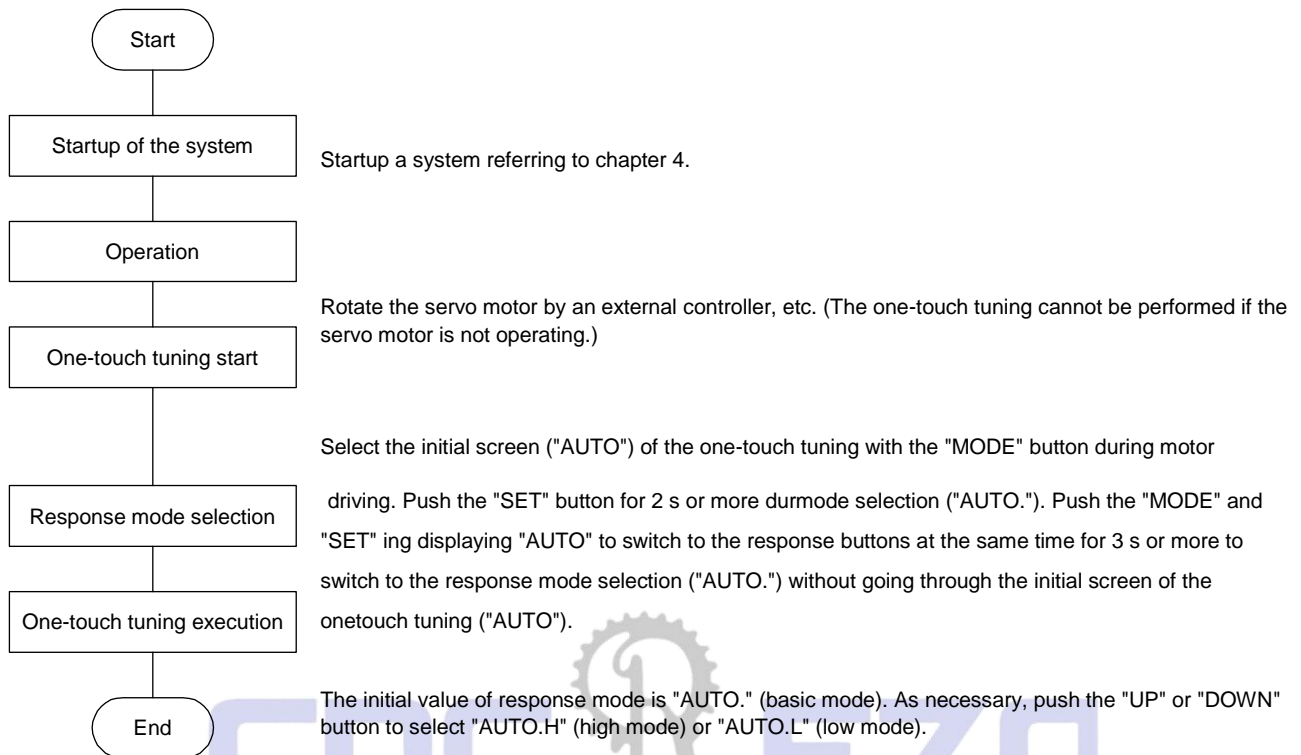

Push the "SET" button to start one-touch tuning. Push the "SET" button during servo motor driving. When one-touch tuning is completed normally, the parameters described in table 6.1 will be set automatically.

سازنده انواع ماشین آلات صنعتی و ماشین مخصوص  
WWW.CNCREZA.IR

### 6.2.2 Display transition and operation procedure of one-touch tuning

(1) When you use MR Configurator2

(a) Response mode selection

Select a response mode from three modes in the one-touch tuning window of MR Configurator2.

## 6. NORMAL GAIN ADJUSTMENT



Response mode	Explanation
High mode	This mode is for high rigid system.
Basic mode	This mode is for standard system.
Low mode	This mode is for low rigid system.

Refer to the following table for selecting a response mode.


Response mode			Response	Machine characteristic
Low mode	Basic mode	High mode		Guideline of corresponding machine
↑ ↓	↑ ↓	↑ ↓	Low response ↑ ↓ High response	

## 6. NORMAL GAIN ADJUSTMENT

### (b) One-touch tuning execution

POINT	
●	Point in which overshoot during one-touch tuning is in the permissible overshoot range, changing the value of [Pr. PA25 One-touch tuning permissible level] will shorten the settling time and improve the response.

After the response mode is selected in (a), pushing the start button during driving will start one-touch tuning. If the start button is pushed while the motor stops, "C 0 0 2" or "C 0 0 4" will be displayed at status in error code. (Refer to table 6.2 of (1) (d) of this section for error codes.)

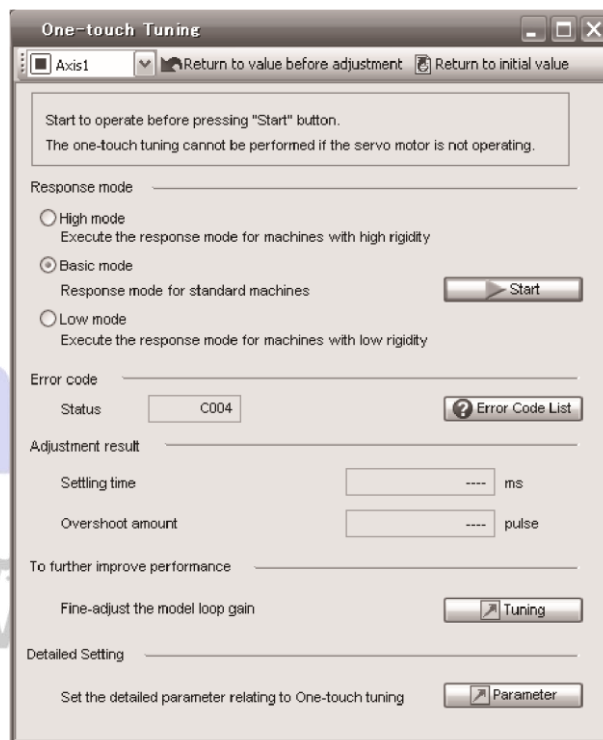

During processing of one-touch tuning, the status will be displayed in the progress window as follows. One-touch tuning will be finished at 100%.



Completing the one-touch tuning starts writing tuning parameters to the servo amplifier. "0 0 0 0" is displayed at status in error code. In addition, settling time and overshoot amount will be displayed in "Adjustment result" after adjustment.

### (c) Stop of one-touch tuning

During one-touch tuning, pushing the stop button stops one-touch tuning. If the one-touch tuning is stopped, "C 0 0 0" will be displayed at status in error code.

## 6. NORMAL GAIN ADJUSTMENT

### (d) Error occurrence

If a tuning error occurs during tuning, one-touch tuning will be forcibly terminated. With that, the following error code will be displayed in status. Check the cause of tuning error.

Table 6.2 Error code list during one-touch tuning

Error code	Name	Description	Action
C000		Tuning canceled The stop button or "SET" of the push button was pushed.	
C001		Overshoot exceeded The overshoot amount is larger than the value Increase the in-position range. set in [Pr. PA10 In-position range].	
C002		Servo-off during tuning The one-touch tuning was attempted during one-touch tuning after servo-on. servo-off.	Perform the
C003	Control mode error	The one-touch tuning was attempted while the torque control mode was selected in the control modes. controller, and then make one-touch tuning.	Select the position control mode or speed mode for the control mode from the control modes.
C004	Time-out	1. One cycle time during the operation has been over 30 s.	Set the one cycle time during the operation to 30 s or less.
		2. The command speed is low.	Set the servo motor speed to 100 r/min or higher.
		3. The operation interval of the continuous driving about 200 ms.	Maintain the operation interval during motor operation is short. driving about
C005	Load to motor inertia ratio misestimated	1. The estimation of the load to motor inertia ratio at one-touch tuning was a failure. follows.	Drive the motor with meeting conditions as follows. <ul style="list-style-type: none"> <li>• Time to reach 2000 r/min is the acceleration/deceleration time constant of 5 s or less.</li> <li>• Speed is 150 r/min or higher.</li> <li>• The load to motor inertia ratio is 100 times or less.</li> <li>• The acceleration/deceleration torque is 10% or more of the rated torque.</li> </ul>
		2. The load to motor inertia ratio was not estimated due to such as an oscillation.	Set to the auto tuning mode that does not estimate the load to motor inertia ratio as follows, and then execute the one-touch tuning. <ul style="list-style-type: none"> <li>• Select "Auto tuning mode 2 ( _ _ _ 2)", "Manual mode ( _ _ _ 3)", or "2 gain adjustment mode 2 ( _ _ _ 4)" of "Gain adjustment mode selection" in [Pr. PA08].</li> <li>• Set [Pr. PB06 Load to motor inertia ratio] properly with manual setting.</li> </ul>
C00F	One-touch tuning disabled	"One-touch tuning function selection" in [Pr. PA21] is "Disabled ( _ _ _ 0)".	Select "Enabled ( _ _ _ 1)".

### (e) If an alarm occurs

If an alarm occurs during tuning, one-touch tuning will be forcibly terminated. Remove the cause of the alarm and execute one-touch tuning again.

### (f) If a warning occurs

If a warning which continue the motor driving occurs during the tuning, one-touch tuning will be continued.

If a warning which does not continue the motor driving occurs during the tuning, one-touch tuning will be stopped.

### (g) Clearing one-touch tuning

You can clear the parameter values set with one-touch tuning.

## 6. NORMAL GAIN ADJUSTMENT

Refer to table 6.1 for the parameters which you can clear.

Pushing "Return to value before tuning" in the one-touch tuning window of MR Configurator2 enables to rewrite the parameter to the value before pushing the start button.

In addition, pushing "Return to initial value" in the one-touch tuning window enables to rewrite the parameter to the initial value.



When clearing one-touch tuning is completed, the following window will be displayed. (returning to initial value)




(2) When you use push buttons

POINT	
●	ODE" and "SET" buttons at the same time for 3 s or more to switch response mode selection ("AUTO.") without going through the initial one-touch tuning ("AUTO").

(a) Response mode selection

Select a response mode of the one-touch tuning from 3 modes with "UP" or "DOWN". Refer to (1) (a) of this section for a guideline of response mode.

## 6. NORMAL GAIN ADJUSTMENT

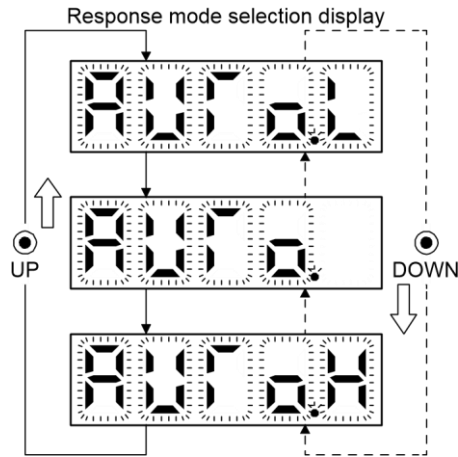

Low mode: This mode is for low rigid system.


Basic mode: This mode is for standard system.

High mode: This mode is for high rigid system.

### (b) One-touch tuning execution

POINT	
●	point in which overshoot during one-touch tuning is in the permissible n-position range, changing the value of [Pr. PA25 One-touch tuning permissible level] will shorten the settling time and improve the response.

After the response mode is selected in (a), pushing the "SET" button will start one-touch tuning.

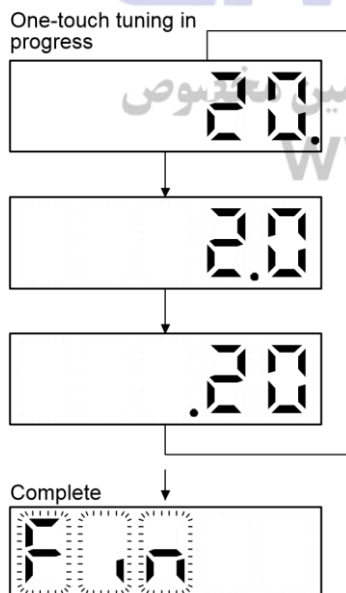

The one-touch tuning progress is displayed with 0% to 100%. The decimal point moves left to right in rotation during the tuning. To switch the display to the status display during the tuning, push the "MODE" button.


Completing the one-touch tuning will start writing the auto-tuned parameters to the servo amplifier.

### (c) Stop of one-touch tuning



The one-touch tuning mode can be stopped by pushing the "SET" button regardless of displayed item.

The stop symbol and error code "C 000" (cancel during tuning) will be displayed by turns with 2 s interval.

## 6. NORMAL GAIN ADJUSTMENT

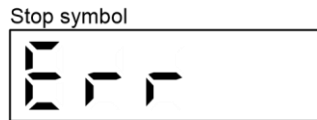


2 s interval

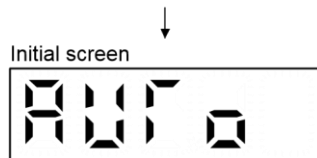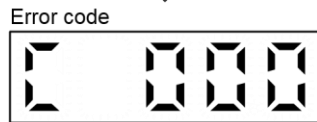


Pushing the "SET" button will switch to the initial screen.

(d) If an error occurs

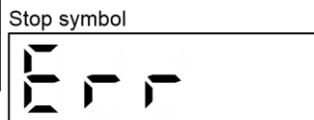

2 s interval

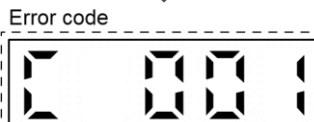

If an error occurs during the one-touch tuning, the tuning will be forcibly terminated and the stop symbol and error code from "C 001" to "C 00F" will be displayed by turns with 2 s interval.


Check the error cause referring table 6.2 of (1) (d) of this section.

CNC EZA

سازنده انواع ماشین آلات صنعتی و ماشین مخصوص


WWW.CNCREZA.IR

Pushing the

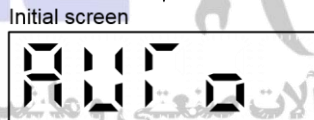


"SET" button will switch to the initial screen.


(e) If an alarm occurs

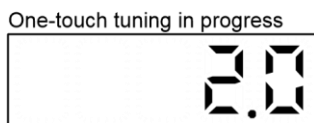


If an alarm occurs during tuning, one-touch tuning will be forcibly terminated and the alarm No. will be displayed.

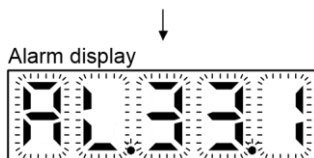

(f) If a warning occurs

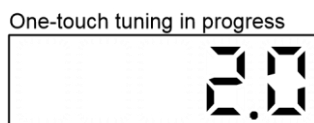

If a warning occurs during tuning, the alarm No. of the warning will be displayed. When the warning is one which continue the motor driving, the one-touch tuning will be continued.

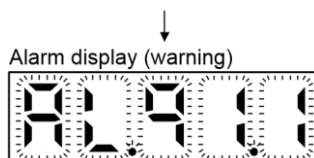



## 6. NORMAL GAIN ADJUSTMENT


### (g) Clearing one-touch tuning

Refer to table 6.1 for the parameters which you can clear.

You can initialize the parameters changed by the one-touch tuning with the clear mode. You can reset the parameters to before tuning with the back mode.

1) Push the "MODE" button to switch to the initial screen "AUTO" of the one-touch tuning.

2) Select the clear mode or back mode with the "UP" or "DOWN" button.

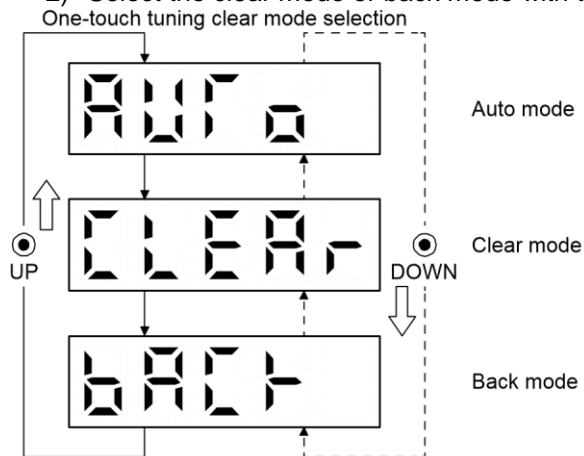

To clear the one-touch tuning, push the "SET" button for 2 s.

One-touch tuning clear mode display (initializing)



The one-touch tuning clear mode is in progress.  
The clear mode symbol flickers for 3 s.

Clearing one-touch tuning is completed, the initial screen will be displayed.

Initial screen



### 6.2.3 Caution for one-touch tuning

- (1) The tuning is not available in the torque control mode.
- (2) The one-touch tuning cannot be executed while an alarm or warning which withholds the motor driving is occurring.
- (3) You can execute the one-touch tuning during the following test operation modes marked by "z".

How to one-touch tuning	Test operation mode				
	Output signal (DO) forced output	JOG operation	Positioning operation	Motor-less operation	Program operation
MR Configurator2		○	○		○
Push buttons					

## 6.3 Auto tuning

### 6.3.1 Auto tuning mode

## 6. NORMAL GAIN ADJUSTMENT

The servo amplifier has a real-time auto tuning function which estimates the machine characteristic (load to motor inertia ratio) in real time and automatically sets the optimum gains according to that value. This function permits ease of gain adjustment of the servo amplifier.

### (1) Auto tuning mode 1

The servo amplifier is factory-set to the auto tuning mode 1.

In this mode, the load to motor inertia ratio of a machine is always estimated to set the optimum gains automatically.

The following parameters are automatically adjusted in the auto tuning mode 1.

Parameter	Symbol	Name
PB06	GD2	Load to motor inertia ratio
PB07	PG1	Model loop gain
PB08	PG2	Position loop gain
PB09	VG2	Speed loop gain
PB10	VIC	Speed integral compensation

POINT	
●	Auto tuning mode 1 may not be performed properly if all of the following conditions are not satisfied.
▪	Maximum speed is less than 2000 r/min or the acceleration/deceleration time constant is less than 5 s.
▪	Maximum speed is less than 150 r/min or higher.
▪	Load to motor inertia ratio is 100 times or less.
▪	Acceleration/deceleration torque is 10% or more of the rated torque.
●	Auto tuning mode 1 may not be performed properly if all of the following conditions which will impose sudden disturbance torque during acceleration/deceleration or on a machine which is extremely loose, auto tuning mode 1 is not performed properly. In such cases, use the auto tuning mode 2 or mode 3 to make gain adjustment.

### (2) Auto tuning mode 2

Use the auto tuning mode 2 when proper gain adjustment cannot be made by auto tuning mode 1. Since the load to motor inertia ratio is not estimated in this mode, set the value of a correct load to motor inertia ratio in [Pr. PB06].


The following parameters are automatically adjusted in the auto tuning mode 2.

Parameter	Symbol	Name
PB07	PG1	Model loop gain
PB08	PG2	Position loop gain
PB09	VG2	Speed loop gain
PB10	VIC	Speed integral compensation

#### 6.3.2 Auto tuning mode basis

The block diagram of real-time auto tuning is shown below.

## 6. NORMAL GAIN ADJUSTMENT

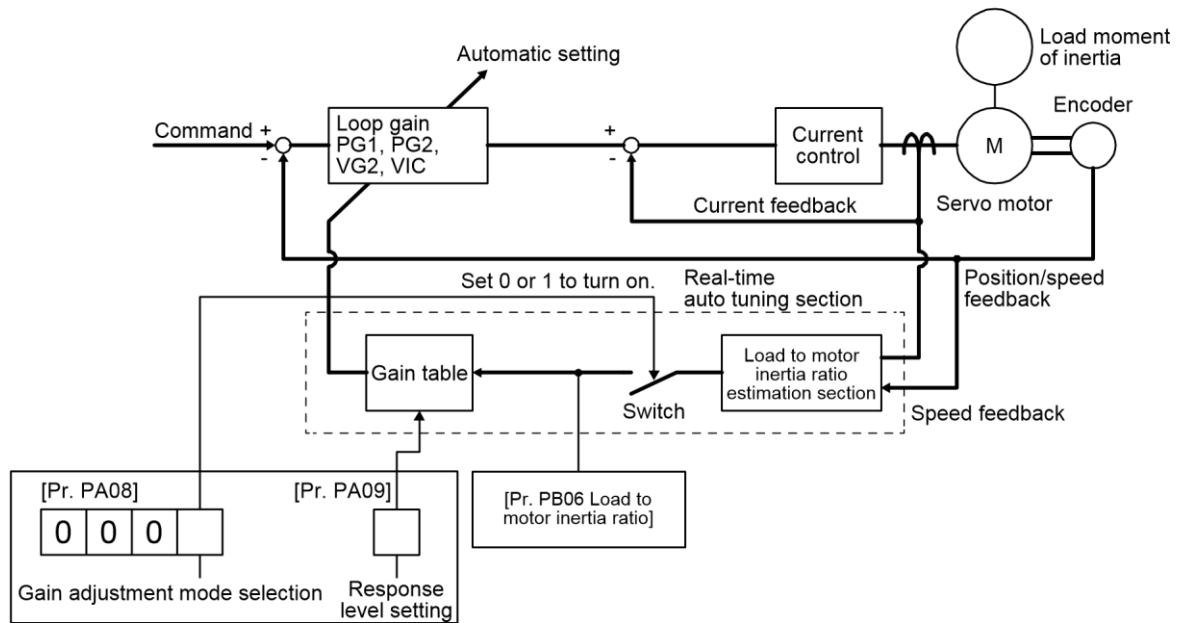

When a servo motor is accelerated/decelerated, the load to motor inertia ratio estimation section always estimates the load to motor inertia ratio from the current and speed of the servo motor. The results of estimation are written to [Pr. PB06 Load to motor inertia ratio]. These results can be confirmed on the status display screen of the MR Configurator2.

If you have already known the value of the load to motor inertia ratio or failed to estimate, set "Gain adjustment mode selection" to "Auto tuning mode 2 (\_\_\_ 2)" in [Pr. PA08] to stop the estimation (turning off the switch in above diagram), and set the load to motor inertia ratio ([Pr. PB06]) manually.

From the preset load to motor inertia ratio ([Pr. PB06]) value and response ([Pr. PA09]), the optimum loop gains are automatically set on the basis of the internal gain table.

The auto tuning results are saved in the EEP-ROM of the servo amplifier every 60 minutes since power-on. At power-on, auto tuning is performed with the value of each loop gain saved in the EEP-ROM being used as an initial value.


WWW.CNCREZA.IR

POINT	
●	When disturbance torque is imposed during operation, the load to motor inertia ratio may be misestimated temporarily. In such a case, set "Gain adjustment mode selection" to "Auto tuning mode 2 (___ 2)" in [Pr. PA08] and correct load to motor inertia ratio in [Pr. PB06].
●	If the auto tuning mode 1 and auto tuning mode settings is changed to mode 2 setting, the current loop gains and load to motor inertia ratio value are saved in the EEP-ROM.

### 6.3.3 Adjustment procedure by auto tuning

Since auto tuning is enabled before shipment from the factory, simply running the servo motor automatically sets the optimum gains that match the machine. Merely changing the response level setting value as required completes the adjustment. The adjustment procedure is as follows.

## 6. NORMAL GAIN ADJUSTMENT

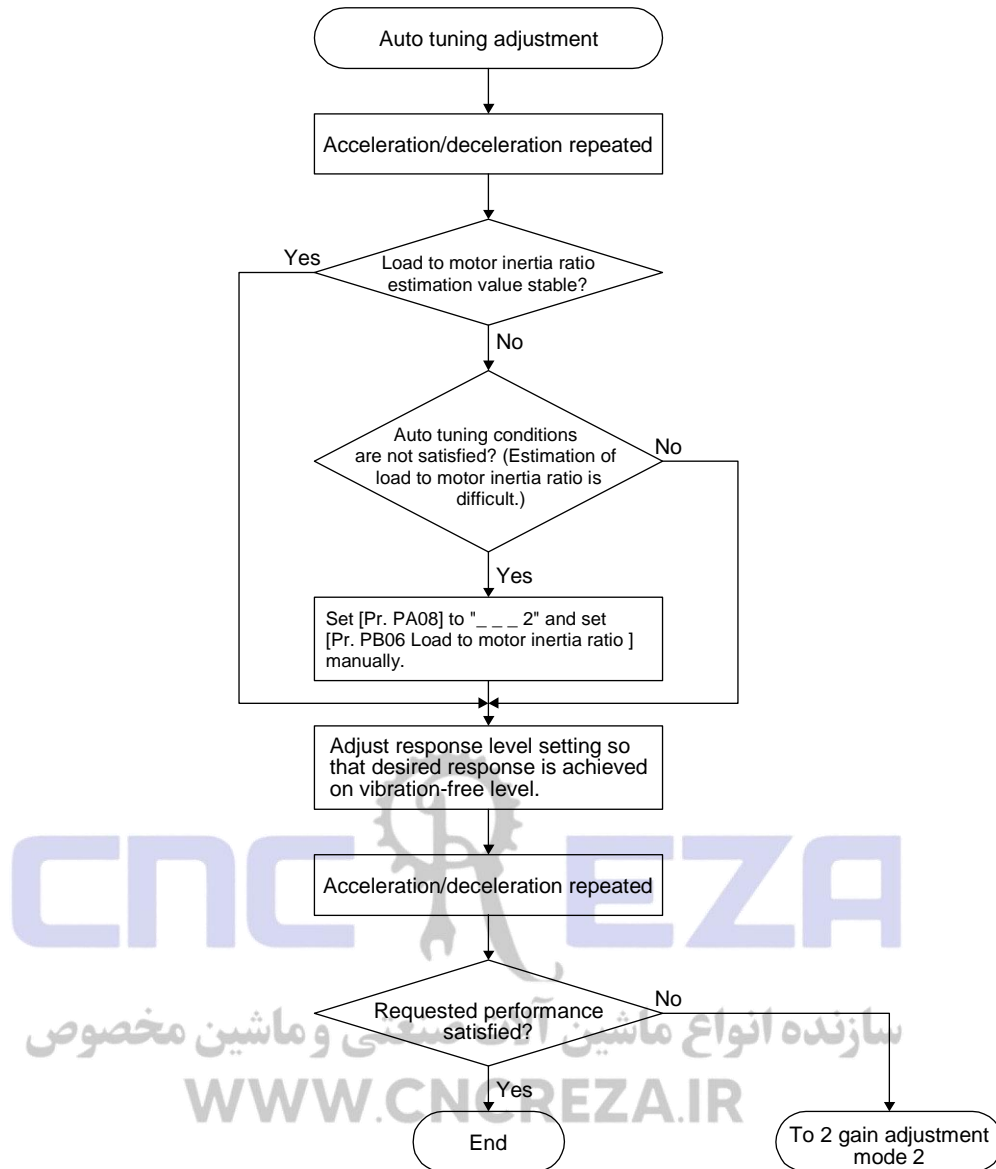

### 6.3.4 Response level setting in auto tuning mode

Set the response of the whole servo system by [Pr. PA09]. As the response level setting is increased, the track ability and settling time for a command decreases, but a too high response level will generate vibration. Hence, make setting until desired response is obtained within the vibration-free range.

If the response level setting cannot be increased up to the desired response because of machine resonance beyond 100 Hz, filter tuning mode selection in [Pr. PB01] or machine resonance suppression filter in [Pr. PB13] to [Pr. PB16], and [Pr. PB46] to [Pr. PB51] may be used to suppress machine resonance.

Suppressing machine resonance may allow the response level setting to increase. Refer to section 7.1.1 and 7.1.2 for settings of the adaptive tuning mode and machine resonance suppression filter.

[Pr. PA09]

Setting value	Machine characteristic	
	Response	Guideline for machine resonance frequency [Hz]
1		2.7

Setting value	Machine characteristic	
	Response	Guideline for machine resonance frequency [Hz]
21		67.1

## 6. NORMAL GAIN ADJUSTMENT

2	Low response	3.6	22	Middle response	75.6
3		4.9	23		85.2
4		6.6	24		95.9
5		10.0	25		108.0
6		11.3	26		121.7
7		12.7	27		137.1
8		14.3	28		154.4
9		16.1	29		173.9
10		18.1	30		195.9
11		20.4	31		220.6
12		23.0	32		248.5
13		25.9	33		279.9
14		29.2	34		315.3
15		32.9	35		355.1
16		37.0	36		400.0
17		41.7	37		446.6
18		Middle response	47.0		38
19	52.9		39	571.5	
20	59.6		40	642.7	

### 6.4 Manual mode

If you are not satisfied with the adjustment of auto tuning, you can make simple manual adjustment with three parameters.

POINT	
●	Resonance occurs, filter tuning mode selection in [Pr. PB01] or resonance suppression filter in [Pr. PB13] to [Pr. PB16] and [Pr. PB46] may be used to suppress machine resonance. (Section 7.1.1, 7.1.2)

(1) For speed control

(a) Parameter

The following parameters are used for gain adjustment.

Parameter	Symbol	Name
PB06	GD2	Load to motor inertia ratio
PB07	PG1	Model loop gain
PB09	VG2	Speed loop gain
PB10	VIC	Speed integral compensation

(b) Adjustment procedure

## 6. NORMAL GAIN ADJUSTMENT

Step	Operation	Description
1	Brief-adjust with auto tuning. Refer to section 6.3.3.	
2	Change the setting of auto tuning to the manual mode ([Pr. PA08]: ___-3).	
3	Set an estimated value to the load to motor inertia ratio. (If the estimate value with auto tuning is correct, setting change is not required.) Set a slightly smaller value to the model loop gain	
4	Set a slightly larger value to the speed integral compensation.	
5	Increase the speed loop gain within the vibration- and unusual noise-free range, and return slightly if vibration takes place.	Increase the speed loop gain.
6	Decrease the speed integral compensation within the vibration-free range, and return slightly if vibration takes place.	Decrease the time constant of the speed integral compensation.
7	Increase the model loop gain, and return slightly if overshoot takes place.	Increase the model loop gain.
8	If the gains cannot be increased due to mechanical system resonance or the like and the desired response cannot be achieved, response may be increased by suppressing resonance and with the adaptive tuning mode or machine resonance and then executing steps 3 to 7.	Suppression of machine resonance Refer to section 7.1.1 7.1.2. suppression filter and
9	While checking the motor status, fine-adjust each gain.	Fine adjustment

### (c) Parameter adjustment

#### 1) [Pr. PB09 Speed loop gain]

This parameter determines the response level of the speed control loop. Increasing the setting increases the response level, but the mechanical system is liable to vibrate. The actual response frequency of the speed loop is as indicated in the following expression.

$$\text{Speed loop response frequency [Hz]} = \frac{\text{Speed loop gain}}{(1 + \text{Load to motor inertia ratio}) \times 2\pi}$$

#### 2) [Pr. PB10 Speed integral compensation]

To eliminate stationary deviation against a command, the speed control loop is under proportional integral control. For the speed integral compensation, set the time constant of this integral control. Increasing the setting lowers the response level. However, if the load to motor inertia ratio is large or the mechanical system has any vibratory element, the mechanical system is liable to vibrate unless the setting is increased to some degree. The guideline is as indicated in the following expression.

$$\text{Speed integral compensation setting [ms]} \bullet \frac{2000 \text{ to } 3000}{\text{Speed loop gain}/(1 + \text{Load to motor inertia ratio})}$$

#### 3) [Pr. PB07 Model loop gain]

This parameter determines the response level to a speed command. Increasing the value improves track ability to a speed command, but a too high value will make overshoot liable to occur at settling.

$$\text{Estimated model loop gain} \approx \frac{\text{Speed loop gain}}{\left(1 \text{ to } 1\right)}$$

## 6. NORMAL GAIN ADJUSTMENT

$$(1 + \text{Load to motor inertia ratio}) \quad 4 \quad 8$$

(2) For position control

(a) Parameter

The following parameters are used for gain adjustment.

Parameter	Symbol	Name
PB06	GD2	Load to motor inertia ratio
PB07	PG1	Model loop gain
PB08	PG2	Position loop gain
PB09	VG2	Speed loop gain
PB10	VIC	Speed integral compensation

(b) Adjustment procedure

Step	Operation	Description
1	Brief-adjust with auto tuning. Refer to section 6.3.3.	
2	Change the setting of auto tuning to the manual mode ([Pr. PA08]: ___ 3).	
3	Set an estimated value to the load to motor inertia ratio. (If the estimate value with auto tuning is correct, setting change is not required.)	
4	Set a slightly smaller value to the model loop gain and the position loop gain. Set a slightly larger value to the speed integral compensation.	
5	Increase the speed loop gain within the vibration- and unusual noise-free range, and return slightly if vibration takes place.	Increase the speed loop gain.
6	Decrease the speed integral compensation within the vibration-free range, and return slightly if vibration takes place.	Decrease the time constant of the speed integral compensation.
7	Increase the position loop gain, and return slightly if vibration takes place.	Increase the position loop gain.
8	Increase the model loop gain, and return slightly if overshoot takes place.	Increase the model loop gain.
9	If the gains cannot be increased due to mechanical system resonance or the like and the desired response cannot be achieved, response may be increased by suppressing resonance Section 7.1.1 and 7.1.2 with the adaptive tuning mode or machine resonance suppression filter and then executing steps 3 to 8.	Suppression of machine resonance
10	While checking the settling characteristic and motor status, fine-adjust each gain.	Fine adjustment

(c) Parameter adjustment

1) [Pr. PB09 Speed loop gain]

This parameter determines the response level of the speed control loop. Increasing the setting increases the response level, but the mechanical system is liable to vibrate. The actual response frequency of the speed loop is as indicated in the following expression.

$$\text{Speed loop response frequency [Hz]} = \frac{\text{Speed loop gain}}{(1 + \text{Load to motor inertia ratio}) \times 2\pi}$$

2) [Pr. PB10 Speed integral compensation]

## 6. NORMAL GAIN ADJUSTMENT

---

To eliminate stationary deviation against a command, the speed control loop is under proportional integral control. For the speed integral compensation, set the time constant of this integral control. Increasing the setting lowers the response level. However, if the load to motor inertia ratio is large or the mechanical system has any vibratory element, the mechanical system is liable to vibrate unless the setting is increased to some degree. The guideline is as indicated in the following expression.

2000 to 3000

Speed integral compensation setting [ms] •  
Speed loop gain/(1 + Load to motor inertia ratio)

### 3) [Pr. PB08 Position loop gain]


This parameter determines the response level to a disturbance to the position control loop. Increasing the position loop gain increases the response level to a disturbance, but the mechanical system is liable to vibrate.

Position loop gain guideline "  $\frac{\text{Speed loop gain}}{(1 + \text{Load to motor inertia ratio})} \times \left( \frac{1}{4} \text{ to } \frac{1}{8} \right)$

### 4) [Pr. PB07 Model loop gain]

This parameter determines the response level to a position command. Increasing the value improves track ability to a position command, but a too high value will make overshoot liable to occur at settling.

Estimated model loop gain "  $\frac{\text{Speed loop gain}}{(1 + \text{Load to motor inertia ratio})} \times \left( \frac{1}{4} \text{ to } \frac{1}{8} \right)$

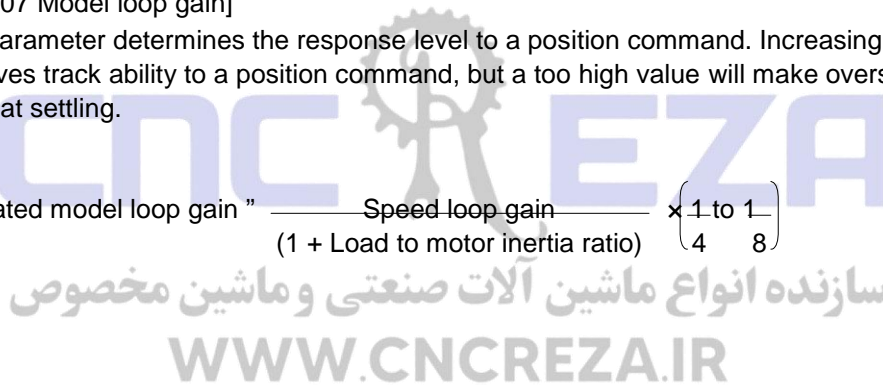



## 6. NORMAL GAIN ADJUSTMENT

### 6.5 2 gain adjustment mode

The 2 gain adjustment mode is used to match the position loop gains of the axes when performing the interpolation operation of servo motors of two or more axes for an X-Y table or the like. In this mode, manually set the model loop gain that determines command track ability. Other parameters for gain adjustment are set automatically.

#### (1) 2 gain adjustment mode 1

For the 2 gain adjustment mode 1, manually set the model loop gain that determines command track ability. The mode constantly estimates the load to motor inertia ratio, and automatically set other parameters for gain adjustment to optimum gains using auto tuning response. The following parameters are used for 2 gain adjustment mode 1.

##### (a) Automatically adjusted parameter

The following parameters are automatically adjusted by auto tuning.

Parameter	Symbol	Name
PB06	GD2	Load to motor inertia ratio
PB08	PG2	Position loop gain
PB09	VG2	Speed loop gain
PB10	VIC	Speed integral compensation

##### (b) Manually adjusted parameter

The following parameters are adjustable manually.

Parameter	Symbol	Name
PA09	RSP	Auto tuning response
PB07	PG1	Model loop gain

#### (2) 2 gain adjustment mode 2

Use 2 gain adjustment mode 2 when proper gain adjustment cannot be made with 2 gain adjustment mode 1. Since the load to motor inertia ratio is not estimated in this mode, set the value of a proper load to motor inertia ratio in [Pr. PB06].

The following parameters are used for 2 gain adjustment mode 2.

##### (a) Automatically adjusted parameter

The following parameters are automatically adjusted by auto tuning.

Parameter	Symbol	Name
PB08	PG2	Position loop gain
PB09	VG2	Speed loop gain
PB10	VIC	Speed integral compensation

##### (b) Manually adjusted parameter

The following parameters are adjustable manually.

## 6. NORMAL GAIN ADJUSTMENT

Parameter	Symbol	Name
PA09	RSP	Auto tuning response
PB06	GD2	Load to motor inertia ratio
PB07	PG1	Model loop gain

### (3) Adjustment procedure of 2 gain adjustment mode

POINT
<ul style="list-style-type: none"> <li>● Set the value in [Pr. PB07 Model loop gain] for the axis used in 2 gain adjustment mode.</li> </ul>

Step	Operation	Description
1	Set to the auto tuning mode.	Select the auto tuning mode 1.
2	During operation, increase the response level setting value in [Pr. PA09], and return the setting if vibration occurs.	Adjustment in auto tuning mode 1
3	Check value of the model loop gain and the load to motor inertia ratio in advance.	Check the upper setting limits.
4	Set the 2 gain adjustment mode 1 ([Pr. PA08]: ___ 0).	Select the 2 gain adjustment mode 1 (interpolation mode).
5	When the load to motor inertia ratio is different from the design value, select the 2 gain adjustment mode 2 ([Pr. PA08]: ___ 4) and then set the load to motor inertia ratio manually in [Pr. PB06].	Check the load to motor inertia ratio.
6	Set the model loop gain of all the axes to be interpolated to the same value. At that time, adjust to the setting value of the axis, which has the smallest model loop gain.	Set position loop gain.
7	Considering the interpolation characteristic and motor status, fine-adjust the model loop gain and response level setting.	Fine adjustment

### (4) Parameter adjustment

[Pr. PB07 Model loop gain]

This parameter determines the response level of the position control loop. Increasing the value improves track ability to a position command, but a too high value will make overshoot liable to occur at settling. The droop pulse value is determined by the following expression.

$$\text{Number of droop pulses [pulse]} = \frac{\text{Position command frequency [pulse/s]}}{\text{Model loop gain setting}}$$

$$\text{Position command frequency} = \frac{\text{Speed [r/min]}}{60} \times \text{Encoder resolution (number of pulses per servo motor 60 revolution)}$$



## 6. NORMAL GAIN ADJUSTMENT

---

---

---

---

---

---

---

---




## 7. SPECIAL ADJUSTMENT FUNCTIONS

### 7. SPECIAL ADJUSTMENT FUNCTIONS

POINT
<ul style="list-style-type: none"> <li>● The functions given in this chapter need not be used normally. Use them if you are satisfied with the machine status after making adjustment in the methods in chapter 6.</li> </ul>

#### 7.1 Filter setting

The following filters are available with MR-JE servo amplifiers.

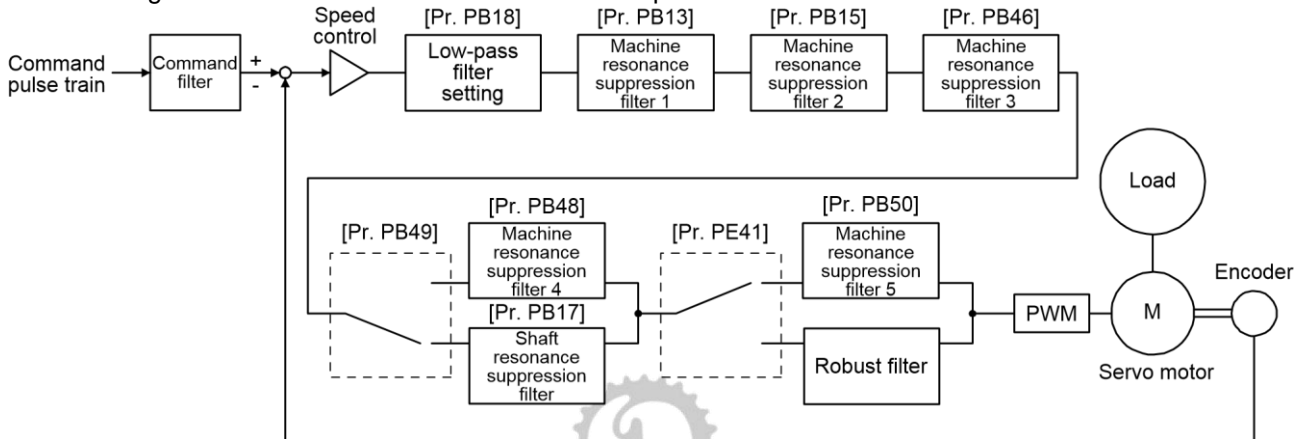

#### 7.1.1 Machine resonance suppression filter


POINT
<ul style="list-style-type: none"> <li>● The machine resonance suppression filter is a delay factor for the servo system. Vibration may increase if you set an incorrect resonance frequency or notch characteristics too deep or too wide.</li> <li>● If the resonance frequency of machine resonance is unknown, decrease the notch frequency from higher to lower ones in order. The optimum notch frequency is the point where vibration is minimal.</li> <li>● A notch with a higher effect on machine resonance suppression but more phase delay and may increase vibration.</li> <li>● A notch with a higher effect on machine resonance suppression but more phase delay and may increase vibration.</li> <li>● The resonance characteristic can be grasped beforehand by the machine analyzer (Figure 2). This allows the required notch frequency and notch characteristics to be determined.</li> </ul>

If a mechanical system has a natural resonance point, increasing the servo system response level may cause the mechanical system to produce resonance (vibration or unusual noise) at that resonance frequency. Using the machine resonance suppression filter and adaptive tuning can suppress the resonance of the mechanical system. The setting range is 10 Hz to 4500 Hz.

(1) Function

## 7. SPECIAL ADJUSTMENT FUNCTIONS

The machine resonance suppression filter is a filter function (notch filter) which decreases the gain of the specific frequency to suppress the resonance of the mechanical system. You can set the gain decreasing frequency (notch frequency), gain decreasing depth and width.

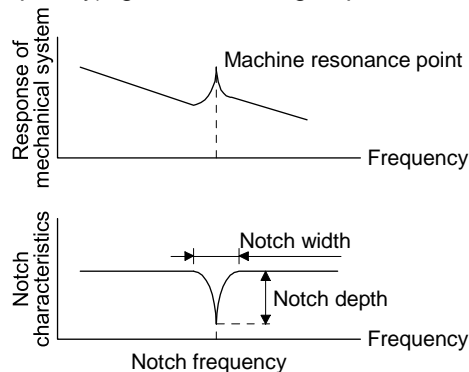

You can set five machine resonance suppression filters at most.

Filter	Setting parameter	Precaution	Parameter that is reset with vibration tough drive function	Parameter automatically adjusted with one-touch tuning
Machine resonance suppression filter 1	PB01/PB13/PB14	The filter can be set automatically with "Filter tuning mode selection" in [Pr. PB01].	PB13	PB01/PB13/PB14
Machine resonance suppression filter 2	PB15/PB16		PB15	PB15/PB16
Machine resonance suppression filter 3	PB46/PB47			PB47
Machine resonance suppression filter 4	PB48/PB49	Enabling the filter disables the shaft resonance suppression filter. The shaft resonance suppression filter is enabled for the initial setting.		PB48/PB49
Machine resonance suppression filter 5	PB50/PB51	The setting of this filter is disabled while you use the robust filter. The robust filter is disabled for the initial setting.		PB51

### (2) Parameter

#### (a) Machine resonance suppression filter 1 ([Pr. PB13] and [Pr. PB14])

Set the notch frequency, notch depth and notch width of the machine resonance suppression filter 1 ([Pr. PB13] and [Pr. PB14])

When you select "Manual setting ( \_ \_ 2 )" of "Filter tuning mode selection" in [Pr. PB01], the setting of the machine resonance suppression filter 1 is enabled.

#### (b) Machine resonance suppression filter 2 ([Pr. PB15] and [Pr. PB16])

To use this filter, select "Enabled ( \_ \_ 1 )" of "Machine resonance suppression filter 2 selection" in [Pr. PB16].

How to set the machine resonance suppression filter 2 ([Pr. PB15] and [Pr. PB16]) is the same as for the machine resonance suppression filter 1 ([Pr. PB13] and [Pr. PB14]).

#### (c) Machine resonance suppression filter 3 ([Pr. PB46] and [Pr. PB47])

To use this filter, select "Enabled ( \_ \_ 1 )" of "Machine resonance suppression filter 3 selection" in [Pr. PB47].

How to set the machine resonance suppression filter 3 ([Pr. PB46] and [Pr. PB47]) is the same as for the machine resonance suppression filter 1 ([Pr. PB13] and [Pr. PB14]).

## 7. SPECIAL ADJUSTMENT FUNCTIONS

(d) Machine resonance suppression filter 4 ([Pr. PB48] and [Pr. PB49])

To use this filter, select "Enabled ( \_ \_ \_ 1)" of "Machine resonance suppression filter 4 selection" in [Pr. PB49]. However, enabling the machine resonance suppression filter 4 disables the shaft resonance suppression filter.

How to set the machine resonance suppression filter 4 ([Pr. PB48] and [Pr. PB49]) is the same as for the machine resonance suppression filter 1 ([Pr. PB13] and [Pr. PB14]).

(e) Machine resonance suppression filter 5 ([Pr. PB50] and [Pr. PB51])

To use this filter, select "Enabled ( \_ \_ \_ 1)" of "Machine resonance suppression filter 5 selection" in [Pr. PB51]. However, enabling the robust filter ([Pr. PE41: \_ \_ \_ 1]) disables the machine resonance suppression filter 5.

How to set the machine resonance suppression filter 5 ([Pr. PB50] and [Pr. PB51]) is the same as for the machine resonance suppression filter 1 ([Pr. PB13] and [Pr. PB14]).


### 7.1.2 Adaptive filter II

POINT	
●	resonance frequency which adaptive filter II (adaptive tuning) can detect about 100 Hz to 2.25 kHz. As for the resonance frequency out of this range, it must be set manually.
●	When adaptive tuning is executed, vibration sound increases as an excitation is manually applied for several seconds.
●	When adaptive tuning is executed, machine resonance is detected for a period of about 10 s and a filter is generated. After filter generation, the adaptive filter automatically shifts to the manual setting.
●	Adaptive tuning generates the optimum filter with the currently set control gains. When machine resonance occurs when the response setting is increased, execute adaptive tuning again.
●	When adaptive tuning, a filter having the best notch depth at the set control gain is generated. To allow a filter margin against machine resonance, increase the notch depth in the manual setting.
●	Adaptive vibration suppression control may provide no effect on a mechanical system which has complex resonance characteristics.
●	


(1) Function

Adaptive filter II (adaptive tuning) is a function in which the servo amplifier detects machine vibration for a predetermined period of time and sets the filter characteristics automatically to suppress mechanical system vibration. Since the filter characteristics (frequency, depth) are set automatically, you need not be conscious of the resonance frequency of a mechanical system.

## 7. SPECIAL ADJUSTMENT FUNCTIONS

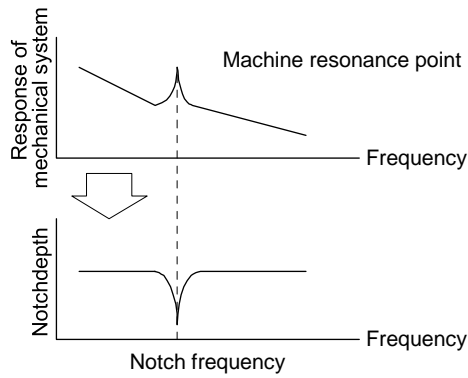

When machine resonance is large and frequency is low

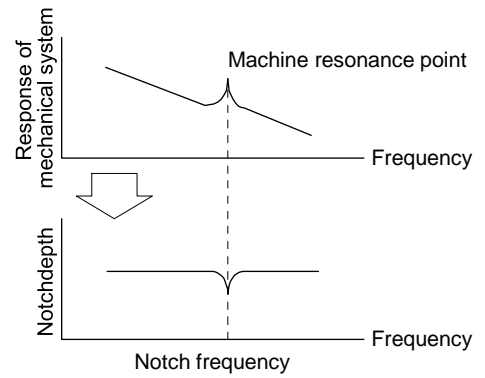

When machine resonance is small and frequency is high

### (2) Parameter

Select how to set the filter tuning in [Pr. PB01 Adaptive tuning mode (adaptive filter II)]. [Pr.

PB01]

0	0	0	
---	---	---	--

Filter tuning mode selection


Setting value	Filter tuning mode selection	Automatically set parameter
0	Disabled	
1	Automatic setting	PB13/PB14
2	Manual setting	

### (3) Adaptive tuning mode procedure

سازنده انواع ماشین آلات صنعتی و ماشین مخصوص  
WWW.CNCREZA.IR



# 7. SPECIAL ADJUSTMENT FUNCTIONS

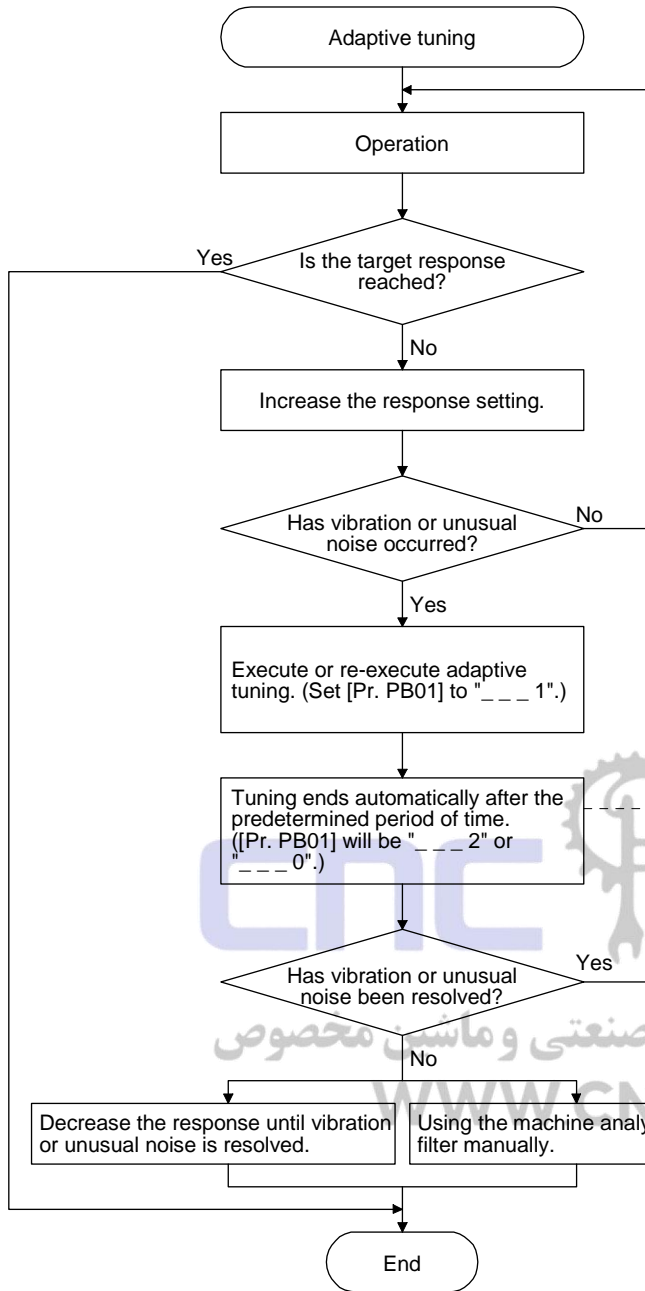

If assumption fails after tuning is executed at a large vibration or oscillation, decrease the response setting temporarily down to the vibration level and execute again.

**Factor**  
The response has increased to the machine limit. The machine is too complicated to provide the optimum filter.

## 7.1.3 Shaft resonance suppression filter


### (1) Function

When a load is mounted to the servo motor shaft, resonance by shaft torsion during driving may generate a mechanical vibration at high frequency. The shaft resonance suppression filter suppresses the vibration.

When you select "Automatic setting", the filter will be set automatically on the basis of the motor you use and the load to motor inertia ratio. The disabled setting increases the response of the servo amplifier for high resonance frequency.

### (2) Parameter

Set "Shaft resonance suppression filter selection" in [Pr. PB23].

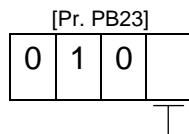

Shaft resonance suppression filter selection

- 0: Automatic setting
- 1: Manual setting
- 2: Disabled

To set [Pr. PB17 Shaft resonance suppression filter] automatically, select "Automatic setting". To set [Pr. PB17 Shaft resonance suppression filter] manually, select "Manual setting". The setting values are as follows.

Shaft resonance suppression filter setting frequency selection

## 7. SPECIAL ADJUSTMENT FUNCTIONS

Setting value	Frequency [Hz]	Setting value	Frequency [Hz]
__ 0 0	Disabled	__ 1 0	562
__ 0 1	Disabled	__ 1 1	529
__ 0 2	4500	__ 1 2	500
__ 0 3	3000	__ 1 3	473
__ 0 4	2250	__ 1 4	450
__ 0 5	1800	__ 1 5	428
__ 0 6	1500	__ 1 6	409
__ 0 7	1285	__ 1 7	391
__ 0 8	1125	__ 1 8	375
__ 0 9	1000	__ 1 9	360
__ 0 A	900	__ 1 A	346
__ 0 B	818	__ 1 B	333
__ 0 C	750	__ 1 C	321
__ 0 D	692	__ 1 D	310
__ 0 E	642	__ 1 E	300
__ 0 F	600	__ 1 F	290

### 7.1.4 Low-pass filter

#### (1) Function


When a ball screw or the like is used, resonance of high frequency may occur as the response level of the servo system is increased. To prevent this, the low-pass filter is enabled for a torque command as the initial value. The filter frequency of the low-pass filter is automatically adjusted to the value in the following equation.

$$\text{Filter frequency (rad/s)} = \frac{\sqrt{G_2}}{1 + GD^2} \times 10$$

To set [Pr. PB18] manually, select "Manual setting (\_ \_ 1 \_)" of "Low-pass filter selection" in [Pr. PB23].

#### (2) Parameter

Set "Low-pass filter selection" in [Pr. PB23].

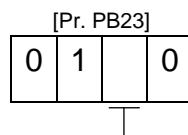

Low-pass filter selection

- 0: Automatic setting
- 1: Manual setting
- 2: Disabled

### 7.1.5 Advanced vibration suppression control II


POINT	
-------	--

## 7. SPECIAL ADJUSTMENT FUNCTIONS

- is enabled when "Gain adjustment mode selection" in [Pr. PA08] is mode 2 (\_\_\_ mode 2 (\_\_\_ 2)", "Manual mode (\_\_\_ 3)", or "2 gain adjustment 4)".
- resonance frequency supported in the vibration suppression mode is 1.0 Hz to 100.0 Hz. As for the vibration out of the range, set manually.
- vo motor before changing the vibration suppression control-related parameters.
- Otherwise, it may cause an unexpected operation.
- ng operation during execution of vibration suppression control.
- de a stop time to ensure a stop after vibration damping.
- opression control tuning may not make normal estimation if the response at the servo motor side is small.
- opression control tuning sets the optimum parameter with the control gains. When the response setting is increased, set vibration control tuning again.
- the vibration suppression control 2, set "\_\_\_ 1" in [Pr. PA24].

### (1) Function

Vibration suppression control is used to further suppress load-side vibration, such as work-side vibration and base shake. The servo motor-side operation is adjusted for positioning so that the machine does not vibrate.

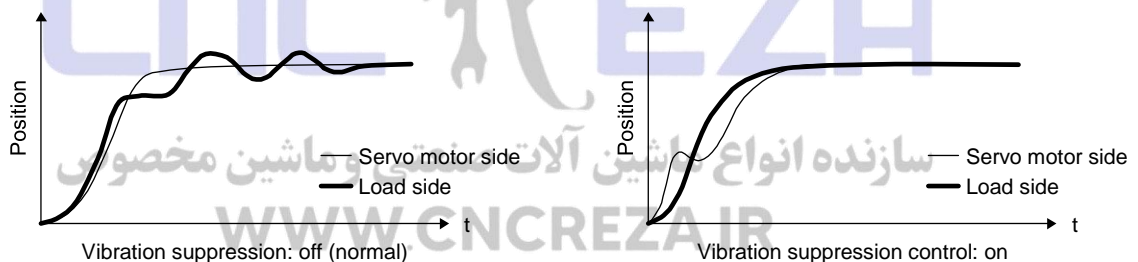

When the advanced vibration suppression control II ([Pr. PB02 Vibration suppression control tuning mode]) is executed, the vibration frequency at load side is automatically estimated to suppress machine side vibration two times at most.

In the vibration suppression control tuning mode, this mode shifts to the manual setting after the positioning operation is performed the predetermined number of times. For manual setting, adjust the vibration suppression control 1 with [Pr. PB19] to [Pr. PB22] and vibration suppression control 2 with [Pr. PB52] to [Pr. PB55].

### (2) Parameter

Set [Pr. PB02 Vibration suppression control tuning mode (advanced vibration suppression control II)]. When you use a vibration suppression control, set "Vibration suppression control 1 tuning mode selection". When you use two vibration suppression controls, set "Vibration suppression control 2 tuning mode selection" in addition.

## 7. SPECIAL ADJUSTMENT FUNCTIONS


[Pr. PB02]		
0	0	
Vibration suppression control 1 tuning mode		
Setting value	Vibration suppression control 1 tuning mode selection	Automatically set parameter
__ 0	Disabled	
__ 1	Automatic setting	PB19/PB20/PB21/PB22
__ 2	Manual setting	
Vibration suppression control 2 tuning mode		
Setting value	Vibration suppression control 2 tuning mode selection	Automatically set parameter
__ 0	Disabled	
__ 1	Automatic setting	PB52/PB53/PB54/PB55
__ 2	Manual setting	

### (3) Vibration suppression control tuning procedure

The following flow chart is for the vibration suppression control 1. For the vibration suppression control 2, set "\_\_ 1 \_\_" in [Pr. PB02] to execute the vibration suppression control tuning.



# 7. SPECIAL ADJUSTMENT FUNCTIONS

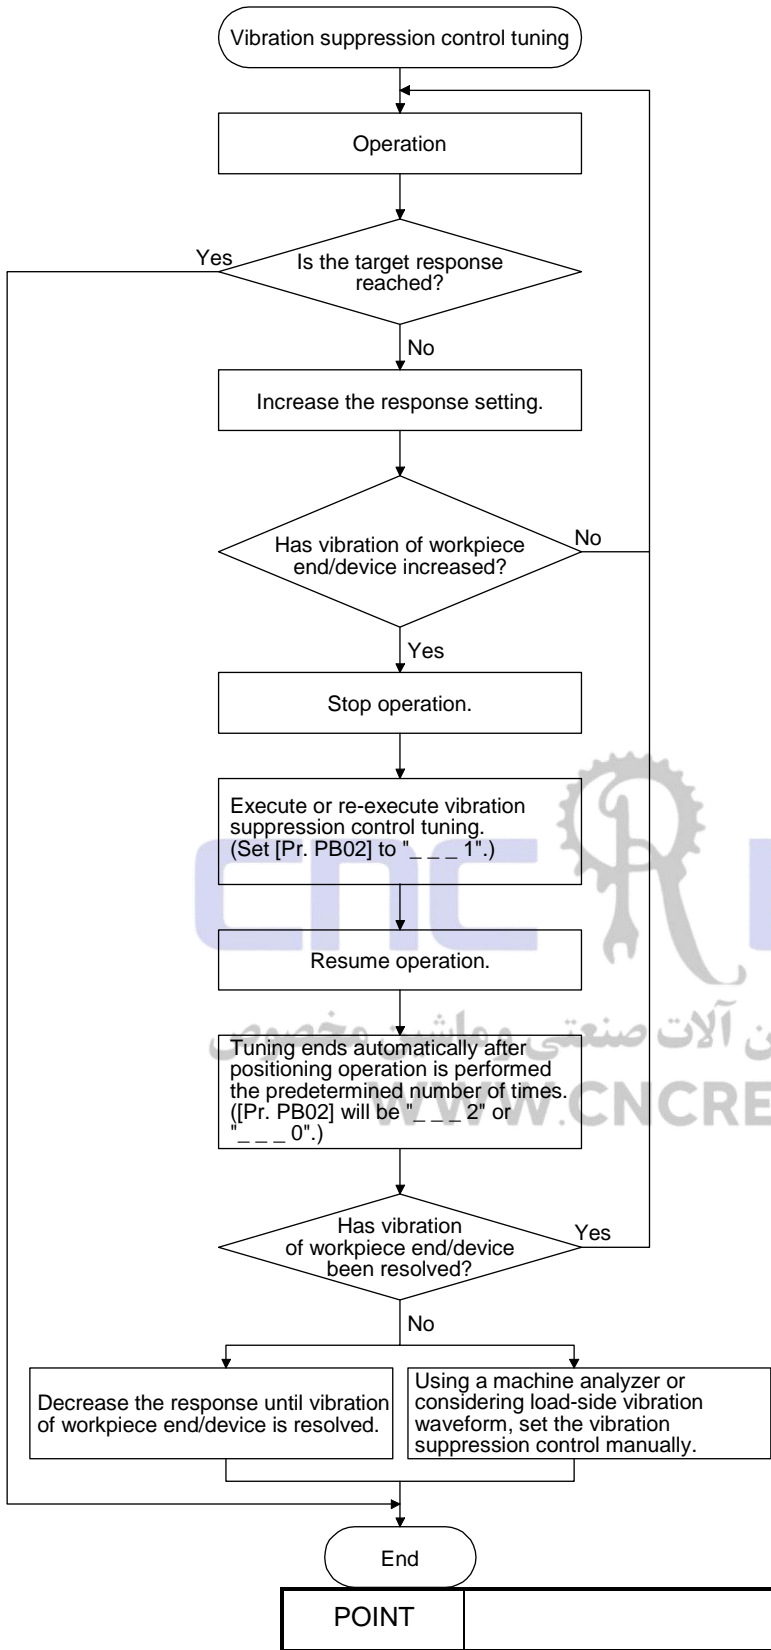

Factor  
 Estimation cannot be made as load-side vibration has not been transmitted to the servo motor side. The response of the model loop gain has increased to the load-side vibration frequency (vibration suppression control limit).

(4) Vibration suppression control manual mode

## 7. SPECIAL ADJUSTMENT FUNCTIONS

<ul style="list-style-type: none"> <li>• If side vibration does not show up in servo motor-side vibration, the servo motor-side vibration frequency does not produce an effect.</li> <li>• Anti-resonance frequency and resonance frequency can be confirmed with machine analyzer or external equipment, do not set the same value for both.</li> <li>• Different values to improve the vibration suppression performance. A vibration suppression control effect is not produced if the relation between the [Pr. PB07] value and vibration frequency is as follows.</li> </ul>
<p>Vibration suppression control 1:</p> $\frac{1}{(0.9 \times [\text{Pr. PB07}])^2}$ <p>[Pr. PB19] &lt; <math>\frac{1}{(0.9 \times [\text{Pr. PB07}])^2}</math></p> <p>Vibration suppression control 2:</p> $\frac{1}{(0.3 \times [\text{Pr. PB19}] + \frac{1}{8} \times [\text{Pr. PB52}] / [\text{Pr. PB07}])^2} < [\text{Pr. PB52}]$ $< 5.0 + 0.1 \times [\text{Pr. PB07}]$ $< 5.0 + 0.1 \times [\text{Pr. PB07}] \wedge$

Measure work-side vibration and device shake with the machine analyzer or external measuring instrument, and set the following parameters to adjust vibration suppression control manually.


Setting item	Vibration suppression control 1	Vibration suppression control 2
Vibration suppression control - Vibration frequency	[Pr. PB19]	[Pr. PB52]
Vibration suppression control - Resonance frequency	[Pr. PB20]	[Pr. PB53]
Vibration suppression control - Vibration frequency damping	[Pr. PB21]	[Pr. PB54]
Vibration suppression control - Resonance frequency damping	[Pr. PB22]	[Pr. PB55]

Step 1. Select "Manual setting ( \_ \_ 2 )" of "Vibration suppression control 1 tuning mode selection" or "Manual setting ( \_ \_ 2 \_ )" of "Vibration suppression control 2 tuning mode selection" in [Pr. PB02].


Step 2. Set "Vibration suppression control - Vibration frequency" and "Vibration suppression control - Resonance frequency" as follows.

(a) When a vibration peak can be confirmed with machine analyzer using MR Configurator2, or external equipment.

# 7. SPECIAL ADJUSTMENT FUNCTIONS

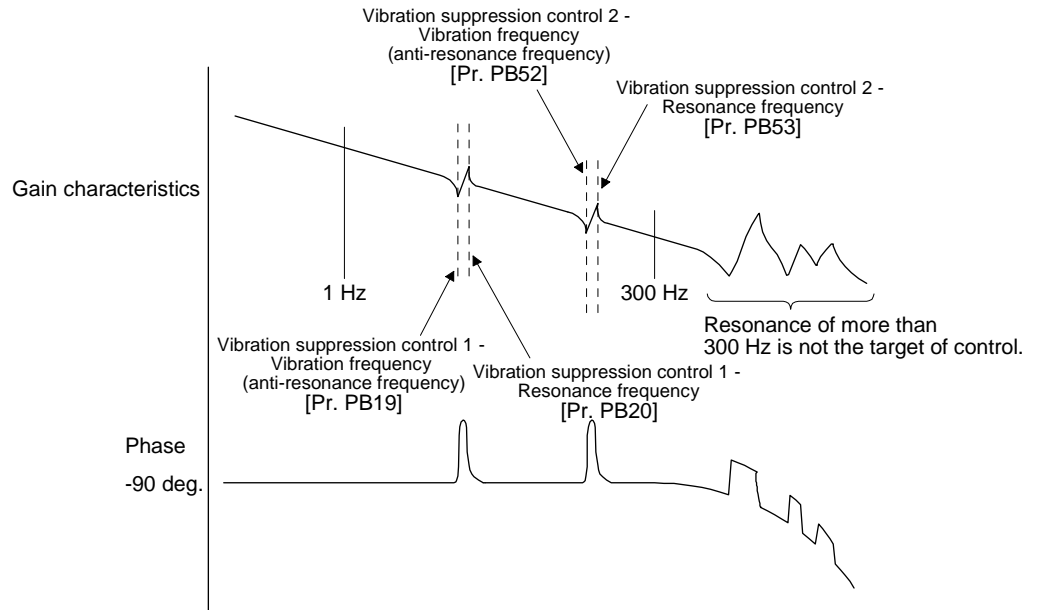

(b) When vibration can be confirmed using monitor signal or external sensor

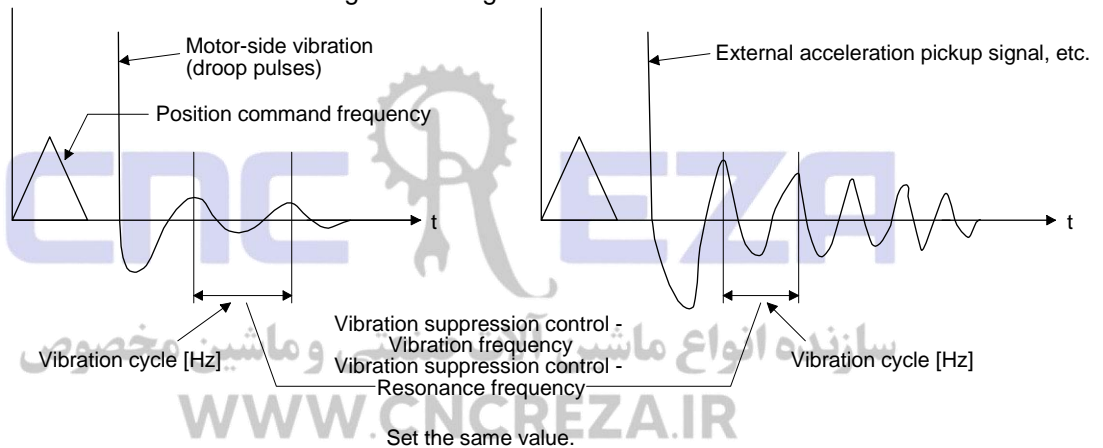

Step 3. Fine-adjust "Vibration suppression control - Vibration frequency damping" and "Vibration suppression control - Resonance frequency damping".


## 7.1.6 Command notch filter

POINT	
●	advanced vibration suppression control II and the command notch filter, is between 4.5 Hz and 2250 Hz. Set a frequency close to vibration frequency and within the range.
●	B45 Command notch filter] is changed during the positioning. The changed setting is not reflected. The setting is reflected only 150 ms after the servo motor stops (after servo-lock).


(1) Function

## 7. SPECIAL ADJUSTMENT FUNCTIONS

Command notch filter has a function that lowers the gain of the specified frequency contained in a position command. By lowering the gain, load-side vibration, such as work-side vibration and base shake, can be suppressed. Which frequency to lower the gain and how deep to lower the gain can be set.

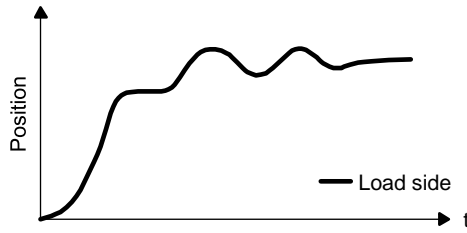

Command notch filter: disabled

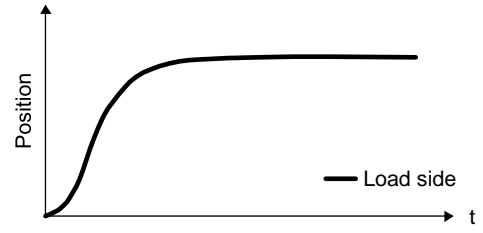

Command notch filter: enabled

### (2) Parameter

Set [Pr. PB45 Command notch filter] as shown below. For the command notch filter setting frequency, set the closest value to the vibration frequency [Hz] at the load side.

[Pr. PB45]

0			
---	--	--	--

Notch depth Command notch filter setting frequency


Setting value	Frequency [Hz]	Setting value	Frequency [Hz]	Setting value	Frequency [Hz]
0	Disabled	20	70	40	17.6
1	2250	21	66	41	16.5
2	1125	22	62	42	15.6
3	750	23	59	43	14.8
4	562	24	56	44	14.1
5	450	25	53	45	13.4
6	375	26	51	46	12.8
7	321	27	48	47	12.2
8	281	28	46	48	11.7
9	250	29	45	49	11.3
A	225	2A	43	4A	10.8
B	204	2B	41	4B	10.4
C	187	2C	40	4C	10.0
D	173	2D	38	4D	9.7
E	160	2E	37	4E	9.4
F	150	2F	36	4F	9.1
	10	30	35.2	50	8.8
	11	31	33.1	51	8.3
	12	32	31.3	52	7.8
	13	33	29.6	53	7.4
	14	34	28.1	54	7.0
	15	35	26.8	55	6.7
	16	36	25.6	56	6.4
	17	37	24.5	57	6.1
	18	38	23.4	58	5.9
	19	39	22.5	59	5.6
	1A	3A	21.6	5A	5.4



## 7. SPECIAL ADJUSTMENT FUNCTIONS

---

1B	83	3B	20.8	5B	5.2
1C	80	3C	20.1	5C	5.0
1D	77	3D	19.4	5D	4.9
1E	75	3E	18.8	5E	4.7
1F	72	3F	18.2	5F	4.5

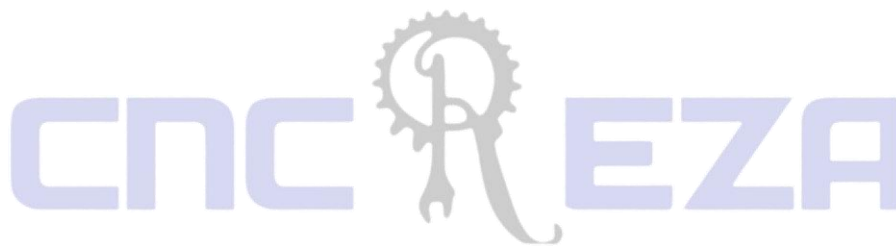

سازنده انواع ماشین آلات صنعتی و ماشین مخصوص

WWW.CNCREZA.IR

### 7.2 Gain switching function

You can switch gains with the function. You can switch gains during rotation and during stop, and can use an input device to switch gains during operation.

#### 7.2.1 Applications


The following shows when you use the function.

- (1) You want to increase the gains during servo-lock but decrease the gains to reduce noise during rotation.
- (2) You want to increase the gains during settling to shorten the stop settling time.
- (3) You want to change the gains using an input device to ensure stability of the servo system since the load to motor inertia ratio varies greatly during a stop (e.g. a large load is mounted on a carrier).

#### 7.2.2 Function block diagram


## 7. SPECIAL ADJUSTMENT FUNCTIONS

---

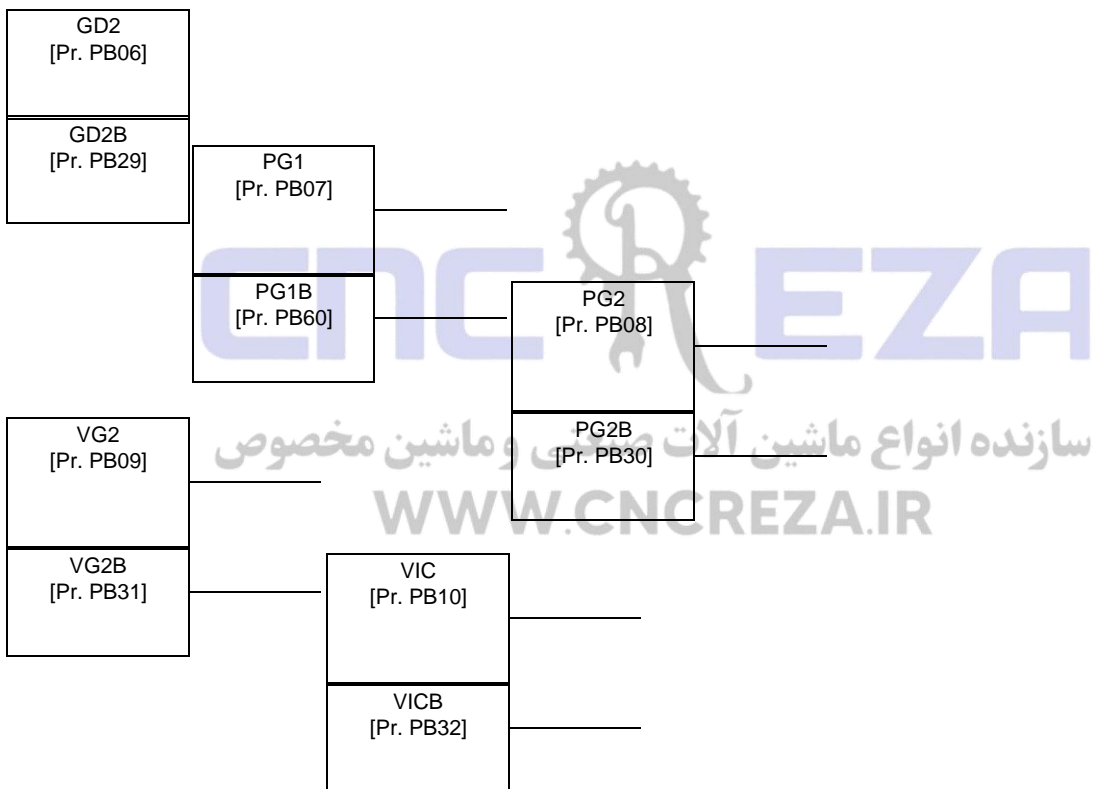

# 7. SPECIAL ADJUSTMENT FUNCTIONS

The control gains, load to motor inertia ratio, and vibration suppression control settings are changed according to the conditions selected by [Pr. PB26 Gain switching function] and [Pr. PB27 Gain switching condition].

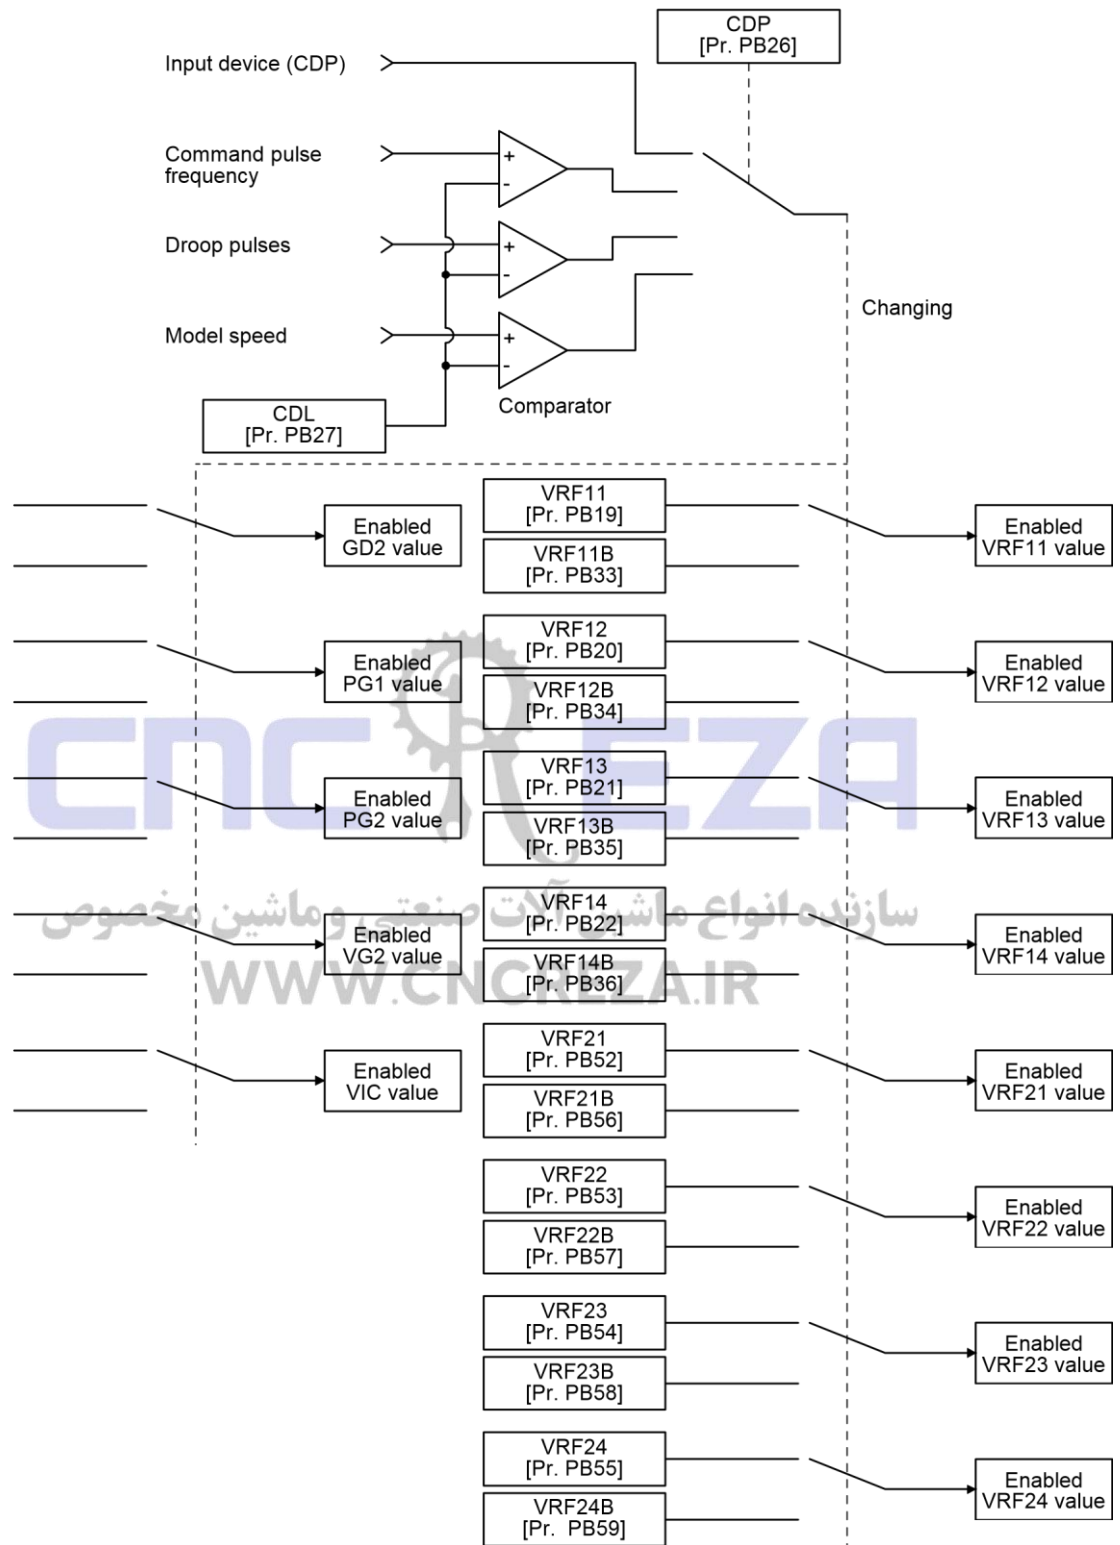

### 7.2.3 Parameter

When using the gain switching function, always select "Manual mode ( \_ \_ \_ 3)" of "Gain adjustment mode selection" in [Pr. PA08 Auto tuning mode]. The gain switching function cannot be used in the auto tuning mode.

(1) Variable gain operation setting parameter


## 7. SPECIAL ADJUSTMENT FUNCTIONS

Parameter	Symbol	Name	Unit	Description
PB26	CDP	Gain switching selection		Used to select the changing condition.
PB27	CDL	Gain switching condition	[kpulse/s] /[pulse] /[r/min]	Used to set the changing condition values.
PB28	CDT	Gain switching time constant	[ms]	You can set the filter time constant for a gain change at changing.

### (a) [Pr. PB26 Gain switching function]

Used to set the gain switching condition. Select the switching condition in the first digit and second digit.

[Pr. PB26]

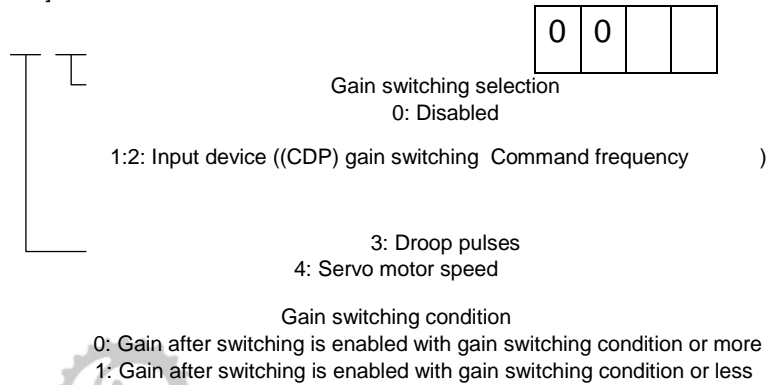

### (b) [Pr. PB27 Gain switching condition]

Set a level to switch gains after you select "Command frequency", "Droop pulses", or "Servo motor speed" in [Pr. PB26 Gain switching function]. The setting unit is as follows.

Gain switching condition	Unit
Command frequency	[kpulse/s]
Droop pulses	[pulse]
Servo motor speed	[r/min]

### (c) [Pr. PB28 Gain switching time constant]

You can set the primary delay filter to each gain at gain switching. This parameter is used to suppress shock given to the machine if the gain difference is large at gain switching, for example.

### (2) Switchable gain parameter

Loop gain	Before switching			After switching		
	Parameter	Symbol	Name	Parameter	Symbol	Name
Load to motor inertia ratio	PB06	GD2	Load to motor inertia ratio	PB29	GD2B	Gain switching Load to motor inertia ratio
Model loop gain	PB07	PG1	Model loop gain	PB60	PG1B	Gain switching Model loop gain
Position loop gain	PB08	PG2	Position loop gain	PB30	PG2B	Gain switching Position loop gain
Speed loop gain	PB09	VG2	Speed loop gain	PB31	VG2B	Gain switching Speed loop gain

## 7. SPECIAL ADJUSTMENT FUNCTIONS

Speed integral compensation	PB10	VIC	Speed integral compensation	PB32	VICB	Gain switching Speed integral compensation
Vibration suppression control 1 Used to set the value of the after-changing vibration suppression control vibration frequency setting.	PB19	VRF11	Vibration suppression control 1 Used to set the value of the after-changing vibration suppression control vibration frequency setting.	PB33	VRF11B	Vibration suppression control 1 - Vibration frequency after gain switching
Vibration suppression control 1 - Resonance frequency	PB20	VRF12	Vibration suppression control 1 - Resonance frequency	PB34	VRF12B	Vibration suppression control 1 - Resonance frequency after gain switching
Vibration suppression control 1 - Vibration frequency damping	PB21	VRF13	Vibration suppression control 1 - Vibration frequency damping	PB35	VRF13B	Vibration suppression control 1 - Vibration frequency damping after gain switching
Vibration suppression control 1 - Resonance frequency damping	PB22	VRF14	Vibration suppression control 1 - Resonance frequency damping	PB36	VRF14B	Vibration suppression control 1 - Resonance frequency damping after gain switching
Vibration suppression control 2 - Vibration frequency	PB52	VRF21	Vibration suppression control 2 - Vibration frequency	PB56	VRF21B	Vibration suppression control 2 - Vibration frequency after gain switching
Vibration suppression control 2 - Resonance frequency	PB53	VRF22	Vibration suppression control 2 - Resonance frequency	PB57	VRF22B	Vibration suppression control 2 - Resonance frequency after gain switching
Vibration suppression control 2 - Vibration frequency damping	PB54	VRF23	Vibration suppression control 2 - Vibration frequency damping	PB58	VRF23B	Vibration suppression control 2 - Vibration frequency damping after gain switching
Vibration suppression control 2 - Resonance frequency damping	PB55	VRF24	Vibration suppression control 2 - Resonance frequency damping	PB59	VRF24B	Vibration suppression control 2 - Resonance frequency damping after gain switching

(a) [Pr. PB06] to [Pr. PB10]

These parameters are the same as in ordinary manual adjustment. Gain switching allows the values of load to motor inertia ratio, position loop gain, speed loop gain, and speed integral compensation to be switched.

(b) [Pr. PB19] to [Pr. PB22]/[Pr. PB52] to [Pr. PB55]

These parameters are the same as in ordinary manual adjustment. You can switch the vibration frequency, resonance frequency, vibration frequency damping, and resonance frequency damping by switching gain during motor stop.

(c) [Pr. PB29 Load to motor inertia ratio after gain switching]

Set the load to motor inertia ratio after gain switching. If the load to motor inertia ratio does not change, set it to the same value as [Pr. PB06 Load to motor inertia ratio].

(d) [Pr. PB30 Position loop gain after gain switching], [Pr. PB31 Speed loop gain after gain switching], and [Pr. PB32 Speed integral compensation after gain switching]

Set the values of after switching position loop gain, speed loop gain and speed integral compensation.

(e) Vibration suppression control after gain switching ([Pr. PB33] to [Pr. PB36]/[Pr. PB56] to [Pr.

## 7. SPECIAL ADJUSTMENT FUNCTIONS

PB59)]/[Pr. PB60 Model loop gain after gain switching]

The gain switching vibration suppression control and model loop gain are used only with input device (CDP) on/off.

You can switch the vibration frequency, resonance frequency, vibration frequency damping, resonance frequency damping, and model loop gain of the vibration suppression control 1 and vibration suppression control 2.

### 7.2.4 Gain switching procedure

This operation will be described by way of setting examples.


#### (1) When you choose switching by input device (CDP) (a) Setting

Parameter	Symbol	Name	Setting value	Unit
PB06	GD2	Load to motor inertia ratio	4.00	[Multiplier]
PB07	PG1	Model loop gain	100	[rad/s]
PB08	PG2	Position loop gain	120	[rad/s]
PB09	VG2	Speed loop gain	3000	[rad/s]
PB10	VIC	Speed integral compensation	20	[ms]
PB19	VRF11	Vibration suppression control 1 - Vibration frequency	50	[Hz]
PB20	VRF12	Vibration suppression control 1 - Resonance frequency	50	[Hz]
PB21	VRF13	Vibration suppression control 1 - Vibration frequency damping	0.20	
PB22	VRF14	Vibration suppression control 1 - Resonance frequency damping	0.20	
PB52	VRF21	Vibration suppression control 2 - Vibration frequency	20	[Hz]
PB53	VRF22	Vibration suppression control 2 - Resonance frequency	20	[Hz]
PB54	VRF23	Vibration suppression control 2 - Vibration frequency damping	0.10	
PB55	VRF24	Vibration suppression control 2 - Resonance frequency damping	0.10	
PB29	GD2B	Gain switching Load to motor inertia ratio	10.00	[Multiplier]
PB60	PG1B	Model loop gain after gain switching	50	[rad/s]
PB30	PG2B	Gain switching position loop gain	84	[rad/s]
PB31	VG2B	Gain switching speed loop gain	4000	[rad/s]
PB32	VICB	Speed integral compensation after gain switching	50	[ms]
PB26	CDP	Gain switching function	0001 (Switch by input device (CDP) on/off.)	

## 7. SPECIAL ADJUSTMENT FUNCTIONS

Parameter	Symbol	Name	Setting value	Unit
PB28	CDT	Gain switching time constant	100	[ms]
PB33	VRF11B	Vibration suppression control 1 - Vibration frequency after gain switching	60	[Hz]
PB34	VRF12B	Vibration suppression control 1 - Resonance frequency after gain switching	60	[Hz]
PB35	VRF13B	Vibration suppression control 1 - Vibration frequency damping after gain switching	0.15	
PB36	VRF14B	Vibration suppression control 1 - Resonance frequency damping after gain switching	0.15	
PB56	VRF21B	Vibration suppression control 2 - Vibration frequency after gain switching	30	[Hz]
PB57	VRF22B	Vibration suppression control 2 - Resonance frequency after gain switching	30	[Hz]
PB58	VRF23B	Vibration suppression control 2 - Vibration frequency damping after gain switching	0.05	
PB59	VRF24B	Vibration suppression control 2 - Resonance frequency damping after gain switching	0.05	

(b) Switching timing chart

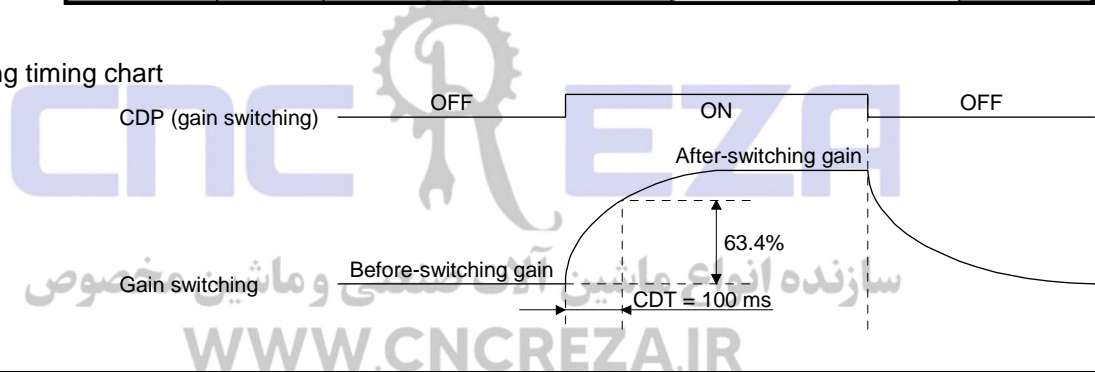

Model loop gain	100	í	50	í	100
Load to motor inertia ratio	4.00	í	10.00	í	4.00
Position loop gain	120	í	84	í	120
Speed loop gain	3000	í	4000	í	3000
Speed integral compensation	20	í	50	í	20
Vibration suppression control 1 - Vibration frequency	50	í	60	í	50
Vibration suppression control 1 - Resonance frequency	50	í	60	í	50
Vibration suppression control 1 - Vibration frequency damping	0.20	í	0.15	í	0.20
Vibration suppression control 1 - Resonance frequency damping	0.20	í	0.15	í	0.20
Vibration suppression control 2 - Vibration frequency	20	í	30	í	20
Vibration suppression control 2 - Resonance frequency	20	í	30	í	20
Vibration suppression control 2 - Vibration frequency damping	0.10	í	0.05	í	0.10
Vibration suppression control 2 - Resonance frequency damping	0.10	í	0.05	í	0.10

## 7. SPECIAL ADJUSTMENT FUNCTIONS


(2) When you choose switching by droop pulses

In this case, the Vibration suppression control after gain switching and model loop gain after gain switching cannot be used.

(a) Setting

Parameter	Symbol	Name	Setting value	Unit
PB06	GD2	Load to motor inertia ratio	4.00	[Multiplier]
PB08	PG2	Position loop gain	120	[rad/s]
PB09	VG2	Speed loop gain	3000	[rad/s]
PB10	VIC	Speed integral compensation	20	[ms]
PB29	GD2B	Load to motor inertia ratio after gain switching	10.00	[Multiplier]
PB30	PG2B	Gain switching position loop gain	84	[rad/s]
PB31	VG2B	Gain switching speed loop gain	4000	[rad/s]
PB32	VICB	Speed integral compensation after gain switching	50	[ms]
PB26	CDP	Gain switching selection	0003	(switching by droop pulses)
PB27	CDL	Gain switching condition	50	[pulse]
PB28	CDT	Gain switching time constant	100	[ms]

(b) Switching timing chart

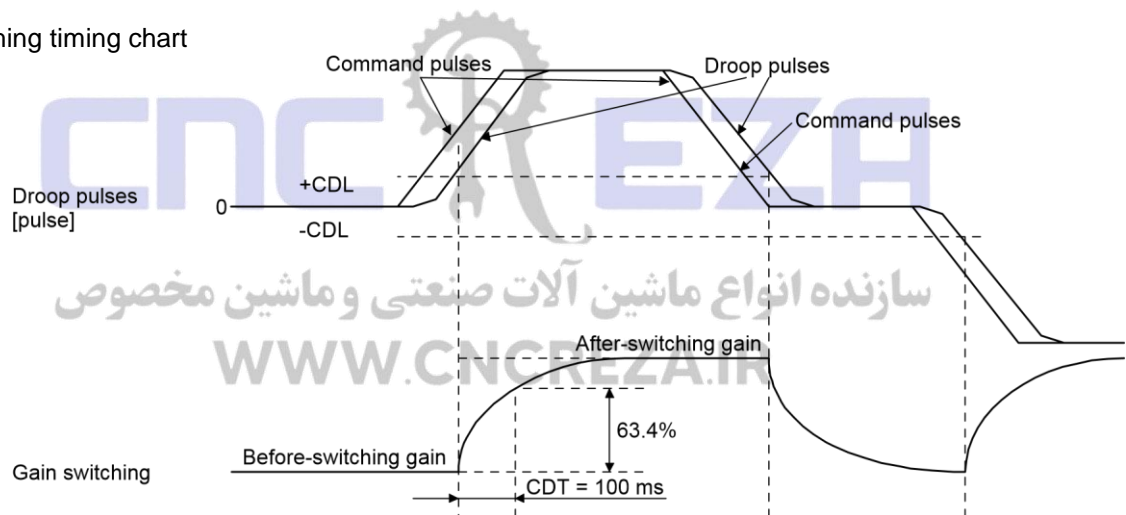

Load to motor inertia ratio	4.00	↑ 10.00	↓ 4.00	↓ 10.00
Position loop gain	120	↑ 84	↓ 120	↓ 84
Speed loop gain	3000	↑ 4000	↓ 3000	↓ 4000
Speed integral compensation	20	↑ 50	↓ 20	↓ 50

### 7.3 Tough drive function

POINT	
●	isable of the tough drive function with [Pr. PA20 Tough drive fer to section 5.2.1.)

This function makes the equipment continue operating even under the condition that an alarm occurs.



## 7. SPECIAL ADJUSTMENT FUNCTIONS

### 7.3.1 Vibration tough drive function

This function prevents vibration by resetting a filter instantaneously when machine resonance occurs due to varied vibration frequency caused by machine aging.

To reset the machine resonance suppression filters with the function, [Pr. PB13 Machine resonance suppression filter 1] and [Pr. PB15 Machine resonance suppression filter 2] should be set in advance. Set [Pr. PB13] and [Pr. PB15] as follows.

- (1) One-touch tuning execution (section 6.2)
- (2) Manual setting (section 5.2.2)

The vibration tough drive function operates when a detected machine resonance frequency is within  $\pm 30\%$  for a value set in [Pr. PB13 Machine resonance suppression filter 1] or [Pr. PB15 Machine resonance suppression filter 2].

To set a detection level of the function, set sensitivity in [Pr. PF23 Vibration tough drive - Oscillation detection level].



POINT	
●	r. PB13] and [Pr. PB15] by the vibration tough drive function is constantly. However, the number of write times to the EEPROM is ce per hour.
●	rough drive function does not reset [Pr. PB46 Machine resonance filter 3], [Pr. PB48 Machine resonance suppression filter 4], and [Pr. ne resonance suppression filter 5].
●	rough drive function does not detect a vibration of 100 Hz or less.

The following shows the function block diagram of the vibration tough drive function.

The function detects machine resonance frequency and compare it with [Pr. PB13] and [Pr. PB15], and reset a machine resonance frequency of a parameter whose set value is closer.

## 7. SPECIAL ADJUSTMENT FUNCTIONS

Filter	Setting parameter	Precaution	Parameter that is reset with vibration tough drive function
Machine resonance suppression filter 1	PB01/PB13/PB14	The filter can be set automatically with "Filter tuning mode selection" in [Pr. PB01].	PB13
Machine resonance suppression filter 2	PB15/PB16		PB15
Machine resonance suppression filter 3	PB46/PB47		
Machine resonance suppression filter 4	PB48/PB49	Enabling the filter disables the shaft resonance suppression filter. The shaft resonance suppression filter is enabled for the initial setting.	
Machine resonance suppression filter 5	PB50/PB51	The setting of this filter is disabled while you use the robust filter. The robust filter is disabled for the initial setting.	

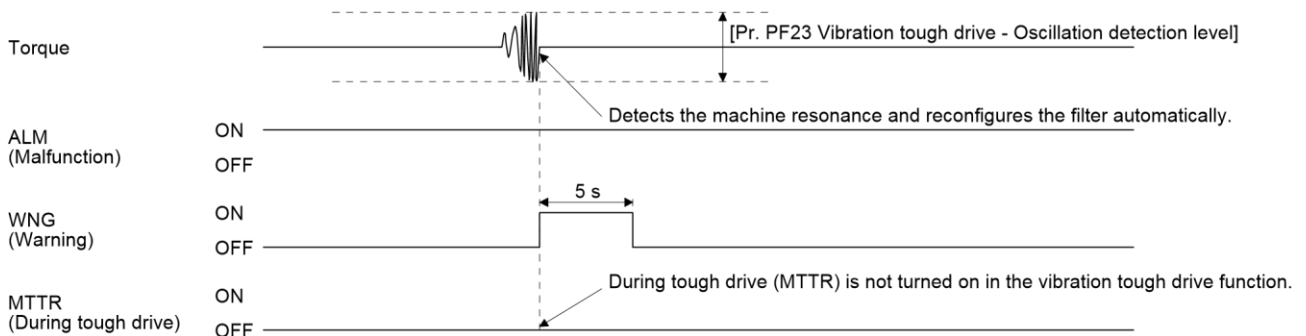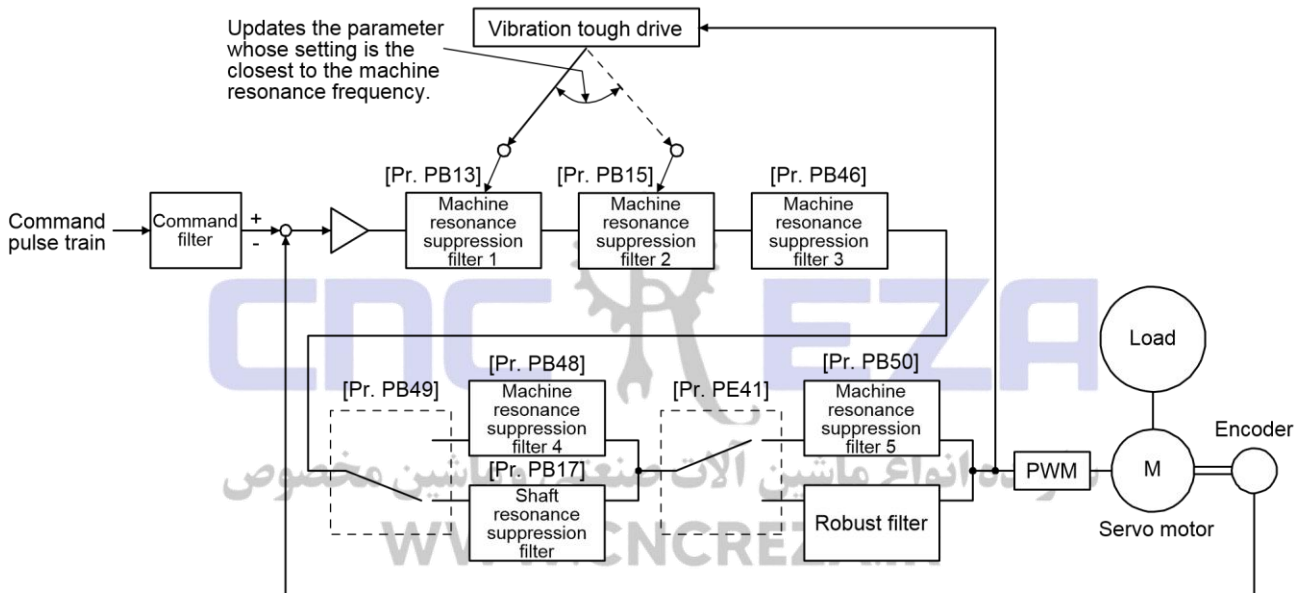

### 7.3.2 Instantaneous power failure tough drive function


**CAUTION** • The immunity to instantaneous power failures is increased by the instantaneous power failure tough drive function. However, it is not guarantee to comply with the SEMI-F47 standard.

## 7. SPECIAL ADJUSTMENT FUNCTIONS

The instantaneous power failure tough drive function avoids [AL. 10 Undervoltage] even when an instantaneous power failure occurs during operation. When the instantaneous power failure tough drive activates, the function will increase the immunity to instantaneous power failures using the electrical energy charged in the capacitor in the servo amplifier and will change an alarm level of [AL. 10 Undervoltage] simultaneously. The [AL. 10.1 Voltage drop in the power] detection time for the power supply can be changed by [Pr. PF25 SEMI-F47 function - Instantaneous power failure detection time (instantaneous power failure tough drive - detection time)]. In addition, [AL.10.2 Bus voltage drop] detection level for the bus voltage is changed automatically.

POINT	
●	omagnetic brake interlock) will not turn off during the instantaneous ough drive.
●	nabled ( _ _ _ 1)" for "Torque limit function selection at s power failure" in [Pr. PA26] will limit torques to save electric
●	an instantaneous power failure occurs during operation and will 0 Undervoltage] less likely to occur. ad of instantaneous power failure is large, the undervoltage alarm caused by the bus voltage drop may occur regardless of the set PF25 SEMI-F47 function - Instantaneous power failure detection aneous power failure tough drive - detection time)].
([	

- (1) Instantaneous power failure time > [Pr. PF25 SEMI-F47 function - Instantaneous power failure detection time (instantaneous power failure tough drive - detection time)]  
The alarm occurs when the instantaneous power failure time exceeds [Pr. PF25 SEMI-F47 function - Instantaneous power failure detection time (instantaneous power failure tough drive - detection time)].  
MTTR (During tough drive) turns on after the instantaneous power failure is detected. MBR (Electromagnetic brake interlock) turns off when the alarm occurs.

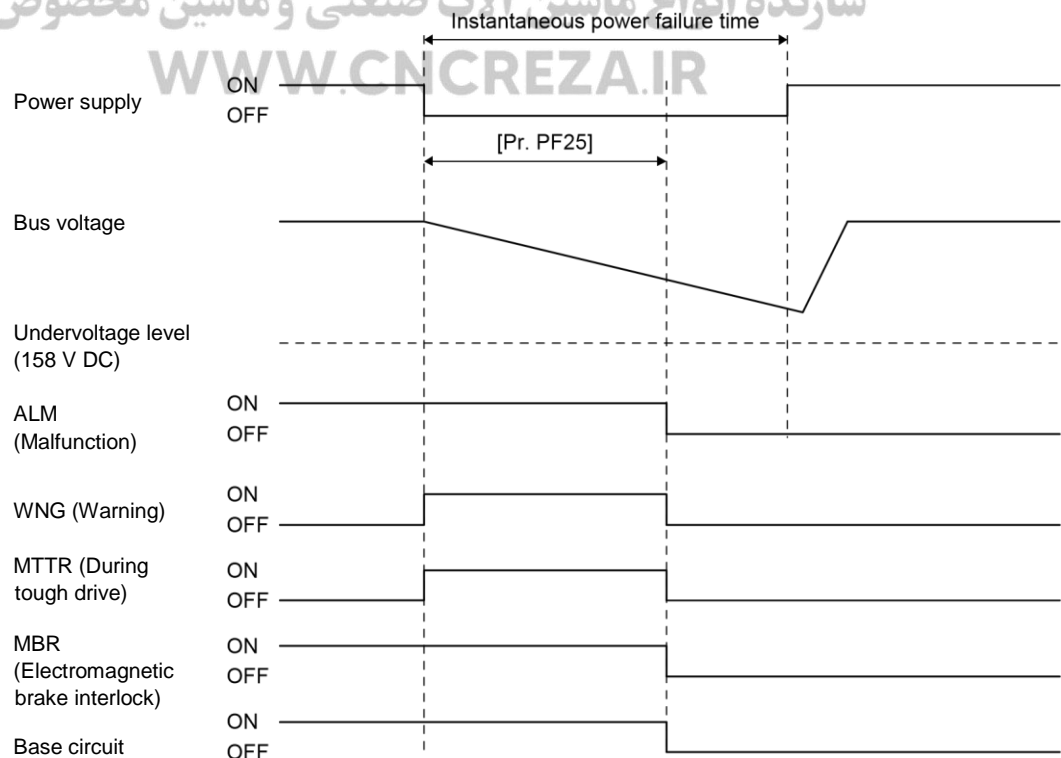


## 7. SPECIAL ADJUSTMENT FUNCTIONS

- (2) Instantaneous power failure time < [Pr. PF25 SEMI-F47 function - Instantaneous power failure detection time (instantaneous power failure tough drive - detection time)]

Operation status differs depending on how bus voltage decrease.


- (a) When the bus voltage decreases lower than 158 V DC within the instantaneous power failure time [AL. 10 Undervoltage] occurs when the bus voltage decrease lower than 158 V DC regardless of the enabled instantaneous power failure tough drive.

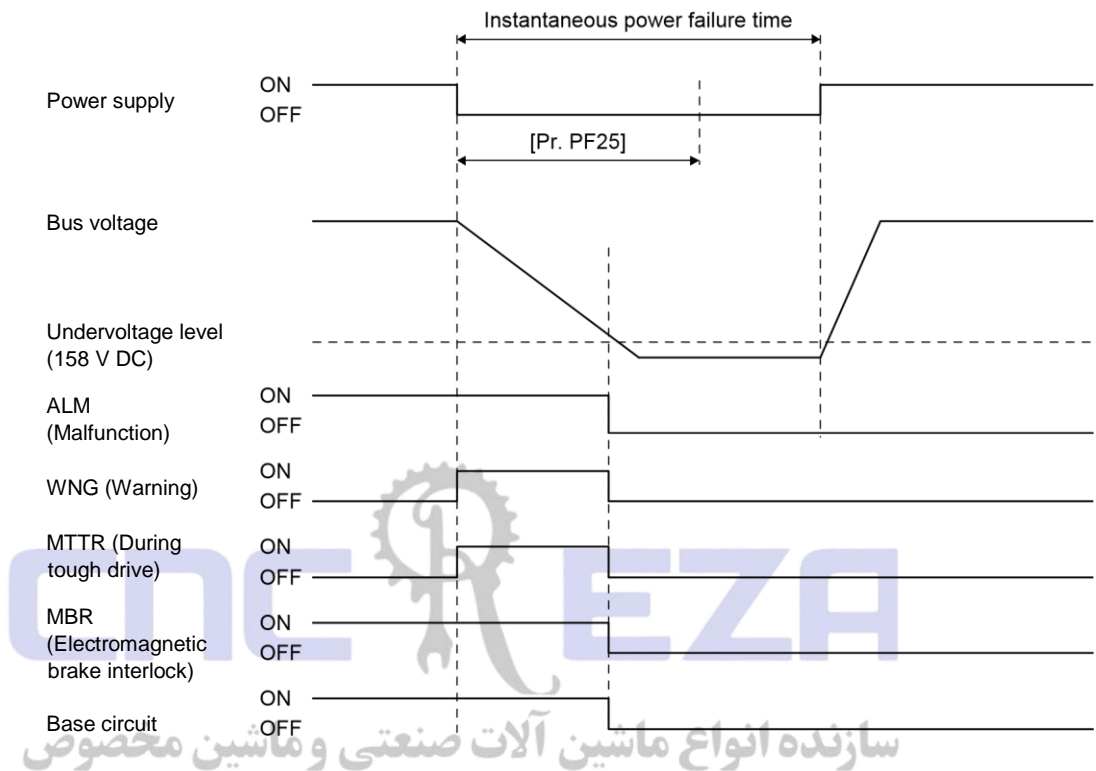


- (b) When the bus voltage does not decrease lower than 158 V DC within the instantaneous power failure time

The operation continues without alarming.

## 7. SPECIAL ADJUSTMENT FUNCTIONS

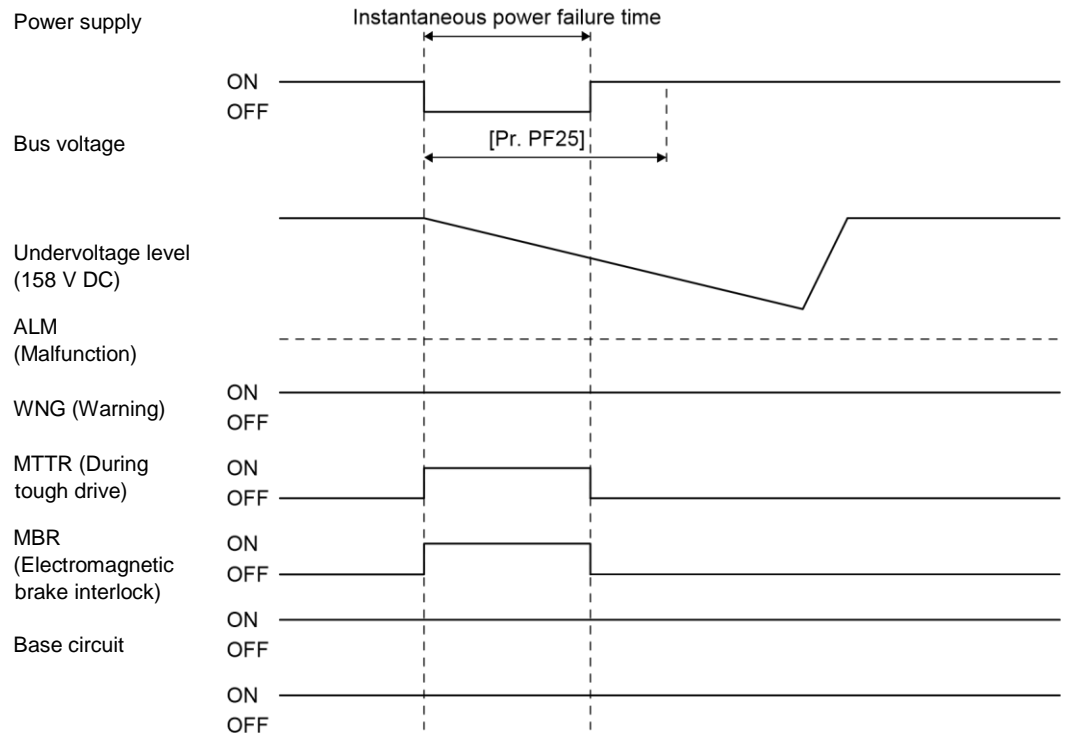

MEMO

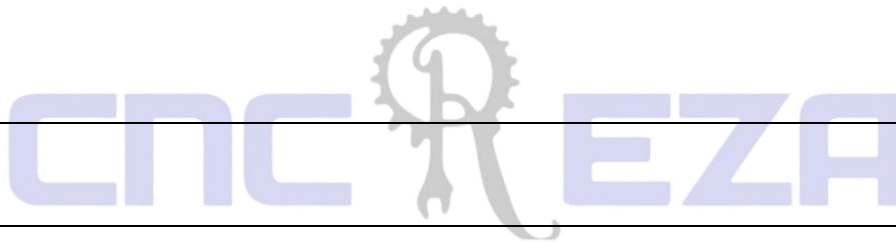

سازنده انواع ماشین آلات صنعتی و ماشین مخصوص

WWW.CNCREZA.IR



## 8. TROUBLESHOOTING

### 8. TROUBLESHOOTING

POINT	
●	an alarm occurs, turn SON (Servo-on) off and interrupt the power.

#### 8.1 Alarm and warning list

When an error occurs during operation, the corresponding alarm or warning is displayed. If any alarm or warning has occurred, refer to section 8.2 or 8.3 and take the appropriate action. When an alarm occurs, ALM will turn off.

To output alarm codes, set [Pr. PD34] to "\_ \_ \_ 1". Alarm codes are outputted by on/off of bit 0 to bit 2. Warnings ([AL. 91] to [AL. F3]) do not have alarm codes. The alarm codes in the following table will be outputted when they occur. The alarm codes will not be outputted in normal condition.

After its cause has been removed, the alarm can be deactivated in any of the methods marked z in the alarm deactivation column. Warnings are automatically canceled after the cause of occurrence is removed. For the alarms and warnings in which "SD" is written in the stop method column, the servo motor stops with the dynamic brake after forced stop deceleration. For the alarms and warnings written "DB" in the stop method column, the servo motor stops with the dynamic brake without forced stop deceleration.

Table 8.1 Alarm list

	No.	Alarm code			Name	Detailed display	Detail name	Stop method (Note 2, 3)	Alarm deactivation		
		CN1 49 (Bit 2)	CN1 23 (Bit 1)	CN1 24 (Bit 0)					Alarm reset (RES)	Press the "SET" button on the current alarm screen.	Power off to On (Note 4)
Alarm	10	0	1	0	Undervoltage	10.1	Voltage drop in the power	DB	○	○	○
						10.2	Bus voltage drop	SD	○	○	○
	12	0	0	0	Memory error 1 (RAM)	12.1	RAM error 1	DB	○	○	○
						12.2	RAM error 2	DB	○	○	○
						12.4	RAM error 4	DB	○	○	○
						12.5	RAM error 5	DB	○	○	○
						12.5	RAM error 5	DB	○	○	○
	13	0	0	0	Clock error	13.1	Clock error 1	DB	○	○	○
						13.2	Clock error 2	DB	○	○	○
	14	0	0	0	Control process error	14.1	Control process error 1	DB	○	○	○
						14.2	Control process error 2	DB	○	○	○
						14.3	Control process error 3	DB	○	○	○
						14.4	Control process error 4	DB	○	○	○
						14.5	Control process error 5	DB	○	○	○
						14.6	Control process error 6	DB	○	○	○
						14.7	Control process error 7	DB	○	○	○
						14.8	Control process error 8	DB	○	○	○
						14.9	Control process error 9	DB	○	○	○
14.A						Control process error 10	DB	○	○	○	
15	0	0	0	Memory error 2 (EEP-ROM)	15.1	EEP-ROM error at power on	DB	○	○	○	
					15.2	EEP-ROM error during operation	DB	○	○	○	

## 8. TROUBLESHOOTING

	No.	Alarm code			Name	Detailed display	Detail name	Stop method (Note 2, 3)	Alarm deactivation		
		CN1 49 (Bit 2)	CN1 23 (Bit 1)	CN1 24 (Bit 0)					Alarm reset (RES)	Press the "SET" button on the current alarm screen.	Power off to On (Note 4)
Alarm	16	1	1	0	Encoder initial communication error 1	16.1	Encoder initial communication - Receive data error 1	DB			○
						16.2	Encoder initial communication - Receive data error 2	DB			○
						16.3	Encoder initial communication - Receive data error 3	DB			○
						16.5	Encoder initial communication - Transmission data error 1	DB			○
						16.6	Encoder initial communication - Transmission data error 2	DB			○
						16.7	Encoder initial communication - Transmission data error 3	DB			○
						16.A	Encoder initial communication - Process error 1	DB			○
						16.B	Encoder initial communication - Process error 2	DB			○
						16.C	Encoder initial communication - Process error 3	DB			○
						16.D	Encoder initial communication - Process error 4	DB			○
						16.E	Encoder initial communication - Process error 5	DB			○
						16.F	Encoder initial communication - Process error 6	DB			○
	17	0	0	0	Board error	17.1	Board error 1	DB			○
						17.3	Board error 2	DB			○
						17.4	Board error 3	DB			○
	19	0	0	0	Memory error 3 (FLASH-ROM)	19.1	FLASH-ROM error 1	DB			○
						19.2	FLASH-ROM error 2	DB			○
	1A	1	1	0	Servo motor combination error	1A.1	Servo motor combination error	DB			○
	1E	1	1	0	Encoder initial communication error 2	1E.1	Encoder malfunction	DB			○
	1F	1	1	0	Encoder initial communication error 3	1F.1	Incompatible encoder	DB			○
	20	1	1	0	Encoder normal communication error 1	20.1	Encoder normal communication - Receive data error 1	DB			○
						20.2	Encoder normal communication - Receive data error 2	DB			○
						20.3	Encoder normal communication - Receive data error 3	DB			○
						20.5	Encoder normal communication - Transmission data error 1	DB			○
						20.6	Encoder normal communication - Transmission data error 2	DB			○
						20.7	Encoder normal communication - Transmission data error 3	DB			○
						20.9	Encoder normal communication - Receive data error 4	DB			○
						20.A	Encoder normal communication - Receive data error 5	DB			○
	21	1	1	0	Encoder normal communication error 2	21.1	Encoder data error 1	DB			○
						21.2	Encoder data update error	DB			○
21.3						Encoder data waveform error	DB			○	
21.5						Encoder hardware error 1	DB			○	
21.6						Encoder hardware error 2	DB			○	
21.9						Encoder data error 2	DB			○	



## 8. TROUBLESHOOTING

	No.	Alarm code			Name	Detailed display	Detail name	Stop method (Note 2, 3)	Alarm deactivation		
		CN1 49 (Bit 2)	CN1 23 (Bit 1)	CN1 24 (Bit 0)					Alarm reset (RES)	Press the "SET" button on the current alarm screen.	Power off to On (Note 4)

Alarm	No.	Alarm code			Name	Detailed display	Detail name	Stop method (Note 2, 3)	Alarm deactivation		
		CN1 49 (Bit 2)	CN1 23 (Bit 1)	CN1 24 (Bit 0)					Alarm reset (RES)	Press the "SET" button on the current alarm screen.	Power off to On (Note 4)
	24	1	0	0	Main circuit error	24.1	Ground fault detected by hardware detection circuit	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
						24.2	Ground fault detected by software detection function	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	30	0	0	1	Regenerative error (Note 1)	30.1	Regeneration heat error	DB	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)
						30.2	Regeneration signal error	DB	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)
						30.3	Regeneration feedback signal error	DB	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)
	31	1	0	1	Overspeed	31.1	Abnormal motor speed	SD	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	32	1	0	0	Overcurrent	32.1	Overcurrent detected at hardware detection circuit (during operation)	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
						32.2	Overcurrent detected at software detection function (during operation)	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
						32.3	Overcurrent detected at hardware detection circuit (during a stop)	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
						32.4	Overcurrent detected at software detection function (during a stop)	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	33	0	0	1	Overvoltage	33.1	Main circuit voltage error	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	35	1	0	1	Command frequency error	35.1	Command frequency error	SD	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	37	0	0	0	Parameter error	37.1	Parameter setting range error	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
						37.2	Parameter combination error	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	45	0	1	1	Main circuit device overheat (Note 1)	45.1	Main circuit device overheat error	SD	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)
	46	0	1	1	Servo motor overheat (Note 1)	46.1	Abnormal temperature of servo motor 1	SD	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)
						46.5	Abnormal temperature of servo motor 3	DB	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)
						46.6	Abnormal temperature of servo motor 4	DB	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)
	47	0	1	1	Cooling fan error	47.2	Cooling fan speed reduction error	SD	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	50	0	1	1	Overload 1 (Note 1)	50.1	Thermal overload error 1 during operation	SD	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)
						50.2	Thermal overload error 2 during operation	SD	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)
						50.3	Thermal overload error 4 during operation	SD	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)
						50.4	Thermal overload error 1 during a stop	SD	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)
						50.5	Thermal overload error 2 during a stop	SD	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)
50.6						Thermal overload error 4 during a stop	SD	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	
51	0	1	1	Overload 2 (Note 1)	51.1	Thermal overload error 3 during operation	DB	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	
					51.2	Thermal overload error 3 during a stop	DB	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	<input type="checkbox"/> (Note 1)	
52	1	0	1	Error excessive	52.1	Excess droop pulse 1	SD	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
					52.3	Excess droop pulse 2	SD	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
					52.4	Error excessive during 0 torque limit	SD	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
					52.5	Excess droop pulse 3	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
54	0	1	1	Oscillation detection	54.1	Oscillation detection error	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
56	1	1	0	Forced stop error	56.2	Over speed during forced stop	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
					56.3	Estimated distance over during forced stop	DB	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

## 8. TROUBLESHOOTING

No.	Alarm code			Name	Detailed display	Detail name	Stop method (Note 2, 3)	Alarm deactivation		
	CN1 49 (Bit 2)	CN1 23 (Bit 1)	CN1 24 (Bit 0)					Alarm reset (RES)	Press the "SET" button on the current alarm screen.	Power off to On (Note 4)

Alarm	8A	0	0	0	USB communication time-out error	8A.1	USB communication time-out error	SD	○	○	○
	8E	0	0	0	USB communication error	8E.1	USB communication receive error	SD	○	○	○
8E.2						USB communication checksum error	SD	○	○	○	
8E.3						USB communication character error	SD	○	○	○	
8E.4						USB communication command error	SD	○	○	○	
8E.5						USB communication data number error	SD	○	○	○	
88888				Watchdog	8888_	Watchdog	SD			○	

Note 1. Leave for about 30 minutes of cooling time after removing the cause of occurrence.

2. Stop method indicates as follows: DB: Stop with dynamic brake

- SD: Forced stop deceleration

3. This is applicable when [Pr. PA04] is set to the initial value. The stop system of SD can be changed to DB using [Pr. PA04].

4. To cancel the alarm, turn off the power and check that the 5-digit, 7-segment LED display is off, and then turn on the power.



## 8. TROUBLESHOOTING

Table 8.2 Warning list

No.	Name	Detailed display	Detail name	Stop method (Note 2, 3)
Warning	91	Servo amplifier overheat warning (Note 1)	91.1 Main circuit device overheat warning	
	99	Stroke limit warning	99.1 Forward rotation stroke end off	(Note 4)
			99.2 Reverse rotation stroke end off	(Note 4)
	E0	Excessive regeneration warning (Note 1)	E0.1 Excessive regeneration warning	
	E1	Overload warning 1 (Note 1)	E1.1 Thermal overload warning 1 during operation	
			E1.2 Thermal overload warning 2 during operation	
			E1.3 Thermal overload warning 3 during operation	
			E1.4 Thermal overload warning 4 during operation	
			E1.5 Thermal overload error 1 during a stop	
			E1.6 Thermal overload error 2 during a stop	
			E1.7 Thermal overload error 3 during a stop	
			E1.8 Thermal overload error 4 during a stop	
	E6	Servo forced stop warning	E6.1 Forced stop warning	SD
	E8	Cooling fan speed reduction warning	E8.1 Decreased cooling fan speed warning	
	E9	Main circuit off warning	E9.1 Servo-on signal on during main circuit off	DB
			E9.2 Bus voltage drop during low speed operation	DB
	EC	Overload warning 2 (Note 1)	EC.1 Overload warning 2	
	ED	Output watt excess warning	ED.1 Output watt excess warning	
	F0	Tough drive warning	F0.1 Instantaneous power failure tough drive warning	
			F0.3 Vibration tough drive warning	
F2	Drive recorder - Miswriting warning	F2.1 Drive recorder - Area writing time-out warning		
		F2.2 Drive recorder - Data miswriting warning		
F3	Oscillation detection warning	F3.1 Oscillation detection warning		

Note 1. Leave for about 30 minutes of cooling time after removing the cause of occurrence.


2. Stop method indicates as follows: DB: Stop with dynamic brake

- SD: Forced stop deceleration

3. This is applicable when [Pr. PA04] is set to the initial value. The stop system of SD can be changed to DB using [Pr. PA04].

4. Quick stop or slow stop can be selected using [Pr. PD30].

### 8.2 Remedies for alarms

 <b>CAUTION</b>	<ul style="list-style-type: none"> <li>● When any alarm has occurred, eliminate its cause, ensure safety, and deactivate the alarm before restarting operation. Otherwise, it may cause injury.</li> <li>● As soon as an alarm occurs, make the Servo-off status and interrupt the power.</li> </ul>
--	--

POINT	
-------	--

## 8. TROUBLESHOOTING

- If the following alarms has occurred, do not cycle the power or restart. Doing so will cause a malfunction of the servo amplifier motor. Remove its cause and allow about 30 minutes for cooling during the operation.
  - [AL. 45 Main circuit device overheat]
  - [AL. 50 Overload 1]
  - [AL. 51 Overload 2]

Remove the cause of the alarm in accordance with this section. Use MR Configurator2 to refer to the cause of alarm occurrence.

Alarm No.: 10 or less		Name: Undervoltage				
Alarm content		<ul style="list-style-type: none"> <li>▪ The power supply voltage dropped.</li> <li>▪ The bus voltage dropped.</li> </ul>				
Display	Detail name	Cause	Check method	Check result	Action	
10.1	Voltage drop in the power	(1)	The connection of the power connector has a failure.	Check the power connector.	It has a failure.	Connect it correctly.
					It has no failure.	Check (2).
		(2)	Power supply voltage is low.	Check if the voltage of the power supply is 160 V AC or lower.	The voltage is lower than 160 V AC.	Review the voltage of the power supply.
					The voltage is higher than 160 V AC.	Check (3).
(3)	An instantaneous power failure has occurred for longer time than the specified time. The time will be 60 ms when [Pr. PA20] is "_ 0 _ _". The time will be the value set in [Pr. PF25] when [Pr. PA20] is "_ 1 _ _".	Check if the power has a problem.	It has a problem.	Review the power.		
10.2	Bus voltage drop	(1)	The connection of the power connector has a failure.	Check the power connector.	It has a failure.	Connect it correctly.
					It has no failure.	Check (2).
		(2)	Power supply voltage is low.	Check if the voltage of the power supply is 160 V AC or lower.	The voltage is lower than 160 V AC.	Increase the power supply voltage.
					The voltage is higher than 160 V AC.	Check (3).
		(3)	The alarm has occurred during acceleration.	Check that the bus voltage during acceleration is 200 V DC or more.	The voltage is less than 200 V DC.	Increase the acceleration time constant. Or increase the power supply capacity.
					The voltage is 200 V DC or more.	Check (4).
		(4)	The servo amplifier is malfunctioning.	Check the bus voltage value.	The voltage of the power supply is 160 V AC or more, and the bus voltage is less than 200 V DC.	Replace the servo amplifier.

Alarm No.: 12	Name: Memory error 1 (RAM)
---------------	----------------------------

## 8. TROUBLESHOOTING

Alarm content		. A part (RAM) in the servo amplifier is failure.				
Display	Detail name	Cause	Check method	Check result	Action	
12.1	RAM error 1	(1)	A part in the servo amplifier is failure.	Disconnect the cables except the power supply, and then check the repeatability.	It is repeatable.	Replace the servo amplifier.
					It is not repeatable.	Check (2).
	(2)	Something near the device caused it.	Check the power supply for noise.	It has a failure.	Take countermeasures against its cause.	
12.2	RAM error 2	Check it with the check method for [AL. 12.1].				
12.4	RAM error 4					
12.5	RAM error 5					

Alarm No.: 13		Name: Clock error				
Alarm content		. A part in the servo amplifier is failure.				
Display	Detail name	Cause	Check method	Check result	Action	
13.1	Clock error 1	(1)	A part in the servo amplifier is failure.	Disconnect the cables except the power supply, and then check the repeatability.	It is repeatable.	Replace the servo amplifier.
					It is not repeatable.	Check (2).
	(2)	Something near the device caused it.	Check the power supply for noise. Check if the connector is shorted.	It has a failure.	Take countermeasures against its cause.	
13.2	Clock error 2	Check it with the check method for [AL. 13.1].				

Alarm No.: 14		Name: Control process error				
Alarm content		. The process did not complete within the specified time.				
Display	Detail name	Cause	Check method	Check result	Action	
14.1	Control process error 1	(1)	The parameter setting is incorrect.	Check if the parameter setting is incorrect.	It is incorrect.	Set it correctly.
					It is correct.	Check (2).
		(2)	Something near the device caused it.	Check the power supply for noise. Check if the connector is shorted.	It has a failure.	Take countermeasures against its cause.
				It has no failure.	Check (3).	
	(3)	The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.	
14.2	Control process error 2	(1)	The parameter setting is incorrect.	Check if the parameter setting is incorrect.	It is incorrect.	Set it correctly.
					It is correct.	Check (2).
		(2)	Something near the device caused it.	Check the power supply for noise. Check if the connector is shorted.	It has a failure.	Take countermeasures against its cause.
				It has no failure.	Check (3).	
	(3)	The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.	
14.3	Control process error 3					

## 8. TROUBLESHOOTING

14.4	Control process error 4	Check it with the check method for [AL. 14.1].
14.5	Control process error 5	
14.6	Control process error 6	
14.7	Control process error 7	
14.8	Control process error 8	
14.9	Control process error 9	
14.A	Control process error 10	

Alarm No.: 15		Name: Memory error 2 (EEP-ROM)				
Alarm content		. A part (EEP-ROM) in the servo amplifier is failure.				
Display	Detail name	Cause	Check method	Check result	Action	
15.1	EEP-ROM error at power on	(1)	EEP-ROM is malfunctioning at power on.	Disconnect the cables except the power supply, and then check the repeatability.	It is repeatable.	Replace the servo amplifier.
					It is not repeatable.	Check (2).
		(2)	Something near the device caused it.	Check the power supply for noise. Check if the connector is shorted.	It has a failure.	Take countermeasures against its cause.
					It has no failure.	Check (3).
		(3)	The number of write times exceeded 100,000.	Check if parameters has been used very frequently.	It has a failure.	Replace the servo amplifier. Change the process to use parameters less frequently after replacement.
		15.2	EEP-ROM error during operation	(1)	EEP-ROM is malfunctioning during normal operation.	Check if the error occurs when you change parameters during normal operation.
It does not occur.	Check (2).					
(2)	A write error occurred while tuning results was processed.			Check if the alarm occurs after an hour from power on.	It takes an hour or more.	Replace the servo amplifier.
					It takes less than an hour.	Check (3).
(3)	Something near the device caused it.			Check the power supply for noise. Check if the connector is shorted.	It has a failure.	Take countermeasures against its cause.

Alarm No.: 16		Name: Encoder initial communication error 1				
Alarm content		. An error occurred in the communication between an encoder and servo amplifier.				
Display	Detail name	Cause	Check method	Check result	Action	
16.1	Encoder initial communication - Receive data error 1	(1)	An encoder cable is malfunctioning.	Check if the encoder cable is disconnected or shorted.	It has a failure.	Replace or repair the cable.
					It has no failure.	Check (2).
		(2)	The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.
					It is repeatable.	Check (3).

## 8. TROUBLESHOOTING

		(3) An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.
				It is repeatable.	Check (4).
		(4) Something near the device caused it.	Check the noise, ambient temperature, vibration, etc.	It has a failure.	Take countermeasures against its cause.
16.2	Encoder initial communication Receive data error 2	Check it with the check method for [AL. 16.1].			

Alarm No.: 16		Name: Encoder initial communication error 1			
Alarm content		. An error occurred in the communication between an encoder and servo amplifier.			
Display	Detail name	Cause	Check method	Check result	Action
16.3	Encoder initial communication Receive data error 3	(1) An encoder cable was disconnected.	Check if the encoder cable is connected correctly.	It is not connected.	Connect it correctly.
				It is connected.	Check (2).
		(2) The parameter setting of two-wire type/four-wire type is incorrect.	Check the [Pr. PC22] setting.	The setting is incorrect.	Set it correctly.
				The setting is correct.	Check (3).
		(3) An encoder cable is malfunctioning.	Check if the encoder cable is disconnected or shorted.	It has a failure.	Replace or repair the cable.
				It has no failure.	Check (4).
		(4) The power voltage has been unstable.	Check the power voltage.	It is an instantaneous power failure.	Review the power and related parts.
It has no failure.	Check (5).				
(5) The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.		
		It is repeatable.	Check (6).		
(6) An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.		
		It is repeatable.	Check (7).		
(7) Something near the device caused it.	Check the noise, ambient temperature, vibration, etc.	It has a failure.	Take countermeasures against its cause.		
16.5	Encoder initial communication Transmission data error 1	Check it with the check method for [AL. 16.1].			
16.6	Encoder initial communication Transmission data error 2				
16.7	Encoder initial communication Transmission data error 3				
16.A	Encoder initial communication Process error 1	(1) The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.
				It is repeatable.	Check (2).
		(2) An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.
It is repeatable.	Check (3).				
(3) Something near the device caused it.	Check the noise, ambient temperature, vibration, etc.	It has a failure.	Take countermeasures against its cause.		

## 8. TROUBLESHOOTING

16.B	Encoder initial communication Process error 2	Check it with the check method for [AL. 16.A].
16.C	Encoder initial communication Process error 3	
16.D	Encoder initial communication Process error 4	
16.E	Encoder initial communication Process error 5	
16.F	Encoder initial communication Process error 6	

Alarm No.: 17		Name: Board error			
Alarm content		. A part in the servo amplifier is malfunctioning.			
Display	Detail name	Cause	Check method	Check result	Action
17.1	Board error 1	(1) A current detection circuit is malfunctioning.	Check if the alarm occurs during the servoon status.	It occurs.	Replace the servo amplifier.
				It does not occur.	Check (2).
		(2) Something near the device caused it.	Check the noise, ambient temperature, etc.	It has a failure.	Take countermeasures against its cause.
17.3	Board error 2	Check it with the check method for [AL. 17.1].			
17.4	Board error 3	(1) The servo amplifier recognition signal was not read properly.	Disconnect the cables except the power supply, and then check the repeatability.	It is repeatable.	Replace the servo amplifier.
				It is not repeatable.	Check (2).
		(2) Something near the device caused it.	Check the noise, ambient temperature, etc.	It has a failure.	Take countermeasures against its cause.

Alarm No.: 19		Name: Memory error 3 (FLASH-ROM)			
Alarm content		. A part (Flash-ROM) in the servo amplifier is failure.			
Display	Detail name	Cause	Check method	Check result	Action
19.1	FLASH-ROM error 1	(1) The Flash-ROM is malfunctioning.	Disconnect the cables except the power supply, and then check the repeatability.	It is repeatable.	Replace the servo amplifier.
				It is not repeatable.	Check (2).
		(2) Something near the device caused it.	Check the noise, ambient temperature, etc.	It has a failure.	Take countermeasures against its cause.
19.2	FLASH-ROM error 2	Check it with the check method for [AL. 19.1].			

Alarm No.: 1A	Name: Servo motor combination error
---------------	-------------------------------------



## 8. TROUBLESHOOTING

Alarm content		. The combination of servo amplifier and servo motor is incorrect.				
Display	Detail name	Cause	Check method	Check result	Action	
1A.1	Servo motor combination error	(1)	The servo amplifier and the servo motor was connected incorrectly.	Check the model name of the servo motor and corresponding servo amplifier.	The combination is incorrect. The combination is correct.	Use them in the correct combination. Check (2).
		(2)	An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.

Alarm No.: 1E		Name: Encoder initial communication error 2				
Alarm content		. An encoder is malfunctioning.				
Display	Detail name	Cause	Check method	Check result	Action	
1E.1	Encoder malfunction	(1)	An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable. It is repeatable.	Replace the servo motor. Check (2).
		(2)	Something near the device caused it.	Check the noise, ambient temperature, vibration, etc.	It has a failure.	Take countermeasures against its cause.

Alarm No.: 1F		Name: Encoder initial communication error 3				
Alarm content		. The connected encoder is not compatible with the servo amplifier.				
Display	Detail name	Cause	Check method	Check result	Action	
1F.1	Incompatible encoder	(1)	A servo motor, which is not compatible with the servo amplifier, was connected.	Check the model of the servo motor.	It is not compatible with the amplifier. It is compatible with the amplifier.	Replace it with the servo motor which is compatible. Check (2).
				It is supported.	Check (3).	
		(2)	The software version of the servo amplifier does not support the servo motor.	Check if the software version supports the servo motor.	It is not supported. It is supported.	Replace the servo amplifier to one which software version supports the servo motor. Check (3).
(3)	An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.		
			It is repeatable.	Replace the servo amplifier.		

Alarm No.: 20		Name: Encoder normal communication error 1				
Alarm content		. An error occurred in the communication between an encoder and servo amplifier.				
Display	Detail name	Cause	Check method	Check result	Action	
20.1	Encoder normal communication Receive data error 1	(1)	An encoder cable is malfunctioning.	Check if the encoder cable is disconnected or shorted.	It has a failure. It has no failure.	Repair or replace the cable. Check (2).
				It is not repeatable. It is repeatable.	Replace the servo amplifier. Check (3).	
		(2)	The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable. It is repeatable.	Replace the servo amplifier. Check (3).
(3)			It is not repeatable.	Replace the servo motor.		

## 8. TROUBLESHOOTING

		An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is repeatable.	Check (4).
		(4) Something near the device caused it.	Check the noise, ambient temperature, vibration, etc.	It has a failure.	Take countermeasures against its cause.
20.2	Encoder normal communication Receive data error 2	Check it with the check method for [AL. 20.1].			
20.3	Encoder normal communication Receive data error 3				
20.5	Encoder normal communication Transmission data error 1				
20.6	Encoder normal communication Transmission data error 2				
20.7	Encoder normal communication Transmission data error 3				
20.9	Encoder normal communication Receive data error 4				
20.A	Encoder normal communication Receive data error 5				

Alarm No.: 21		Name: Encoder normal communication error 2			
Alarm content		. The encoder detected an error signal.			
Display	Detail name	Cause	Check method	Check result	Action
21.1	Encoder data error 1	(1) The encoder detected a high speed/acceleration rate due to an oscillation or other factors.	Decrease the loop gain, and then check the repeatability.	It is not repeatable.	Use the encoder with low loop gain.
				It is repeatable.	Check (2).
		(2) An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.
				It is repeatable.	Check (3).
		(3) Something near the device caused it.	Check the noise, ambient temperature, vibration, etc.	It has a failure.	Take countermeasures against its cause.
21.2	Encoder data update error	(1) An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.
				It is repeatable.	Check (2).
		(2) Something near the device caused it.	Check the noise, ambient temperature, etc.	It has a failure.	Take countermeasures against its cause.

## 8. TROUBLESHOOTING

21.3	Encoder data waveform error	Check it with the check method for [AL. 21.2].
21.5	Encoder hardware error 1	Check it with the check method for [AL. 21.2].
21.6	Encoder hardware error 2	
21.9	Encoder data error 2	Check it with the check method for [AL. 21.1].

Alarm No.: 24		Name: Main circuit error			
Alarm content		<ul style="list-style-type: none"> <li>• A ground fault occurred on the servo motor power lines.</li> <li>• A ground fault occurred at the servo motor.</li> </ul>			
Display	Detail name	Cause	Check method	Check result	Action
24.1	Ground fault detected by hardware detection circuit	(1) The servo amplifier is malfunctioning.	Disconnect the servo motor power cables (U, V, and W) and check if the alarm occurs.	It occurs.	Replace the servo amplifier.
				It does not occur.	Check (2).
		(2) A ground fault or short occurred at the servo motor power cable.	Check if only the servo motor power cable is shorted.	It is shorted.	Replace the servo motor power cable.
				It is not shorted.	Check (3).
		(3) A ground fault occurred at the servo motor.	Disconnect the servo motor power cables on motor side, and check insulation of the motor (between U, V, W, and $\oplus$ ).	It is shorted.	Replace the servo motor.
				It is not shorted.	Check (4).
(4) The servo amplifier power input cable and servo motor power input cable were shorted.	Shut off the power, and check if the servo amplifier power input cable and servo motor power input cable are in contact.	They are in contact.	Correct the wiring.		
		They are not in contact.	Check (5).		
(5) Something near the device caused it.	Check the noise, ambient temperature, etc.	It has a failure.	Take countermeasures against its cause.		
24.2	Ground fault detected by software detection function	Check it with the check method for [AL. 24.1].			

Alarm No.: 30		Name: Regenerative error			
Alarm content		<ul style="list-style-type: none"> <li>• Permissible regenerative power of the built-in regenerative resistor or regenerative option is exceeded. A regenerative transistor in the servo amplifier is malfunctioning.</li> </ul>			
Display	Detail name	Cause	Check method	Check result	Action
30.1	Regeneration heat error	(1) The setting of the regenerative resistor (regenerative option) is incorrect.	Check the regenerative resistor (regenerative option) and [Pr. PA02] setting.	The setting value is incorrect.	Set it correctly.
				It is set correctly.	Check (2).
		(2) The regenerative resistor (regenerative option) is not connected.	Check if the regenerative resistor (regenerative option) is connected correctly.	It is not connected correctly.	Connect it correctly.
				It is connected correctly.	Check (3).
		(3) Power supply voltage high.	Check the input power supply voltage.	It is over 240 V AC.	Reduce the power supply voltage.
				It is 240 V AC or less.	Check (4).

## 8. TROUBLESHOOTING

		(4)	The regenerative load ratio has been over 100%.	Check the regenerative load ratio when alarm occurs.	It is 100% or more.	Reduce the frequency of positioning. Reduce the load. Use a regenerative option if it is not being used. Review the regenerative option capacity.
30.2	Regeneration signal error	(1)	A detection circuit of the servo amplifier is malfunctioning.	Check if the regenerative resistor (regenerative option) is overheating.	It is overheating abnormally.	Replace the servo amplifier.
30.3	Regeneration feedback signal error	(1)	A detection circuit of the servo amplifier is malfunctioning.	Remove the regenerative option or built-in regenerative resistor and then check if the alarm occur at power on.	The alarm occurs.	Replace the servo amplifier.
					The alarm does not occur.	Check (2).
		(2)	Something near the device caused it.	Check the noise, ground fault, ambient temperature, etc.	It has a failure.	Take countermeasures against its cause.

Alarm No.: 31		Name: Overspeed				
Alarm content		. The servo motor speed has exceeded the permissible instantaneous speed.				
Display	Detail name		Cause	Check method	Check result	Action
31.1	Abnormal motor speed	(1)	The command pulse frequency is high.	Check the command pulse frequency.	The command pulse frequency is high.	Check operation pattern.
					The command pulse frequency is low.	Check (2).
		(2)	The servo motor was at the maximum torque at the time of acceleration.	Check if the torque at the time of acceleration is the maximum torque.	It is the maximum torque.	Increase the acceleration/deceleration time constant. Or reduce the load.
					It is lower than the maximum torque.	Check (3).
					It is oscillating.	Adjust the servo gain. Or reduce the load.
		(3)	The servo system is unstable and oscillating.	Check if the servo motor is oscillating.	It is not oscillating.	Check (4).
					(4)	The velocity waveform has overshoot.
		It is not overshooting.	Check (5).			
		(5)	An encoder is malfunctioning.	Check if the alarm is occurring during less than permissible instantaneous speed.	It is occurring during less than permissible instantaneous speed.	Replace the servo motor.

## 8. TROUBLESHOOTING

Alarm No.: 32		Name: Overcurrent				
Alarm content		• A current higher than the permissible current was applied to the servo amplifier.				
Display	Detail name	Cause	Check method	Check result	Action	
32.1	Overcurrent detected at hardware detection circuit (during operation)	(1)	The servo amplifier is malfunctioning.	Disconnect the servo motor power cables (U, V, and W) and check if the alarm occurs.	It occurs.	Replace the servo amplifier.
				It does not occur.	Check (2).	
		(2)	A ground fault or short occurred at the servo motor power cable.	Check if only the servo motor power cable is shorted.	It is shorted.	Replace the servo motor power cable.
					It is not shorted.	Check (3).
		(3)	The servo motor is malfunctioning.	Disconnect the servo motor power cables on motor side, and check insulation of the motor (between U, V, W, and $\oplus$ ).	A ground fault is occurring.	Replace the servo motor.
					A ground fault is not occurring.	Check (4).
		(4)	The dynamic brake is malfunctioning.	Check if the error occurs when you turn on the servo-on command.	It occurs.	Replace the servo amplifier.
					It does not occur.	Check (5).
		(5)	The connection destination of the encoder cable is incorrect.	Check if the encoder cable is connected correctly.	It is not correct.	Wire it correctly.
					It is correct.	Check (6).
		(6)	Something near the device caused it.	Check the noise, ambient temperature, etc.	It has a failure.	Take countermeasures against its cause.
		32.2	Overcurrent detected at software detection function (during operation)	(1)	The servo gain is high.	Check if an oscillation is occurring.
An oscillation is not occurring.	Check (2).					
(2)	The servo amplifier is malfunctioning.			Disconnect the servo motor power cables (U, V, and W) and check if the alarm occurs.	It occurs.	Replace the servo amplifier.
					It does not occur.	Check (3).
(3)	A ground fault or short occurred at the servo motor power cable.			Check if only the servo motor power cable is shorted.	It is shorted.	Replace the servo motor power cable.
					It is not shorted.	Check (4).
(4)	The servo motor is malfunctioning.			Disconnect the servo motor power cables on motor side, and check insulation of the motor (between U, V, W, and $\oplus$ ).	A ground fault is occurring.	Replace the servo motor.
					A ground fault is not occurring.	Check (5).
(5)	The connection destination of the encoder cable is incorrect.			Check if the encoder cable is connected correctly.	It is not correct.	Connect it correctly.
					It is correct.	Check (6).
(6)	Something near the device caused it.			Check the noise, ambient temperature, etc.	It has a failure.	Take countermeasures against its cause.
32.3	Overcurrent detected at hardware detection circuit (during a stop)			Check it with the check method for [AL. 32.1].		
32.4	Overcurrent detected at software detection function (during a stop)	Check it with the check method for [AL. 32.2].				

## 8. TROUBLESHOOTING

Alarm No.: 33		Name: Overvoltage				
Alarm content		. The value of the bus voltage exceeded 400 V DC.				
Display	Detail name	Cause	Check method	Check result	Action	
33.1	Main circuit voltage error	(1)	The setting of the regenerative resistor (regenerative option) is incorrect.	Check the regenerative resistor (regenerative option) and [Pr. PA02] setting.	The setting value is incorrect.	Set it correctly.
					It is set correctly.	Check (2).
		(2)	The regenerative resistor (regenerative option) is not connected.	Check if the regenerative resistor (regenerative option) is connected correctly.	It is not connected correctly.	Connect it correctly.
					It is connected correctly.	Check (3).
		(3)	Wire breakage of built-in regenerative resistor or regenerative option	Measure the resistance of the built-in regenerative resistor or regenerative option.	The resistance is abnormal.	When using a built-in regenerative resistor, replace the servo amplifier. When using a regenerative option, replace the regenerative option.
					The resistance is normal.	Check (4).
		(4)	The regeneration capacity is insufficient.	Set a longer deceleration time constant, and then check the repeatability.	It is not repeatable.	When using a built-in regenerative resistor, use a regenerative option. When using a regenerative option, use a larger capacity one.
					It is repeatable.	Check (5).
(5)	Power supply voltage high.	Check the input voltage.	It is over 264 V AC.	Reduce the input voltage.		
			It is 264 V AC or less.	Check (6).		
(6)	Something near the device caused it.	Check the noise, ambient temperature, etc.	It has a failure.	Take countermeasures against its cause.		

Alarm No.: 35		Name: Command frequency error				
Alarm content		. Input pulse frequency of command pulse is too high.				
Display	Detail name	Cause	Check method	Check result	Action	
35.1	Command frequency error	(1)	The command pulse frequency is high.	Check the command pulse frequency.	The command pulse frequency is high.	Check operation pattern.
					The command pulse frequency is low.	Check (2).
		(2)	Something near the device caused it.	Check the noise, ambient temperature, etc.	It has a failure.	Take countermeasures against its cause.

Alarm No.: 37		Name: Parameter error				
Alarm content		. Parameter setting is incorrect.				
Display	Detail name	Cause	Check method	Check result	Action	
37.1	Parameter setting range error	(1)	A parameter was set out of setting range.	Check the parameter error No. and setting value.	It is out of setting range.	Set it within the range.
					It is within the setting range.	Check (2).
		(2)	The parameter setting has changed due to a servo amplifier malfunction.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.

## 8. TROUBLESHOOTING

37.2	Parameter combination error	(1)	A parameter setting contradicts another.	Check the parameter error No. and setting value.	A setting value is incorrect.	Correct the setting value.
------	-----------------------------	-----	--	--	-------------------------------	----------------------------

Alarm No.: 45		Name: Main circuit device overheat				
Alarm content		. Inside of the servo amplifier overheated.				
Display	Detail name	Cause	Check method	Check result	Action	
45.1	Main circuit device overheat error	(1)	Ambient temperature has exceeded 55 °C.	Check the ambient temperature.	It is over 55 °C.	Lower the ambient temperature.
					It is less than 55 °C.	Check (2).
		(2)	The close mounting is out of specifications.	Check the specifications of close mounting.	It is out of specifications.	Use within the range of specifications.
					It is within specifications.	Check (3).
		(3)	Turning on and off were repeated under the overload status.	Check if the overload status occurred many times.	It occurred.	Check operation pattern.
					It did not occur.	Check (4).
(4)	A cooling fan, heat sink, or openings is clogged with foreign matter.	Clean the cooling fan, heat sink, or openings, and then check the repeatability.	It is not repeatable.	Clean it periodically.		
			It is repeatable.	Check (5).		
(5)	The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.		

Alarm No.: 46		Name: Servo motor overheat				
Alarm content		. The servo motor overheated.				
Display	Detail name	Cause	Check method	Check result	Action	
46.1	Abnormal temperature of servo motor 1	(1)	Ambient temperature of the servo motor has exceeded 40 °C.	Check the ambient temperature of the servo motor.	It is over 40 °C.	Lower the ambient temperature.
					It is less than 40 °C.	Check (2).
		(2)	Servo motor is overloaded.	Check the effective load ratio.	The effective load ratio is high.	Reduce the load or review the operation pattern.
					The effective load ratio is small.	Check (3).
(3)	The thermal sensor in the encoder is malfunctioning.	Check the servo motor temperature when the alarm occurs.	The servo motor temperature is low.	Replace the servo motor.		
46.5	Abnormal temperature of servo motor 3	Check it with the check method for [AL. 46.1].				
46.6	Abnormal temperature of servo motor 4	(1)	A current was applied to the servo amplifier in excess of its continuous output current.	Check the effective load ratio.	The effective load ratio is high.	Reduce the load or review the operation pattern. Or use a larger capacity motor.

Alarm No.: 47		Name: Cooling fan error				
Alarm content		<ul style="list-style-type: none"> <li>The speed of the servo amplifier cooling fan decreased.</li> <li>Or the cooling fan speed decreased to the alarm occurrence level or less.</li> </ul>				
Display	Detail name	Cause	Check method	Check result	Action	
47.2		(1)	Foreign matter was caught in the cooling fan.	Something has been caught.	Remove the foreign matter.	

## 8. TROUBLESHOOTING

	Cooling fan speed reduction error		Check if a foreign matter is caught in the cooling fan.	Nothing has been caught.	Check (2).
	(2)	Cooling fan life expired.	Check the cooling fan speed.	The fan speed is less than the alarm occurrence level.	Replace the servo amplifier.

Alarm No.: 50		Name: Overload 1				
Alarm content		. Load exceeded overload protection characteristic of servo amplifier.				
Display	Detail name	Cause	Check method	Check result	Action	
50.1	Thermal overload error 1 during operation	(1)	The servo motor power cable was disconnected.	Check the servo motor power cable.	It is disconnected.	Repair or replace the servo motor power cable.
				It is not disconnected.	Check (2).	
		(2)	The connection of the servo motor is incorrect.	Check the wiring of U, V, and W.	It is incorrect.	Connect it correctly.
					It is correct.	Check (3).
		(3)	The electromagnetic brake has not released. (The electromagnetic brake has been activated.)	Check if the electromagnetic brake is released during operation.	It is not released.	Release the electromagnetic brake.
					It is released.	Check (4).
		(4)	A current was applied to the servo amplifier in excess of its continuous output current.	Check the effective load ratio.	The effective load ratio is high.	Reduce the load. Or use a larger capacity motor.
					The effective load ratio is small.	Check (5).
(5)	The connection destination of the encoder cable is incorrect.	Check if the encoder cable is connected correctly.	It is not correct.	Connect it correctly.		
			It is correct.	Check (6).		
(6)	The servo system is unstable and resonating.	Check if it is resonating.	It is resonating.	Adjust gains.		
			It is not resonating.	Check (7).		
(7)	The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.		
			It is repeatable.	Check (8).		
(8)	An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.		
50.2	Thermal overload error 2 during operation	Check it with the check method for [AL. 50.1].				
50.3	Thermal overload error 4 during operation					

Alarm No.: 50		Name: Overload 1				
Alarm content		. Load exceeded overload protection characteristic of servo amplifier.				
Display	Detail name	Cause	Check method	Check result	Action	
50.4	Thermal overload error 1 during a stop	(1)	A moving part collided against the machine.	Check if it collided.	It collided.	Check operation pattern.
				It did not collide.	Check (2).	
		(2)	The servo motor power cable was disconnected.	Check the servo motor power cable.	It is disconnected.	Repair or replace the servo motor power cable.
					It is not disconnected.	Check (3).



## 8. TROUBLESHOOTING

		(3)	Hunting occurs during servo-lock.	Check if the hunting is occurring.	The hunting is occurring.	Adjust gains.
					The hunting is not occurring.	Check (4).
		(4)	The electromagnetic brake has not released. (The electromagnetic brake has been activated.)	Check if the electromagnetic brake is released.	It is not released.	Release the electromagnetic brake.
				It is released.	Check (5).	
		(5)	A current was applied to the servo amplifier in excess of its continuous output current.	Check the effective load ratio.	The effective load ratio is high.	Reduce the load. Or use a larger capacity motor.
				The effective load ratio is small.	Check (6).	
		(6)	The connection destination of the encoder cable is incorrect.	Check if the encoder cable is connected correctly.	It is not correct.	Connect it correctly.
				It is correct.	Check (7).	
		(7)	The servo system is unstable and resonating.	Check if it is resonating.	It is resonating.	Adjust gains.
		It is not resonating.	Check (8).			
		(8)	The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.
				It is repeatable.	Check (9).	
		(9)	An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.
50.5	Thermal overload error 2 during a stop	Check it with the check method for [AL. 50.4].				
50.6	Thermal overload error 4 during a stop					

Alarm No.: 51		Name: Overload 2				
Alarm content		. Maximum output current flowed continuously due to machine collision or the like.				
Display	Detail name	Cause	Check method	Check result	Action	
51.1	Thermal overload error 3 during operation	(1)	The servo motor power cable was disconnected.	Check the servo motor power cable.	It is disconnected.	Repair or replace the servo motor power cable.
					It is not disconnected.	Check (2).
		(2)	The connection of the servo motor is incorrect.	Check the wiring of U, V, and W.	It is incorrect.	Connect it correctly.
					It is correct.	Check (3).
		(3)	The connection of the encoder cable is incorrect.	Check if the encoder cable is connected correctly.	It is incorrect.	Connect it correctly.
					It is correct.	Check (4).
		(4)	The torque is insufficient.	Check the peak load ratio.	The torque is saturated.	Reduce the load or review the operation pattern. Or use a larger capacity motor.
					The torque is not saturated.	Check (5).
		(5)	The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.
					It is repeatable.	Check (6).

## 8. TROUBLESHOOTING

		(6)	An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.
51.2	Thermal overload error 3 during a stop	(1)	A moving part collided against the machine.	Check if it collided.	It collided.	Check operation pattern.
					It did not collide.	Refer to (2).
		(2)	The servo motor power cable was disconnected.	Check it with the check method for [AL. 51.1].		
		(3)	The connection of the servo motor is incorrect.			
		(4)	The connection of the encoder cable is incorrect.			
		(5)	The torque is saturated.			
		(6)	The servo amplifier is malfunctioning.			
(7)	An encoder is malfunctioning.					

Alarm No.: 52		Name: Error excessive				
Alarm content		. Droop pulses have exceeded the alarm occurrence level.				
Display	Detail name	Cause		Check method	Check result	Action
52.1	Excess droop pulse 1	(1)	The servo motor power cable was disconnected.	Check the servo motor power cable.	It is disconnected.	Repair or replace the servo motor power cable.
					It is not disconnected.	Check (2).
		(2)	The connection of the servo motor is incorrect.	Check the wiring of U, V, and W.	It is incorrect.	Connect it correctly.
					It is correct.	Check (3).
		(3)	The connection of the encoder cable is incorrect.	Check if the encoder cable is connected correctly.	It is incorrect.	Connect it correctly.
					It is correct.	Check (4).
		(4)	The torque limit has been enabled.	Check if the limiting torque is in progress.	The limiting torque is in progress.	Increase the torque limit value.
					The limiting torque is not in progress.	Check (5).
		(5)	A moving part collided against the machine.	Check if it collided.	It collided.	Check operation pattern.
					It did not collide.	Check (6).
		(6)	The torque is insufficient.	Check the peak load ratio.	The torque is saturated.	Reduce the load or review the operation pattern. Or use a larger capacity motor.
					The torque is not saturated.	Check (7).
		(7)	Power supply voltage dropped.	Check the bus voltage value.	The bus voltage is low.	Check the power supply voltage and power supply capacity.
					The bus voltage is high.	Check (8).
(8)	Acceleration/deceleration time constant is too short.	Set a longer deceleration time constant, and then check the repeatability.	It is not repeatable.	Increase the acceleration/deceleration time constant.		
			It is repeatable.	Check (9).		
				It is not repeatable.	Increase the position loop gain ([Pr. PB08]).	

## 8. TROUBLESHOOTING

		(9)	The position loop gain is small.	Increase the position loop gain, and then check the repeatability.	It is repeatable.	Check (10).
		(10)	Servo motor shaft was rotated by external force.	Measure the actual position under the servolock status.	It is rotated by external force.	Review the machine.
					It is not rotated by external force.	Check (11).
		(11)	An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.
52.3	Excess droop pulse 2	Check it with the check method for [AL. 52.1].				
52.4	Error excessive during 0 torque limit	(1)	The torque limit has been 0.	Check the torque limit value.	The torque limit has been 0.	Do not input a command while the torque limit value is 0.
52.5	Excess droop pulse 3	Check it with the check method for [AL. 52.1].				

Alarm No.: 54		Name: Oscillation detection				
Alarm content		. An oscillation of the servo motor was detected.				
Display	Detail name	Cause	Check method	Check result	Action	
54.1	Oscillation detection error	(1)	The servo system is unstable and oscillating.	Check if the servo motor is oscillating. Check the torque ripple with MR Configurator2.	The torque ripple is vibrating.	Adjust the servo gain with the auto tuning. Set the machine resonance suppression filter.
				The torque ripple is not vibrating.	Check (2).	
		(2)	The resonance frequency has changed due to deterioration.	Measure the resonance frequency of the equipment and compare it with the setting value of the machine resonance suppression filter.	The resonance frequency of the equipment is different from the filter setting value.	Change the setting value of the machine resonance suppression filter.
					The resonance frequency of the equipment is the same as the filter setting value.	Check (3).
(3)	An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.		

Alarm No.: 56		Name: Forced stop error				
Alarm content		. The servo motor does not decelerate normally during forced stop deceleration.				
Display	Detail name	Cause	Check method	Check result	Action	
56.2	Over speed during forced stop	(1)	The forced stop deceleration time constant is short.	Increase the parameter setting value of [Pr. PC51], and then check the repeatability.	It is not repeatable.	Adjust the deceleration time constant.
				It is repeatable.	Check (2).	
		(2)	The torque limit has been enabled.	Check if the limiting torque is in progress.	The limiting torque is in progress.	Review the torque limit value.
					The limiting torque is not in progress.	Check (3).
		(3)		Check if the servo motor is oscillating.	The torque ripple is vibrating.	Adjust the servo gain. Set the machine resonance suppression filter.

## 8. TROUBLESHOOTING

			The servo system is unstable and oscillating.	Check the torque ripple with MR Configurator2.	The torque ripple is not vibrating.	Check (4).
		(4)	An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.
56.3	Estimated distance over during forced stop	(1)	The forced stop deceleration time constant is short.	Increase the parameter setting value of [Pr. PC51], and then check the repeatability.	It is not repeatable.	Adjust the deceleration time constant.
					It is repeatable.	Check (2).
		(2)	The torque limit has been enabled.	Check if the limiting torque is in progress.	The limiting torque is in progress.	Review the torque limit value.
The limiting torque is not in progress.	Check (3).					
		(3)	An encoder is malfunctioning.	Replace the servo motor, and then check the repeatability.	It is not repeatable.	Replace the servo motor.

Alarm No.: 8A		Name: USB communication time-out error				
Alarm content		. Communication between the servo amplifier and a personal computer, etc. stopped for the specified time or longer.				
Display	Detail name	Cause	Check method	Check result	Action	
8A.1	USB communication time-out error	(1)	Communication commands have not been transmitted.	Check if a command was transmitted from the personal computer, etc.	It was not transmitted.	Transmit a command.
					It was transmitted.	Check (2).
		(2)	A USB cable was disconnected.	Replace the USB cable, and then check the repeatability.	It is not repeatable.	Replace the USB cable.
It is repeatable.	Check (3).					
	(3)	The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.	

Alarm No.: 8E		Name: USB communication error				
Alarm content		. A communication error occurred between servo amplifier and a personal computer, etc.				
Display	Detail name	Cause	Check method	Check result	Action	
8E.1	USB communication receive error	(1)	A USB cable is malfunctioning.	Check the USB cable, and then check the repeatability.	It is not repeatable.	Replace the USB cable.
					It is repeatable.	Check (2).
		(2)	The setting of the personal computer, etc. is incorrect.	Check the setting of the personal computer, etc.	It is incorrect.	Review the settings.
It is correct.	Check (3).					
	(3)	The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.	
8E.2	USB communication checksum error	(1)	The setting of the personal computer, etc. is incorrect.	Check the setting of the personal computer, etc.	It is incorrect.	Review the settings.
8E.3	USB communication character error	(1)	The transmitted character is out of specifications.	Check the character code at the time of transmission.	The transmitted character is out of specifications.	Correct the transmission data.
					The transmitted character is within specifications.	Check (2).

## 8. TROUBLESHOOTING

		(2)	The communication protocol is failure.	Check if transmission data conforms the communication protocol.	It is not conforming.	Modify the transmission data according to the communication protocol.
					It is conforming.	Check (3).
		(3)	The setting of the personal computer, etc. is incorrect.	Check the setting of the personal computer, etc.	It is incorrect.	Review the settings.
8E.4	USB communication command error	(1)	The transmitted command is out of specifications.	Check the command at the time of transmission.	The transmitted command is out of specifications.	Correct the transmission data.
					The transmitted command is within specifications.	Check (2).
		(2)	The communication protocol is failure.	Check if transmission data conforms the communication protocol.	It is not conforming.	Modify the transmission data according to the communication protocol.
					It is conforming.	Check (3).
		(3)	The setting of the personal computer, etc. is incorrect.	Check the setting of the personal computer, etc.	It is incorrect.	Review the settings.

Alarm No.: 8E		Name: USB communication error				
Alarm content		. A communication error occurred between servo amplifier and a personal computer, etc.				
Display	Detail name	Cause	Check method	Check result	Action	
8E.5	USB communication data number error	(1)	The transmitted data number is out of specifications.	Check the data number at the time of transmission.	The transmitted data number is out of specifications.	Correct the transmission data.
					The transmitted data number is within specifications.	Check (2).
		(2)	The communication protocol is failure.	Check if transmission data conforms the communication protocol.	It is not conforming.	Modify the transmission data according to the communication protocol.
					It is conforming.	Check (3).
		(3)	The setting of the personal computer, etc. is incorrect.	Check the setting of the personal computer, etc.	It is incorrect.	Review the settings.

Alarm No.: 8888		Name: Watchdog				
Alarm content		. A part such as CPU is malfunctioning.				
Display	Detail name	Cause	Check method	Check result	Action	
8888_	Watchdog	(1) A part in the servo amplifier is failure.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.	

## 8. TROUBLESHOOTING

### 8.3 Remedies for warnings

POINT
<p>● If the following alarms has occurred, do not cycle the power of the inverter repeatedly to restart. Doing so will cause a malfunction of the inverter and servo motor. If the power of the servo amplifier is switched off after the alarms, allow more than 30 minutes for cooling before resuming operation.</p> <ul style="list-style-type: none"> <li>• [AL. E0 Excessive regeneration warning]</li> <li>• [AL. E1 Overload warning 1]</li> <li>• [AL. EC Overload warning 2]</li> </ul>

If [AL. E6] or [AL. E9] occurs, the amplifier will be the servo-off status. If any other warning occurs, operation can be continued but an alarm may take place or proper operation may not be performed. Remove the cause of warning according to this section. Use MR Configurator2 to refer to the cause of warning occurrence.

Alarm No.: 91		Name: Servo amplifier overheat warning			
Alarm content		The temperature inside of the servo amplifier reached a warning level.			
Display	Detail name	Cause	Check method	Check result	Action
91.1	Main circuit device overheat warning	(1) Ambient temperature of the servo amplifier has exceeded 55 °C.	Check the ambient temperature.	It is over 55 °C.	Lower the ambient temperature.
				It is less than 55 °C.	Check (2).
		(2) The close mounting is out of specifications.	Check the specifications of close mounting.	It is out of specifications.	Use within the range of specifications.

Alarm No.: 99		Name: Stroke limit warning			
Alarm content		The stroke limit signal is off.			
Display	Detail name	Cause	Check method	Check result	Action
99.1	Forward rotation stroke end off	(1) The forward rotation stroke limit switch has not connected.	Check if the limit switch is connected correctly.	It is not connected.	Connect it correctly.
				It is connected.	Check (2).
		(2) The forward rotation stroke limit was exceeded during driving.	Check if the forward rotation stroke limit switch turned off.	It turned off.	Check operation pattern.
99.2	Reverse rotation stroke end off	(1) The reverse rotation stroke limit switch has not connected.	Check if the limit switch is connected correctly.	It is not connected.	Connect it correctly.
				It is connected.	Check (2).
		(2) The reverse rotation stroke limit was exceeded during driving.	Check if the reverse rotation stroke limit switch turned off.	It turned off.	Check operation pattern.

Alarm No.: E0		Name: Excessive regeneration warning			
Alarm content		There is a possibility that regenerative power may exceed permissible regenerative power of built-in regenerative resistor or regenerative option.			
Display	Detail name	Cause	Check method	Check result	Action

## 8. TROUBLESHOOTING

E0.1	Excessive regeneration warning	(1)	The regenerative power exceeded 85% of the permissible regenerative power of the built-in regenerative resistor or regenerative option.	Check the effective load ratio.	It is 85% or more.	Reduce the frequency of positioning. Increase the deceleration time constant. Reduce the load. Use a regenerative option if it is not being used.
------	--------------------------------	-----	---	---------------------------------	--------------------	--

Alarm No.: E1		Name: Overload warning 1				
Alarm content		. [AL.50 Overload 1] or [AL.51 Overload 2] may occur.				
Display	Detail name		Cause	Check method	Check result	Action
E1.1	Thermal overload warning 1 during operation	(1)	The load was over 85% to the alarm level of [AL. 50.1 Thermal overload error 1 during operation].	Check it with the check method for [AL. 50.1].		
E1.2	Thermal overload warning 2 during operation	(1)	The load was over 85% to the alarm level of [AL. 50.2 Thermal overload error 2 during operation].	Check it with the check method for [AL. 50.2].		
E1.3	Thermal overload warning 3 during operation	(1)	The load was over 85% to the alarm level of [AL. 51.1 Thermal overload error 3 during operation].	Check it with the check method for [AL. 51.1].		
E1.4	Thermal overload warning 4 during operation	(1)	The load was over 85% to the alarm level of [AL. 50.3 Thermal overload error 4 during operation].	Check it with the check method for [AL. 50.3].		
E1.5	Thermal overload error 1 during a stop	(1)	The load was over 85% to the alarm level of [AL. 50.4 Thermal overload error 1 during a stop].	Check it with the check method for [AL. 50.4].		
E1.6	Thermal overload error 2 during a stop	(1)	The load was over 85% to the alarm level of [AL. 50.5 Thermal overload error 2 during a stop].	Check it with the check method for [AL. 50.5].		
E1.7	Thermal overload error 3 during a stop	(1)	The load was over 85% to the alarm level of [AL. 51.2 Thermal overload error 3 during operation].	Check it with the check method for [AL. 51.2].		
E1.8	Thermal overload error 4 during a stop	(1)	The load was over 85% to the alarm level of [AL. 50.6 Thermal overload error 4 during a stop].	Check it with the check method for [AL. 50.6].		

Alarm No.: E6		Name: Servo forced stop warning				
Alarm content		. EM2/EM1 (Forced stop) turned off.				
Display	Detail name		Cause	Check method	Check result	Action
E6.1	Forced stop warning	(1)	EM2/EM1 (Forced stop) turned off.	Check the status of EM2/EM1.	It is off.	Ensure safety and turn on EM2/EM1 (Forced stop).
					It is on.	Check (2).
					It is not inputted.	Input the 24 V DC power supply.

## 8. TROUBLESHOOTING

	(2)	An external 24 V DC power supply have not inputted.	Check if the external 24 V DC power supply is inputted.	It is inputted.	Check (3).
	(3)	The servo amplifier is malfunctioning.	Replace the servo amplifier, and then check the repeatability.	It is not repeatable.	Replace the servo amplifier.

Alarm No.: E8		Name: Cooling fan speed reduction warning				
Alarm content		. The cooling fan speed decreased to the warning occurrence level or less.				
Display	Detail name	Cause	Check method	Check result	Action	
E8.1	Decreased cooling fan speed warning	(1)	Foreign matter was caught in the cooling fan.	Check if a foreign matter is caught in the cooling fan.	Something has been caught. Nothing has been caught.	Remove the foreign matter. Check (2).
		(2)	Cooling fan life expired.	Check the total of power on time of the servo amplifier.	It exceed the cooling fan life.	Replace the servo amplifier.

Alarm No.: E9		Name: Main circuit off warning				
Alarm content		<ul style="list-style-type: none"> <li>The servo-on command was inputted with power supply off.</li> <li>The bus voltage dropped during the servo motor driving under 50 r/min.</li> </ul>				
Display	Detail name	Cause	Check method	Check result	Action	
E9.1	Servo-on signal on during main circuit off	(1)	The bus voltage is less than 215 V DC.	Check the bus voltage.	It is less than 215 V DC.	Review the wiring. Check the power supply capacity.
		(2)	The servo amplifier is malfunctioning.	Check the bus voltage value.	The voltage of the power supply is 160 V AC or more, and the bus voltage is less than 200 V DC.	Replace the servo amplifier.
E9.2	Bus voltage drop during low speed operation	(1)	The bus voltage dropped during the servo motor driving under 50 r/min.	Check the bus voltage.	It is less than 200 V DC.	Review the power supply capacity. Increase the acceleration time constant.

Alarm No.: EC		Name: Overload warning 2				
Alarm content		. Operations over rated output were repeated while the servo motor shaft was not rotated.				
Display	Detail name	Cause	Check method	Check result	Action	
EC.1	Overload warning 2	(1)	The load is too large or the capacity is not enough.	Check the effective load ratio.	The effective load ratio is high.	Reduce the load. Replace the servo motor with the one of larger capacity.

Alarm No.: ED		Name: Output watt excess warning				
Alarm content		. The status, in which the output wattage (speed x torque) of the servo motor exceeded the rated output, continued steadily.				
Display	Detail name	Cause	Check method	Check result	Action	
ED.1	Output watt excess warning	(1)	The status, in which the output wattage (speed x torque) of the servo motor exceeded 150% of the rated output, continued steadily.	Check the servo motor speed and torque.	The output wattage is 150% of rating.	Reduce the servo motor speed. Reduce the load.



## 8. TROUBLESHOOTING

Alarm No.: F0		Name: Tough drive warning				
Alarm content		. Tough drive function was activated.				
Display	Detail name	Cause	Check method	Check result	Action	
F0.1	Instantaneous power failure tough drive warning	(1) The power supply voltage dropped.	Check it with the check method for [AL. 10.1].			
F0.3	Vibration tough drive warning	(1) The setting value of the machine resonance suppression filter was changed due to a machine resonance.	Check if it was changed frequently.	It was changed frequently.	Set the machine resonance suppression filter. Check the machine status if screws are loose or the like.	

Alarm No.: F2		Name: Drive recorder - Miswriting warning				
Alarm content		. A waveform measured by the drive recorder function was not recorded.				
Display	Detail name	Cause	Check method	Check result	Action	
F2.1	Drive recorder - Area writing time-out warning	(1) The Flash-ROM is malfunctioning.	Disconnect the cables except the power supply, and then check the repeatability.	It is repeatable.	Replace the servo amplifier.	
F2.2	Drive recorder - Data miswriting warning	(1) Data were not written to the drive recorder area.	Check if the records have all written.	They have all written.	Delete the records in the drive recorder window of MR Configurator2. If records cannot be written after deletion, replace the servo amplifier.	

Alarm No.: F3		Name: Oscillation detection warning				
Alarm content		. [AL. 54 Oscillation detection] may occur.				
Display	Detail name	Cause	Check method	Check result	Action	
F3.1	Oscillation detection warning	Check it with the check method for [AL. 54.1].				



## 8. TROUBLESHOOTING

---

---

---

---

---

---

---






# 9. DIMENSIONS



## 9. DIMENSIONS

### 9.1 Servo amplifier


#### (1) MR-JE-10A to MR-JE-40A

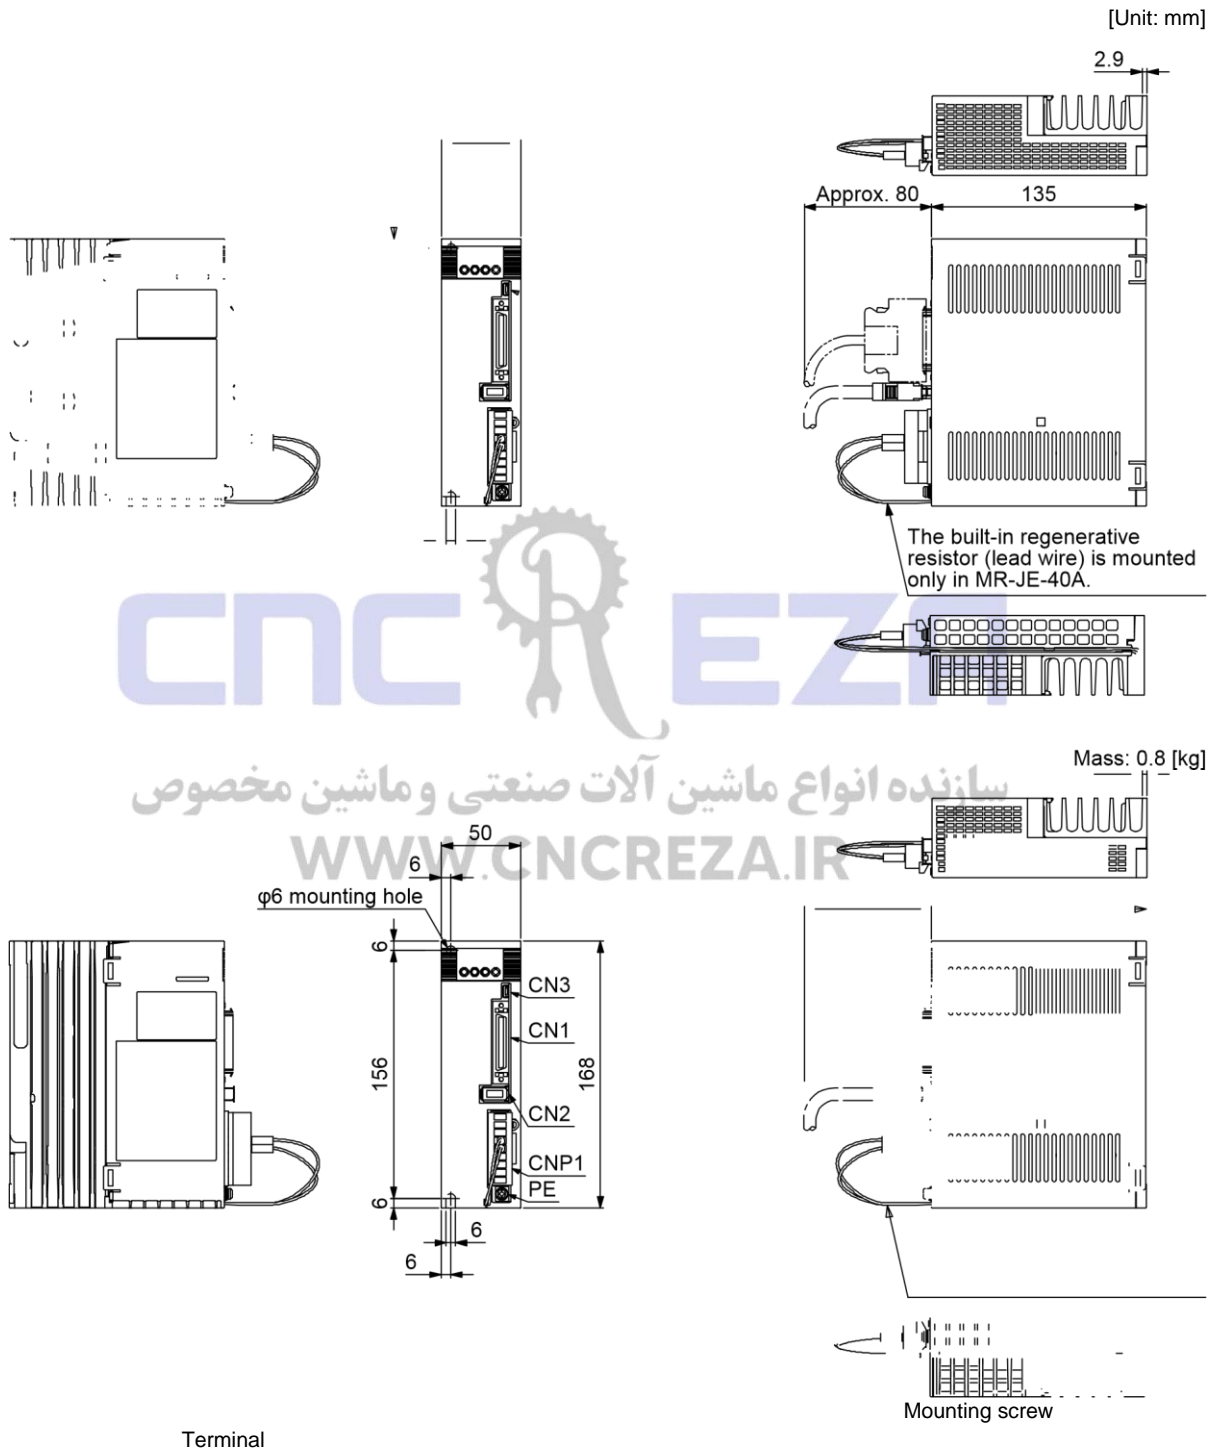


# 9. DIMENSIONS

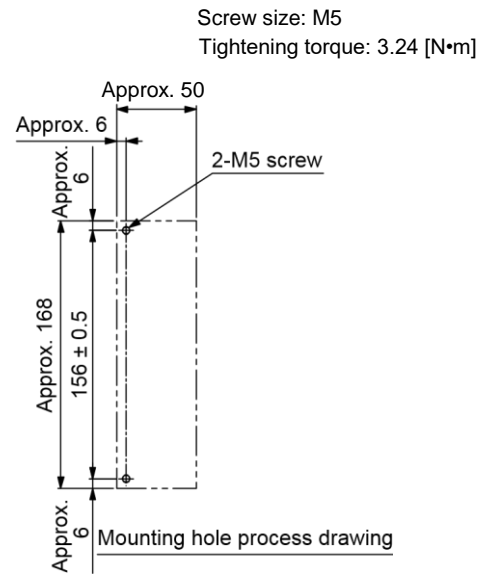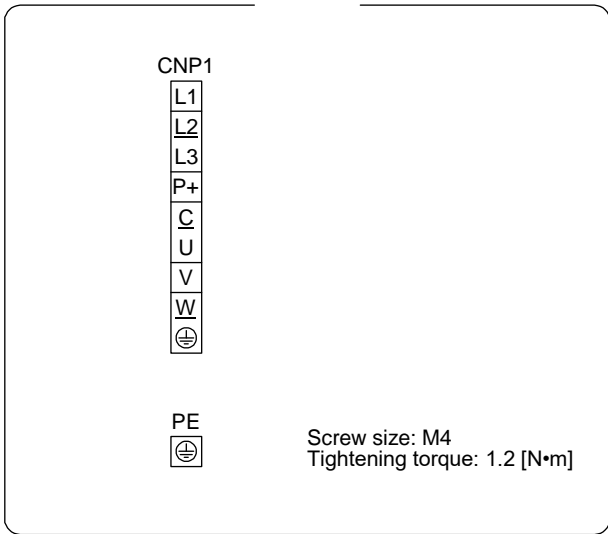


(2) MR-JE-70A/MR-JE-100A

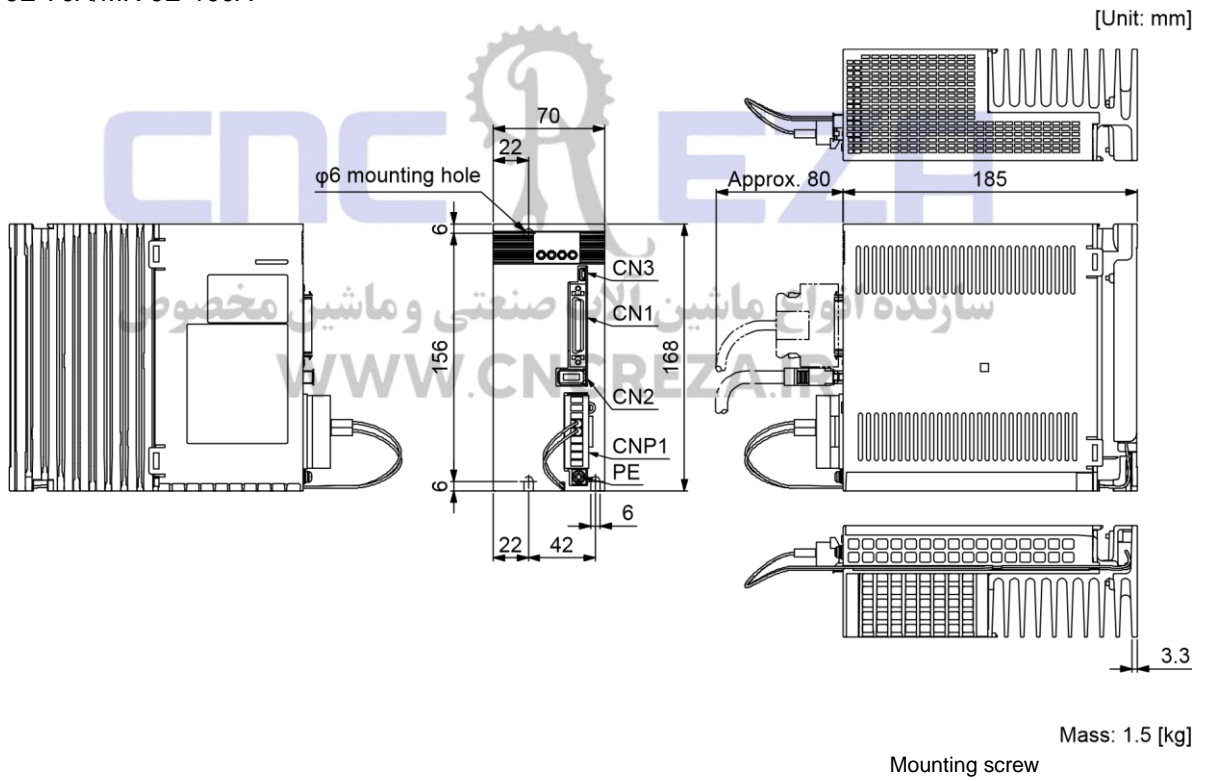


# 9. DIMENSIONS

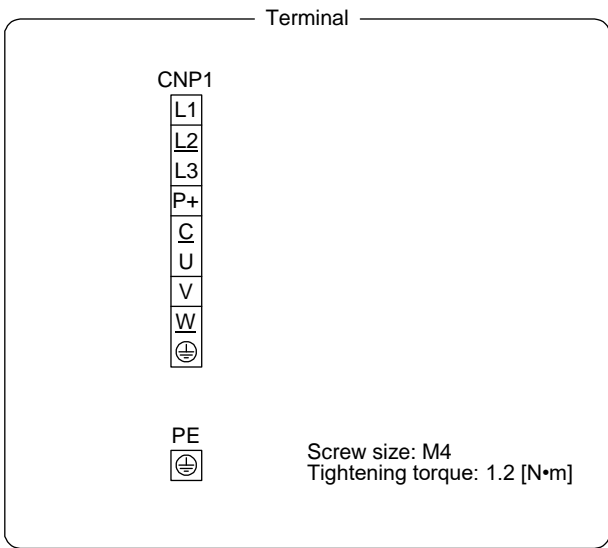


Screw size: M5  
Tightening torque: 3.24 [N·m]

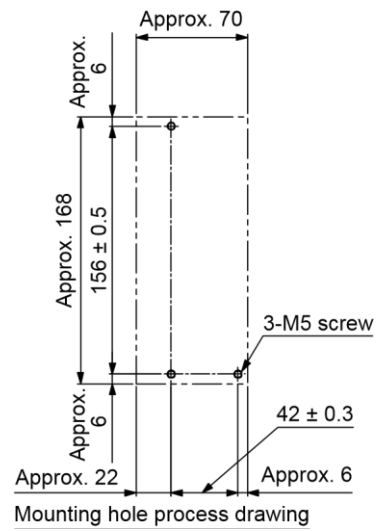


(3) MR-JE-200A/MR-JE-300A

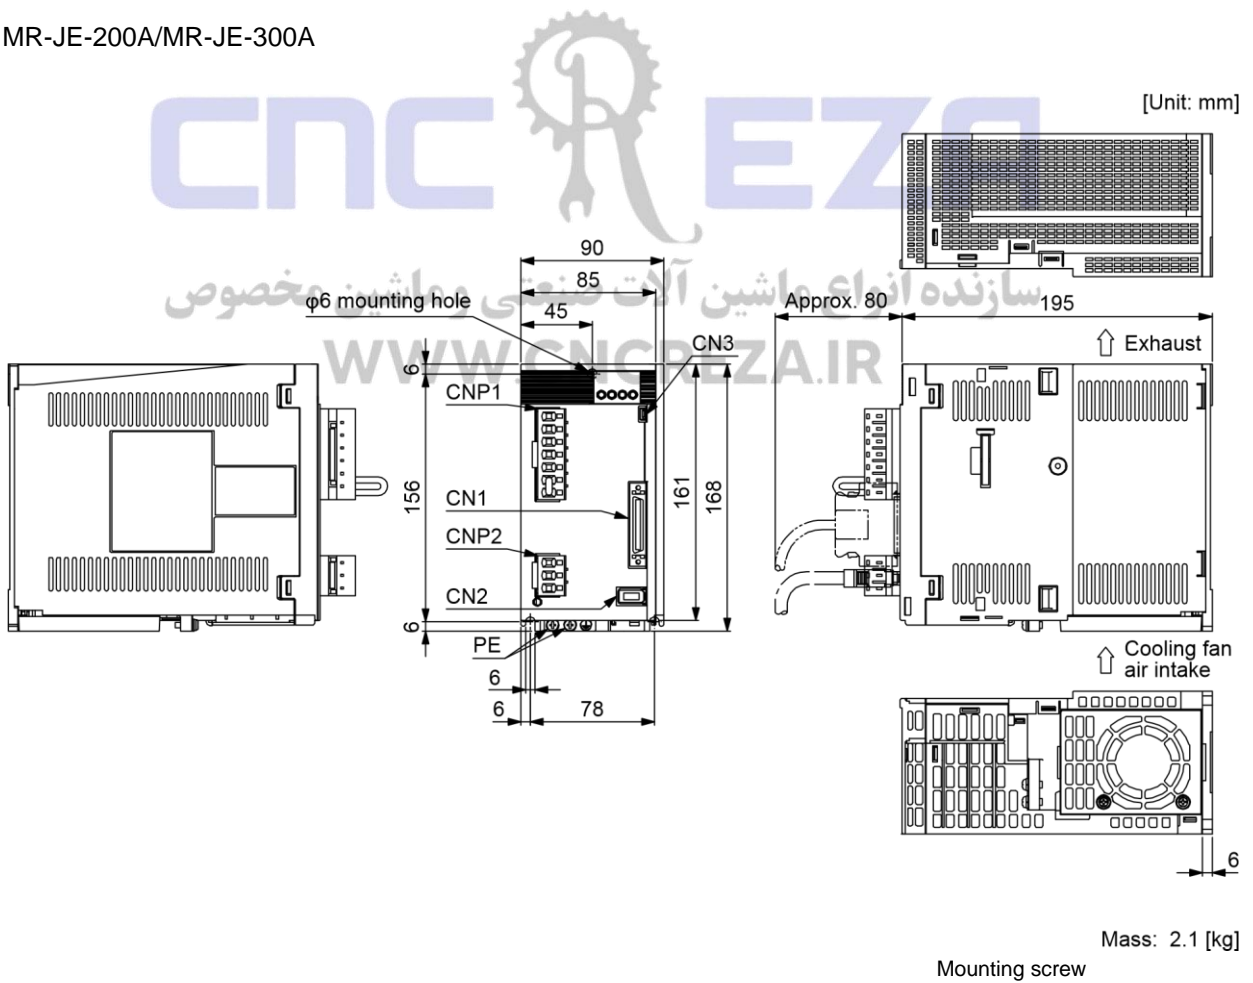

## 9. DIMENSIONS

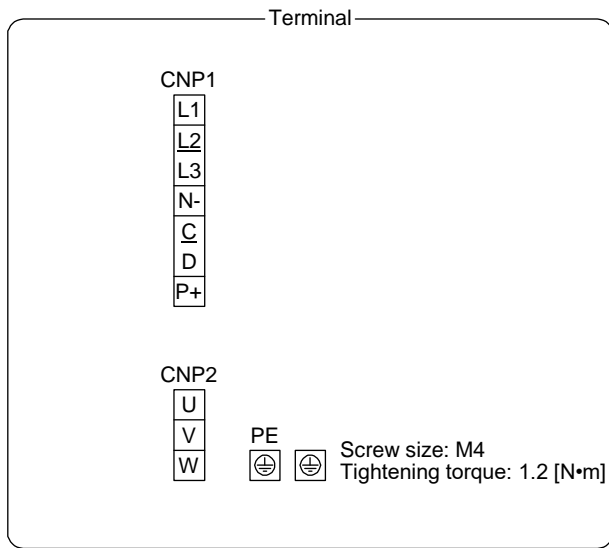


Screw size: M5  
Tightening torque: 3.24 [N•m]

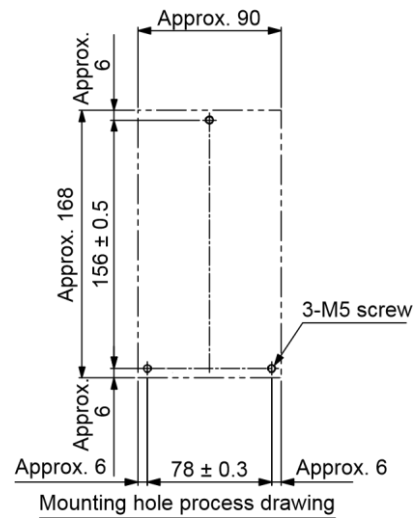


### 9.2 Connector

- (1) Miniature delta ribbon (MDR) system (3M)  
(a) One-touch lock type

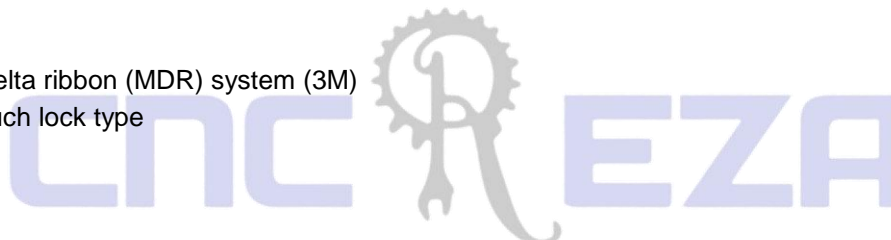

A  
C  
[Unit: mm]

سازندگان انواع ماشین آلات صنعتی و ماشین مخصوص  
WWW.CNCREZA.COM

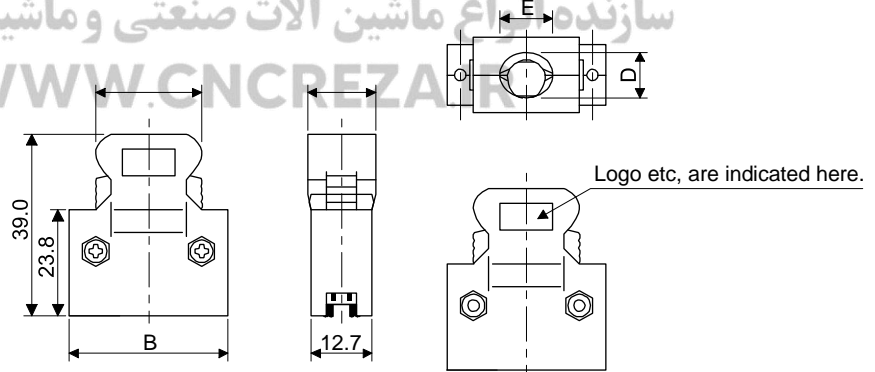


Connector	Shell kit	Variable dimensions				
		A	B	C	D	E
10150-3000PE	10350-52F0-008	41.1	52.4	18.0	14.0	17.0

- (b) Jack screw M2.6 type  
This is not available as option.





## 9. DIMENSIONS

[Unit: mm]

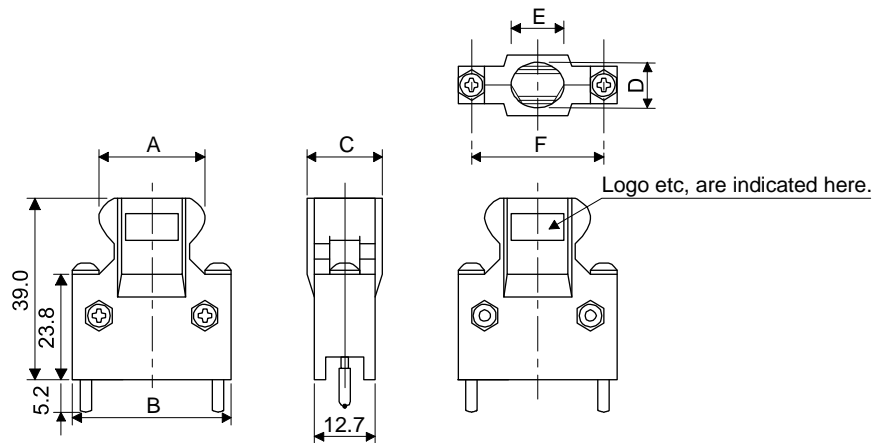

Connector	Shell kit	Variable dimensions					
		A	B	C	D	E	F
10150-3000PE	10350-52A0-008	41.1	52.4	18.0	14.0	17.0	46.5

- (2) SCR connector system (3M)  
 Receptacle: 36210-0100PL  
 Shell kit: 36310-3200-008

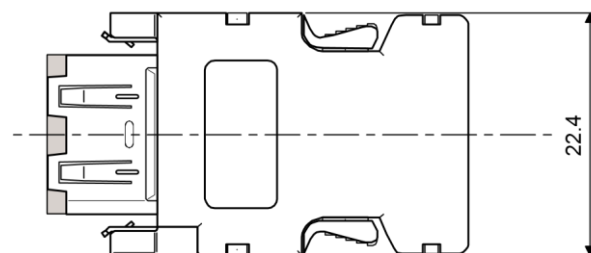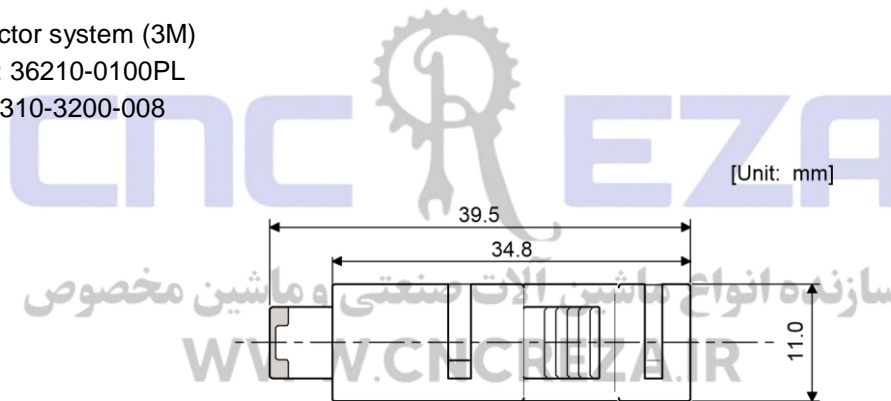



## 9. DIMENSIONS

---

---

---

---

---

---

---

---

---

---





## 10. CHARACTERISTICS

---

### 10. CHARACTERISTICS

#### 10.1 Overload protection characteristics



An electronic thermal is built in the servo amplifier to protect the servo motor, servo amplifier and servo motor power wires from overloads.

[AL. 50 Overload 1] occurs if overload operation performed is above the electronic thermal protection curve shown in fig. 10.1. [AL. 51 Overload 2] occurs if the maximum current is applied continuously for several seconds due to machine collision, etc. Use the equipment on the left-side area of the continuous or broken line in the graph.

For the system where the unbalanced torque occurs, such as a vertical axis system, it is recommended that the unbalanced torque of the machine be kept at 70% or less of the motor's rated torque.

This servo amplifier has servo motor overload protective function. (The servo motor overload current (full load current) is set on the basis of 120% rated current of the servo amplifier.)

# 10. CHARACTERISTICS

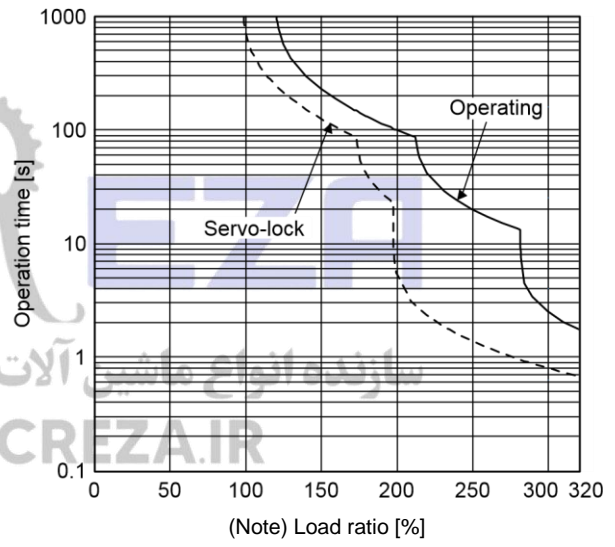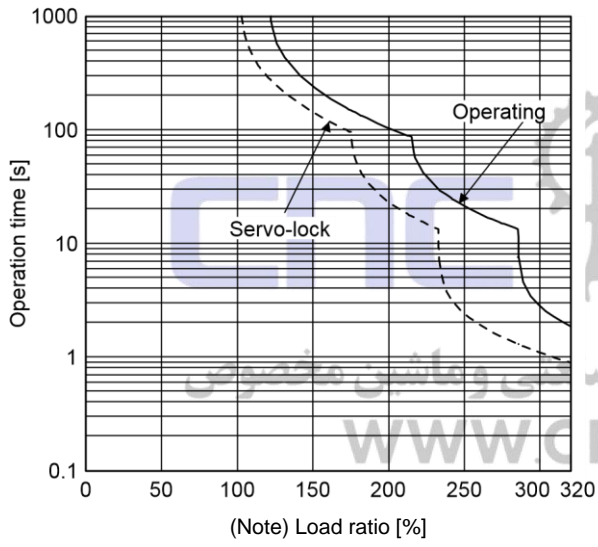

## 10. CHARACTERISTICS

---

HF-KN13, HF-KN23, HF-KN43  
HF-KN73, HF-SN52, HF-SN102

HF-SN152, HF-SN202, HF-SN302

Note. If operation that generates torque more than 100% of the rating is performed with an abnormally high frequency in a servo motor stop status (servo-lock status) or in a 30 r/min or less low-speed operation status, the servo amplifier may malfunction regardless of the electronic thermal protection.

Fig. 10.1 Electronic thermal protection characteristics



# 10. CHARACTERISTICS

## 10.2 Power supply capacity and generated loss

### (1) Amount of heat generated by the servo amplifier

Table 10.1 indicates servo amplifiers' power supply capacities and losses generated under rated load. For thermal design of an enclosed type cabinet, use the values in the table in consideration for the worst operating conditions. The actual amount of generated heat will be intermediate between values at rated torque and servo-off according to the duty used during operation. When the servo motor is run at less than the rated speed, the power supply capacity will be smaller than the value in the table, but the servo amplifier's generated heat will not change.

Table 10.1 Power supply capacity and generated loss per servo motor at rated output

Servo amplifier	Servo motor	(Note 1) Power supply capacity [kVA]	(Note 2) Servo amplifier generated heat [W]		Area required for heat dissipation [m <sup>2</sup> ]
			At rated output	With servo-off	
MR-JE-10A	HF-KN13	0.3	25	15	0.5
MR-JE-20A	HF-KN23	0.5	25	15	0.5
MR-JE-40A	HF-KN43	0.9	35	15	0.7
MR-JE-70A	HF-KN73	1.3	50	15	1.0
	HF-SN52	1.0	40	15	0.8
MR-JE-100A	HF-SN102	1.7	50	15	1.0
MR-JE-200A	HF-SN152	2.5	90	20	1.8
	HF-SN202	3.5			
MR-JE-300A	HF-SN302	4.8	120	20	2.4

Note 1. Note that the power supply capacity will vary according to the power supply impedance. This value is applicable when the power factor improving AC reactor is not used.

2. Heat generated during regeneration is not included in the servo amplifier-generated heat. To calculate heat generated by the regenerative option, refer to section 11.2.

### (2) Heat dissipation area for an enclosed type cabinet

The enclosed type cabinet (hereafter called the cabinet) which will contain the servo amplifier should be designed to ensure that its temperature rise is within +10 °C at the ambient temperature of 40 °C. (With an approximately 5 °C safety margin, the system should operate within a maximum 55 °C limit.) The necessary cabinet heat dissipation area can be calculated by equation 10.1.

$$A = \frac{P}{K \cdot \Delta T}$$

(10.1)

$$K \cdot \Delta T$$

A : Heat dissipation area [m<sup>2</sup>] P : Loss generated in the cabinet [W]

ΔT : Difference between internal and ambient temperatures [°C] K

: Heat dissipation coefficient [5 to 6]

When calculating the heat dissipation area with equation 10.1, assume that P is the sum of all losses generated in the cabinet. Refer to table 10.1 for heat generated by the servo amplifier. "A" indicates the effective area for heat dissipation, but if the cabinet is directly installed on an insulated wall, that extra amount must be added to the cabinet's surface area. The required heat dissipation area will vary with the conditions in the cabinet. If convection in the cabinet is poor and heat builds up, effective heat



## 10. CHARACTERISTICS

dissipation will not be possible. Therefore, arrangement of the equipment in the cabinet and the use of a cooling fan should be considered. Table 10.1 lists the cabinet dissipation area for each servo amplifier (guideline) when the servo amplifier is operated at the ambient temperature of 40 °C under rated load.

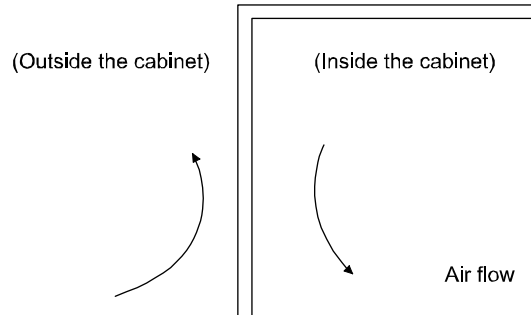


Fig. 10.2 Temperature distribution in an enclosed type cabinet

When air flows along the outer wall of the cabinet, effective heat exchange will be possible, because the temperature slope inside and outside the cabinet will be steeper.

### 10.3 Dynamic brake characteristics


POINT	
●	dynamic brake to stop in a normal operation as it is the function to
●	re operating at the recommended load to motor inertia ratio or less,
●	stop in emergency number of usage times of the dynamic brake is 1000 times while decelerates from the rated speed to a stop once in 10 minutes. Be
●	le EM1 (Forced stop 1) after servo motor stops when using EM1 (Forced stop 1) frequently in other than emergency.
(	

#### 10.3.1 Dynamic brake operation

##### (1) Calculation of coasting distance

Fig. 10.3 shows the pattern in which the servo motor comes to a stop when the dynamic brake is operated. Use equation 10.2 to calculate an approximate coasting distance to a stop. The dynamic brake time constant  $IJ$  varies with the servo motor and machine operation speeds. (Refer to (2) of this section.)

A working part generally has a friction force. Therefore, actual coasting distance will be shorter than a maximum coasting distance calculated with the following equation.

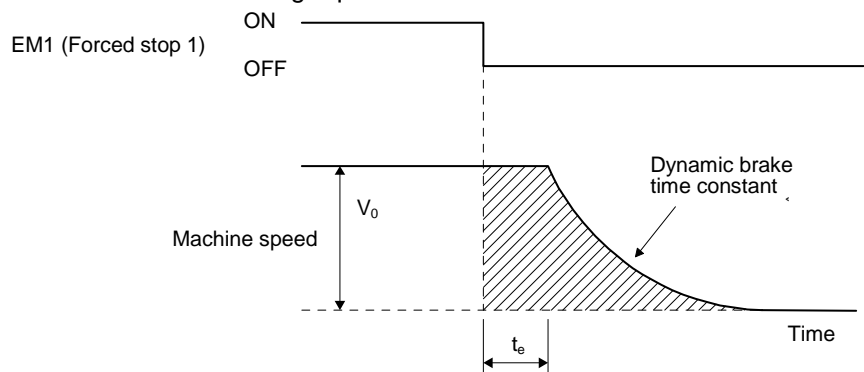

# 10. CHARACTERISTICS

Fig. 10.3 Dynamic brake operation diagram

$$\left\{ e \tau \left( 1 + \frac{J_L}{J_M} \right) \right\}$$

$$V_0 \cdot t$$

..... (10.2)

$L_{max} = 60$

$L_{max}$ : Maximum coasting distance.....[mm]

$V_0$ : Machine's fast feed speed ..... [mm/min]


$J_M$ : Moment of inertia of the servo motor .....[x 10<sup>-4</sup> kg•m<sup>2</sup>]  
 $J_L$ : Load moment of inertia converted into equivalent value on servo motor shaft.....[x 10<sup>-4</sup> kg•m<sup>2</sup>]

$I_J$ : Dynamic brake time constant.....[s]  
 $t_e$ : Delay time of control section .....[s]


There is internal relay delay time of about 10 ms.

(2) Dynamic brake time constant

The following shows necessary dynamic brake time constant  $I_J$  for equation 10.2.

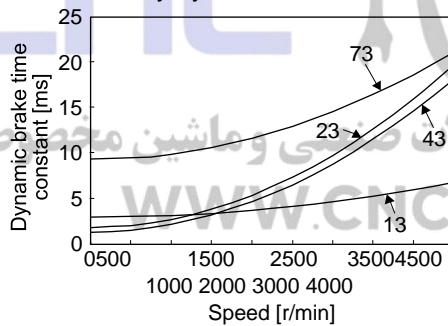

HF-KN series

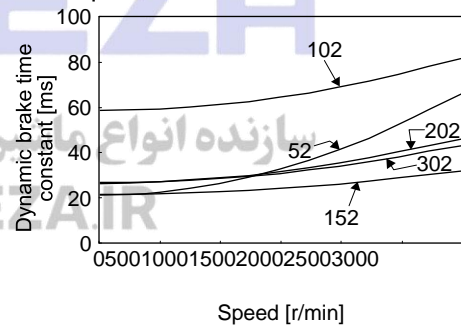

HF-SN series

10.3.2 Permissible load to motor inertia when the dynamic brake is used

Use the dynamic brake under the load to motor inertia ratio indicated in the following table. If the ratio is higher than this value, the dynamic brake may burn. If there is a possibility that the ratio may exceed the value, contact your local sales office.

The values of the permissible load to motor inertia ratio in the table are the values at the maximum rotation speed of the servo motor.


Servo motor	Permissible load to motor inertia ratio [multiplier]
HF-KN13	
HF-KN23	
HF-KN43	

## 10. CHARACTERISTICS

HF-KN73	30
HF-SN52	
HF-SN102	
HF-SN152	
HF-SN202	
HF-SN302	16

### 10.4 Cable bending life

The bending life of the cables is shown below. This graph calculated values. Since they are not guaranteed values, provide a little allowance for these values.

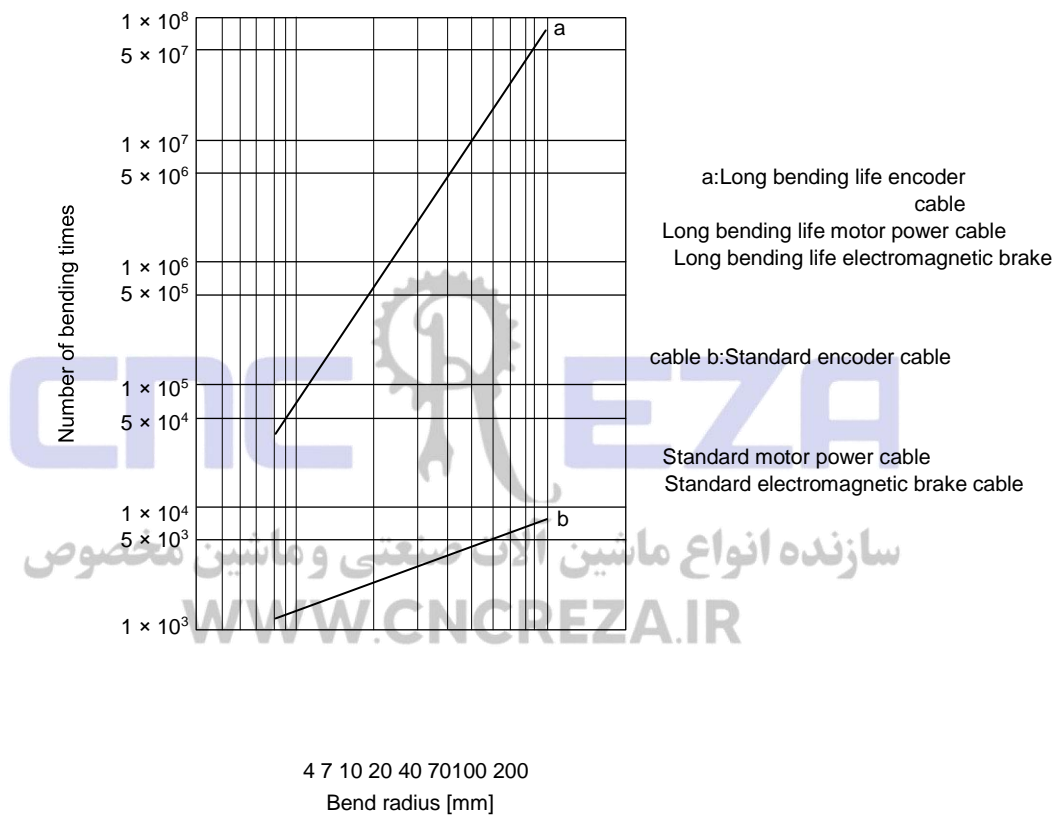

### 10.5 Inrush current at power-on

The following table indicates the inrush currents (reference data) that will flow when 240 V AC is applied at the power supply capacity of 2500 kVA and the wiring length of 1 m. Even when you use a 1-phase 200 V AC power supply with MR-JE-10A to MR-JE-70A, the inrush currents will be the same.

Servo amplifier	Inrush currents ( $A_{0-P}$ )
MR-JE-10A, MR-JE-20A, MR-JE-40A	32 A (attenuated to approx. 3 A in 20 ms)
MR-JE-70A, MR-JE-100A	36 A (attenuated to approx. 7 A in 20 ms)
MR-JE-200A, MR-JE-300A	102 A (attenuated to approx. 12 A in 20 ms)



## 10. CHARACTERISTICS

---

---

---

---

---

---

---

---

---

---





## 11. OPTIONS AND PERIPHERAL EQUIPMENT

---

### 11. OPTIONS AND PERIPHERAL EQUIPMENT

#### WARNING

- Before connecting options and peripheral equipment, turn off the power and wait for 15 minutes or more until the charge lamp turns off. Otherwise, an electric shock may occur. In addition, when confirming whether the charge lamp is off or not, always confirm it from the front of the servo amplifier.



#### CAUTION

Use the specified peripheral equipment and options to prevent a malfunction or a fire.



#### POINT



end using HIV wires to wire the servo amplifiers, options, and equipment. Therefore, the recommended wire sizes may differ from or the previous servo amplifiers.

#### 11.1 Cable/connector sets

#### POINT




ing indicated for cables and connectors is their protection against dust and raindrops when they are connected to a servo amplifier or connector. If the IP rating of the cable, connector, servo amplifier and servo motor, the overall IP rating depends on the lowest IP rating of all

components.

Please purchase the cable and connector options indicated in this section.

#### 11.1.1 Combinations of cable/connector sets





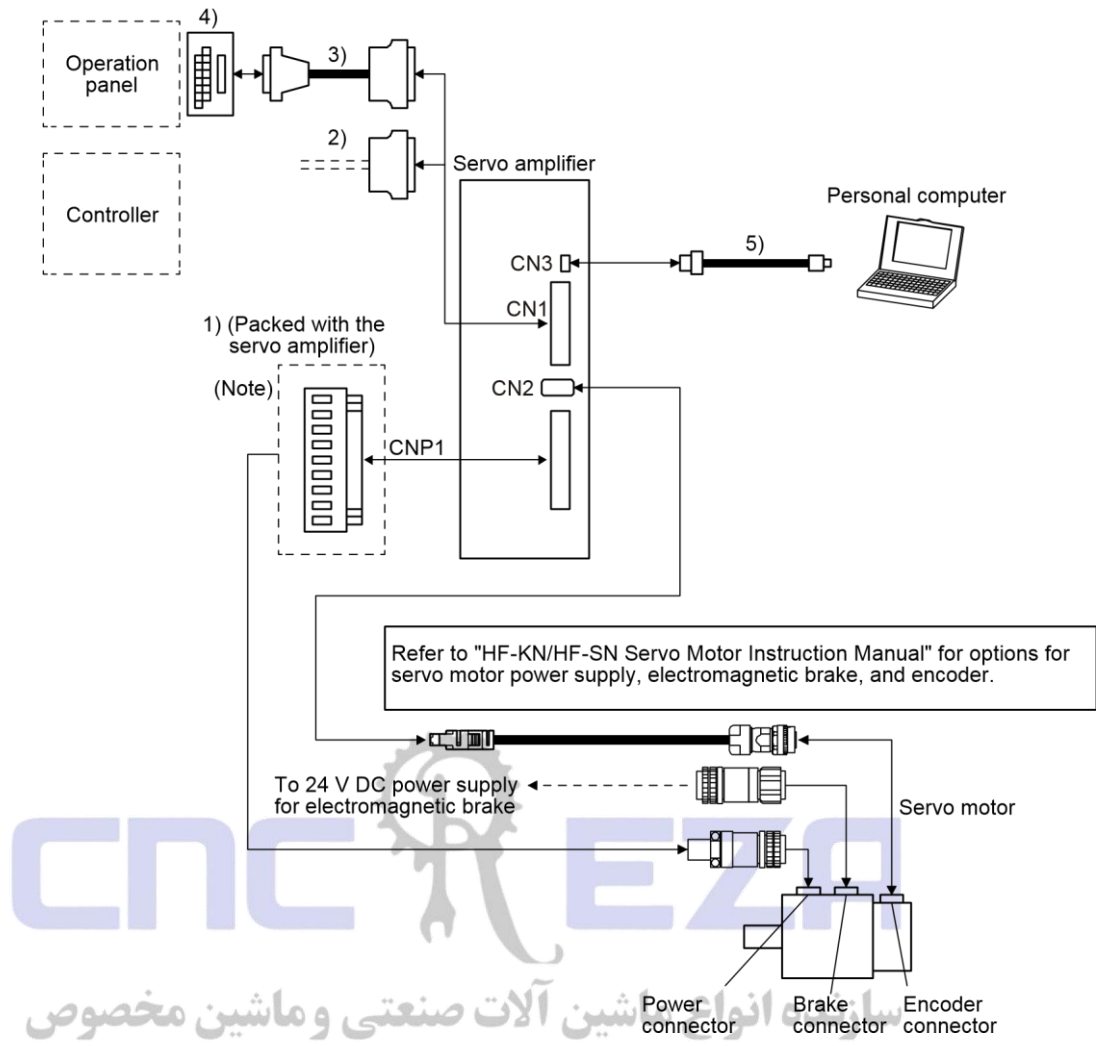



# 11. OPTIONS AND PERIPHERAL EQUIPMENT




Note. Connectors for 1 kW or less. Refer to section 3.3.3 (1) (b) for 2 kW or more.



# 11. OPTIONS AND PERIPHERAL EQUIPMENT

No.	Product name	Model	Description	Application
1)	Servo amplifier CNP1 power connector	MR-JECNP1-01	 CNP1 Connector: 09JFAT-SAXGDK-H5.0 (JST) Applicable wire size: AWG 18 to 14 Insulator OD: to 3.9 mm  Open tool J-FAT-OT (JST)	Supplied with servo amplifiers of 1 kW or less
		MR-JECNP1-02	 CNP1 Connector: 07JFAT-SAXGFK-XL (JST) Applicable wire size: AWG 16 to 10 Insulator OD: to 4.7 mm  Open tool J-FAT-OT-EXL (JST)	Supplied with servo amplifiers of 2 kW and 3 kW
	Servo amplifier power connector	MR-JECNP2-02	 CNP2 Connector: 03JFAT-SAXGFK-XL (JST) Applicable wire size: AWG 16 to 10 Insulator OD: to 4.7 mm	
2)	Junction terminal block cable	MR-J2M- CN1TBL_M Cable length: 0.5 m, 1 m (Refer to section 11.3.)	Junction terminal block connector Connector: D7950-B500FL (3M)  CN1 connector Connector: 10150-6000EL Shell kit: 10350-3210-000 (3M or equivalent)	For junction terminal block connection
3)	CN1 connector set	MR-J3CN1	Connector: 10150-3000PE Shell kit: 10350-52F0-008 (3M or equivalent) 	
4)	Junction terminal block	MR-TB50	Refer to section 11.3.	
5)	USB cable	MR-J3USBCBL3M Cable length: 3 m	CN5 connector mini-B connector (5 pins)  Personal computer connector A connector	For connection with PC-AT compatible personal computer

## 11.2 Regenerative option

 <b>CAUTION</b>	<p>Do not use servo amplifiers with regenerative options other than the combinations specified below.          Otherwise, it may cause a fire.</p>
--	--

## 11. OPTIONS AND PERIPHERAL EQUIPMENT

### 11.2.1 Combination and regenerative power

The power values in the table are resistor-generated powers and not rated powers.

Servo amplifier	Regenerative power [W]					
	Built-in regenerative resistor	MR-RB032 [40 Ω]	MR-RB12 [40 Ω]	MR-RB30 [13 Ω]	MR-RB32 [40 Ω]	(Note) MR-RB50 [13 Ω]
MR-JE-10A		30				
MR-JE-20A		30	100			
MR-JE-40A	10	30	100			
MR-JE-70A	20	30	100		300	
MR-JE-100A	20	30	100		300	
MR-JE-200A	100			300		500
MR-JE-300A	100			300		500

Note. Always install a cooling fan.




# 11. OPTIONS AND PERIPHERAL EQUIPMENT

## 11.2.2 Selection of regenerative option

Use the following method when regeneration occurs continuously in vertical motion applications or when it is desired to make an in-depth selection of the regenerative option.

### (1) Regenerative energy calculation

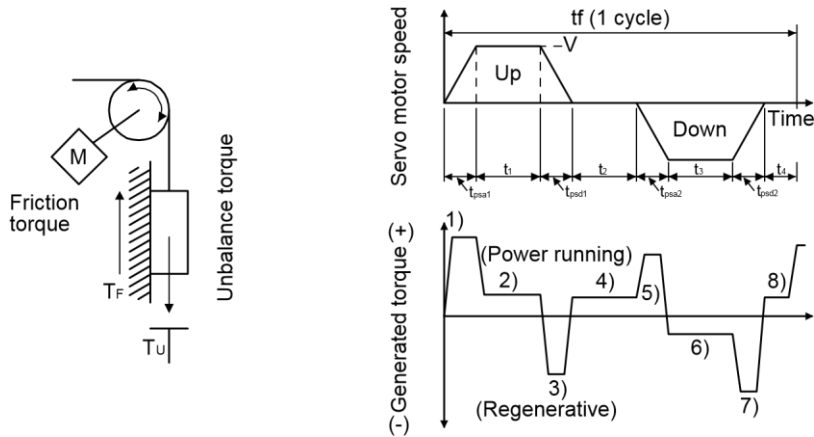

Formulas for calculating torque and energy in operation

Regenerative power	Torque applied to servo motor [N·m]	Energy E [J]
1)	$T_1 = \frac{(\frac{J}{9.55 \cdot 10} \cdot \omega^2 + JM) \cdot V}{4} \cdot t_{psa1} + T_U + T_F$	$E_1 = \frac{0.1047}{2} \cdot V \cdot T_1 \cdot t_{psa1}$
2)	$T_2 = T_U + T_F$	$E_2 = 0.1047 \cdot V \cdot T_2 \cdot t_1$
3)	$T_3 = \frac{-(\frac{J}{9.55 \cdot 10} \cdot \omega^2 + JM) \cdot V}{4} \cdot t_{psa2} + T_U + T_F$	$E_3 = \frac{0.1047}{2} \cdot V \cdot T_3 \cdot t_{psa2}$
4), 8)	$T_4, T_8 = T_U$	$E_4, E_8 = 0$ (No regeneration)
5)	$T_5 = \frac{(\frac{J}{9.55 \cdot 10} \cdot \omega^2 + JM) \cdot V}{4} \cdot t_{psd2} - T_U + T_F$	$E_5 = \frac{0.1047}{2} \cdot V \cdot T_5 \cdot t_{psd2}$
6)	$T_6 = -T_U + T_F$	$E_6 = 0.1047 \cdot V \cdot T_6 \cdot t_3$
7)	$T_7 = \frac{-(\frac{J}{9.55 \cdot 10} \cdot \omega^2 + JM) \cdot V}{4} \cdot t_{psd2} - T_U + T_F$	$E_7 = \frac{0.1047}{2} \cdot V \cdot T_7 \cdot t_{psd2}$

From the calculation results in 1) to 8), find the absolute value (Es) of the sum total of negative energies.

### (2) Losses of servo motor and servo amplifier in regenerative mode

The following table lists the efficiencies and other data of the servo motor and servo amplifier in the regenerative mode.

Servo amplifier	Inve efficiency	Servo amplifier	Inverse efficiency [%]	Capacitor charging [J]
MR-JE-10A	5%	MR-JE-100A	85	25
MR-JE-20A	7%	MR-JE-200A	85	42
MR-JE-40A	8%	MR-JE-300A	85	42

## 11. OPTIONS AND PERIPHERAL EQUIPMENT

MR-JE-70A	85	25
-----------	----	----

Inverse efficiency ( $\xi$ ): Efficiency including some efficiencies of the servo motor and servo amplifier when rated (regenerative) torque is generated at rated speed. Since the efficiency varies with the speed and generated torque, allow for about 10%. Capacitor charging ( $E_c$ ): Energy charged into the electrolytic capacitor in the servo amplifier

Subtract the capacitor charging from the result of multiplying the sum total of regenerative energies by the inverse efficiency to calculate the energy consumed by the regenerative option.

$$ER [J] = \xi \cdot E_s - E_c$$

Calculate the power consumption of the regenerative option on the basis of one-cycle operation period  $t_f$  [s] to select the necessary regenerative option.

$$PR [W] = ER/t_f$$

### 11.2.3 Parameter setting

Set [Pr. PA02] according to the option to be used.

[Pr. PA02]			
0	0		

Regenerative option selection

00: Regenerative option is not used.

For servo amplifier of 200 W, regenerative resistor is not used.

For servo amplifier of 0.4 kW to 3 kW, built-in regenerative resistor is used.

02: MR-RB032

03: MR-RB12

04: MR-RB32

05: MR-RB30

06: MR-RB50 (Cooling fan is required)

For

### 11.2.4 Selection of regenerative option

POINT	
-------	--


## 11. OPTIONS AND PERIPHERAL EQUIPMENT

- - 
  - 
  - 
  -
- Use a regenerative option with an MR-JE-40A to MR-JE-100A, built-in regenerative resistor and wiring from the servo amplifier. B50 is used, a cooling fan is required to cool it. The cooling fan prepared by the customer.
- Wiring sizes used for wiring, refer to section 11.5.
- The regenerative resistor should not be mounted/removed frequently.
- When you mount a built-in regenerative resistor, check the lead wires of the regenerative resistor for scratches or cracks.

The regenerative option generates heat of 100 °C higher than the ambient temperature. Fully consider heat dissipation, installation position, wires used, etc. before installing the option. For wiring, use flame-resistant wires or make the wires flame-resistant and keep them away from the regenerative option. Always use twisted cables of max. 5 m length for connection with the servo amplifier.

### (1) MR-JE-100A or less

When you use a regenerative option for MR-JE-40A to MR-JE-100A, remove wirings of P+ and C, remove the built-in regenerative resistor, and then connect the regenerative option between P+ and C. G3 and G4 are terminals for thermal sensor. Between G3 and G4 is opened when the regenerative option overheats abnormally.

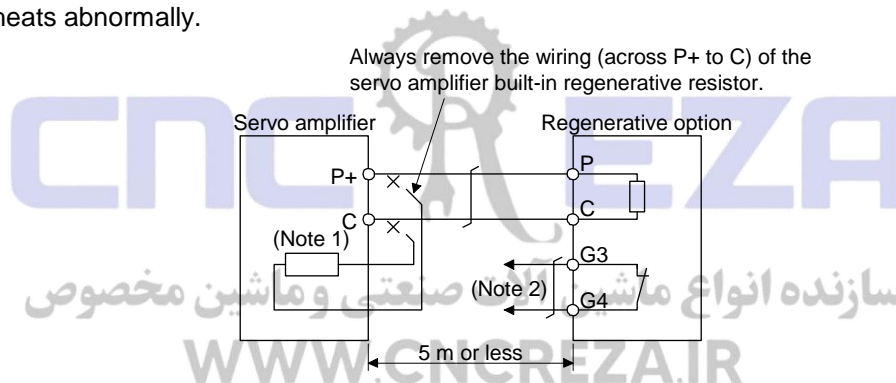

Note 1. The built-in regenerative resistor is not provided for MR-JE-10A and MR-JE-20A.

2. Make up a sequence which will switch off the magnetic contactor when abnormal heating occurs.

G3-G4 contact specifications

Maximum voltage: 120 V AC/DC


Maximum current: 0.5 A/4.8 V DC

Maximum capacity: 2.4 VA

To remove the built-in regenerative resistor mounted on the back of MR-JE-40A to MR-JE-100A, follow the procedures 1) to 3) with referring the illustration.

- 1) Disconnect the wirings of the built-in regenerative resistor from the power connector (CNP1). (Refer to (3) (b) of 3.3.2.)
- 2) Remove the wirings of the built-in regenerative resistor from the closest position to the power connector (CNP1) in order. Please pay full attention not to break the wirings.
- 3) Remove the screw fixing the built-in regenerative resistor and dismount the built-in regenerative resistor.

## 11. OPTIONS AND PERIPHERAL EQUIPMENT

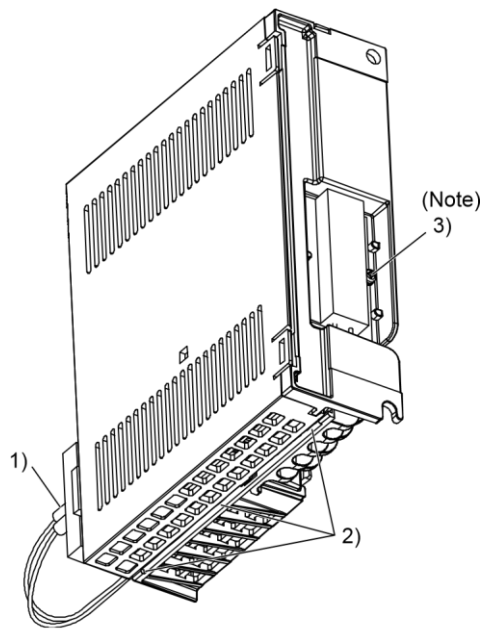


Note. Screw size: M3

Tightening torque: 0.72 [N·m]

### (2) MR-JE-200A or more


Always remove the wiring from across P+ to D and fit the regenerative option across P+ to C. G3 and G4 are terminals for thermal sensor. Between G3 and G4 is opened when the regenerative option overheats abnormally.

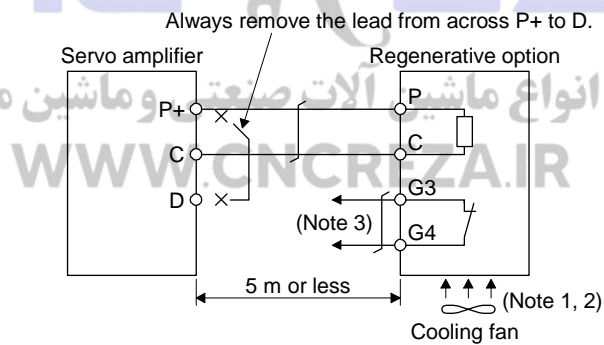

Note 1. When using the MR-RB50, forcibly cool it with a cooling fan (1.0 m<sup>3</sup>/min or more, 92 mm × 92 mm).

2. When the ambient temperature is more than 55 °C and the regenerative load ratio is more than 60% in MR-RB30 and MR-RB32, forcibly cool the air with a cooling fan (1.0 m<sup>3</sup>/min or more, 92 mm × 92 mm). A cooling fan is not required if the ambient temperature is 35 °C or less. (A cooling fan is required for the shaded area in the following graph.)

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

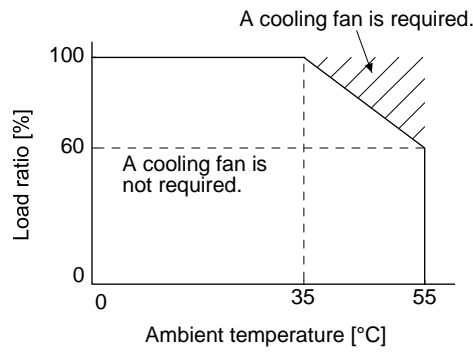

3. Make up a sequence which will switch off the magnetic contactor when abnormal heating occurs.

G3-G4 contact specifications


Maximum voltage: 120 V AC/DC

Maximum current: 0.5 A/4.8 V DC

Maximum capacity: 2.4 VA

## 11.2.5 Dimensions

### (1) MR-RB12

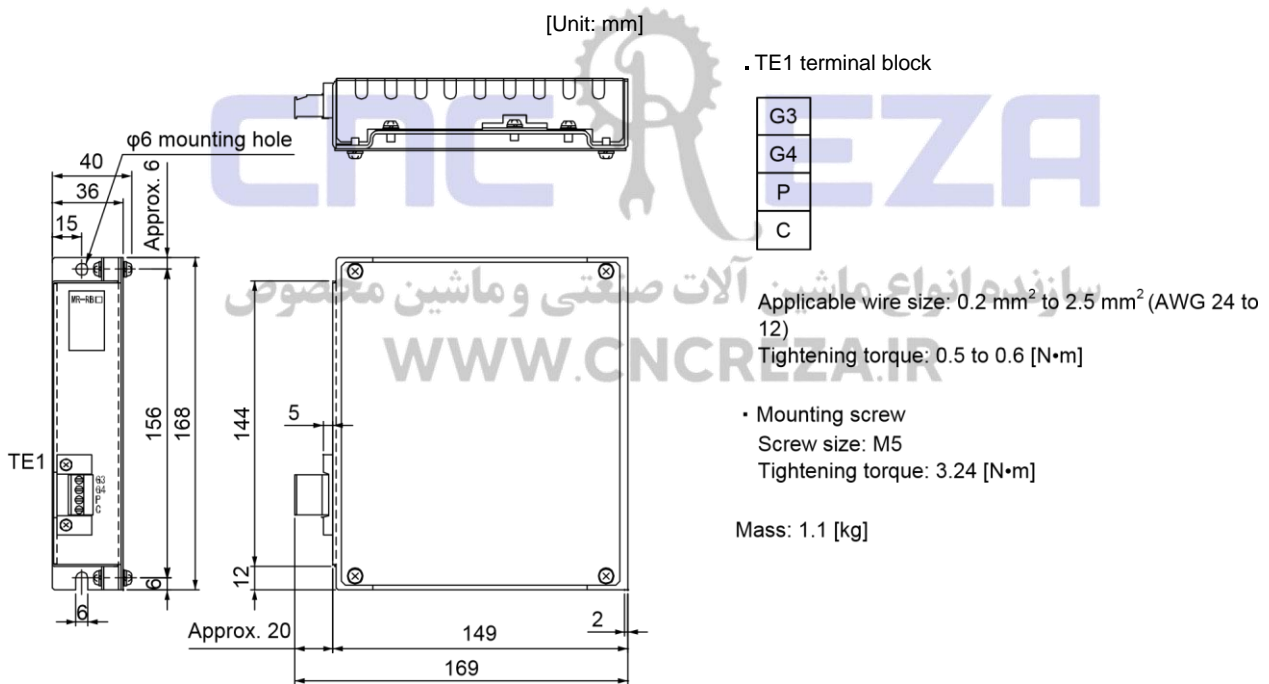

### (2) MR-RB30/MR-RB32


[Unit: mm]

Cooling fan mounting

• Terminal block

P
C
G3
G4

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

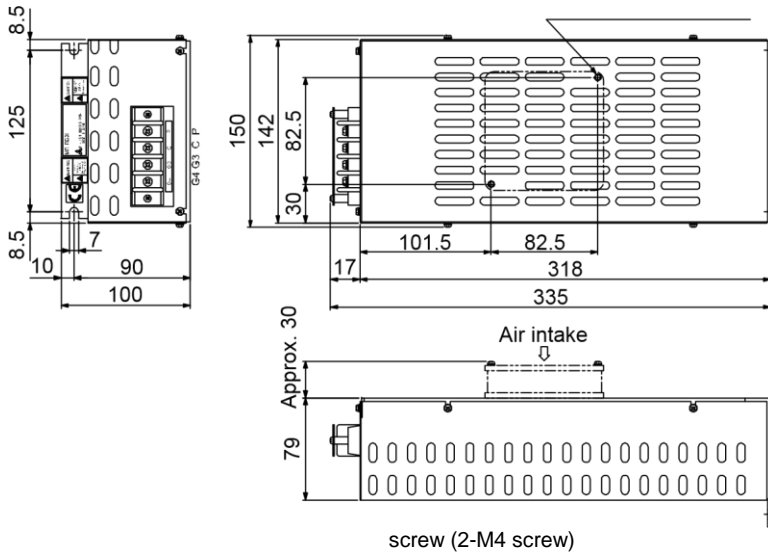

Terminal screw size: M4  
Tightening torque: 1.2 [N·m]

Mounting screw  
Screw size: M6  
Tightening torque: 5.4 [N·m]

Mass: 2.9 [kg]




(3) MR-RB50

[Unit: mm]

. Terminal block



# 11. OPTIONS AND PERIPHERAL EQUIPMENT

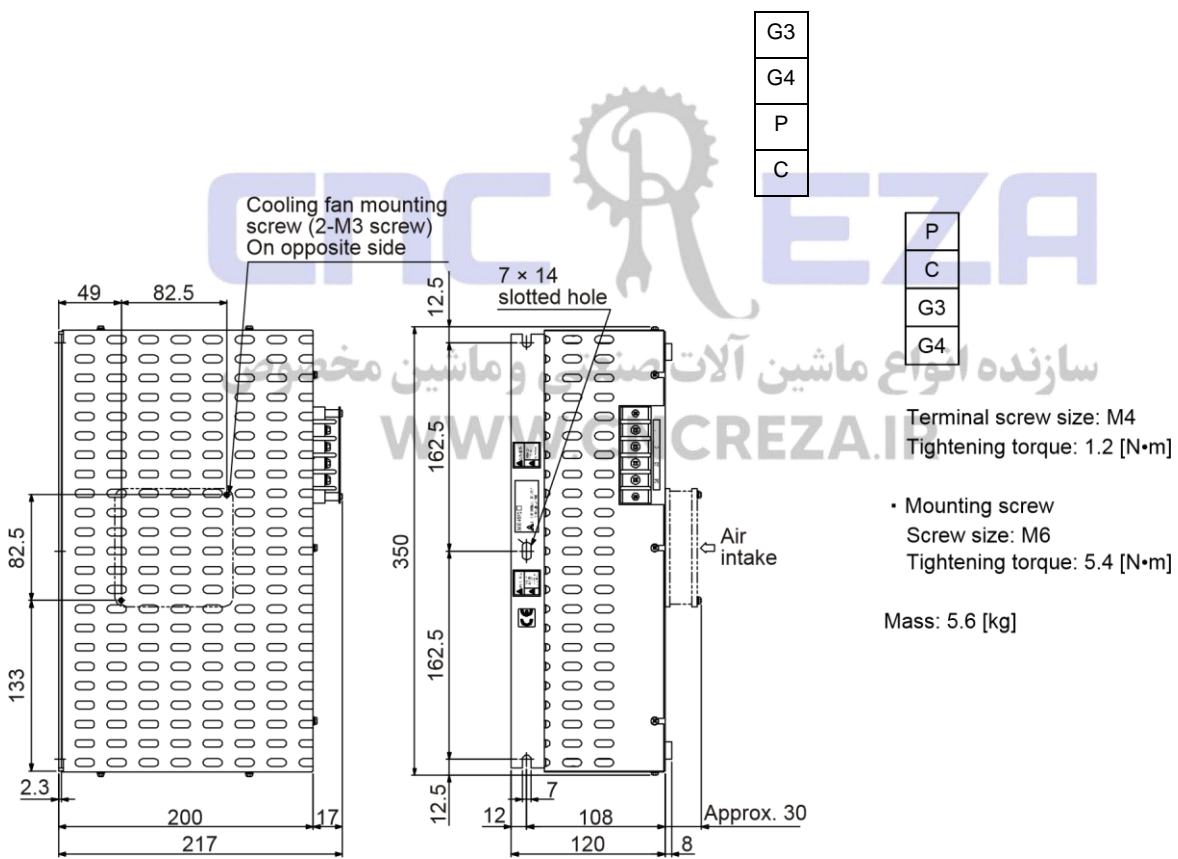


(4) MR-RB032

[Unit: mm]

. TE1 terminal block

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

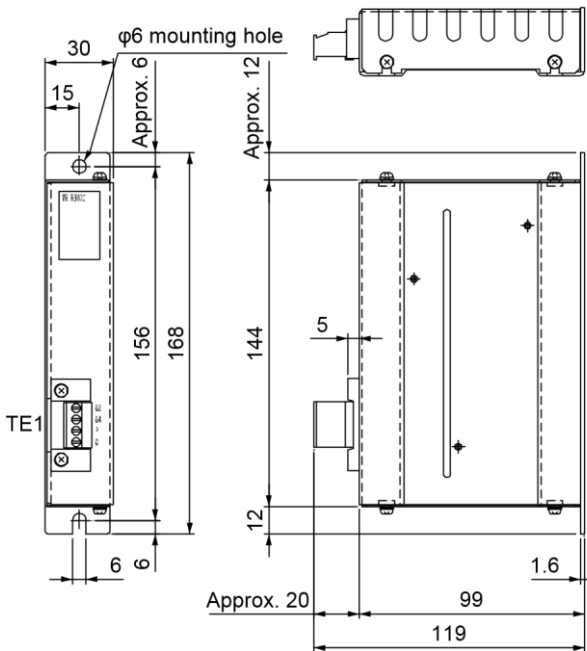

Applicable wire size: 0.2 mm<sup>2</sup> to 2.5 mm<sup>2</sup> (AWG 24 to 12)  
 Tightening torque: 0.5 to 0.6 [N·m]


• Mounting screw  
 size: M5  
 Tightening torque: 3.24 [N·m]

Mass: 0.5 [kg]

## 11.3 Junction terminal block MR-TB50

### (1) Usage

Always use the junction terminal block (MR-TB50) with the option cable (MR-J2M-CN1TBL\_M) as a set.

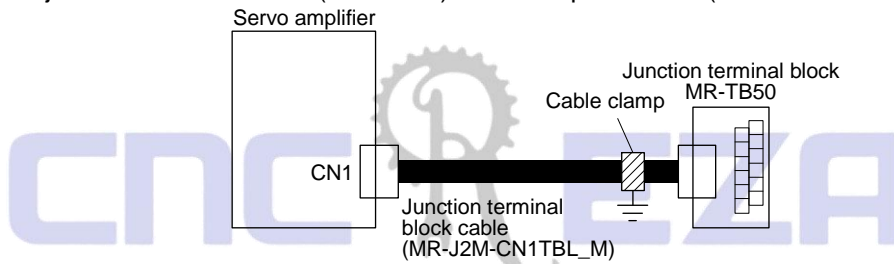

Install the junction terminal block cable on the junction terminal block side with the supplied cable clamp fitting (AERSBAN-ESET). For the use of the cable clamp fitting, refer to section 11.9, (2) (c).


### (2) Terminal block label

Use the following for the terminal label. For the input/output pin assignment in the control mode, refer to (4) (b) of this section.

1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	45	47	49
2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40	42	44	46	48	50

### (3) Dimensions

[Unit: mm]

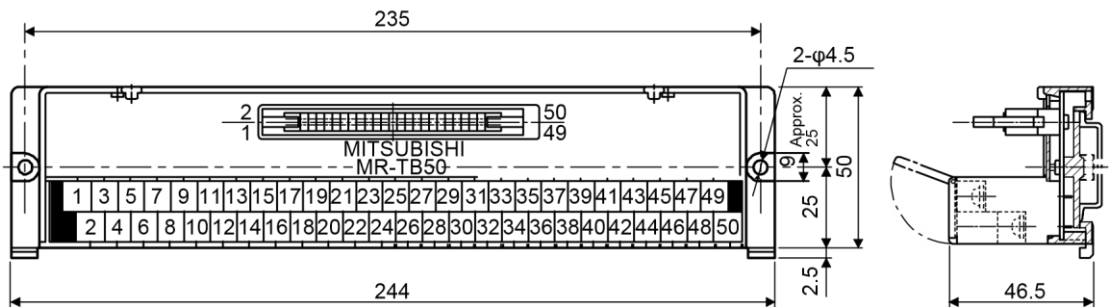

Terminal screw: M3.5 2

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

Applicable wire: 2 mm  
Crimp terminal width: 7.2 mm or shorter

## (4) Junction terminal block cable MR-J2M-CN1TBL\_M

### (a) Model explanations

Model: MR - J 2 M - CN 1 T B L \_ M

Symbol	Cable length [m]
05	0.5
1	1

### (b) Connection diagram

10150-6000EL (Servo amplifier side)				D7650-B500FL (Junction terminal side)	
Signal symbol			Pin No.		Pin No.
Position	Speed	Torque			
			1		1
	VC	VLA	2		2
LG	LG	LG	3		3
LA	LA	LA	4		4
LAR	LAR	LAR	5		5
LB	LB	LB	6		6
LBR	LBR	LBR	7		7
LZ	LZ	LZ	8		8
LZR	LZR	LZR	9		9
PP			10		10
PG			11		11
OPC			12		12
			13		13
			14		14
SON	SON	SON	15		15
			16		16
			17		17
			18		18
RES	ST1	RS2	19		19
DICOM	DICOM	DICOM	20		20
DICOM	DICOM	DICOM	21		21
			22		22
ZSP	ZSP	ZSP	23		23
INP	SA		24		24
			25		25
MO1	MO1	MO1	26		26
TLA	TLA	TC	27		27
LG	LG	LG	28		28
MO2	MO2	MO2	29		29
LG	LG	LG	30		30
			31		31
			32		32
OP	OP	OP	33		33
LG	LG	LG	34		34
NP			35		35
NG			36		36
			37		37
			38		38
			39		39
			40		40
CR	ST2	RS1	41		41
EM2	EM2	EM2	42		42
LSP	LSP		43		43
LSN	LSN		44		44
			45		45
DOCOM	DOCOM	DOCOM	46		46
DOCOM	DOCOM	DOCOM	47		47
ALM	ALM	ALM	48		48
RD	RD	RD	49		49
			50		50
SD	SD	SD	Plate		

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

## 11.4 MR Configurator2

POINT	
●	JE servo amplifier, use MR Configurator2 with software version 1.19V or later.

MR Configurator2 (SW1DNC-MRC2-E) uses the communication function of the servo amplifier to perform parameter setting changes, graph display, test operation, etc. on a personal computer.

### (1) Specifications

Item	Description
Project	Create/read/save/delete project, system setting, and print
Parameter	Parameter setting, axis name setting
Monitor	Display all, I/O monitor, and graph
Diagnosis	Alarm display, alarm onset data, drive recorder, no motor rotation, system configuration, life diagnosis, machine diagnosis
Test operation	Jog operation, positioning operation, motor-less operation, DO forced output, and program operation, test mode information
Adjustment	One-touch tuning, tuning, and machine analyzer
Others	Servo assistant, parameter setting range update, machine unit conversion setting, and help display

### (2) System requirements (a) Components

To use this software, the following components are required in addition to the servo amplifier and servo motor.

سازنده انواع ماشین آلات صنعتی و ماشین مخصوص

Equipment	(Note 1) Description
(Note 2, 3, 4, 5) Personal computer	OS Microsoft® Windows® 7 Enterprise [Service Pack none/1] Microsoft® Windows® 7 Ultimate [Service Pack none/1] Microsoft® Windows® 7 Professional [Service Pack none/1] Microsoft® Windows® 7 Home Premium [Service Pack none/1] Microsoft® Windows® 7 Starter [Service Pack none/1] Microsoft® Windows Vista® Enterprise [Service Pack none /1/2] Microsoft® Windows Vista® Ultimate [Service Pack none/1/2] Microsoft® Windows Vista® Business [Service Pack none/1/2] Microsoft® Windows Vista® Home Premium [Service Pack none/1/2] Microsoft® Windows Vista® Home Basic [Service Pack none/1/2] Microsoft® Windows® XP Professional [Service Pack 2/3] Microsoft® Windows® XP Home Edition [Service Pack 2/3] Microsoft® Windows® 2000 Professional [Service Pack 4]
	CPU Desktop personal computer: Intel® Celeron® processor 2.8GHz or more is recommended. Laptop personal computer: Intel® Pentium® M processor 1.7GHz or more is recommended.
	Memory 512 MB or more (for 32-bit OS) and 1 GB or more (for 64-bit OS)
	Hard Disk 1GB or more of free space
	Communication interface USB port

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

Browser	Windows® Internet Explorer® 4.0 or more (Note 1)
Display	One whose resolution is 1024 × 768 or more and that can provide a high color (16 bit) display. Connectable with the above personal computer.
Keyboard	Connectable with the above personal computer.
Mouse	Connectable with the above personal computer.
Printer	Connectable with the above personal computer.
USB cable	MR-J3USBCBL3M

Note 1. Microsoft, Windows, Internet Explorer and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries.

Celeron and Pentium are the registered trademarks of Intel Corporation.

2. On some personal computers, MR Configurator2 may not run properly.

3. When Microsoft® Windows®7, Microsoft® Windows Vista®, or Microsoft® Windows® XP is used, the following functions cannot be used.

- Windows Program Compatibility mode
- Fast User Switching
- Remote Desktop
- Large Fonts Mode (Display property)
- DPI settings other than 96 DPI (Display property)


For 64-bit operating system, this software is compatible with Windows®7.

4. When Windows® 7 is used, the following functions cannot be used.

- Windows XP Mode
- Windows touch

5. When using this software with Windows Vista® and Windows® 7, log in as a user having USER authority or higher.

## (b) Connection with servo amplifier

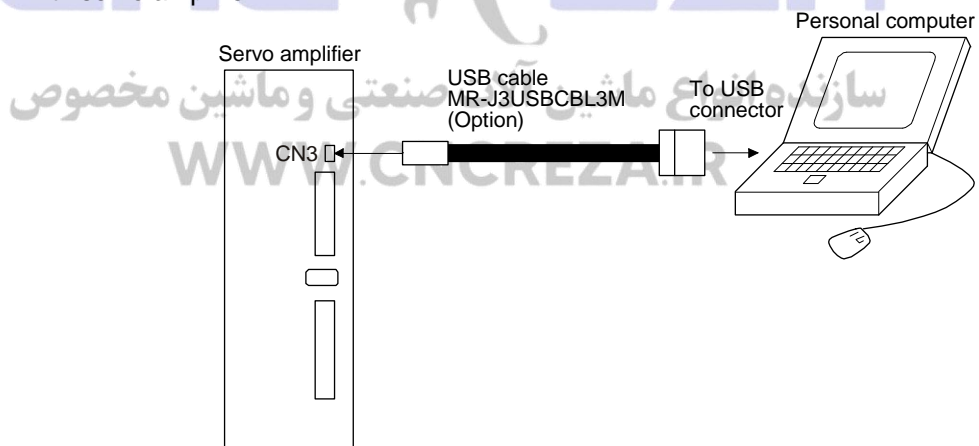

## 11.5 Selection example of wires

POINT	
-------	--

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

- With the UL/CSA standard, use the wires shown in appendix 2 for standard. Comply with other standards, use a wire that is complied with each
- Conditions of wire size is as follows.  
 on condition: One wire is constructed in the air.  
 Length: 30 m or shorter

The following diagram shows the wires used for wiring. Use the wires given in this section or equivalent.

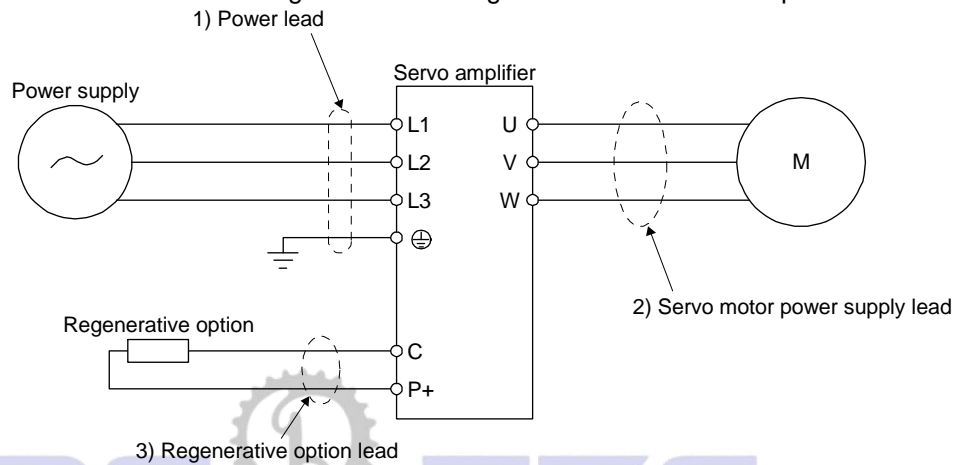


Table 11.1 shows examples for using the 600 V Grade heat-resistant polyvinyl chloride insulated wire (HIV wire).

Table 11.1 Wire size selection example (HIV wire)

Servo amplifier	Wire [mm <sup>2</sup> ]		
	1) L1/L2/L3/⊕	3) P++C	2) U/V/W/⊕ (Note 1)
MR-JE-10A	2 (AWG 14)	2 (AWG 14)	AWG 18 to 14 (Note 2)
MR-JE-20A			
MR-JE-40A			
MR-JE-70A			
MR-JE-100A			
MR-JE-200A	3.5 (AWG 12)		AWG 16 to 10
MR-JE-300A			

Note 1. The wire size shows applicable size of the servo amplifier connector. For wires connecting to the servo motor, refer to "HF-KN/HF-SN Servo Motor Instruction Manual".

2. Be sure to use the size of 2 mm<sup>2</sup> when corresponding to UL/CSA standard.

## 11.6 Molded-case circuit breakers, fuses, magnetic contactors (recommended)

Always use one molded-case circuit breaker and one magnetic contactor with one servo amplifier. When using a fuse instead of the molded-case circuit breaker, use the one having the specifications given in this section.

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

Servo amplifier	Molded-case circuit breaker (Note 1)		Fuse			Magnetic contactor (Note 2)	
	Frame, rated current	Voltage AC [V]	Class	Current [A]	Voltage AC [V]		
MR-JE-10A	30 A frame 5 A	240	T	10	300	S-N10 S-T10	
MR-JE-20A							
MR-JE-40A	30 A frame 10 A						
MR-JE-70A	30 A frame 15 A						
MR-JE-100A							
MR-JE-200A	30 A frame 20 A					40	S-N20 (Note 3) S-T21
MR-JE-300A	30 A frame 30 A					70	S-N20 S-T21

Note 1. When having the servo amplifier comply with the UL/CSA standard, refer to appendix 2.

2. Use a magnetic contactor with an operation delay time (interval between current being applied to the coil until closure of contacts) of 80 ms or less.

3. S-N18 can be used when auxiliary contact is not required.


## 11.7 Power factor improving AC reactor

The following shows the advantages of using power factor improving AC reactor.

- It improves the power factor by increasing the form factor of the servo amplifier's input current.
- It decreases the power supply capacity.
- The input power factor is improved to about 80%.

When using power factor improving reactors for two servo amplifiers or more, be sure to connect a power factor improving reactor to each servo amplifier. If using only one power factor improving reactor, enough improvement effect of phase factor cannot be obtained unless all servo amplifiers are operated.

### (1) Connection example

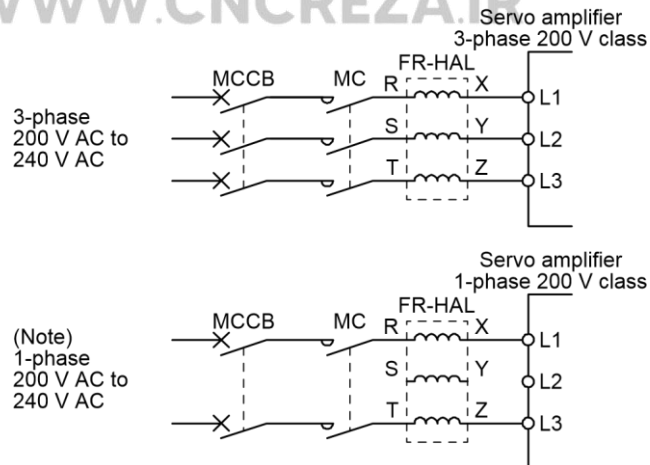

Note. For 1-phase 200 V AC to 240 V AC, connect the power supply to L1 and L3. Leave L2 open.

### (2) Dimensions

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

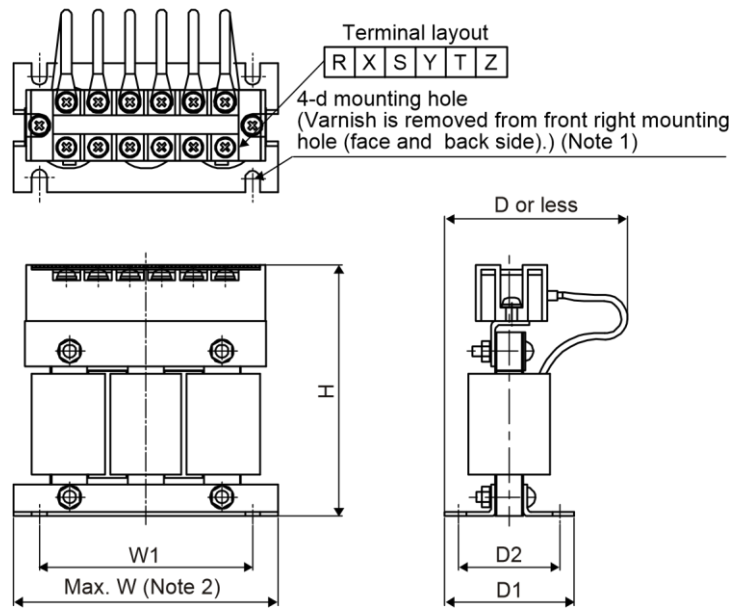


Fig. 11.1

Servo amplifier	Power factor improving AC reactor	Dimensions	Dimensions [mm]							Terminal size	Mass [kg]
			W	W1	H	D (Note 3)	D1	D2	d		
MR-JE-10A, MR-JE-20A	FR-HAL-0.4K	Fig. 11.1	104	84	99	72	51	40	M5	M4	0.6
MR-JE-40A	FR-HAL-0.75K		104	84	99	74	56	44	M5	M4	0.8
MR-JE-70A	FR-HAL-1.5K		104	84	99	77	61	50	M5	M4	1.1
MR-JE-100A	FR-HAL-2.2K		115 (Note 3)	40	115	77	71	57	M6	M4	1.5
MR-JE-200A	FR-HAL-3.7K		115 (Note 3)	40	115	83	81	67	M6	M4	2.2
MR-JE-300A	FR-HAL-5.5K		115 (Note 3)	40	115	83	81	67	M6	M4	2.3

Note 1. Use this for grounding.

2.  $W \pm 2$  is applicable for FR-HAL-0.4K to FR-HAL-1.5K.

3. Maximum dimensions. The dimension varies depending on the input/output lines.

## 11.8 Relay (recommended)

The following relays should be used with the interfaces.

Interface	Selection example
Digital input (interface DI-1) Relay used for digital input command signals	To prevent defective contacts, use a relay for small signal (twin contacts). (Ex.) Omron: type G2A, type MY
Digital output (interface DO-1) Relay used for digital output signals	Small relay with 12 V DC or 24 V DC of rated current 40 mA or less (Ex.) Omron: type MY

## 11.9 Noise reduction techniques



# 11. OPTIONS AND PERIPHERAL EQUIPMENT

Noises are classified into external noises which enter the servo amplifier to cause it to malfunction and those radiated by the servo amplifier to cause peripheral equipment to malfunction. Since the servo amplifier is an electronic device which handles small signals, the following general noise reduction techniques are required. Also, the servo amplifier can be a source of noise as its outputs are chopped by high carrier frequencies. If peripheral equipment malfunction due to noises produced by the servo amplifier, noise suppression measures must be taken. The measures will vary slightly with the routes of noise transmission.

(1) Noise reduction techniques


(a) General reduction techniques

- Avoid bundling power lines (input/output) and signal cables together or running them in parallel to each other. Separate the power lines from the signal cables.
- Use a shielded twisted pair cable for connection with the encoder and for control signal transmission, and connect the external conductor of the cable to the SD terminal.
- Ground the servo amplifier, servo motor, etc. together at one point. (Refer to section 3.11.)


(b) Reduction techniques for external noises that cause the servo amplifier to malfunction If there are noise sources (such as a magnetic contactor, an electromagnetic brake, and many relays which make a large amount of noise) near the servo amplifier and the servo amplifier may malfunction, the following countermeasures are required.

- Provide surge absorbers on the noise sources to suppress noises.
- Attach data line filters to the signal cables.
- Ground the shields of the encoder connecting cable and the control signal cables with cable clamp fittings.
- Although a surge absorber is built into the servo amplifier, to protect the servo amplifier and other equipment against large exogenous noise and lightning surge, attaching a varistor to the power input section of the equipment is recommended.

(c) Techniques for noises radiated by the servo amplifier that cause peripheral equipment to malfunction Noises produced by the servo amplifier are classified into those radiated from the cables connected to the servo amplifier and its main circuits (input and output circuits), those induced electromagnetically or statically by the signal cables of the peripheral equipment located near the main circuit cables, and those transmitted through the power supply cables.

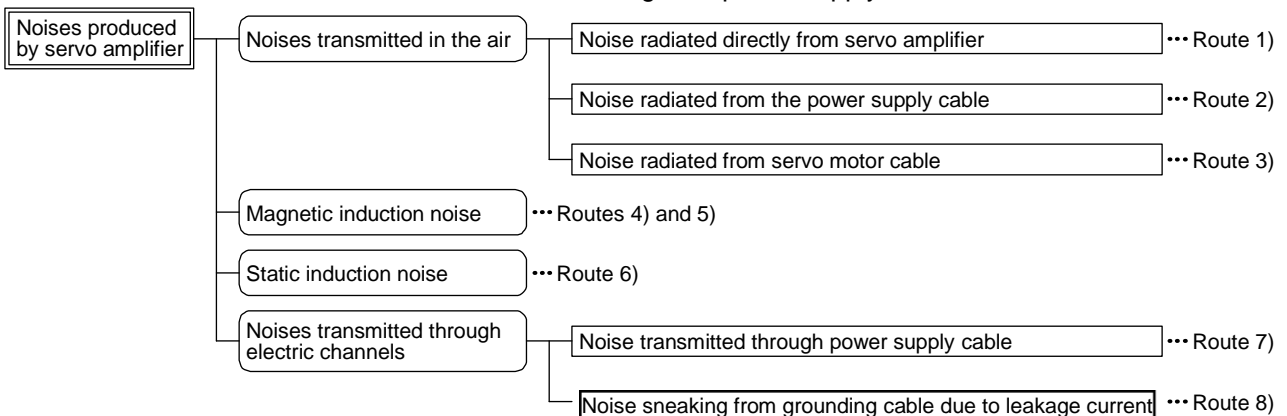

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

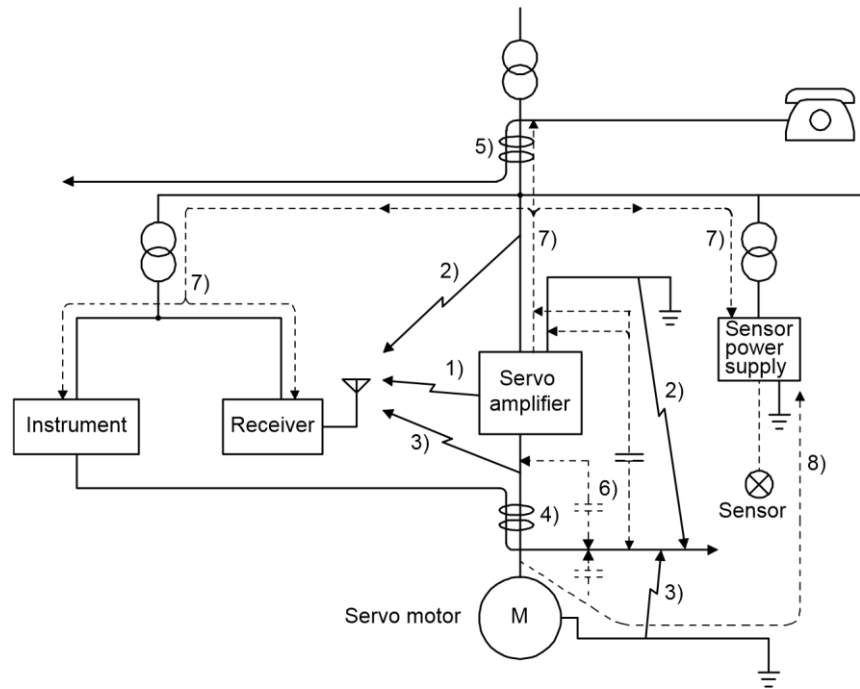

Noise transmission route	Suppression techniques
1) 2) 3)	<p>When measuring instruments, receivers, sensors, etc. which handle weak signals and may malfunction due to noise and/or their signal cables are contained in a cabinet together with the servo amplifier or run near the servo amplifier, such devices may malfunction due to noises transmitted through the air. The following techniques are required.</p> <ol style="list-style-type: none"> <li>1. Provide maximum clearance between easily affected devices and the servo amplifier.</li> <li>2. Provide maximum clearance between easily affected signal cables and the I/O cables of the servo amplifier.</li> <li>3. Avoid wiring the power lines (input/output lines of the servo amplifier) and signal lines side by side or bundling them together.</li> <li>4. Insert a line noise filter to the I/O cables or a radio noise filter on the input line.</li> <li>5. Use shielded wires for the signal and power lines, or put the lines in separate metal conduits.</li> </ol>
4) 5) 6)	<p>When the power lines and the signal lines are laid side by side or bundled together, magnetic induction noise and static induction noise will be transmitted through the signal cables and malfunction may occur. The following techniques are required.</p> <ol style="list-style-type: none"> <li>1. Provide maximum clearance between easily affected devices and the servo amplifier.</li> <li>2. Provide maximum clearance between easily affected signal cables and the I/O cables of the servo amplifier.</li> <li>3. Avoid wiring the power lines (input/output lines of the servo amplifier) and signal lines side by side or bundling them together.</li> <li>4. Use shielded wires for the signal and power lines, or put the lines in separate metal conduits.</li> </ol>
7)	<p>When the power supply of peripheral equipment is connected to the power supply of the servo amplifier system, noises produced by the servo amplifier may be transmitted back through the power supply cable and the devices may malfunction. The following techniques are required.</p> <ol style="list-style-type: none"> <li>1. Install the radio noise filter (FR-BIF) on the power lines (Input lines) of the servo amplifier.</li> <li>2. Install the line noise filter (FR-BSF01) on the power lines of the servo amplifier.</li> </ol>
8)	<p>When the cables of peripheral equipment are connected to the servo amplifier to make a closed loop circuit, leakage current may flow to malfunction the peripheral equipment. If so, malfunction may be prevented by disconnecting the grounding cable of the peripheral device.</p>

## (2) Noise reduction techniques

### (a) Data line filter (recommended)

Noise can be prevented by installing a data line filter onto the encoder cable, etc.

For example, ZCAT3035-1330 by TDK, ESD-SR-250 by NEC TOKIN, and GRFC-13 by Kitagawa


# 11. OPTIONS AND PERIPHERAL EQUIPMENT

Industries are available as data line filters.

As a reference example, the impedance specifications of the ZCAT3035-1330 (TDK) are indicated below. This impedances are reference values and not guaranteed values.


Impedance [δ]	
10 MHz to 100 MHz	100 MHz to 500 MHz
80	150

[Unit: mm]

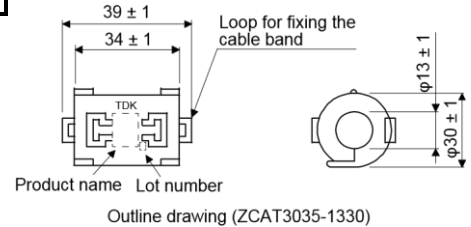

### (b) Surge killer (recommended)

Use of a surge killer is recommended for AC relay, magnetic contactor or the like near the servo amplifier. Use the following surge killer or equivalent.

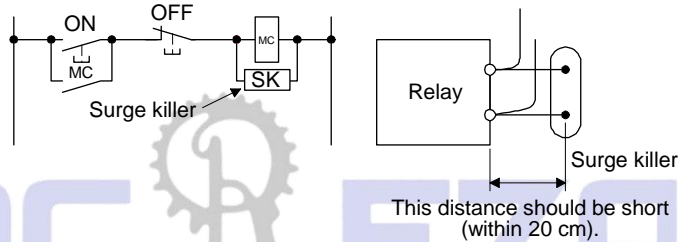


(Ex.) CR-50500 Okaya Electric Industries)

Rated voltage AC [V]	C [ $\mu\text{F} \pm 20\%$ ]	R [ $\delta \pm 30\%$ ]	Dimensions [Unit: mm]
250	0.5	50 (1/2 W)	

Note that a diode should be installed to a DC relay or the like.

Maximum voltage: not less than four times the drive voltage of the relay or the like

Maximum current: not less than two times the drive current of the relay or the like

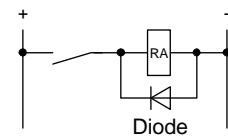

### (c) Cable clamp fitting AERSBAN- \_SET


Generally, the grounding of the shielded wire may only be connected to the connector's SD terminal. However, the effect can be increased by directly connecting the cable to an grounding plate as shown below.

Install the grounding plate near the servo amplifier for the encoder cable. Peel part of the cable sheath to expose the external conductor, and press that part against the grounding plate with the

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

cable clamp. If the cable is thin, clamp several cables in a bunch. The cable clamp comes as a set with the grounding plate.


[Unit: mm]

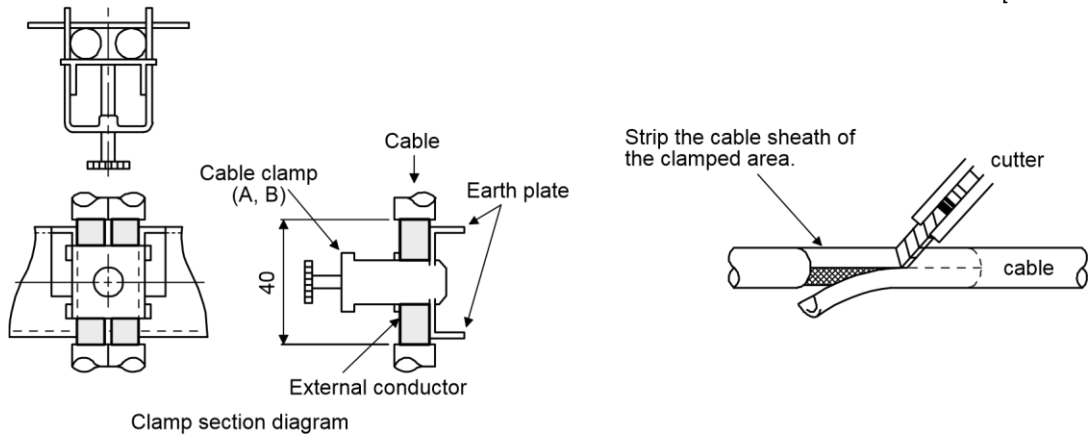

## . Dimensions

[Unit: mm]

[Unit: mm]

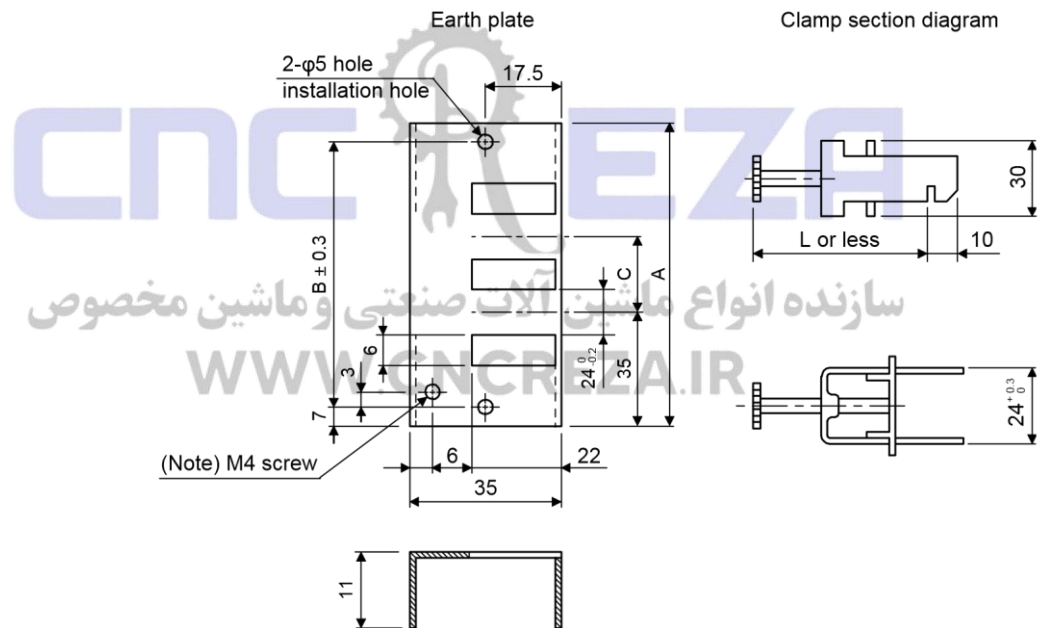

Note. Screw hole for grounding. Connect it to the grounding plate of the cabinet.

Model	A	B	C	Accessory fittings	Clamp fitting	L
AERSBAN-DSET	100	86	30	Clamp A: 2pcs.	A	70
AERSBAN-ESET	70	56		Clamp B: 1pc.	B	45

### (d) Line noise filter (FR-BSF01)

This filter is effective in suppressing noises radiated from the power supply side and output side of the servo amplifier and also in suppressing high-frequency leakage current (0-phase current). It especially affects the noises between 0.5 MHz and 5 MHz band.

Connection diagram	Dimensions [Unit: mm]
--------------------	-----------------------

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

Use the line noise filters for lines of the power supply (L1, L2, and L3) and of the servo motor power (U, V, and W). Pass each of the wires through the line noise filter an equal number of times in the same direction. For the power supply, the effect of the filter rises as the number of passes increases, but generally four passes would be appropriate. For the servo motor power lines, passes must be four times or less. Do not pass the grounding wire through the filter. or the effect of the filter will drop.

Wind the wires by passing through the filter to satisfy the required number of passes as shown in Example 1. If the wires are too thick to wind, use two or more filters to have the required number of passes as shown in Example 2.

Place the line noise filters as close to the servo amplifier as possible for their best performance.

**Example 1**

(Number of passes: 4)

**Example 2**

Two filters are used  
(Total number of passes: 4)

FR-BSF01 (for wire size 3.5 mm<sup>2</sup> (AWG 12) or less)

(e) Radio noise filter (FR-BIF)

This filter is effective in suppressing noises radiated from the power supply side of the servo amplifier especially in 10 MHz and lower radio frequency bands. The FR-BIF is designed for the input only.

200 V class: FR-BIF

Connection diagram	Dimensions [Unit: mm]
<p>Make the connection cables as short as possible. Grounding is always required.</p> <p>When using the FR-BIF with a single-phase power supply, always insulate the lead wires that are not used for wiring.</p>	<p style="text-align: right;">Leakage current: 4 mA</p>


(f) Varistor for input power supply (recommended)

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

Varistors are effective to prevent exogenous noise and lightning surge from entering the servo amplifier. When using a varistor, connect it between each phase of the input power supply of the equipment. For varistors, the TND20V-431K and TND20V-471K, manufactured by NIPPON CHEMICON, are recommended. For detailed specification and usage of the varistors, refer to the manufacturer catalog.


Power supply voltage	Varistor	Maximum rating					Maximum limit voltage		Static capacity (reference value)	Varistor voltage rating (range) V1 mA
		Permissible circuit voltage		Surge current immunity	Energy immunity	Rated pulse power	[A]	[V]		
		AC [Vrms]	DC [V]	8/20 $\mu$ s [A]	2 ms [J]	[W]			[pF]	[V]
200 V class	TND20V-431K	275	350	10000/1 times	195	1.0	100	710	1300	430 (387 to 473)
	TND20V-471K	300	385	7000/2 times	215			775	1200	470 (423 to 517)

[Unit: mm]

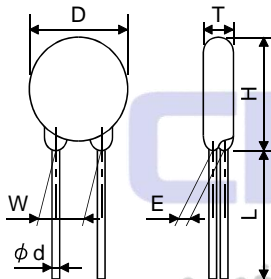

Model	D Max.	H Max.	T Max.	E $\pm$ 1.0	(Note) L min.	ijd $\pm$ 0.05	W $\pm$ 1.0
TND20V-431K	21.5	24.5	6.4	3.3	20	0.8	10.0
TND20V-471K			6.6	3.5			

Note. For special purpose items for lead length (L), contact the manufacturer.

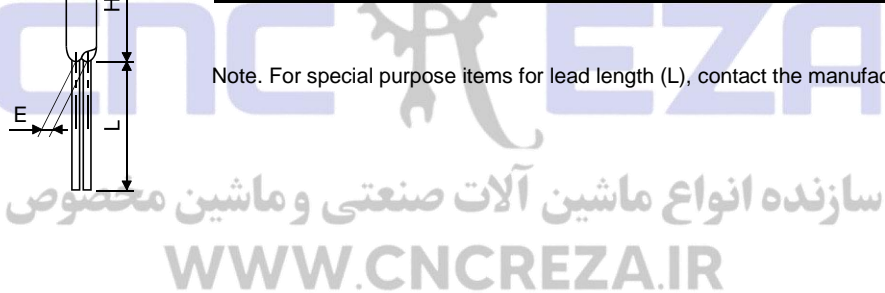

## 11.10 Earth-leakage current breaker

### (1) Selection method


High-frequency chopper currents controlled by pulse width modulation flow in the AC servo circuits. Leakage currents containing harmonic contents are larger than those of the motor which is run with a commercial power supply.

Select an earth-leakage current breaker according to the following formula, and ground the servo amplifier, servo motor, etc. securely.

To minimize leakage currents, make the input and output cables as short as possible, and make the grounding cable longer than 30 cm.

Rated sensitivity current  $\square 10 \cdot \{I_{g1} + I_{gn} + I_{ga} + K \cdot (I_{g2} + I_{gm})\}$  [mA]..... (11.1)

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

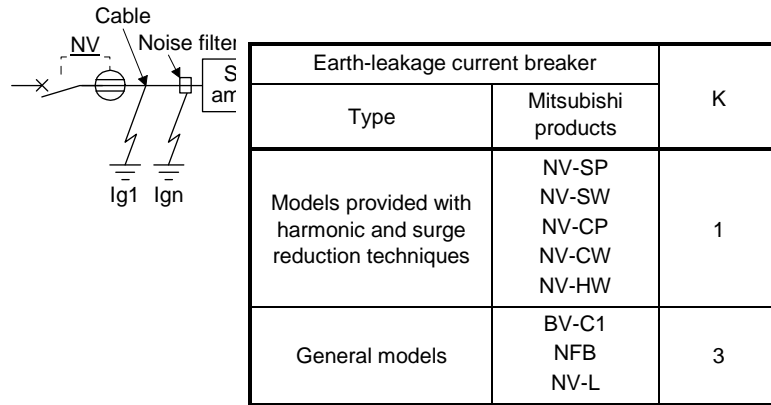

lg1: Leakage current on the electric channel from the earth-leakage current breaker to the input terminals of the servo amplifier (Found from Fig. 11.2.)

lg2: Leakage current on the electric channel from the output terminals of the servo amplifier to the servo motor (found from Fig. 11.2.)

Ign: Leakage current when a filter is connected to the input side (4.4 mA per one FR-BIF)

Iga: Leakage current of the servo amplifier (Found from table 11.3.)

Igm: Leakage current of the servo motor (Found from table 11.2.)

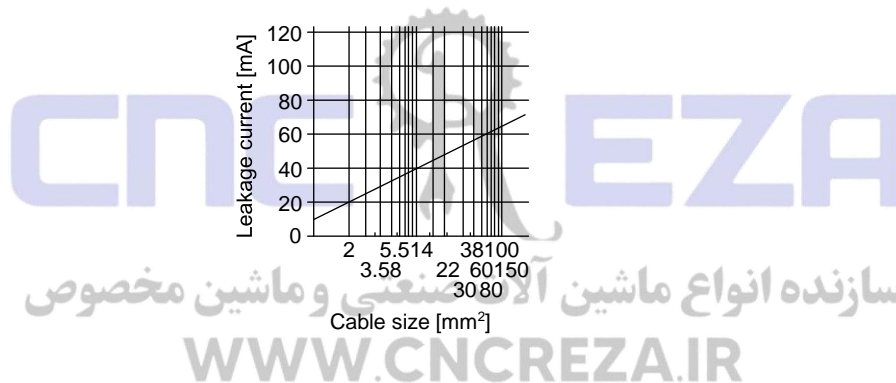


Fig. 11.2 Example of leakage current per km (lg1, lg2) for CV cable run in metal conduit

Table 11.2 Servo motor leakage current example (Igm)

Servo motor power [kW]	Leakage current [mA]
0.1 to 1	0.1
2	0.2
3	0.3

Table 11.3 Servo amplifier leakage current example (Iga)

Servo amplifier capacity [kW]	Leakage current [mA]
0.1 to 0.6	0.1
0.75 to 3	0.15


Table 11.4 Earth-leakage current breaker selection example

Servo amplifier capacity [kW]	Rated sensitivity current of earthleakage current breaker [mA]
MR-JE-10A to MR-JE-300A	15

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

## (2) Selection example

Indicated below is an example of selecting an earth-leakage current breaker under the following conditions.

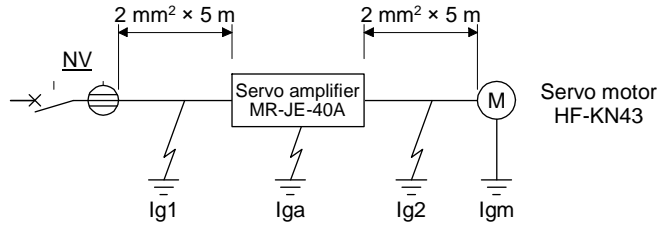

Use an earth-leakage current breaker designed for suppressing harmonics/surges. Find the terms of equation (11.1) from the diagram.

$$I_{g1} = 20 \cdot \frac{5}{1000} = 0.1 \text{ [mA]}$$

$$I_{g2} = 20 \cdot \frac{5}{1000} = 0.1 \text{ [mA]}$$

$$I_{gn} = 0 \text{ (not used)}$$

$$I_{ga} = 0.1 \text{ [mA]}$$

$$I_{gm} = 0.1 \text{ [mA]}$$

Insert these values in equation (11.1).

$$I_g \square 10 \cdot \{0.1 + 0 + 0.1 + 1 \cdot (0.1 + 0.1)\} \\ \bullet 4 \text{ [mA]}$$

According to the result of calculation, use an earth-leakage current breaker having the rated sensitivity current ( $I_g$ ) of 4.0 mA or more.

An earth-leakage current breaker having  $I_g$  of 15 mA is used with the NV-SP/SW/CP/CW/HW series.

### 11.11 EMC filter (recommended)

It is recommended that one of the following filters be used to comply with EN EMC directive. Some EMC filters have large in leakage current.

#### (1) Combination with the servo amplifier

Servo amplifier	Recommended filter (Soshin Electric)				Mass [kg]
	Model	Rated current [A]	Rated voltage [V AC]	Leakage current [mA]	
MR-JE-10A to MR-JE-100A	(Note) HF3010A-UN	10	250	5	3.5




# 11. OPTIONS AND PERIPHERAL EQUIPMENT

MR-JE-200A, MR-JE-300A	(Note) HF3030A-UN	30		5.5
---------------------------	----------------------	----	--	-----

Note. A surge protector is separately required to use any of these EMC filters.

## (2) Connection example

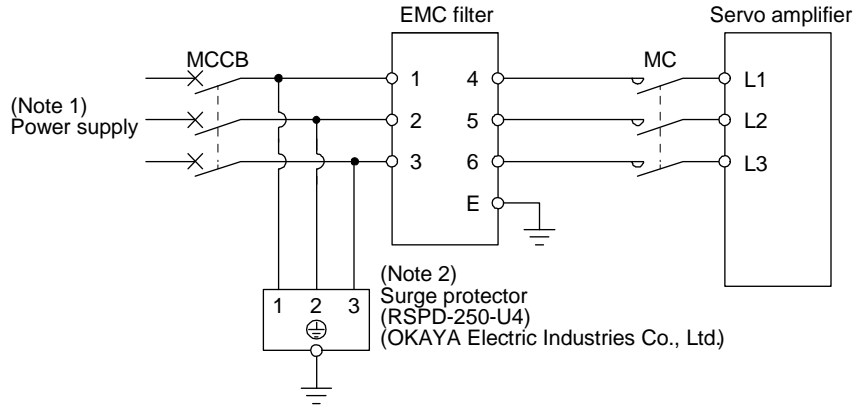


Note 1. For 1-phase 200 V AC to 240 V AC, connect the power supply to L1 and L3. Leave L2 open.

2. The example is when a surge protector is connected.

## (3) Dimensions (a) EMC filter


HF3010A-UN

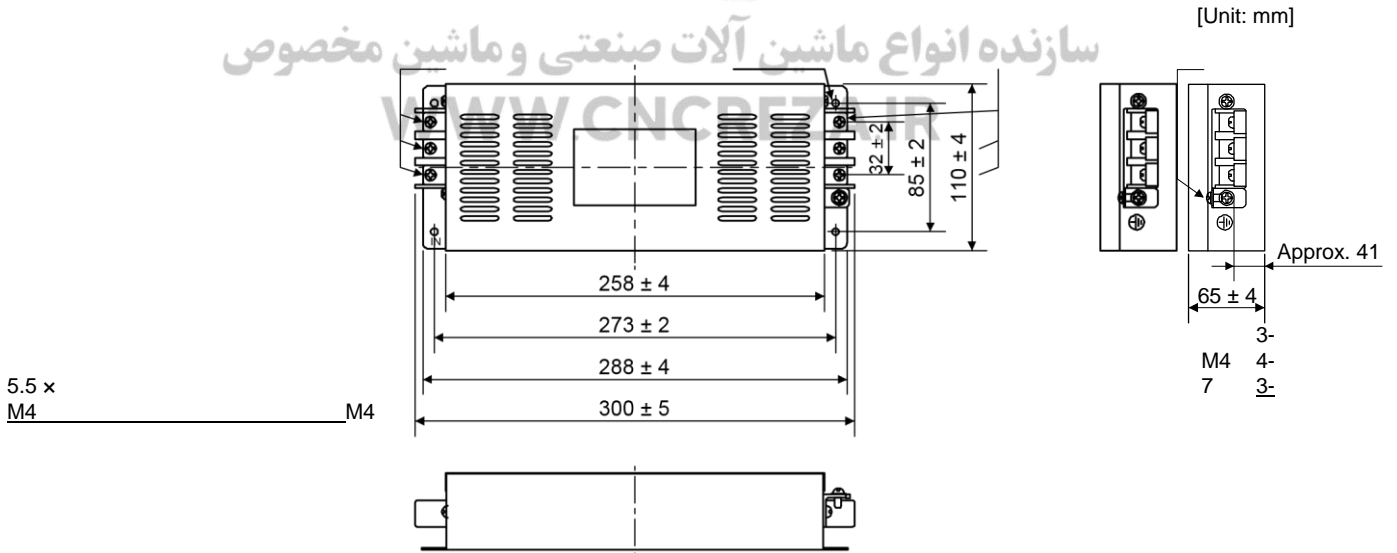

# 11. OPTIONS AND PERIPHERAL EQUIPMENT

HF3030A-UN


[Unit: mm]

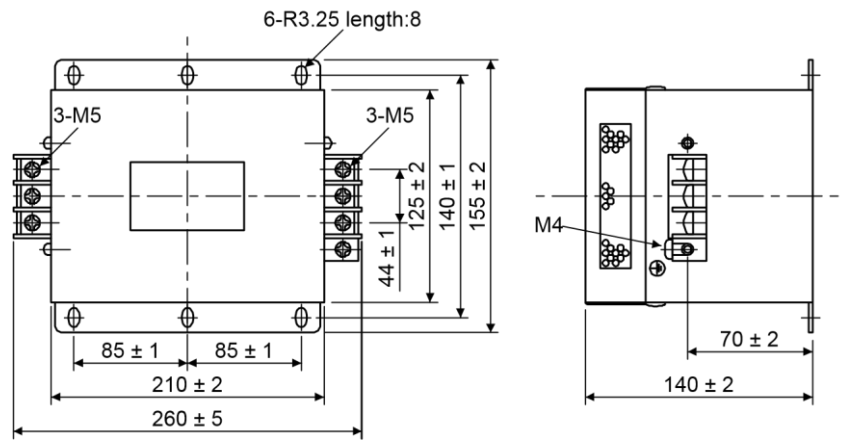

(b) Surge protector

RSPD-250-U4

[Unit: mm]

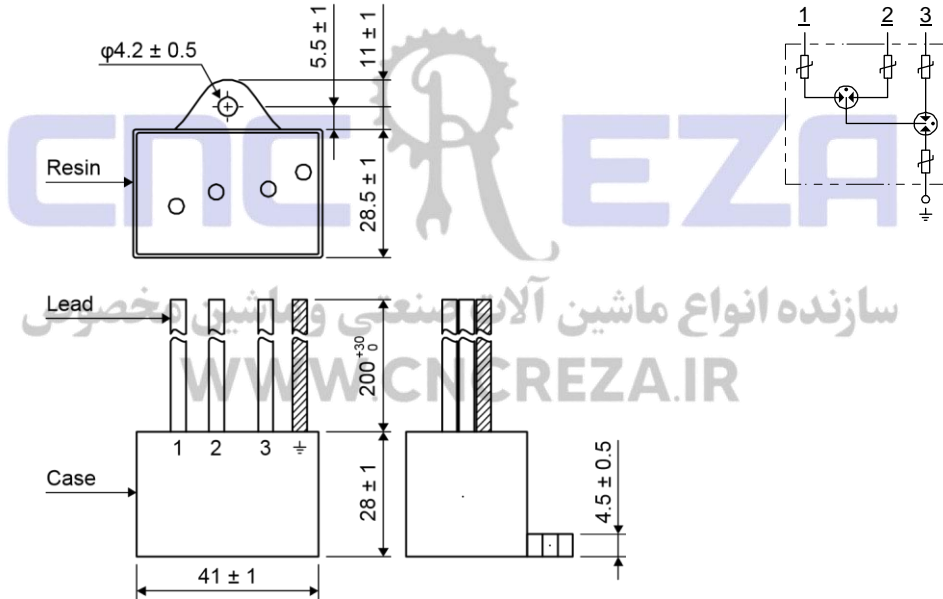



## 11. OPTIONS AND PERIPHERAL EQUIPMENT

---

---

---

---

---

---

---



# APPENDIX

## App. 1 Peripheral equipment manufacturer (for reference)

Names given in the table are as of July 2013.

Manufacturer	Contact information
JST	J.S.T. Mfg. Co., Ltd.
3M	3M
Soshin Electric	Soshin Electric Co., Ltd.

## App. 2 Compliance with global standards

### App. 2.1 About safety

This section explains safety of users and machine operators. Please read the section carefully before mounting the equipment.

#### App. 2.1.1 Professional engineer

Only professional engineers should mount MR-JE servo amplifiers.

Here, professional engineers are persons who have taken proper engineering training qualified persons who are engaged in electrical equipment.

Please note if you can take a proper engineering training at your local Mitsubishi Electric office. Contact your local sales office for schedules and locations.

#### App. 2.1.2 Applications of the devices

MR-JE servo amplifiers comply with the following safety standards.

IEC/EN 61800-5-1, IEC/EN 61800-3

#### App. 2.1.3 Correct use

Always use the MR-JE servo amplifiers within specifications (voltage, temperature, etc. Refer to section 1.3 for details.). Mitsubishi Electric Co. accepts no claims for liability if the equipment is used in any other way or if modifications are made to the device, even in the context of mounting and installation.



**WARNING** It takes 15 minutes for capacitor discharging. Do not touch the unit and terminals immediately after power off.

### (1) Peripheral device and power wiring (a) Local wiring

Use only copper wires rated at 75 °C for wiring. The following table shows wires [AWG] rated at 75 °C.

Servo amplifier	Wire [AWG]		
	(Note 2) L1/L2/L3/⊕	P+/C	(Note 1, 2) U/V/W/⊕
MR-JE-10A/MR-JE-20A/MR-JE-40A/MR-JE-70A/MR-JE-100A/ MR-JE-200A/MR-JE-300A	14	14	14

Note 1. Select wire sizes depending on the rated output of the servo motors. The values in the table are sizes based on rated output of the servo amplifiers.

2. The following shows the PE terminal specifications of the servo amplifier.

# APPENDIX

Screw size: M4  
 Tightening torque: 1.2 [N•m]  
 Recommended crimp terminals: R2-4 (JST)  
 Crimping tool: YPT-60-21 (JST)

(b) Selection example of MCCB and fuse

When a servo amplifier is protected by T class fuses or circuit breaker having an interrupting rating not less than 300 A effective value and 240 V maximum, use T class fuses or molded-case circuit breaker (UL489 Listed MCCB) as the following table. The T class fuses and molded-case circuit breakers in the table are selected examples based on rated I/O of the servo amplifiers. When you select a smaller capacity servo motor to connect it to the servo amplifier, you can also use smaller capacity T class fuses or molded-case circuit breaker than ones in the table. For selecting ones other than Class T fuses and molded-case circuit breakers below, refer to section 11.6.

Servo amplifier	Molded-case circuit breaker (240 V AC)	Fuse (300 V)
MR-JE-10A/MR-JE-20A/MR-JE-40A/MR-JE-70A	NF50-SWU-5A (50 A frame 5 A)	10 A
MR-JE-70A (Note)/MR-JE-100A	NF50-SWU-10A (50 A frame 10 A)	15 A
MR-JE-200A/MR-JE-300A	NF50-SWU-15A (50 A frame 15 A)	30 A

Note. For 1-phase 200 V AC power input

(c) Power supply

This servo amplifier can be supplied from star-connected supply with grounded neutral point of overvoltage category III set forth in IEC/EN 60664-1. However, when you use the neutral point for single phase supply, a reinforced insulating transformer is required in the power input section. For the interface power supply, use an external 24 V DC power supply with reinforced insulation on I/O terminals.

(d) Grounding

To prevent an electric shock, always connect the protective earth (PE) terminal (marked ⊕) of the servo amplifier to the protective earth (PE) of the cabinet. Do not connect two grounding cables to the same protective earth (PE) terminal. Always connect cables to the terminals one-to-one. If using an earth-leakage current breaker, always ground the protective earth (PE) terminal of the servo amplifier to prevent an electric shock. Only an RCD (earth-leakage current breaker) of type B can be used for the power supply side of the product.



(2) EU compliance

The MR-JE servo amplifiers are designed to comply with the following directions to meet requirements for mounting, using, and periodic technical inspections: EMC directive (2004/108/EC) and Low-voltage directive (2006/95/EC).

(a) EMC requirement

MR-JE servo amplifiers comply with category C3 in accordance with IEC/EN 61800-3. Use a EMC filter and surge protector on the primary side. As for I/O signal wires (max. length 10 m) and encoder cables (max. length 50 m), connect them to a shielded grounding. However, when the encoder cable

## APPENDIX

---

length is longer than 30 m for MR-JE-70A and MR-JE-100A, set a radio noise filter (FR-BIF) to the input power supply side of the servo amplifier. The following shows recommended products.

EMC filter: Soshin Electric HF3000A-UN series

Surge protector: Okaya Electric Industries RSPD-250-U4 series

Radio noise filter: Mitsubishi Electric FR-BIF

- MR-JE Series are not intended to be used on a low-voltage public network which supplies domestic premises;

- radio frequency interference is expected if used on such a network.

The installer shall provide a guide for Installation and use, including recommended mitigation devices.

(b) For Declaration of Conformity (DoC)

Hereby, MITSUBISHI ELECTRIC EUROPE B.V., declares that the servo amplifiers are in compliance with the necessary requirements and standards (2004/108/EC and 2006/95/EC). For the copy of Declaration of Conformity, contact your local sales office.

(3) USA/Canada compliance

This servo amplifier is designed in compliance with UL 508C and CSA C22.2 No.14.

(a) Installation

The minimum cabinet size is 150% of MR-JE servo amplifier's volume. Also, design the cabinet so that the ambient temperature in the cabinet is 55 °C or less. The servo amplifier must be installed in the metal cabinet. For environment, the units should be used in open type (UL 50) and overvoltage category III or lower. The servo amplifier needs to be installed at or below of pollution degree 2. For connection, use copper wires.

(b) Short-circuit current rating (SCCR)

Suitable For Use On A Circuit Capable Of Delivering Not More Than 100 kA rms Symmetrical Amperes, 500 Volts Maximum.

(c) Overload protection characteristics

The MR-JE servo amplifiers have servo motor overload protective function. (It is set on the basis (full load current) of 120% rated current of the servo amplifier.)

(d) Over-temperature protection for motor

Motor Over temperature sensing is not provided by the drive.

(e) Capacitor discharge

It takes 15 minutes for capacitor discharging. Do not touch the unit and terminals immediately after power off.

(f) Branch circuit protection

For installation in United States, branch circuit protection must be provided, in accordance with the National Electrical Code and any applicable local codes.

For installation in Canada, branch circuit protection must be provided, in accordance with the Canada Electrical Code and any applicable provincial codes.

(4) South Korea compliance

This product complies with the Radio Wave Law (KC mark). Please note the following to use the product.

# APPENDIX

본 제품은 A급 (Class A) 전자파 방출 특성을 충족하며, 전자기 호환성 (EMC) 요구 사항을 충족합니다. 판매자와 사용자는 위의 사항을 꼭 지켜야 하며, 본 제품을 가정 외의 장소에서 사용하십시오.

(The product is for business use (Class A) and meets the electromagnetic compatibility requirements. The seller and the user must note the above point, and use the product in a place except for home.)

## App. 2.1.4 General cautions for safety protection and protective measures

Observe the following items to ensure proper use of the MELSERVO MR-JE servo amplifiers.

- (1) Only qualified personnel and professional engineers should perform system installation.
- (2) When mounting, installing, and using the MELSERVO MR-JE servo amplifier, always observe standards and directives applicable in the country.

## App. 2.1.5 Disposal


Disposal of unusable or irreparable devices should always occur in accordance with the applicable countryspecific waste disposal regulations. (Example: European Waste 16 02 14)

## App. 2.2 Mounting/dismounting

Installation direction and clearances

● The devices must be installed in the specified direction. Not doing so may cause a malfunction.

**! CAUTION** ● Mount the servo amplifier on a cabinet which meets IP54 in the correct vertical direction to maintain pollution degree 2.

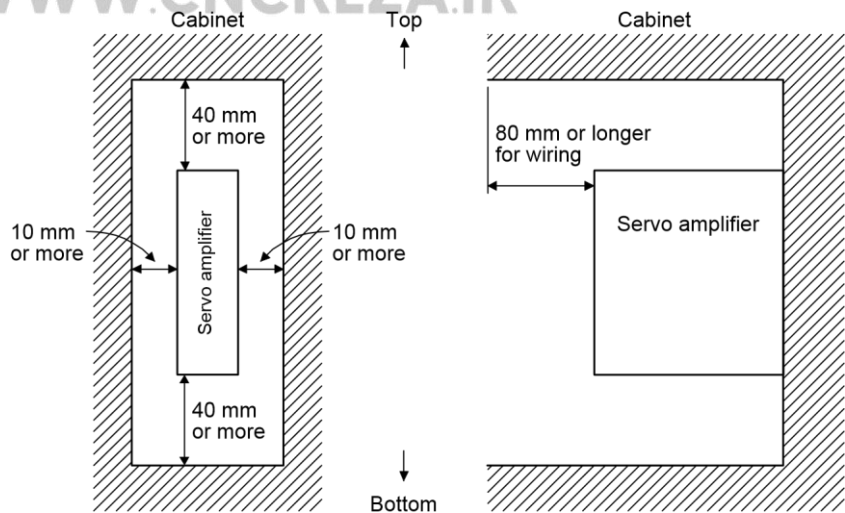

## App. 2.3 Electrical Installation and configuration diagram

**! WARNING** Turn off the molded-case circuit breaker (MCCB) to avoid electrical shocks or damages to the product before starting the installation or wiring.




## APPENDIX




**CAUTION** Connecting a servo motor of the wrong axis to U, V, W, or CN2 of the servo amplifier may cause a malfunction.

The following shows representative configuration examples to conform to the IEC/EN/UL/CSA standards.

### (1) 3-phase input

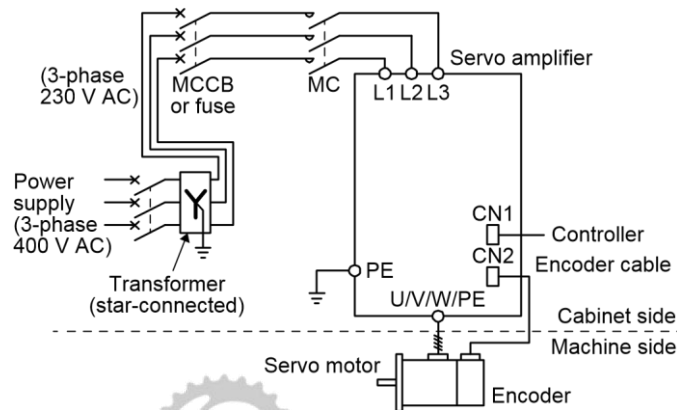

### (2) 1-phase input

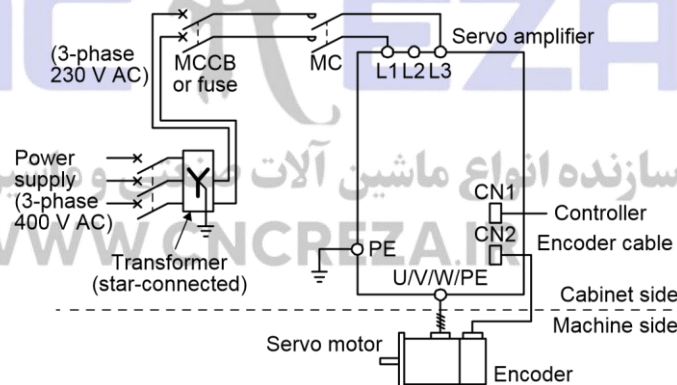

The control circuit connectors described by rectangles are safely separated from the main circuits described by circles.


The connected motors will be limited as follows.

HF-KN/HF-SN series servo motors (Mfg.: Mitsubishi Electric)

#### App. 2.4 Signal

##### App. 2.4.1 Signal

The following shows CN1 connector signals as a typical example. Refer to section 3.4 for other connectors.

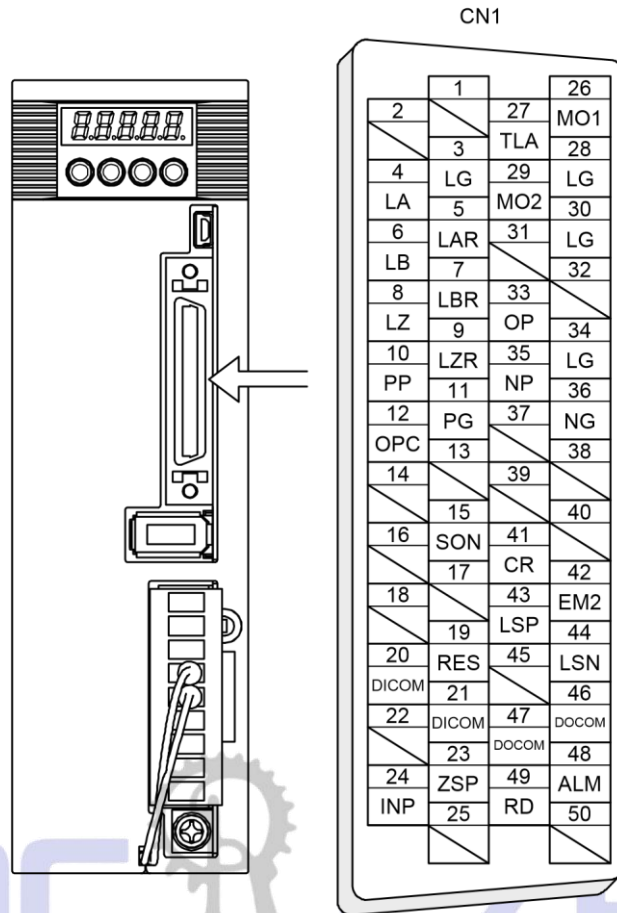

This is in position control mode.

App. 2.4.2 Input/output device

The following shows typical I/O devices. Refer to section 3.5 for other devices.

Input device

Symbol	Device	Connector	Pin No.
SON	Servo-on	CN1	15
RES	Reset		19
CR	Clear		41
EM2	Forced stop 2		42
LSP	Forward rotation stroke end		43
LSN	Reverse rotation stroke end		44

Output device

Symbol	Device	Connector	Pin No.
ZSP	Zero speed detection	CN1	23
INP	In-position		24
ALM	Malfunction		48
RD	Ready		49

## APPENDIX

### Power supply

Symbol	Device	Connector	Pin No.
DICOM	Digital I/F power supply input	CN1	20, 21
DOCOM	Digital I/F common		46, 47
SD	Shield		Plate

#### App. 2.5 Maintenance and service



**WARNING** To avoid an electric shock, only qualified personnel should attempt inspections. For repair and parts replacement, contact your local sales office.



**CAUTION**

● Do not perform insulation resistance test on the servo amplifier. Otherwise, it may cause a malfunction.

● Do not disassemble and/or repair the equipment on customer side.

#### App. 2.5.1 Inspection items

It is recommended that the following points periodically be checked.

- (1) Check for loose protective earth (PE) terminal screws of the servo amplifier. Retighten any loose screws. (Tightening torque: 1.2 N•m)
- (2) Check servo motor bearings, brake section, etc. for unusual noise.
- (3) Check the cables and the like for scratches or cracks. Perform periodic inspection according to operating conditions.
- (4) Check that the connectors are securely connected to the servo motor.
- (5) Check that the wires are not coming out from the connector.
- (6) Check for dust accumulation on the servo amplifier.
- (7) Check for unusual noise generated from the servo amplifier.
- (8) Check the servo motor shaft and coupling for connection.

#### App. 2.5.2 Parts having service lives

Service lives of the following parts are listed below. However, the service life vary depending on operating methods and environment. If any fault is found in the parts, they must be replaced immediately regardless of their service lives. For parts replacement, please contact your local sales office.


# APPENDIX

Part name	Life guideline
Smoothing capacitor	(Note) 10 years
Relay	Number of power-on times and forced stop times: 100,000 in total
Cooling fan	50,000 hours to 70,000 hours (7 years to 8 years)

Note. The characteristic of smoothing capacitor is deteriorated due to ripple currents, etc. The life of the capacitor greatly depends on ambient temperature and operating conditions.

The capacitor will reach the end of its life in 10 years of continuous operation in normal air-conditioned environment (40 °C surrounding air temperature or less).

## App. 2.6 Transportation and storage



- Transport the products correctly according to their mass.
- Stacking in excess of the limited number of product packages is not allowed.
- Install the servo amplifier and servo motor in a load-bearing place in accordance with "MR-JE-\_A Servo Amplifier Instruction Manual".
- Do not get on or put heavy load on the equipment.
- Do not hold the lead wire of the regenerative resistor when transporting the servo amplifier.

When you keep or use it, please fulfill the following environment.

Item		Environment
Ambient temperature	Operation [°C]	0 to 55 Class 3K3 (IEC/EN 60721-3-3)
	Transportation (Note) [°C]	-20 to 65 Class 2K4 (IEC/EN 60721-3-2)
	Storage (Note) [°C]	-20 to 65 Class 1K4 (IEC/EN 60721-3-1)
Ambient humidity	Operation, transportation, storage	5% to 90 %RH
Vibration load	Test values	10 Hz to 57 Hz with constant deviation of 0.075 mm 57 Hz to 150 Hz with constant acceleration of 9.8 m/s <sup>2</sup> (1 g) to IEC/EN 61800-5-1 (Test Fc of IEC 60068-2-6)
	Operation	5.9 m/s <sup>2</sup> (0.6 g)
	Transportation (Note)	Class 2M3 (IEC/EN 60721-3-2)
	Storage	Class 1M2 (IEC/EN 60721-3-2)
Pollution degree		2
IP rating		IP20 (IEC/EN 60529)
		Open type (UL 50)
Altitude	Operation, storage	1000 m or less above sea level
	Transportation	10000 m or less above sea level

Note. In regular transport packaging

## App. 2.7 Technical data

### App. 2.7.1 MR-JE servo amplifier

# APPENDIX

Item		MR-JE-10A/MR-JE-20A/MR-JE-40A/ MR-JE-70A	MR-JE-100A/MR-JE-200A/MR-JE-300A
Power supply	Line voltage	3-phase or 1-phase 200 V AC to 240 V AC, 50 Hz/60 Hz	3-phase 200 V AC to 240 V AC, 50 Hz/60 Hz
	Interface (SELV)	24 V DC, (required current capacity: 300 mA)	
Control method		Sine-wave PWM control, current control method	
Pollution degree		2 (IEC/EN 60664-1)	
Overvoltage category		III (IEC/EN 60664-1)	
Protection class		I (IEC/EN 61800-5-1)	
Short-circuit current rating (SCCR)		100 kA	

## App. 2.7.2 Servo amplifier dimensions

	Servo amplifier	Variable dimension table [mm]			Mass [kg]
		W	H	D	
	MR-JE-10A/MR-JE-20A/MR-JE-40A	50	168	135	0.8
	MR-JE-70A/MR-JE-100A	70	168	185	1.5
	MR-JE-200A/MR-JE-300A	90	168	195	2.1



## App. 2.7.3 Mounting hole

	Servo amplifier	Variable dimensions [mm]				Screw size e	
		a	a1	b	c		d
	MR-JE-10A/MR-JE-20A/MR-JE-40A	6	6	156 ± 0.5	6	M5	
	MR-JE-70A/MR-JE-100A	22	22	156 ± 0.5	6	42 ± 0.3	M5
	MR-JE-200A/MR-JE-300A	6	45	156 ± 0.5	6	78 ± 0.3	M5


## App. 3 Analog monitor

POINT	
●	analog monitor output may be irregular at power-on.

The servo status can be outputted to two channels in terms of voltage.

### (1) Setting


Change the following digits of [Pr. PC14] and [Pr. PC15].

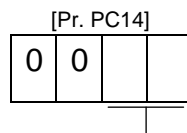

Analog monitor 1 output selection

# APPENDIX

(the signal provided to the output across MO1 and LG)

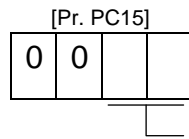

Analog monitor 2 output selection  
(the signal provided to the output across MO2 and LG)

[Pr. PC39] and [Pr. PC40] can be used to set the offset voltages to the analog output voltages. Setting value is -9999 mV to 9999 mV.

Parameter	Description	Setting range [mV]
PC39	This is used to set the offset voltage of MO1 (Analog monitor 1).	-9999 to 9999
PC40	This is used to set the offset voltage of MO2 (Analog monitor 2).	

## (2) Setting

The servo amplifier is factory-set to output the servo motor speed to MO1 (Analog monitor 1) and the torque to MO2 (Analog monitor 2). The setting can be changed as listed below by setting the [Pr. PC14] and [Pr. PC15] value.

Refer to (3) for the detection point.

Setting value	Output item	Description	Setting value	Output item	Description
00	Servo motor speed		01	Torque	
02	Servo motor speed		03	Torque	
04	Current command		05	The command pulse frequency ( $\pm 10$ V/ $\pm 4$ Mpulses/s)	

# APPENDIX


06	Servo motor-side droop pulses (Note 1, 2, 3) ( $\pm 10$ V/100 pulses)		07	Servo motor-side droop pulses (Note 1, 2, 3) ( $\pm 10$ V/1000 pulses)	
08	Servo motor-side droop pulses (Note 1, 2, 3) ( $\pm 10$ V/10000 pulses)		09	Servo motor-side droop pulses (Note 1, 2, 3) ( $\pm 10$ V/100000 pulses)	
0D	Bus voltage		0E	Speed command 2 (Note 2)	
17	Encoder inside temperature ( $\pm 10$ V/ $\pm 128$ °C)				

Note 1. Encoder pulse unit

2. This cannot be used in the torque control mode.
3. This cannot be used in the speed control mode.

WWW.CNCREZA.IR

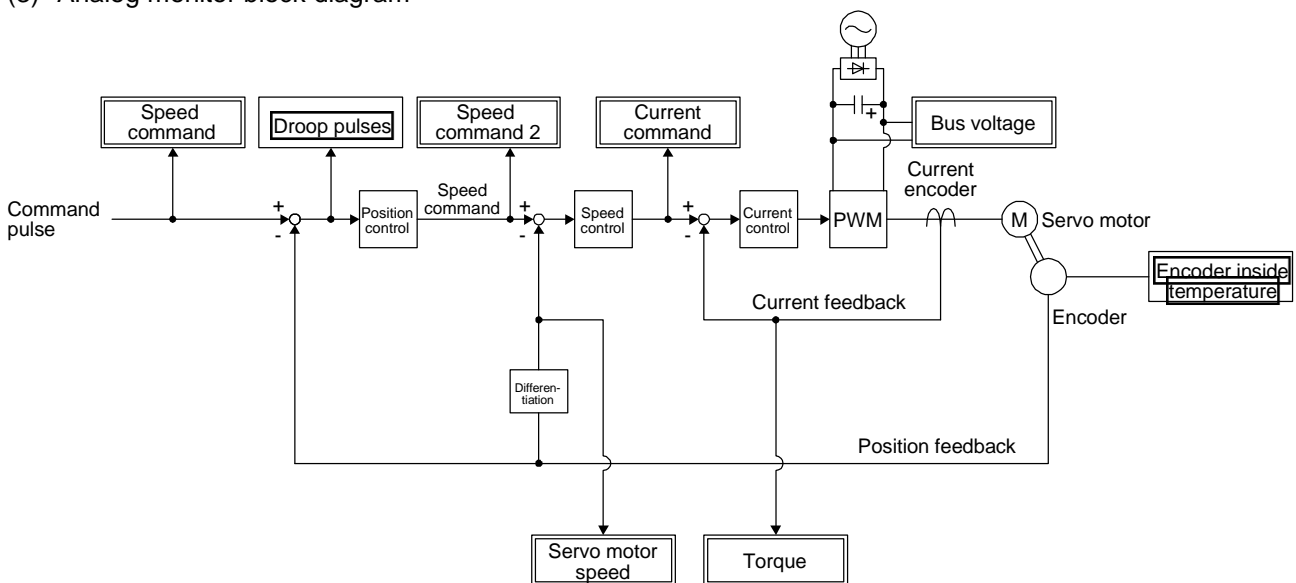


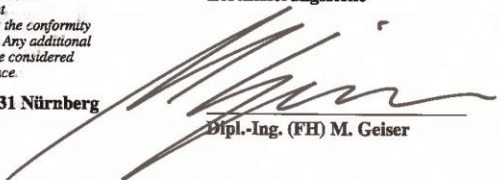
### (3) Analog monitor block diagram



# APPENDIX

## App. 4 Low-voltage directive

MR-JE series servo amplifiers are certificated in compliance with Low-voltage directive. The following shows a certificate by the Certification Body.

<b>Zertifikat Certificate</b>			
<b>Zertifikat Nr. Certificate No.</b> R 50244051	<b>Blatt Page</b> 0001		
<b>Ihr Zeichen Client Reference</b> T.E.	<b>Unser Zeichen Our Reference</b> ZO-HIM- 12311510 001	<b>Ausstellungsdatum</b> 11.01.2013	<b>Date of Issue</b> (day/mo/yr)
<b>Genehmigungsinhaber License Holder</b> Mitsubishi Electric Corp. Nagoya Works 1-14, Yada-minami 5-chome Higashi-ku, Nagoya-shi, Aichi 461-8670 JAPAN		<b>Fertigungsstätte Manufacturing Plant</b> Mitsubishi Electric Corp. Nagoya Works 1-14, Yada-minami 5-chome Higashi-ku, Nagoya-shi, Aichi 461-8670 JAPAN	
<b>Prüfzeichen Test Mark</b>	<b>Geprüft nach Tested acc. to</b>		
	Type Approved Safety Regular Production Surveillance www.tuv.com ID 2000000000 EN 61800-5-1:2007 IEC 61800-5-1:2007		
<b>Zertifiziertes Produkt (Geräteidentifikation)</b> <i>Certified Product (Product Identification)</i>	<b>Lizenzentgelte - Einheit</b> <i>License Fee - Unit</i>		
<b>Control Unit Servo Drive Unit</b>			
Type Designation :	MR-JE-uvw-xyz u, v, w, x, y, z = (see Appendix 1)	5 6	
Rated Voltage :	3AC 200-240V, 50/60Hz or AC 200-240V, 50/60Hz		
Rated Current :	(see Appendix 1)		
Protection Class :	I		
Rated Output Values :	3AC 170V 360Hz		
Ambient Temperature :	0°C to 55°C		
Overvoltage Category:	III (3AC200-240V) or II (AC200-240V)		
Pollution Degree :	2		
<b>Remark:</b> Power circuits and secondary control circuits provide protective separation. The unit must be installed in accordance with the manufacturer's instructions.			
<b>ANLAGE (Appendix) : 1</b>		11	
<p><i>Dem Zertifikat liegt unsere Prüf- und Zertifizierungsordnung zugrunde und es bestätigt die Konformität des Produktes mit den oben genannten Standards und Prüfgrundlagen. Zusätzliche Anforderungen in Ländern, in denen das Produkt in Verkehr gebracht werden soll, müssen zusätzlich betrachtet werden. Die Herstellung des zertifizierten Produktes wird überwacht.</i>  <i>This certificate is based on our Testing and Certification Regulation and states the conformity of the product with the standards and testing requirements as indicated above. Any additional requirements in countries where the product is going to be marketed have to be considered additionally. The manufacturing of the certified product is subject to surveillance.</i></p>			
<b>TÜV Rheinland LGA Products GmbH - Tillystraße 2 - 90431 Nürnberg</b> Tel.: (+49/221)8 06 - 13 71 e-mail: cert-validity@de.tuv.com Fax: (+49/221)8 06 - 39 35 http://www.tuv.com/safety		 <b>Zertifizierungsstelle</b>  Dipl.-Ing. (FH) M. Geiser	


Supplementation: Refer to section 1.6 (2) for the models shown in "(see Appendix 1)".



## REVISIONS

\*The manual number is given on the bottom left of the back cover.

Print Data	*Manual Number	Revision
May. 2013	SH(NA)030128-A	First edition
Jul. 2013	SH(NA)030128-B	<p>4. Additional instructions (3) Partially changed.</p> <p>Transportation and installation Section 1.3</p> <p>Section 1.6 Partially changed.</p> <p>Chapter 2 Partially changed.</p> <p>Chapter 3 CAUTION is partially changed.</p> <p>Section 3.2.1 CAUTION is partially changed.</p> <p>Section 3.4 Partially changed.</p> <p>Section 3.5 Partially changed.</p> <p>Section 3.6.1 Partially changed.</p> <p>Section 3.9.1 Partially changed.</p> <p>Section 3.9.2 Partially changed.</p> <p>Section 3.9.3 Partially changed.</p> <p>Section 5.2.1 Partially deleted.</p> <p>Section 11.3 Partially added and partially changed in Pr. PA13.</p> <p>Section 11.6 Partially changed.</p> <p>App. 2 Partially changed.</p>
 <p>سازنده انواع ماشین آلات صنعتی و ماشین مخصوص</p> <p>WWW.CNCREZA.IR</p>		

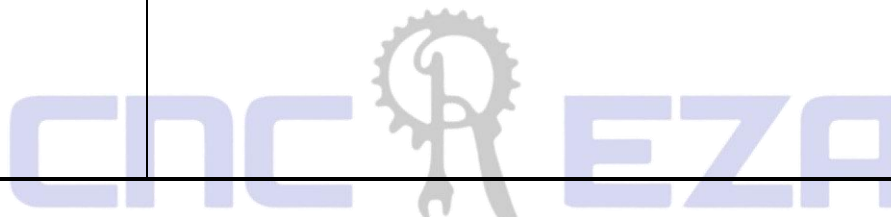

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2013 MITSUBISHI ELECTRIC CORPORATION

Country/Region	Sales office	Tel/Fax
USA	Mitsubishi Electric Automation Inc. 500 Corporate Woods Parkway, Vernon Hills, IL 60061, USA	Tel : +1-847-478-2100 Fax : +1-847-478-0327
Germany	Mitsubishi Electric Europe B.V. German Branch Gothaer Strasse 8, D-40880 Ratingen, Germany	Tel : +49-2102-486-0 Fax : +49-2102-486-1120
Italy	Mitsubishi Electric Europe B.V. Italian Branch Viale Colleoni 7 1-20041 Agrate Brianza (Milano), Italy	Tel : +39-39-60531 Fax : +39-39-6053312
China	Mitsubishi Electric Automation (China) Ltd. 4F Zhi Fu Plazz, No. 80 Xin Chang Road Shanghai 200003, China	Tel : +86-21-6120-0808 Fax : +86-21-6121-2444
Taiwan	Setsuyo Enterprise Co., Ltd. 6F, No.105 Wu-Kung 3rd Rd, Wu-Ku Hsiang, Taipei Hsine, Taiwan	Tel : +886-2-2299-2499 Fax : +886-2-2299-2509
Korea	Mitsubishi Electric Automation Korea Co., Ltd. 3F, 1480-6, Gayang-dong, Gangseo-gu, Seoul 157-200, Korea	Tel : +82-2-3660-9552 Fax : +82-2-3664-8372
	Mitsubishi Electric Asia Pte, Ltd. 307 Alexandra Road #05-01/02, Mitsubishi Electric Building Singapore 159943	Tel : +65-6470-2460 Fax : +65-6476-7439

Singapore



## Warranty

### 1. Warranty period and coverage

We will repair any failure or defect hereinafter referred to as "failure" in our FA equipment hereinafter referred to as the "Product" arisen during warranty period at no charge due to causes for which we are responsible through the distributor from which you purchased the Product or our service provider. However, we will charge the actual cost of dispatching our engineer for an on-site repair work on request by customer in Japan or overseas countries. We are not responsible for any on-site readjustment and/or trial run that may be required after a defective unit are repaired or replaced.

### [Term]

The term of warranty for Product is twelve (12) months after your purchase or delivery of the Product to a place designated by you or eighteen (18) months from the date of manufacture whichever comes first ("Warranty Period"). Warranty period for repaired Product cannot exceed beyond the original warranty period before any repair work.

### [Limitations]

(1) You are requested to conduct an initial failure diagnosis by yourself, as a general rule.

It can also be carried out by us or our service company upon your request and the actual cost will be charged. However, it will not be charged if we are responsible for the cause of the failure.

(2) This limited warranty applies only when the condition, method, environment, etc. of use are in compliance with the terms and conditions and instructions that are set forth in the instruction manual and user manual for the Product and the caution label affixed to the Product.

(3) Even during the term of warranty, the repair cost will be charged on you in the following cases;

(i) a failure caused by your improper storing or handling, carelessness or negligence, etc., and a failure caused by your hardware or software problem  
(ii) a failure caused by any alteration, etc. to the Product made on your side without our approval

(iii) a failure which may be regarded as avoidable, if your equipment in which the Product is incorporated is equipped with a safety device required by applicable laws and has any function or structure considered to be indispensable according to a common sense in the industry

(iv) a failure which may be regarded as avoidable if consumable parts designated in the instruction manual, etc. are duly maintained and replaced

(v) any replacement of consumable parts (battery, fan, smoothing capacitor, etc.)

(vi) a failure caused by external factors such as inevitable accidents, including without limitation fire and abnormal fluctuation of voltage, and acts of God, including without limitation earthquake, lightning and natural disasters

(vii) a failure generated by an unforeseeable cause with a scientific technology that was not available at the time of the shipment of the Product from our company

(viii) any other failures which we are not responsible for or which you acknowledge we are not responsible for

### 2. Term of warranty after the stop of production

(1) We may accept the repair at charge for another seven (7) years after the production of the product is discontinued. The announcement of the stop of production for each model can be seen in our Sales and Service, etc.

(2) Please note that the Product (including its spare parts) cannot be ordered after its stop of production.

### 3. Service in overseas countries

Our regional FA Center in overseas countries will accept the repair work of the Product. However, the terms and conditions of the repair work may differ depending on each FA Center. Please ask your local FA center for details.

### 4. Exclusion of responsibility for compensation against loss of opportunity, secondary loss, etc.

Whether under or after the term of warranty, we assume no responsibility for any damages arisen from causes for which we are not responsible, any losses of opportunity and/or profit incurred by you due to a failure of the Product, any damages, secondary damages or compensation for accidents arisen under a specific circumstance that are foreseen or unforeseen by our company, any damages to products other than the Product, and also compensation for any replacement work, readjustment, start-up test run of local machines and the Product and any other operations conducted by you.

### 5. Change of Product specifications

Specifications listed in our catalogs, manuals or technical documents may be changed without notice.

### 6. Application and use of the Product

(1) For the use of our General-Purpose AC Servo, its applications should be those that may not result in a serious damage even if any failure or malfunction occurs in General-Purpose AC Servo, and a backup or fail-safe function should operate on an external system to General-Purpose AC Servo when any failure or malfunction occurs.

(2) Our General-Purpose AC Servo is designed and manufactured as a general purpose product for use at general industries. Therefore, applications substantially influential on the public interest for such as atomic power plants and other power plants of electric power companies, and also which require a special quality assurance system, including applications for railway companies and government or public offices are not recommended, and we assume no responsibility for any failure caused by these applications when used

In addition, applications which may be substantially influential to human lives or properties for such as airlines, medical treatments, railway service, incineration and fuel systems, man-operated material handling equipment, entertainment machines, safety machines, etc. are not recommended, and we assume no responsibility for any failure caused by these applications when used. We will review the acceptability of the abovementioned applications, if you agree not to require a specific quality for a specific application. Please contact us for consultation.







SH (NA) 030128-B (1307) MEE Printed in Japan

Specifications are subject to change without notice.

MODEL	MR-JE-A INSTRUCTIONMANU
MODEL CODE	1CW706

## mitsubishi electric corporation

HEAD OFFICE : TOKYO BLDG MARUNOUCHI TOKYO 100-8310

